
ITEM NOTE: WF 318785 SIDEBOARD

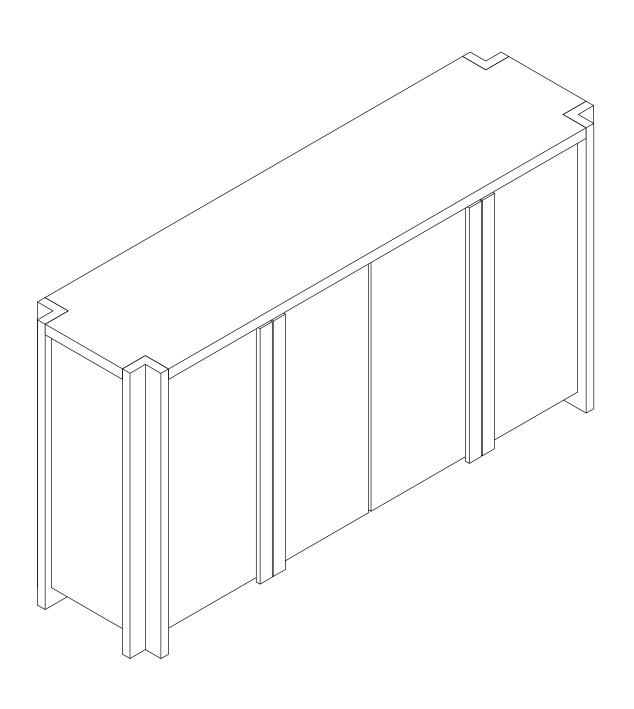

1. Thank you for choosing our products.

2. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

 
If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer at wfteam@comptree.net concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

Recommendations Before Beginning Assembly





Read instructions, cover to cover



  ♣ े Have 2-4 adults on hand for assembly depending on product size








3. Assembly Notice:

- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.
- Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- IMPORTANT: When setting up your product, DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

 Care & Maintenance



Do not clean furniture with harsh cleansers or polish

 
Do not place furniture under direct sunlight

Do not place furniture near heating or cooling vents

Do not write on furniture without a padded barrier to protect the surface

Do not place furniture outside. For indoor use only

Not for commercial use. For residential use only



Children should not climb or jump on the furniture


 \checkmark ullet Dust and pick-up spills using a clean, non-colored, lint-free cloth

Caution

- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.



ITEM NOTE: WF 318785 SIDEBOARD

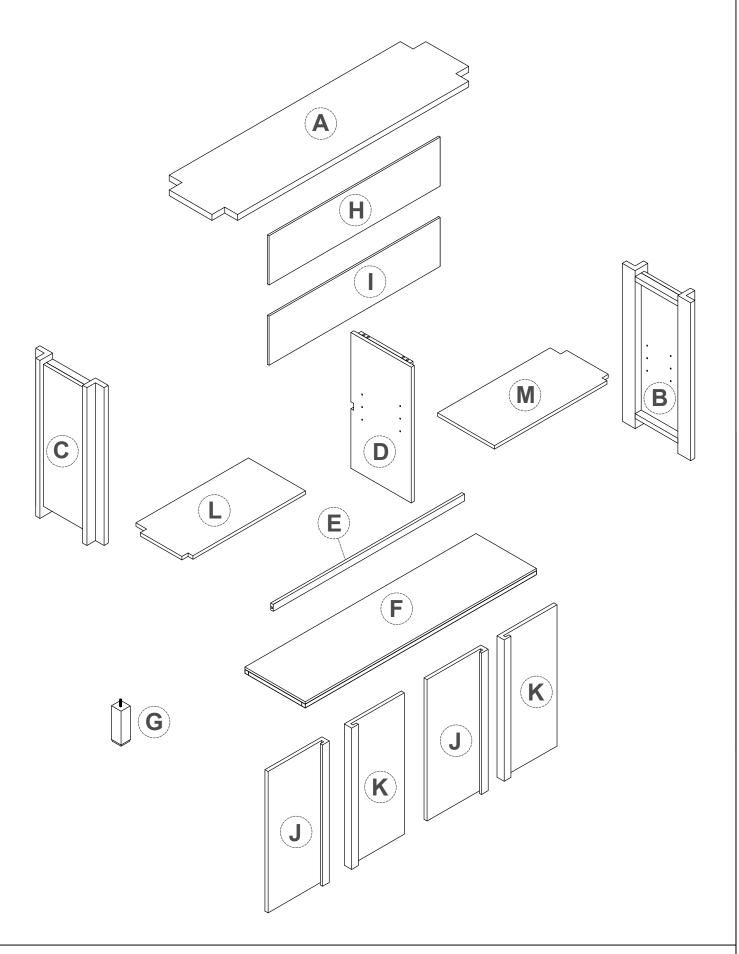

ITEM NOTE: WF 318785 SIDEBOARD

Important - Please read intructions fully before stafting assembly

- . Check you have all the components and tools listed on the following pages
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the before starting.

- . During assembly do not stand or put weight on the product this could cause damage.
- . Assembly the item as close to its final position (in the same room) as possible.
- . Assembly on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.



. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

power drill is set on a low torque setting.

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- . From time to time check that there are no loose screws on this unit.
- . This product not be discarbed with household waste Take to your local authority waste disposal centre.

Handy Hints

- . Assembly all parts and bolts loosely during assembly only once the product is complete should fully tighten the bolts.
- . Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps.

Use the anti tip stap or wan fixing method provibed (if applicable)

Do not allow children to climb or hang on the funiture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture

has been designed for this purpose

Please note that only anti tip strap in provided

You will need to provide wall plugs and screws applicable for your wall type



Tools required

Screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

The screws length is measured from the head to the point

ITEM NOTE: WF 318785 SIDEBOARD


Part List

A	H		
TOP PANEL - 1PC	BACK PANEL - 1PC		
B RIGHT PANEL - 1PC	BACK PANEL - 1PC		
C LEET DANIEL 4DO	J		
LEFT PANEL - 1PC	LEFT DOOR - 2PC		
D	K		
BETWEEN PANEL - 1PC	RIGHT DOOR - 2PC		
E	L		
REAR TIE ROD - 1PC	LEFT SHELF - 1PC		
F	M		
BOTTOM - 1PC	RIGHT SHELF - 1PC		
G			
MIDDLE LEG - 1PC			
6			


ITEM NOTE: WF 318785 SIDEBOARD


Hardware List


	,		
	8		
(Ø13) 5/16" x 40mm	Ø 4 x 25mm		
Hex- Head Bolts (12pcs)	Umbrella Screw - 1pc		
2	9		
5/16" x 11mm x 1.5mm	Ø 4 x 40mm		
Spring Washer (12pcs)	Flat head screw - 2pc		
3	10		
5/16"* 16mm x 1.5mm	Ø 4 x 15mm		
Flat Washer (12pcs)	Umbrella head screw - 52pcs		
4	11 Ø 4 x 15mm		
Allen kay - 1pc	Flat head screw - 48pcs		
5			
Shelf pin - 8pcs			
6			
Ø 10 x 30mm			
Wooden Pegs - 12pcs			
7 A 7 B			
Damper hinge - 4pcs Damper hinge - 4pcs			

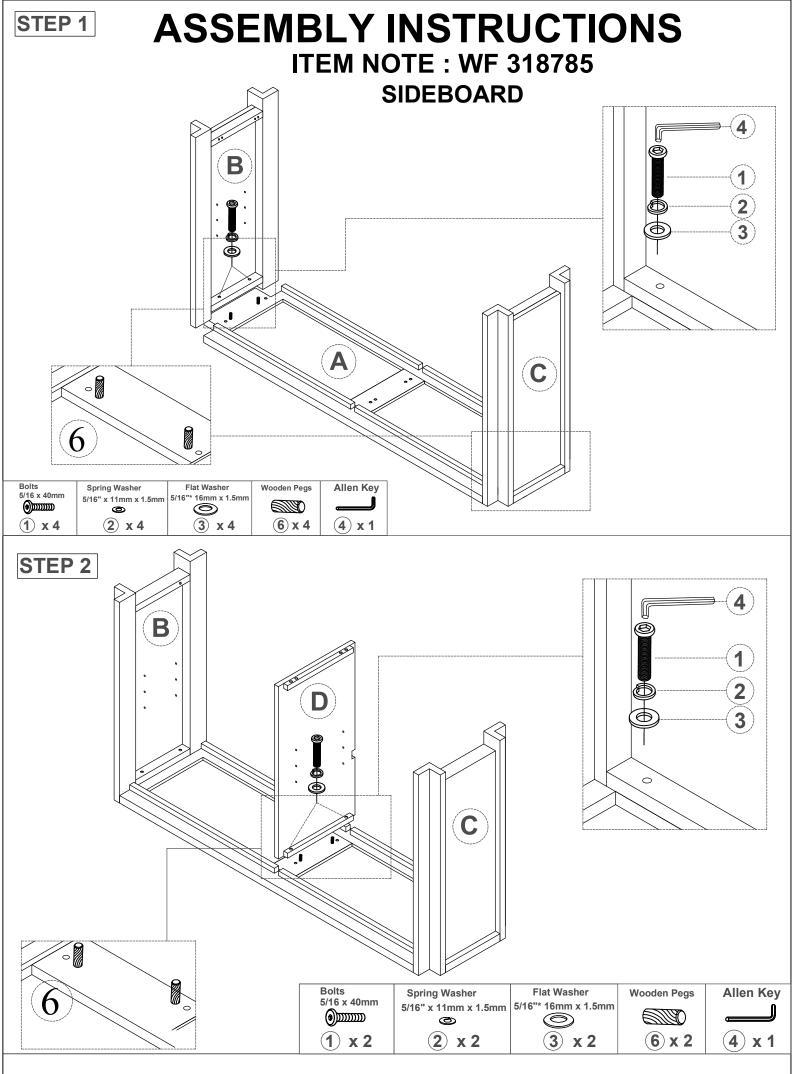

ITEM NOTE: WF 318785

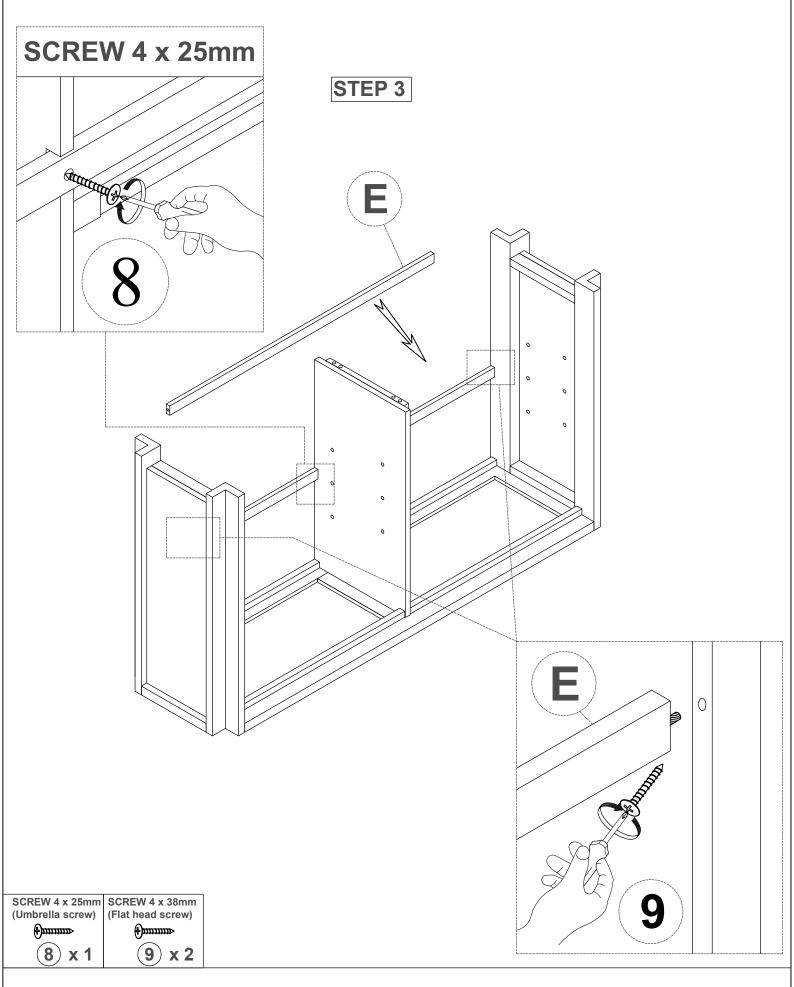


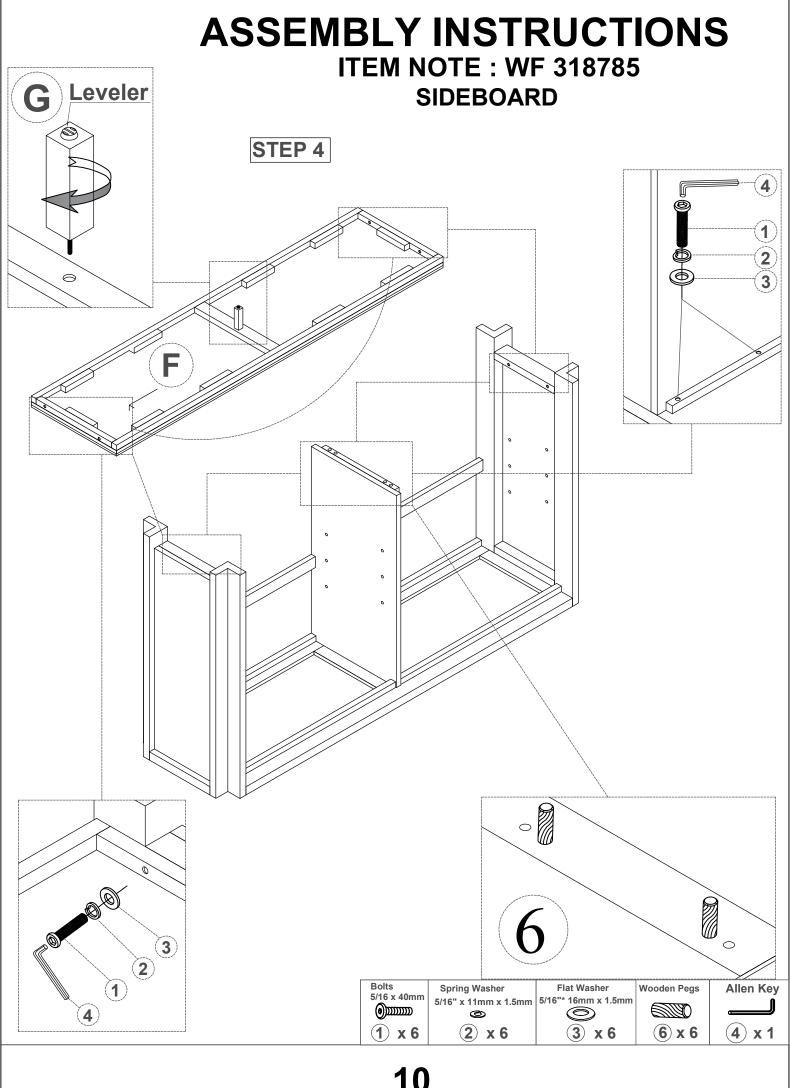

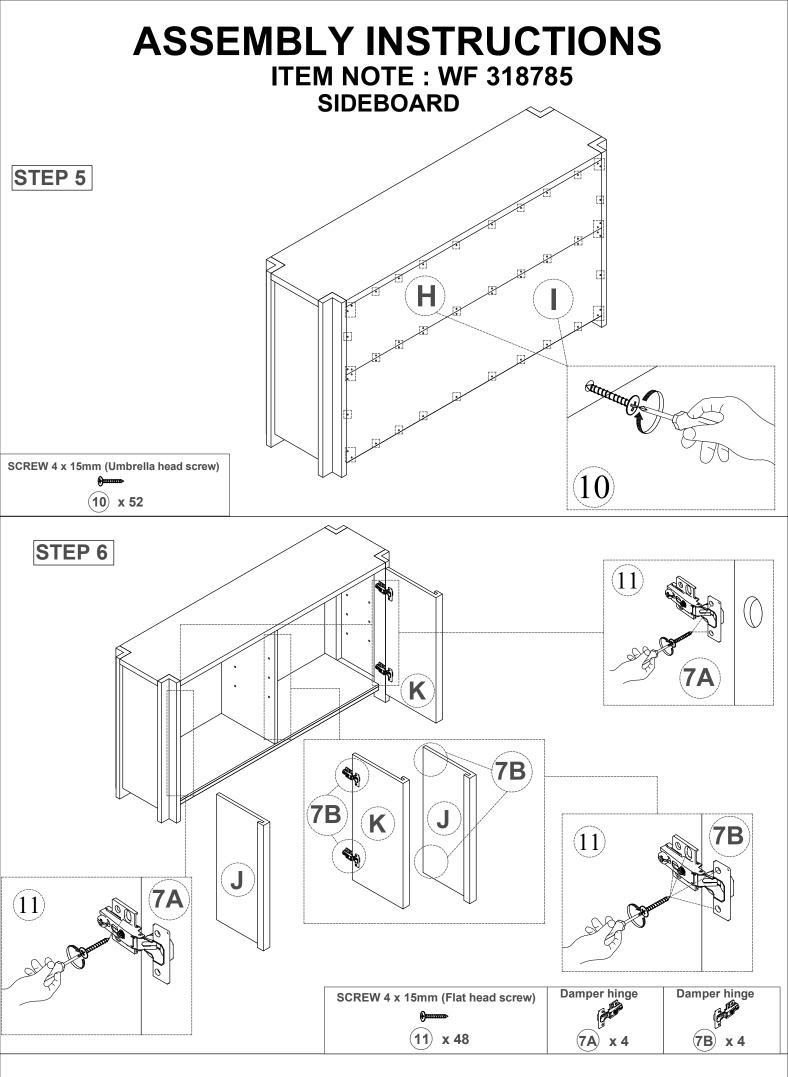





ITEM NOTE: WF 318785 SIDEBOARD

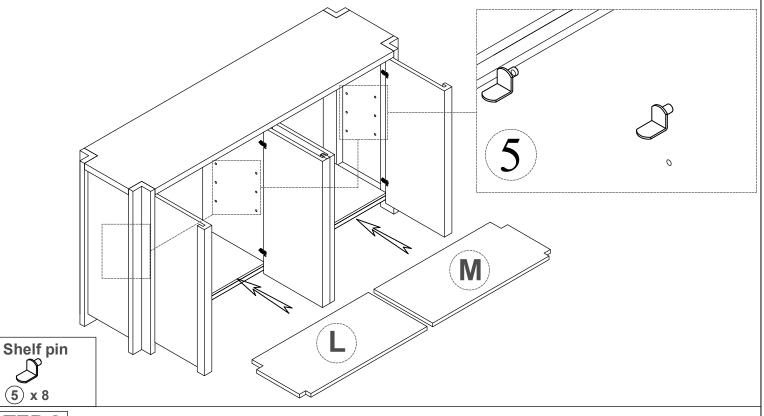

STEP 8

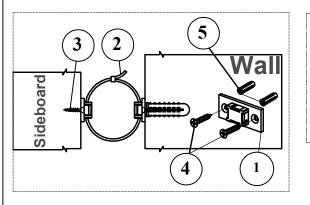


Anti-Tip Hardware			
No	Description		Q'ty
1	BRACKET	[0] P	2 pcs
2	PLASTIC STRAP	Q	1pcs
3	SHORT SCREW 4 x 20mm		2 pcs
4	LONG SCREW 4 x 30mm		2 pcs
5	PLASTIC STOPPER		2 pcs

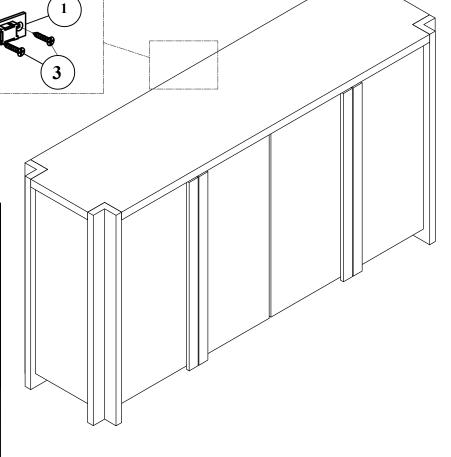

Sideboard

ITEM NOTE: WF 318785 SIDEBOARD

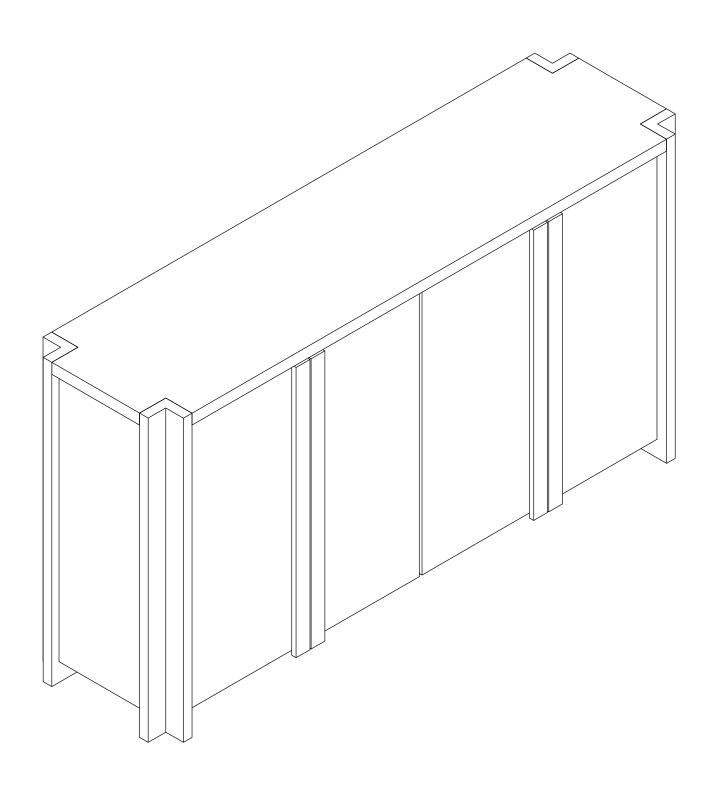

Assembly is Complete