

ASSEMBLY INSTRUCTION

WF317432

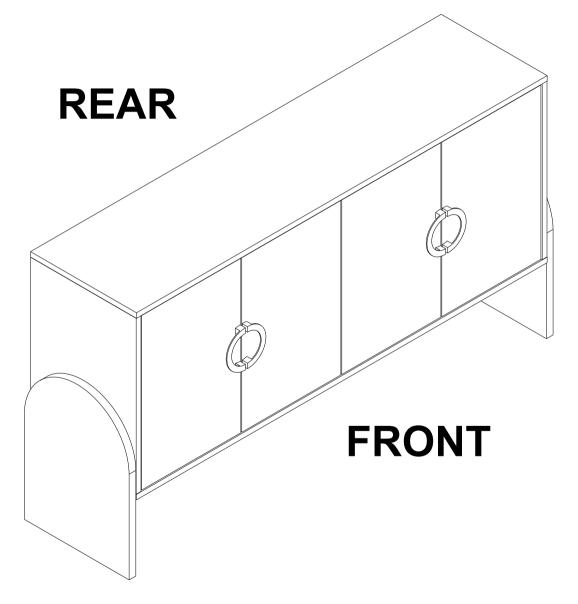


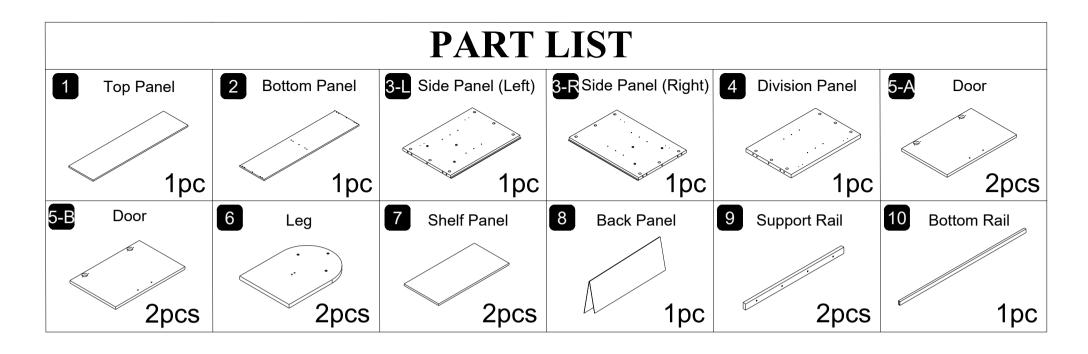










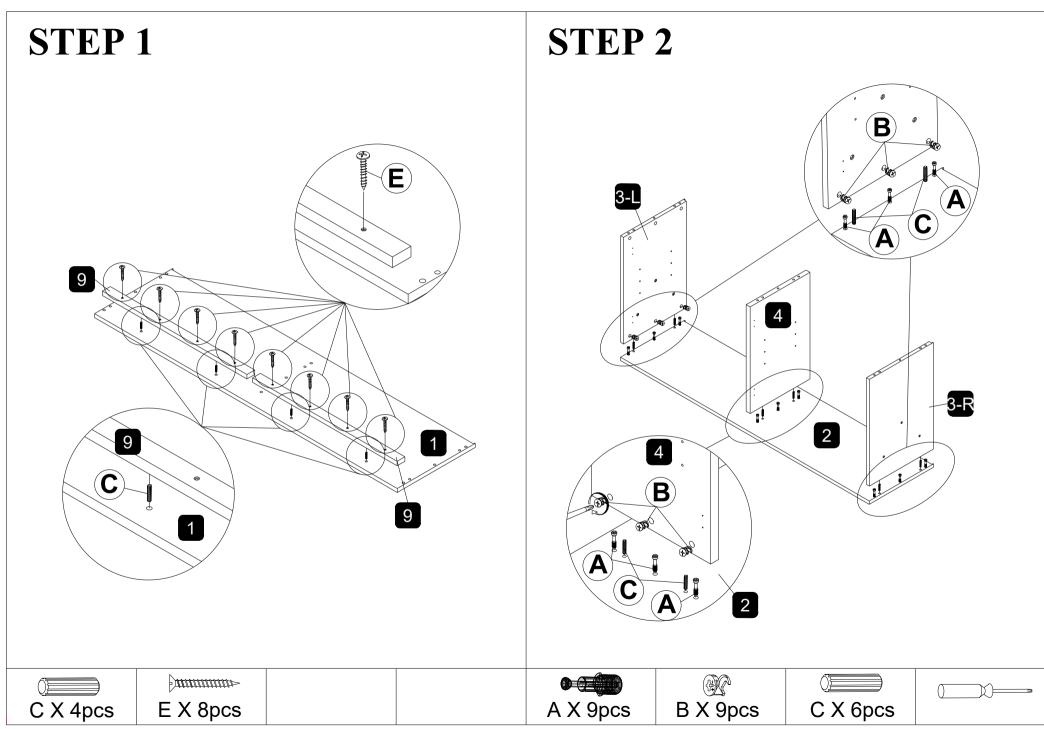

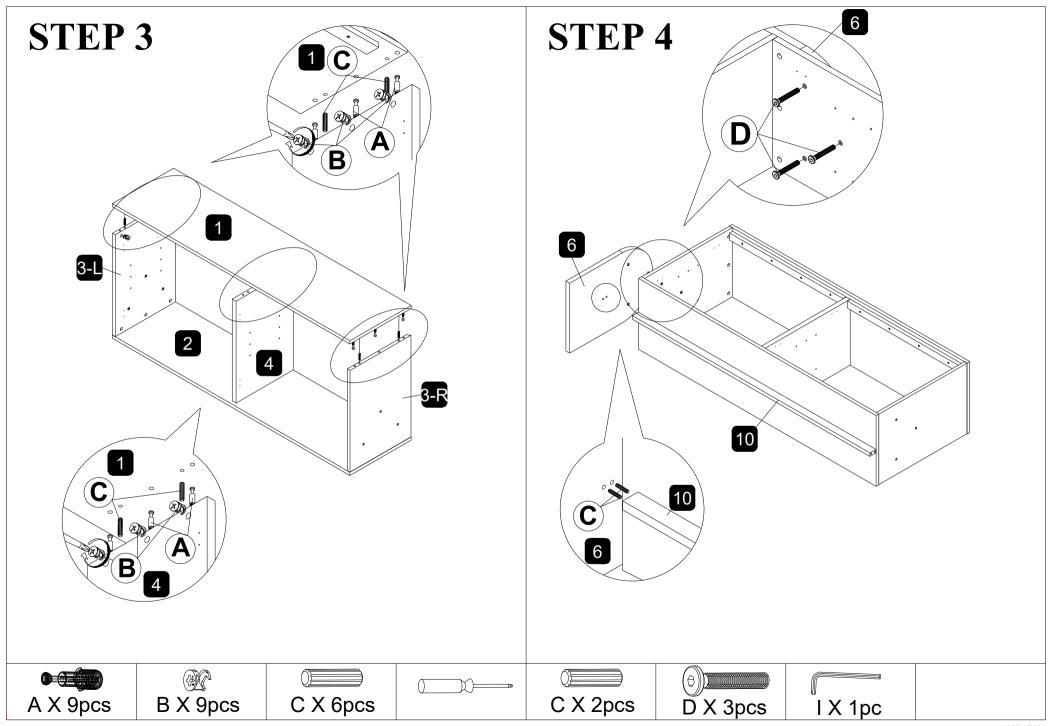


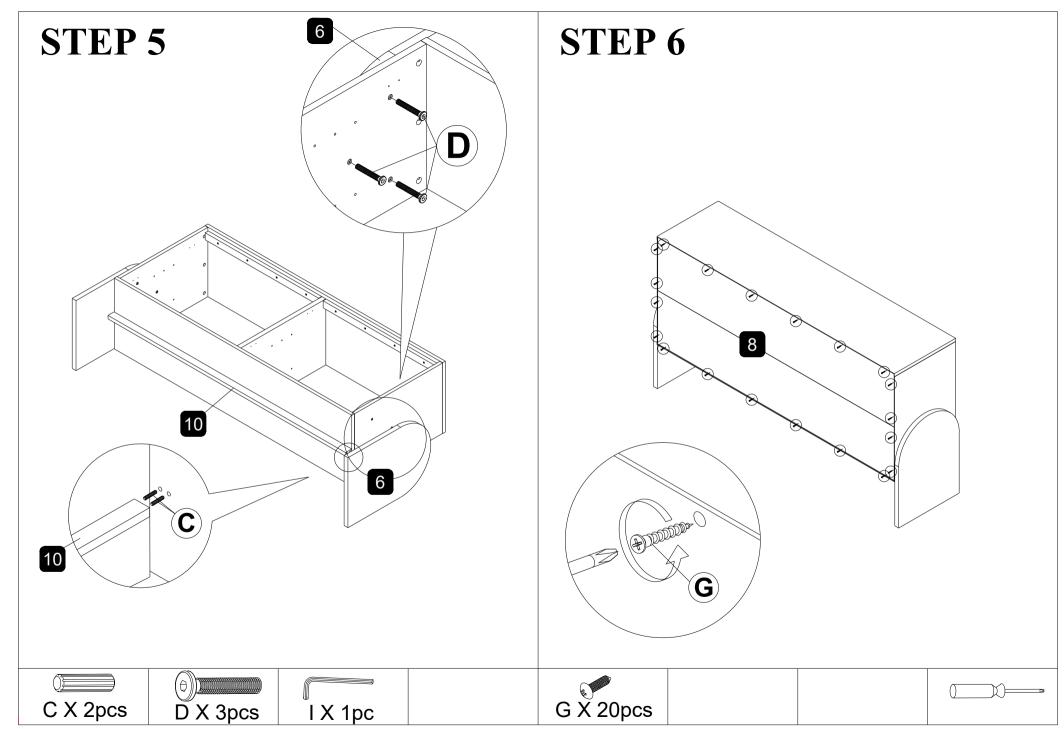

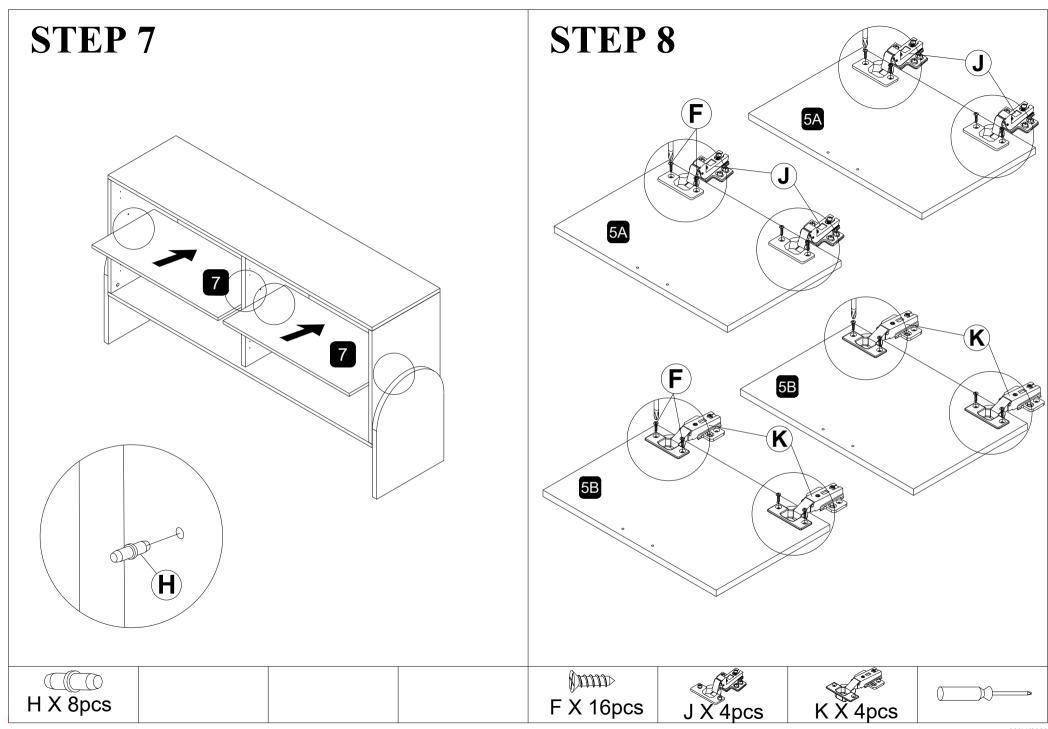

STEP 10 STEP 9 5A 5B 5A Ĵ ∜ L X 4sets *\$mm*⊳ F X 32pcs


COMPLETED ASSEMBLY

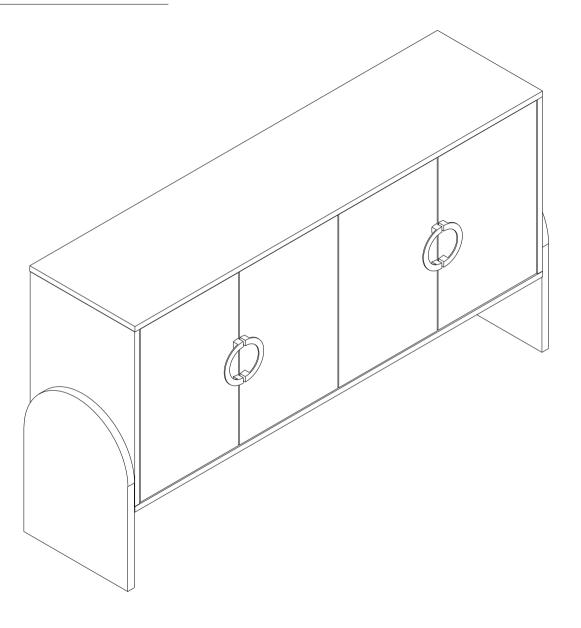

ASSEMBLY INSTRUCTIONS


How to Concealed Hinges

Height Adjustment-helps you to adjust doors so they align at the top and bottom.

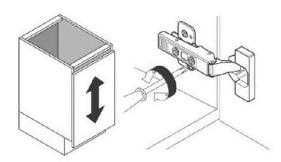


Note: Run your hand along the underside of the doors. You will easily feel which door are sitting lower than the others.

Depth Adjustment- Lets you bring a door into alignment with vertical surfaces such as drawers.

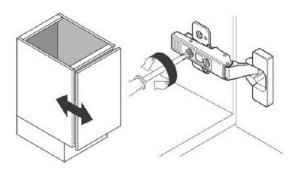

Note: Check to make sure you are not missing a door bumper. Missing door bumpers will cause your cabinet to look out of alignment.

Side Adjustment- adjusts gaps between doors and alleviates rubbing doors.

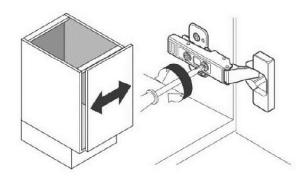

Note: Right Side Hinge: Clockwise moves door to RIGHT, CCW moves door to LEFT. Left Side Hinge: Clockwise moves door to LEFT, CCW door to RIGHT.