WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over


- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
 NEVER allow children to stand,
- climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.


This is a permanent label. Do not remove!

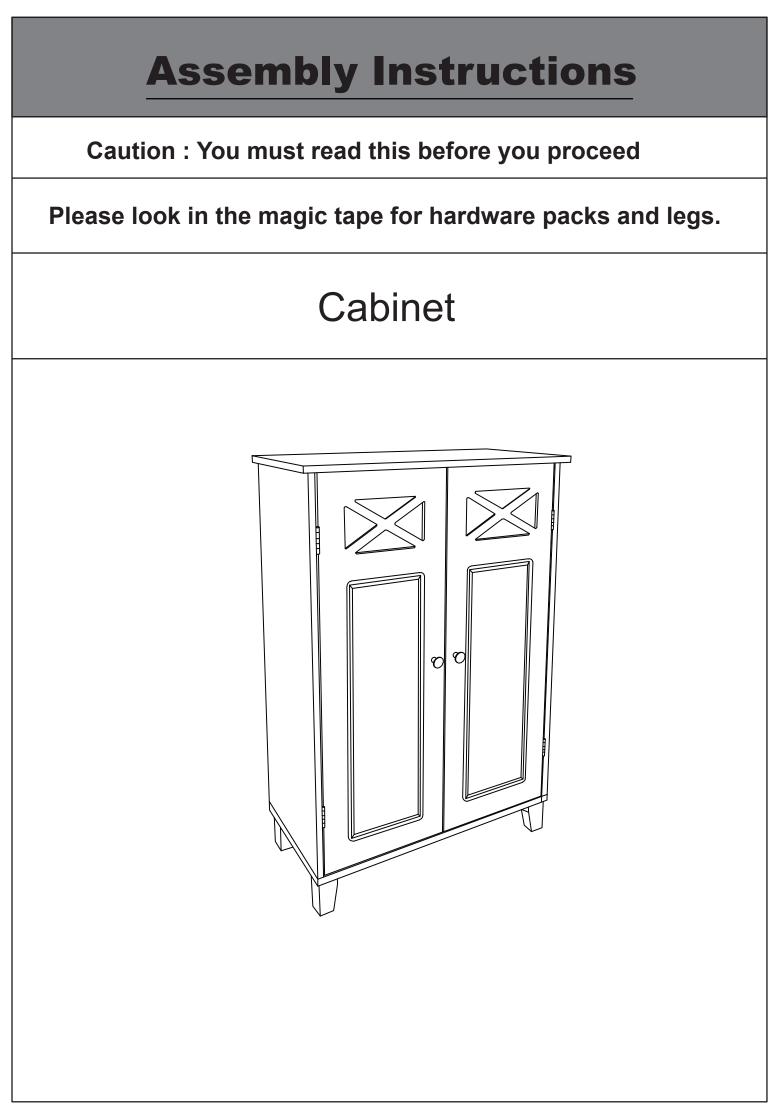

| Parts List | | | | |
|------------|---|------------------|-----|--|
| Label | Picture | Description | QTY | |
| A | · · · · · · · · · · · · · · · · · · · | Top Panel | 1 | |
| В | | Bottom Panel | 1 | |
| с | | Adjustable Panel | 2 | |
| D | ···· · · · · · · · · · · · · · · · · · | Right Side Panel | 1 | |
| E | ° · · · · · · · · · · · · · · · · · · · | Left Side Panel | 1 | |
| F | | Back Panel | 2 | |
| G | | Left Door Panel | 1 | |
| н | · | Right Door Panel | 1 | |
| I | | Back Slat | 1 | |
| J | | Leg | 2 | |
| к | | Leg | 2 | |


| Hardware | | | | |
|---------------------------|---|-------------------------------|-----|--|
| Label | Picture | Description | QTY | |
| 1 | Co | Knob | 2 | |
| 2 | On | Knob Bolt (M4x16mm) | 2 | |
| 3 | | Magnet | 1 | |
| (4) | e to | Hinge | 4 | |
| 5 | | Magnetic Bar | 2 | |
| 6 | BD M | Cam Bolt | 5 | |
| 7 | | Cam Nut | 5 | |
| 8 | | Dowel | 9 | |
| 9 | | Self Pin | 8 | |
| 10 | O wanter | Screw (M4x30mm) | 13 | |
| 11 | Derange | Screw (M3x14mm) | 3 | |
| 12 | Oppos | Screw (M3x12mm) | 19 | |
| 13 | | Back Botton | 6 | |
| 14 | Internation | Screw (M3x16mm) | 7 | |
| Restraint Device Hardware | | | | |
| 15 | Oppose. | Screw (M3x12mm) | 2 | |
| 16 | 0 0 | Restraint Strap | 2 | |
| 17 | 0 | Metal Gasket | 4 | |
| 18 | C - A - C - C - C - C - C - C - C - C - | Wall Anchor Screw | 2 | |
| 19 | Destanting | Screw (M4x35mm) | 2 | |
| 20 | | Screwdriver (Not provided) | 1 | |
| 2) | | Hammer (Not provided) | 1 | |
| 22 | | Power Drill (Not provided) | 1 | |

Assembly Preparation

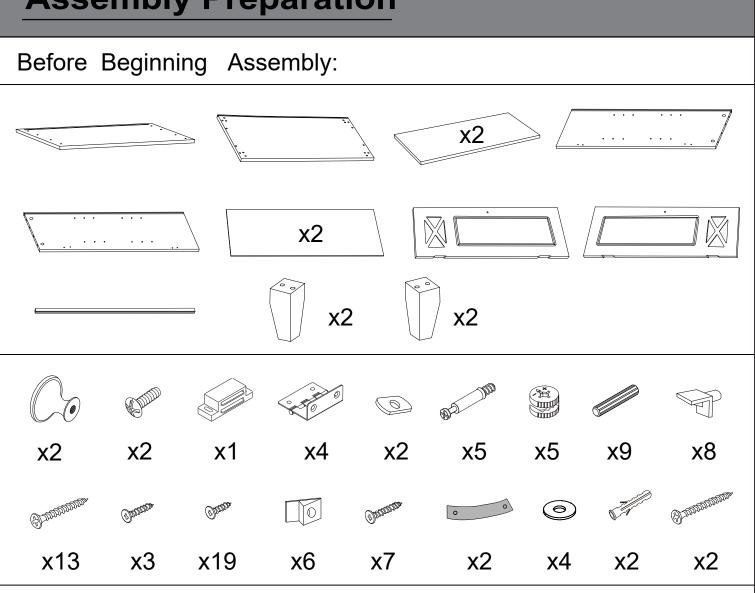

- Read instructions, cover to cover-
 - Have 2 adults on hand for assembly-
 - Do not assemble on flooring or carpet-
 - Assemble on a clean non-marring surface (packing foam)-
 - Save all packaging until finished-


Assembly Steps

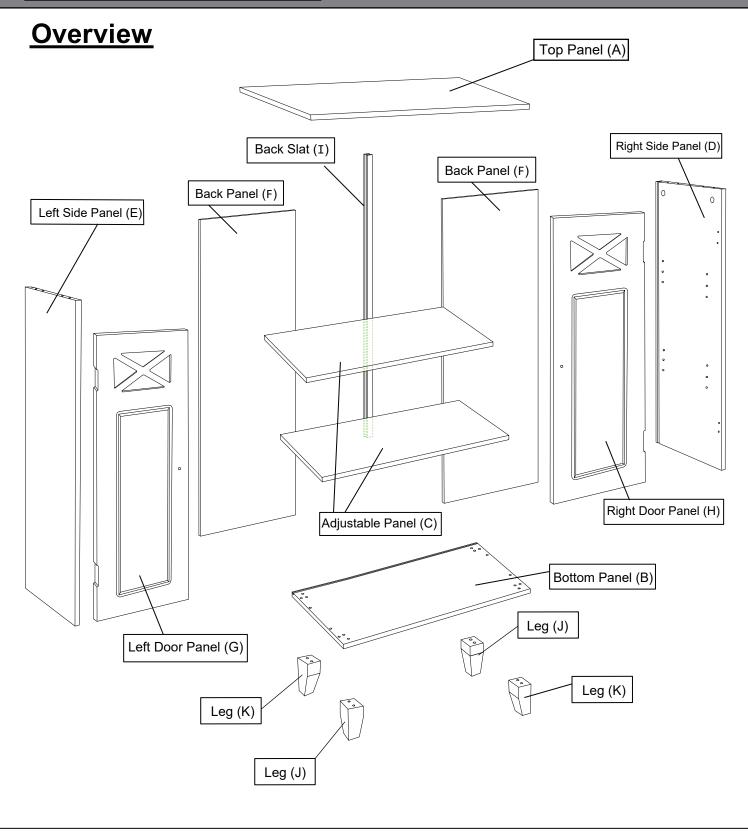



This Cabinet has multiple parts and may require up to 60 minutes to assemble.


To give you an overview of the Cabinet parts, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

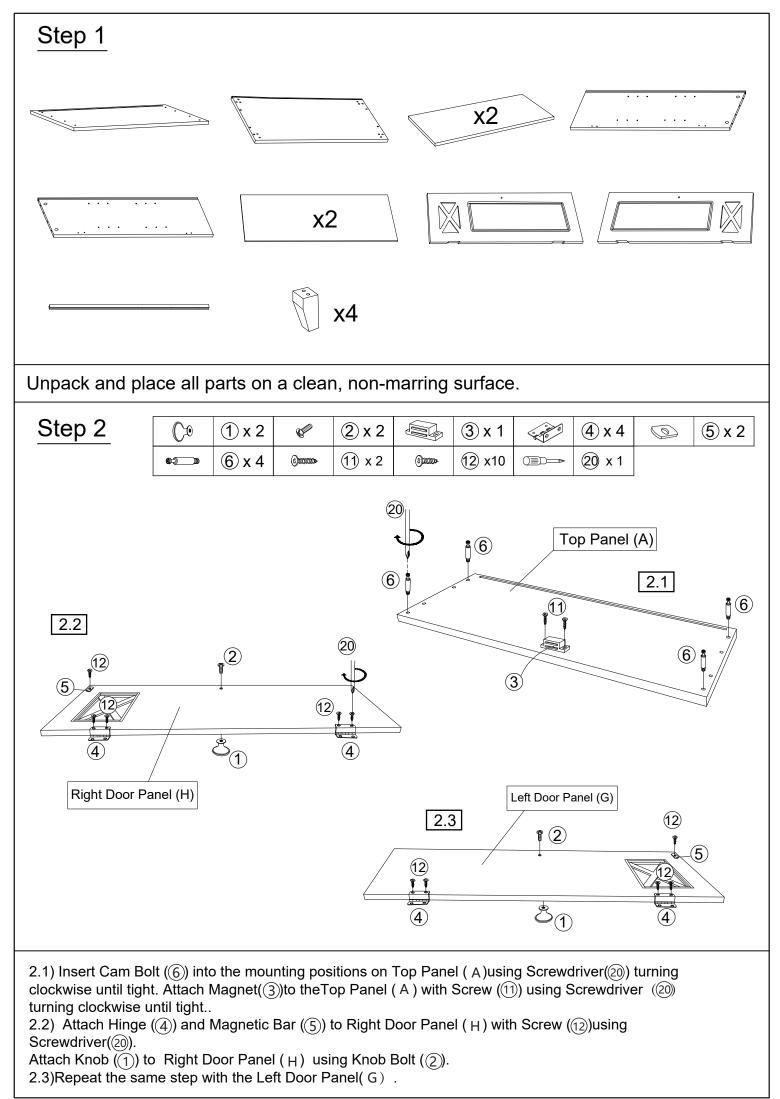

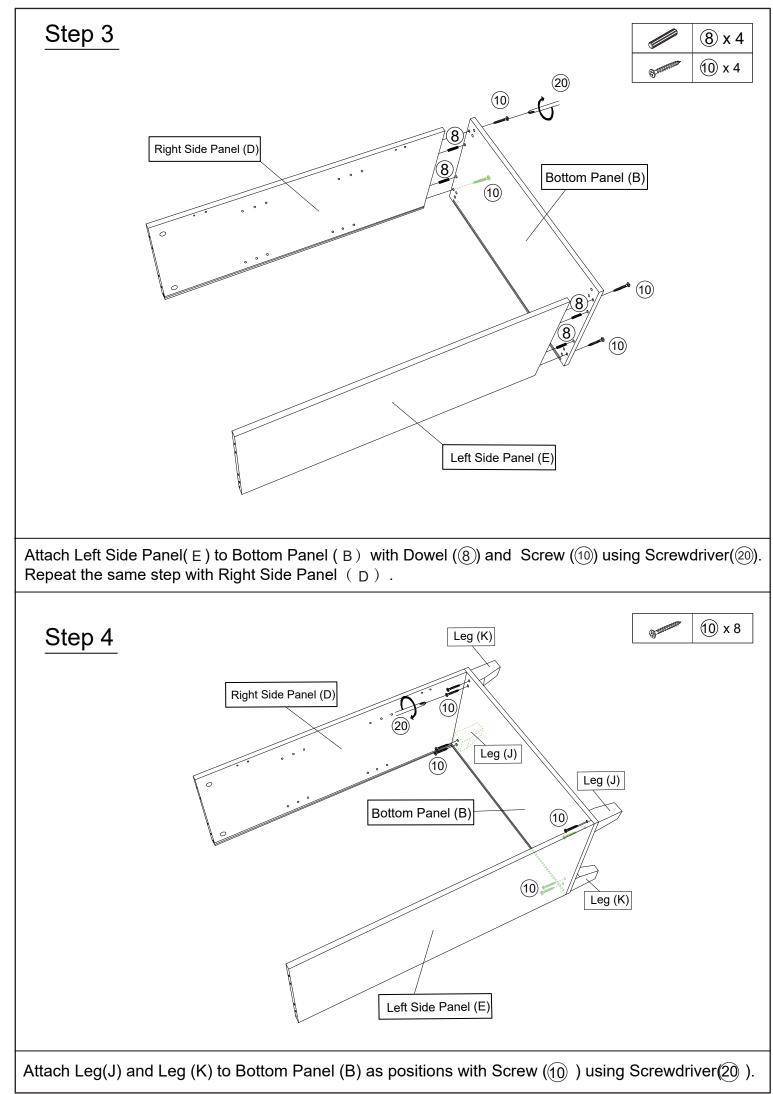

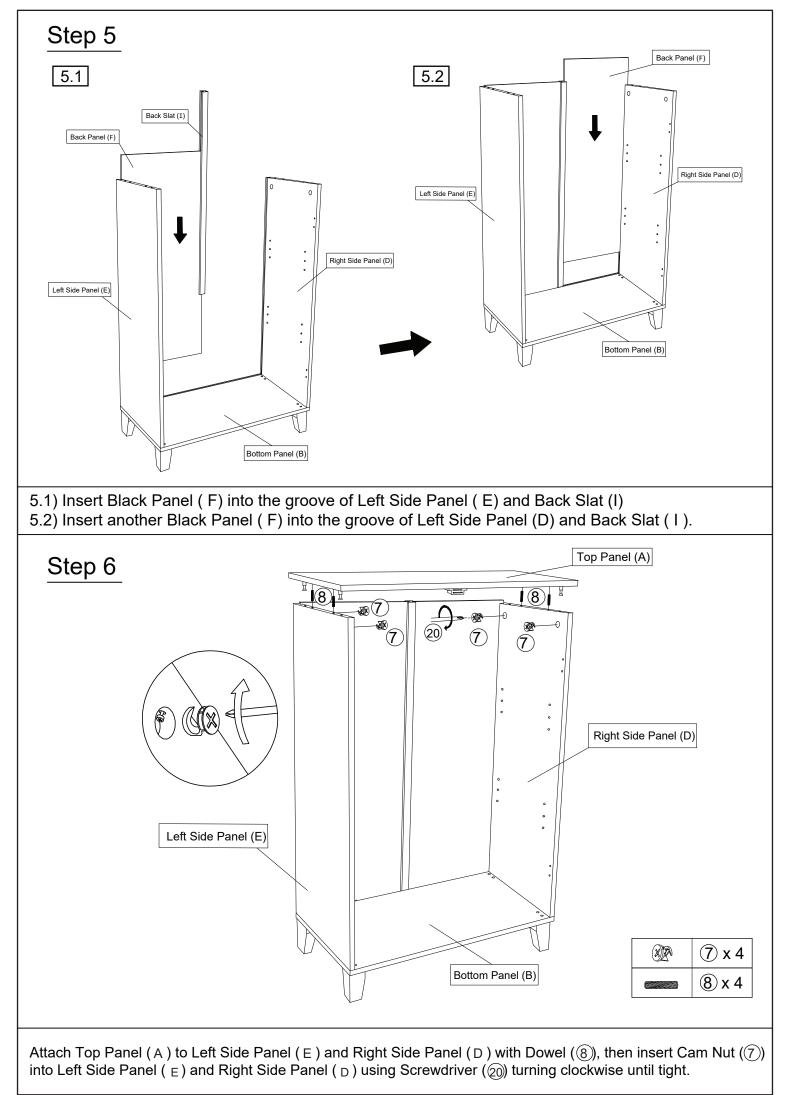

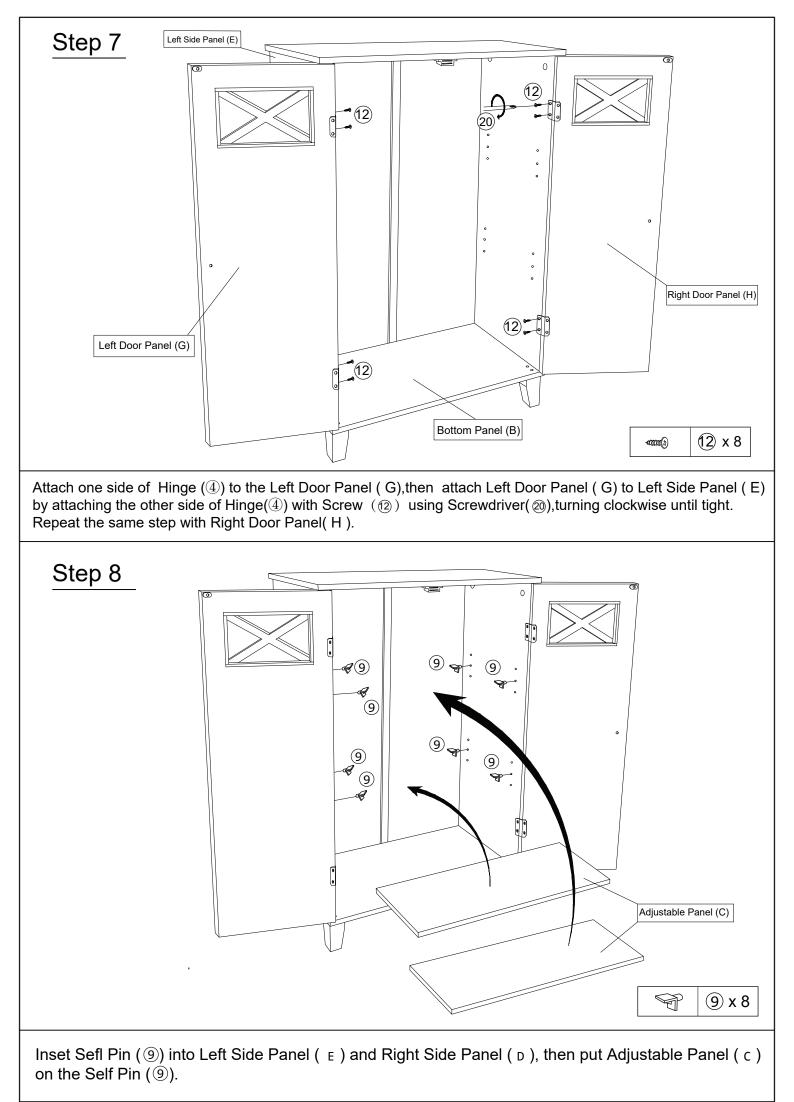





Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using Cabinet Restraint Device.

See product instructions for more ways to help prevent furniture tip-over.



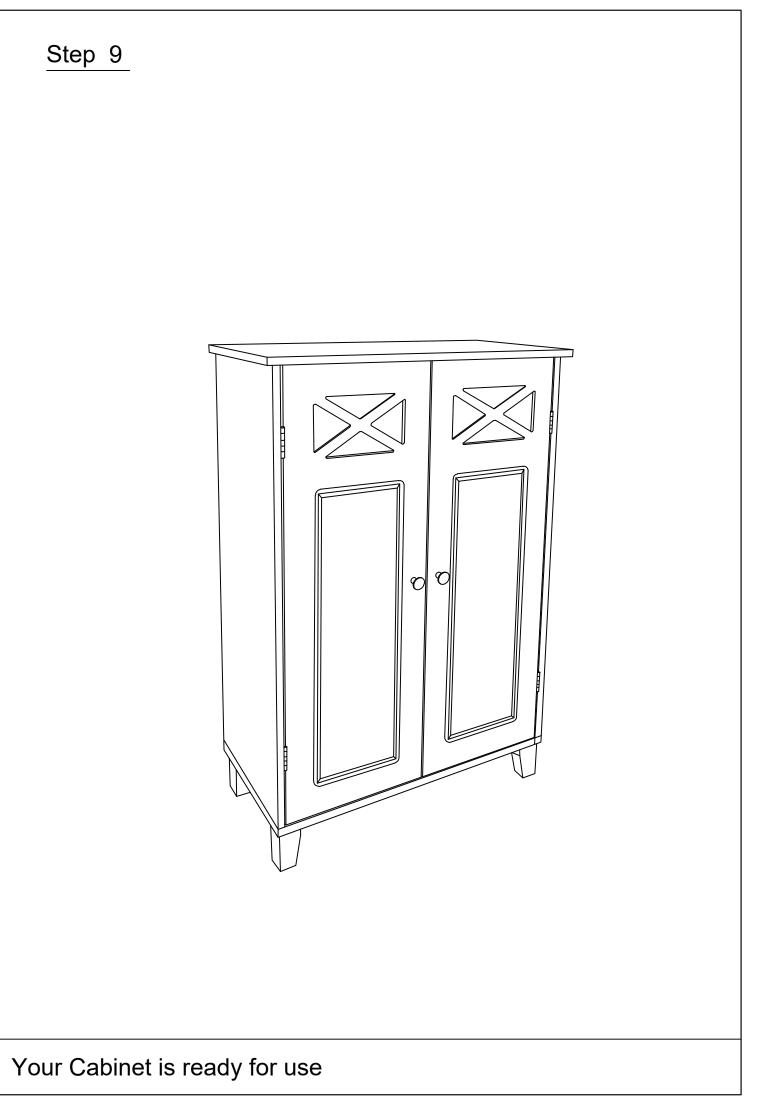

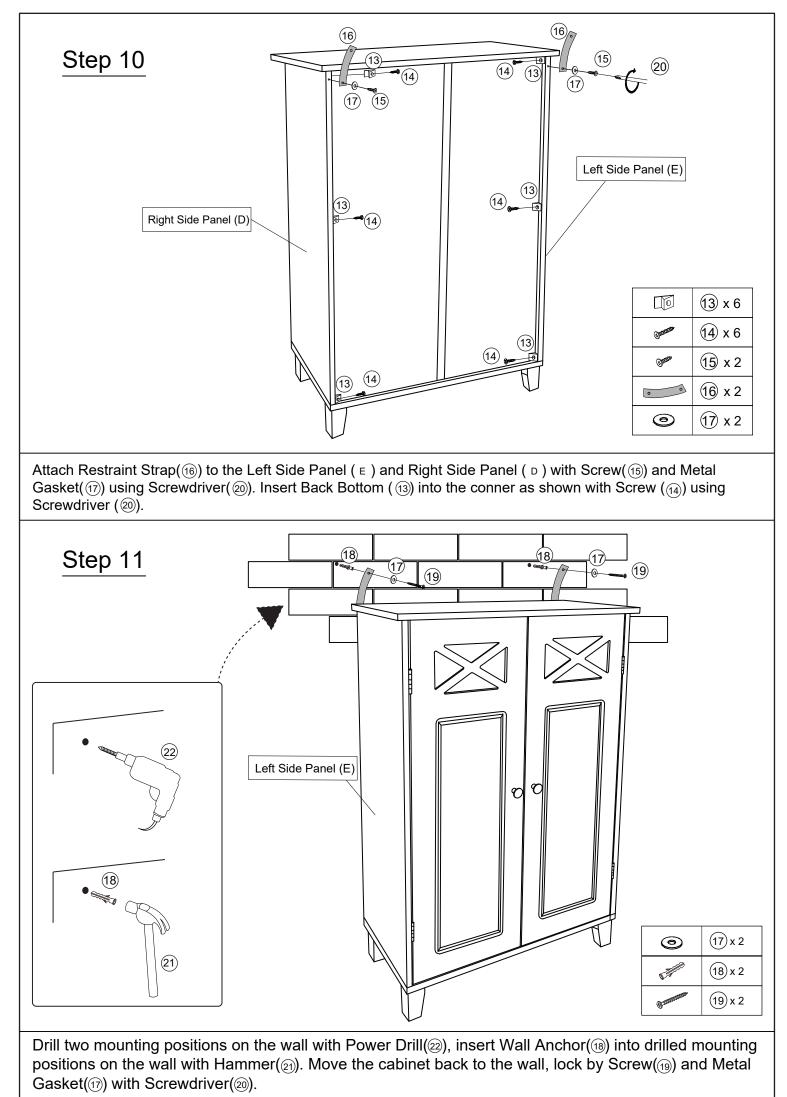

Noble House Home Furnishing LLC

| <u>Care & Maintenance</u> | | | | |
|-------------------------------|---|--|--|--|
| ↓ ∰ | Furniture may scrate furniture pads to pre | ch floors. We recommend using otect your floors. | | |
| 0 | Do not put hot items | s directly on furniture surface. | | |
| 0 | Do not clean furnitu | re with harsh cleansers or polish. | | |
| ØÖ | Do not place furnitu | re under direct sunlight. | | |
| | Do not place furnitu | re near heating or cooling vents. | | |
| 0L | Do not write on furn protect the surface. | iture without a padded barrier to | | |
| ø 🎡 | Do not place furnitu | re outside . For indoor use only. | | |
| 0 | Not for commercial | use. For residential use only. | | |
| 0 | Stains may be remo damp cloth. | oved with mild soap solution and | | |
| 0 ¥ | Children should not | climb or jump on the furniture. | | |
| 1 | Dust and pick-up sp lint-free cloth. | oills using a clean, non-colored, | | |
| | | | | |