
Assembly Instructions

Caution: You must read this before you proceed


Club Chair

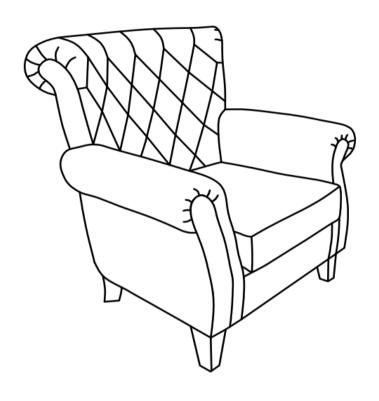

Parts List

Label	Picture	Description	QTY
А		Chair Back	1
В		Chair Base	1

С		Front Leg	2		
D		Back Leg	2		
<u>Hardware</u>					
Label	Picture	Description	QTY		
1		Gasket	7		
Assembly Preparation					
	A AWW				

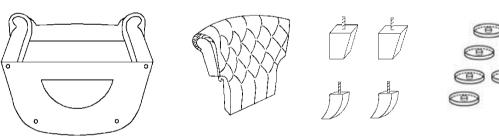



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-





Save all packaging until finished-

Assembly Steps

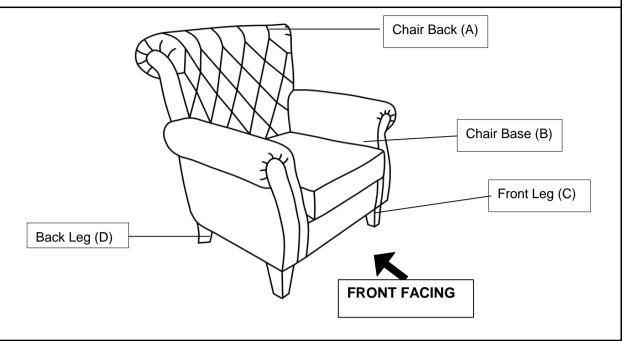

 This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



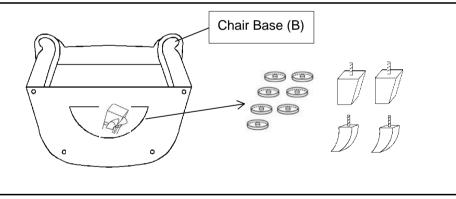


Place the Chair on its back on a clean, non-marring surface as pictured above. Carefully unzip the pouch at the bottom of the Chair Base(B) and remove the Front Leg(C), Back Leg(D) and Hardware.


Close the pouch.

Step 2 Chair Back (A) Chair Base (B)

Position yourself behind the Chair and place the Chair Back(A) into the Chair Base(B). Tilt the Chair Back slightly forward, then gently pull the Chair Back towards you while pushing it down all the way into the Chair Base.

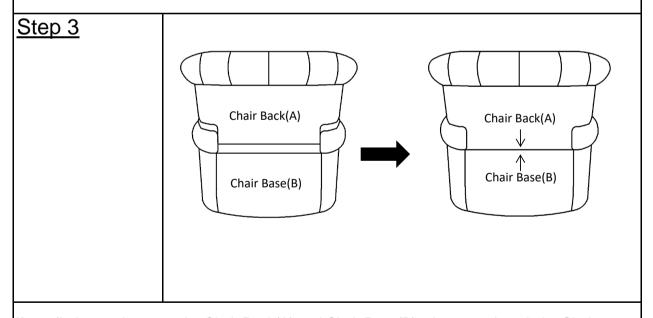

If you find a gap between the Chair Back(A) and Chair Base(B), please push rock the Chair Back(A) back and forth slightly, while pressing the Chair Back downwards until the gap disappeares.

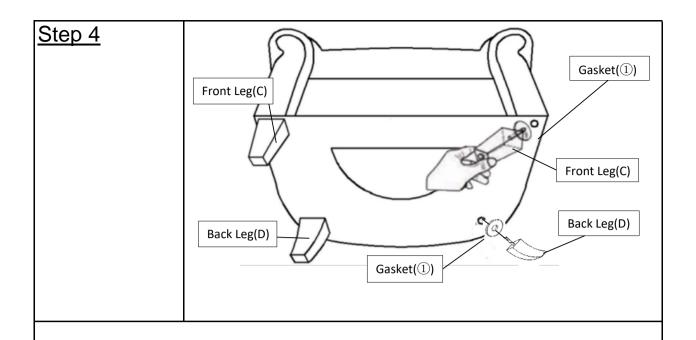


Install Front Leg(C) into the Chair Base(B) by putting a Gasket(①) on the threaded stem. Then insert the threaded stem into the mounting position at the corner of the bottom of Chair Base(B).

Tighten by turning the Front Leg(C) clockwise by hand.

Repeat the same process to install the remaining Front Leg(C) and Back Leg(D).

The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight

wobbles.

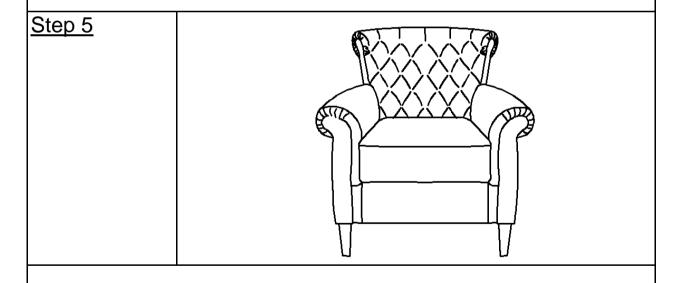

Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.

Care & Maintenance



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.