
Assembly Instructions

Caution: You must read this before you proceed

Dining Chair

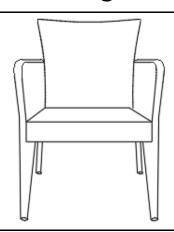


Parts List				
Label	Picture	Description	QTY	
А	D 0	Backrest	1	
В		Left Armrest	1	
С		Right Armrest	1	
D		Seat Panel	1	

Hardware				
Label	Picture	Description	QTY	
1		Allen Wrench	1	
2		Bolt (M6*35MM)	5	
3		Bolt (M6*20MM)	3	
4		Flat Washer	7	

Assembly Preparation

Before Beginning Assembly:

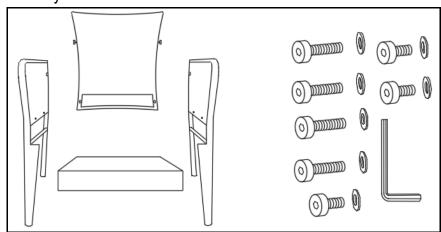



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-



· Save all packaging until finished-


Assembly Steps



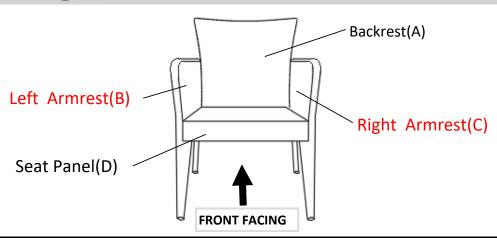


This Dining Chair has multiple parts and may require up to 30 minutes to assemble.


To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.

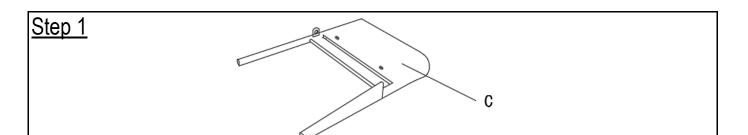

Open the carton and place all the parts onto a clean, non-marring surface, preferably a working top. Place Right Armrest(C) on the ground, as shown in picture above.

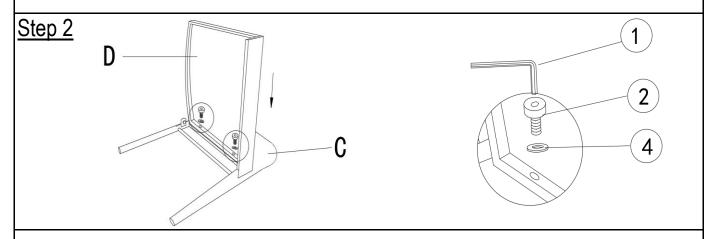


Attach Seat Panel(D) to Right Armrest(C) using Bolts(②) and Washers(④) with Allen Wrench(①). **Do not fully tighten the bolts.**

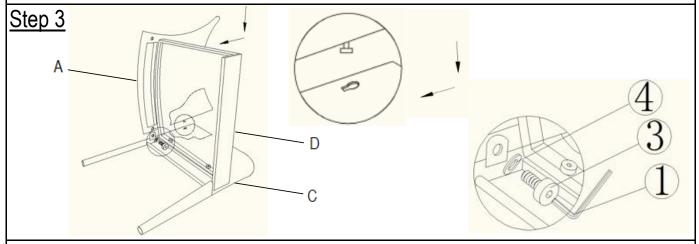


Attach Backrest(A) to Seat Panel(D) and Right Armrest(C) using Bolts(③) and Washers(④) with Allen Wrench(①)

Do not fully tighten the bolts.

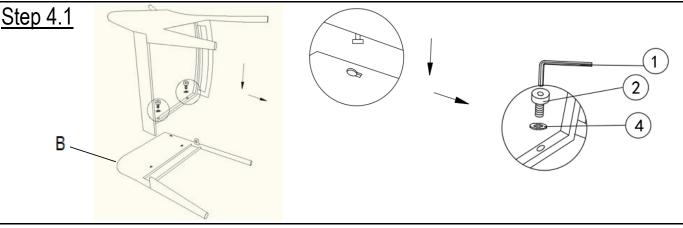


Turn the chair over, and attach the Left Armrest(B) to the Seat Panel(D) using Bolts(②) and Washers(④) with Allen Wrench(①)

Do not fully tighten the bolts.

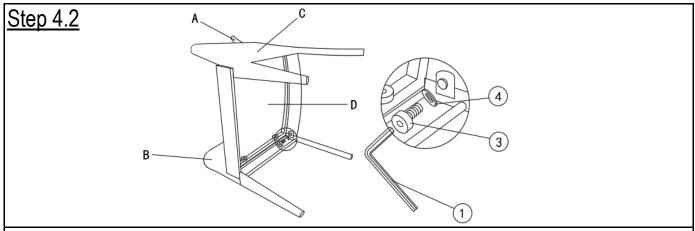

Attach Backrest(A) to Seat Panel(D) and Left Armrest(B) using Bolts(③) and Washers(④) with Allen Wrench(①)

Do not fully tighten the bolts.

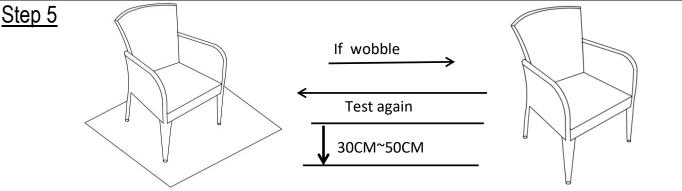

Place the dining chair on a LEVEL SURFACE to check for wobbles.

If it wobbles lift the dining chair to some 20cm to 30cm height from the ground.

Keep your feet and toes well away from the drop zone.

Drop the dining chair freely and vertically with the four legs, hitting the ground, all at the same time.

This Drop Test will help to ensure that all the bolts and gaps to all reach full alignment status.

Test again for evenness on a LEVEL SURFACE.

If no wobbles found, slowly and steadily, turn the chair upside down.

Then, proceed to tighten all bolts in a sequential manner.


CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute this same drop tests.

WARNING!! IF DINING CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

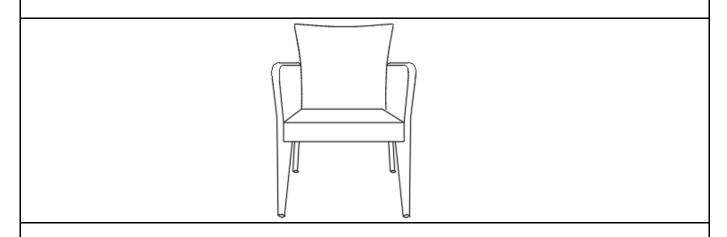

Your Dining Chair is ready for use.

Care & Maintenance



Prolonged exposure to rain may cause rusting which can stain floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



 To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



 Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



Not for commercial use. For residential use only.



Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.



Dust and pick-up spills using a clean, non-colored, lint-free cloth.