



 
Assembly Instructions

Caution : You must read this before you proceed

 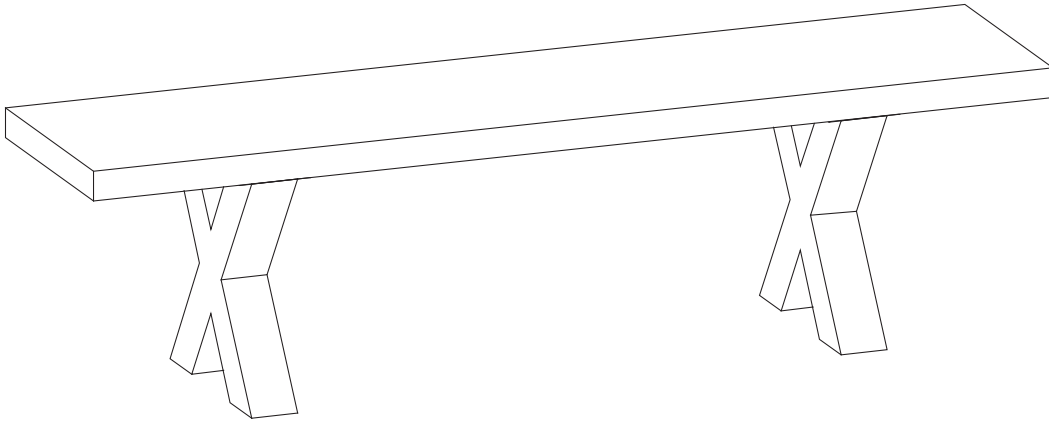



Bench



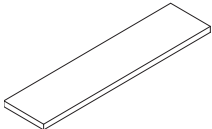
Part List

| Label | Picture | Description | QTY |
|-------|---|-------------|-----|
| A |  | Bench Top | 1 |
| B |  | Bench Legs | 2 |

Hardware



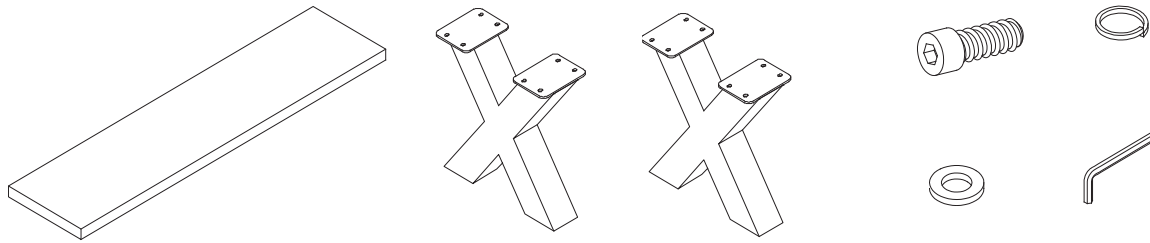


| Label | Picture | Description | QTY |
|-------|---|---------------|-----|
| ① |  | Screw (M8*25) | 17 |
| ② |  | Spring washer | 17 |
| ③ |  | Flat Washer | 17 |
| ④ |  | Allen key | 1 |

Assembly Preparation




Before Beginning Assembly:

*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any parts are missing or damaged, do not attempt to assemble the product.

-  • Read instructions, cover to cover-
-  • Have 2 adults on hand for assembly-
-  • Do not assemble on flooring or carpet-
-  • Assemble on a clean non-marring surface (packing foam)-
-  • Save all packaging until finished-

Assembly Steps

OVERVIEW

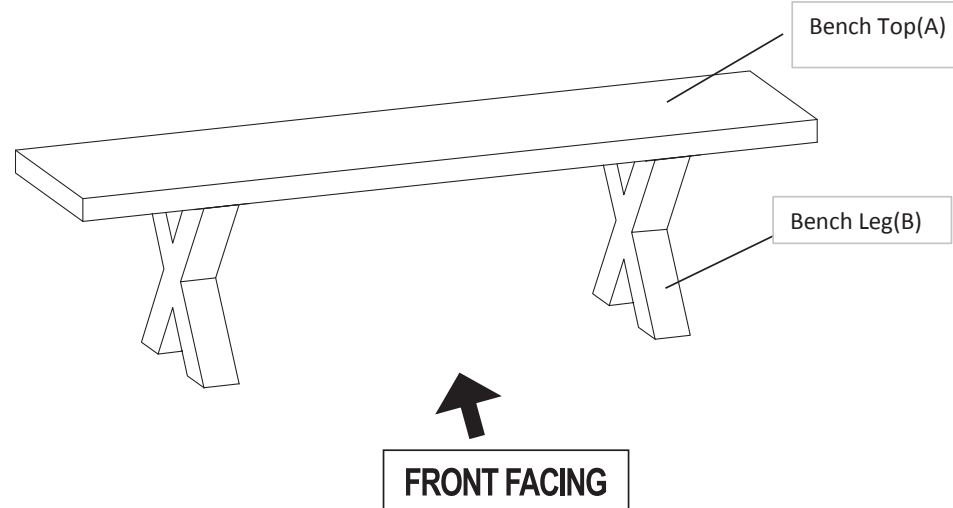

This Bench has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bench parts, the above picture is to help you put the various Bench parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

Hardware Used

①: M8 Screw




②: Spring Washer



③: Flat Washer



④: Allen key

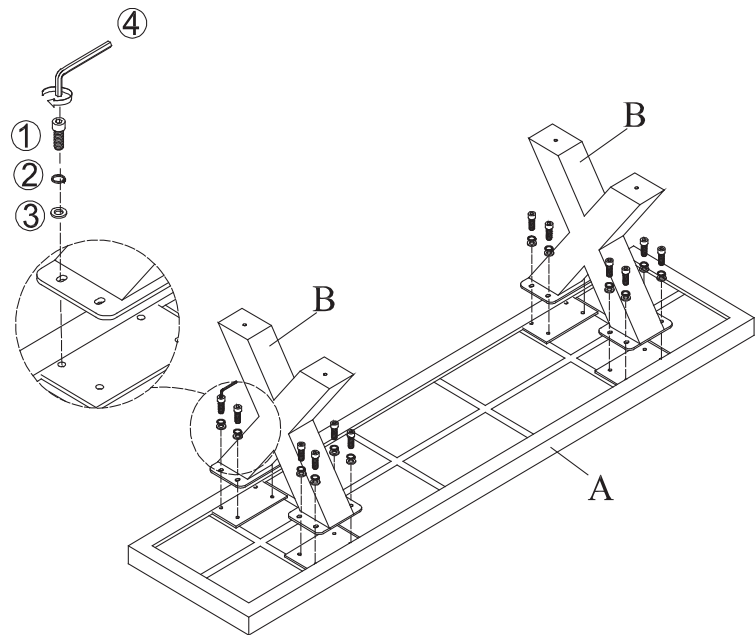


Position the bottom of the Bench top(A) as shown.

And then insert the Legs(B) into the mounting position of Bench Top(A).

Attach the Legs(B) by using M8 Screw(1) + Spring Washer(2)+ Flat Washer (3), onto metal plate of Legs(B), with Allen Key(4).

Do not over tighten Screws(1) while assembling the Legs(B) in order to adjust the Legs(B) as needed while assembling and make sure you follow the steps fully.

Step 2

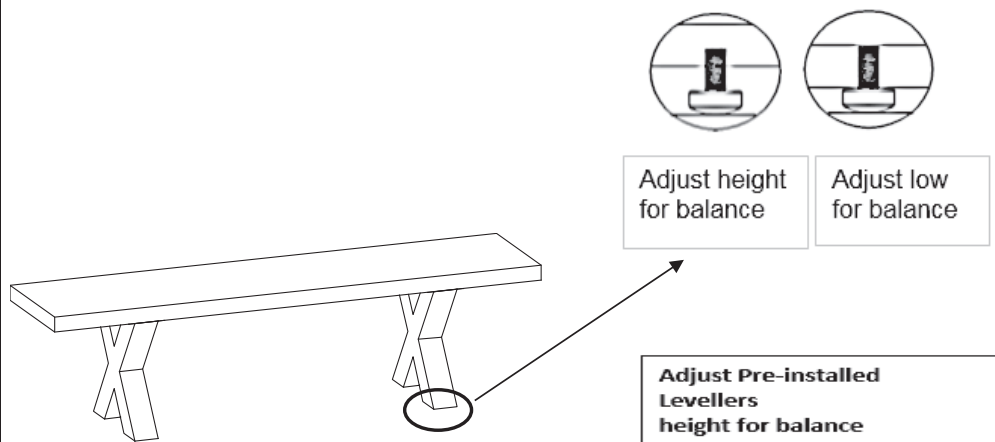


Stand the Bench up.

If the Bench wobbles, adjust the Pre-installed Levellers at the bottom of the Legs until the Bench is level.





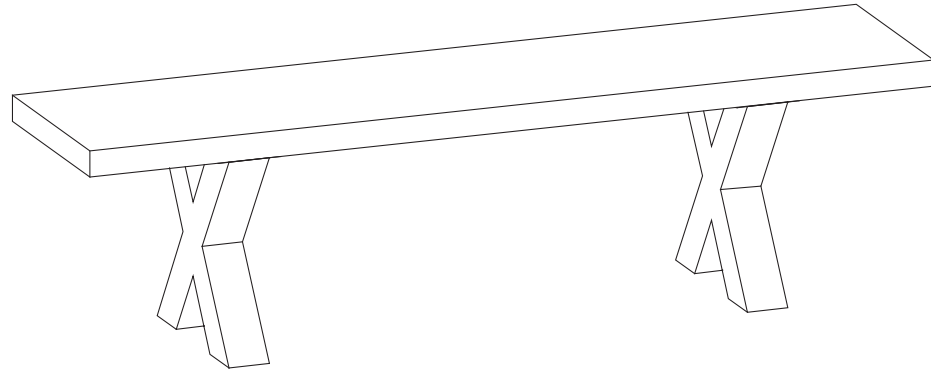













This Bench can only be used on a flat, level surface.

Step 3



Make sure all parts are connected and securely locked into position.
Your Bench is ready for use.

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   ● Children should not climb or jump on the furniture.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .