




Parts List				
Label	Picture	Description	Qty	
A		Table Top	1	
В		Leg	4	
Hardware				
Label	Picture	Description	Qty	
1		Allen Wrench	2	
2		Bolt (M8*55mm)	9	
3	\bigcirc	Washer (M8.5*2mm)	9	
4		Spring Washer (M8.5*2mm)	9	

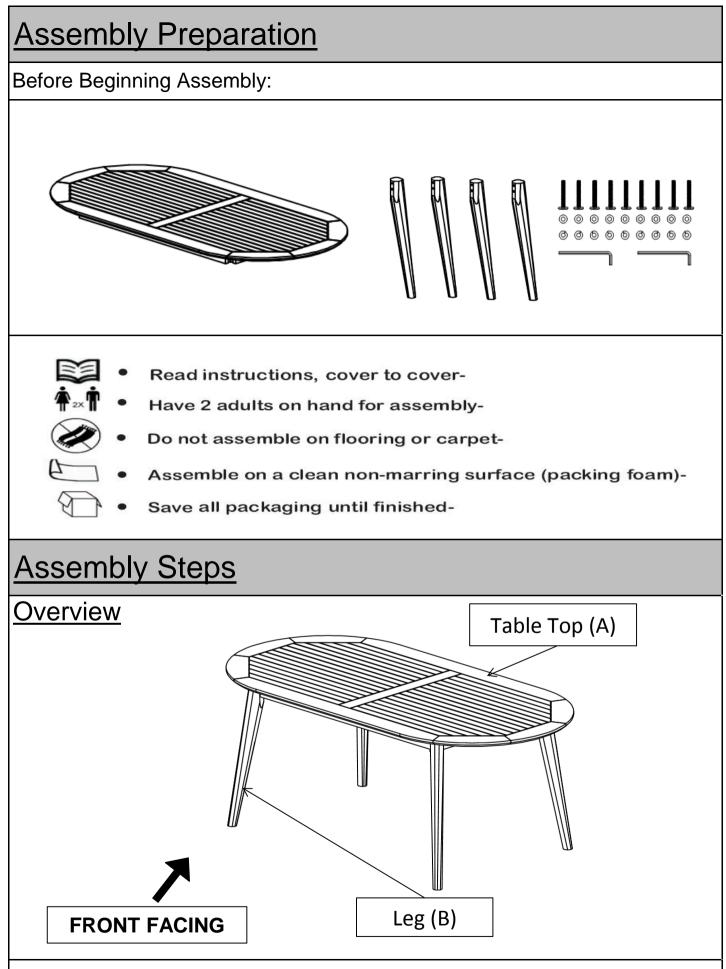

This Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise youself with the parts and steps before assembly.

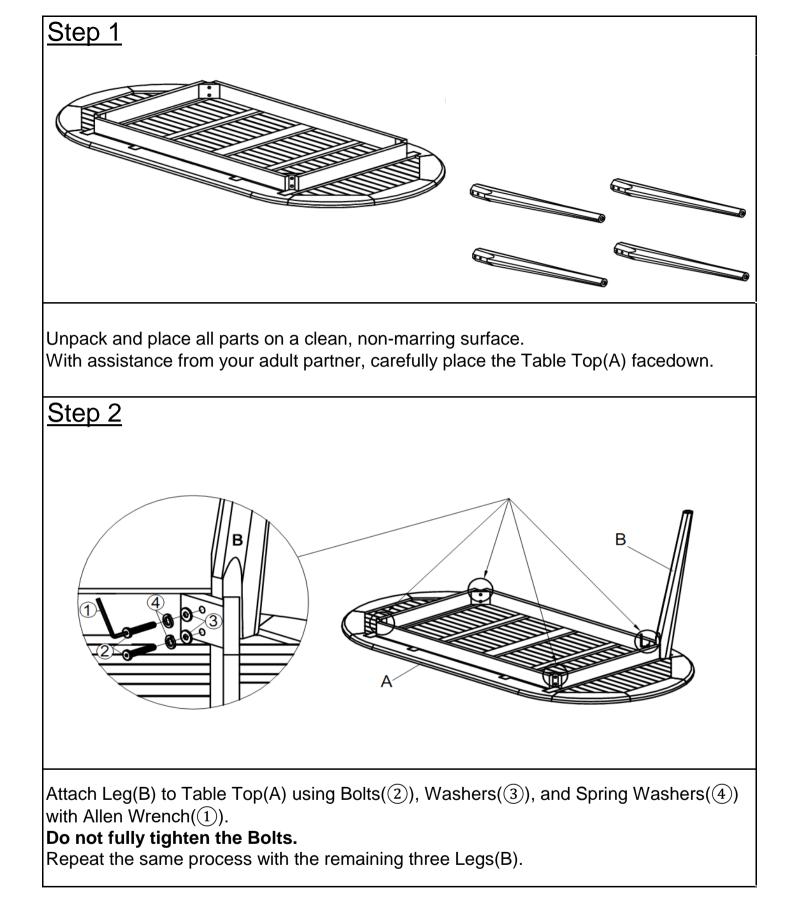

Step 3

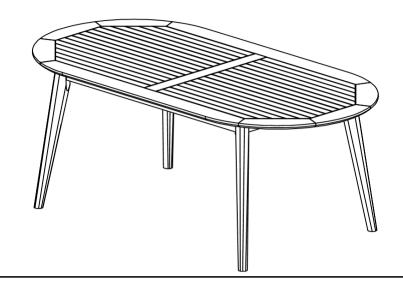

Stand the Table up, with assistance from your adult partner.

Exert pressure floorwards, onto the Table with both your hands.

This pressure will help the Legs and Table Top reach full alignment status.

Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts in a sequential manner, until evenly secured.

When tightening the Bolts tighten sequentially.

Do not tighten any Bolt fully and then move on towards the next one.

If there are still wobbles, loosen the Bolts and excute the same above process. Your Table is ready for use.

This Table can only be used on the flat, level surface.

Care	&	Maintenance
0 0	•	Do not put hot items directly on furniture surface.
⊘ ≜	•	Do not clean furniture with harsh cleansers or polish.
~ O	•	To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.
⊘ ¥	•	Children should not climb or jump on the furniture.
0 L	•	Do not write on furniture without a padded barrier to protect the surface.
√ ⊘	•	To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
⊘ मि	•	Not for commercial use. For residential use only.
0	٠	Stains may be removed with mild soap solution and damp cloth.
10	•	Dust and pick-up spills using a clean, non-colored, lint-free cloth .