





Assembly Instructions

Caution : You must read this before you proceed



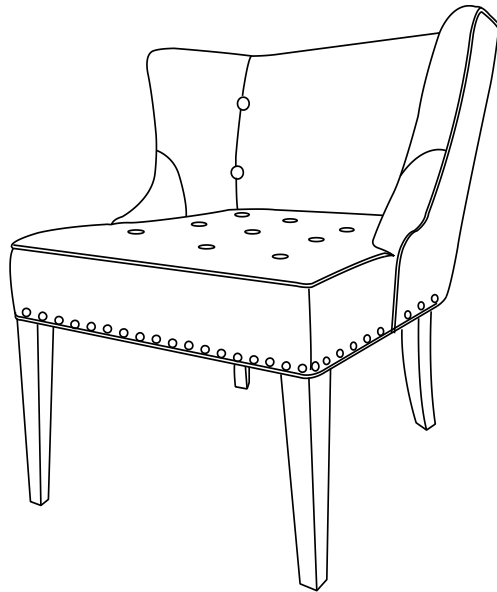

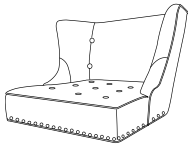Club Chair



Parts List


Label	Picture	Description	QTY
A		Chair Base	1
B		Front Leg (Labelled 'B')	2
C		Back Leg (Labelled 'C')	2

Hardware

Label	Picture	Description	QTY
①		Bolt (8*55mm)	9
②		Spring Washer	9
③		Washer	9
④		Allen Wrench	1

Assembly Preparation

Before Beginning Assembly:

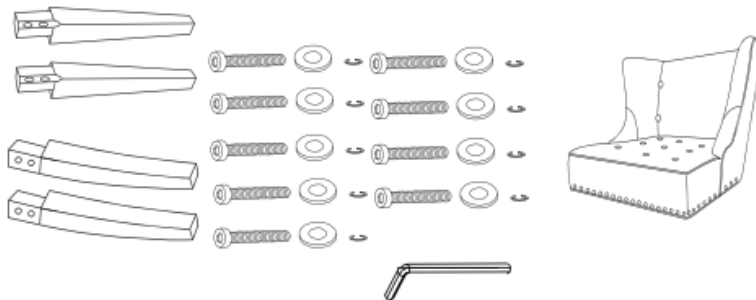

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

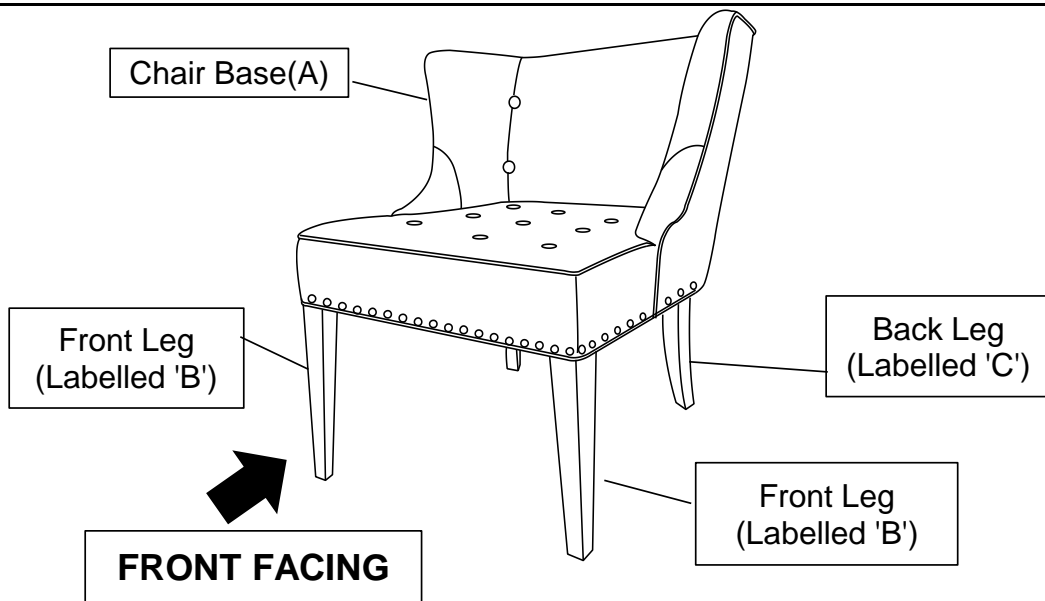

This Club Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

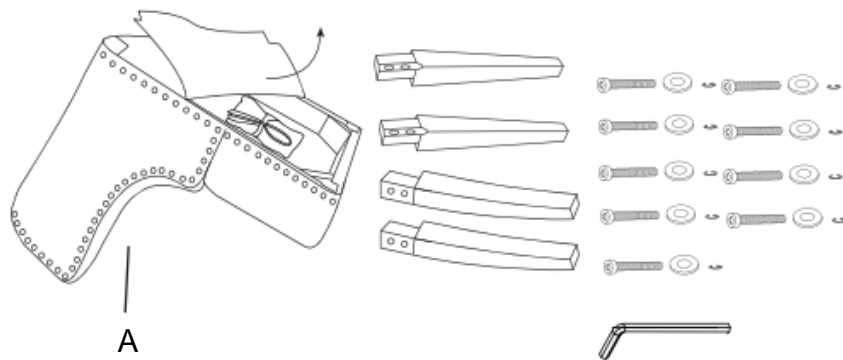


Position Chair Base(A) on its back as shown.

(DO NOT place on surface that can scratch or damage the upholstery.)

Carefully peel away the non-woven fabric from the bottom of the edge, remove 4 Legs and Hardware bag out of the Chair bottom.

Step 2

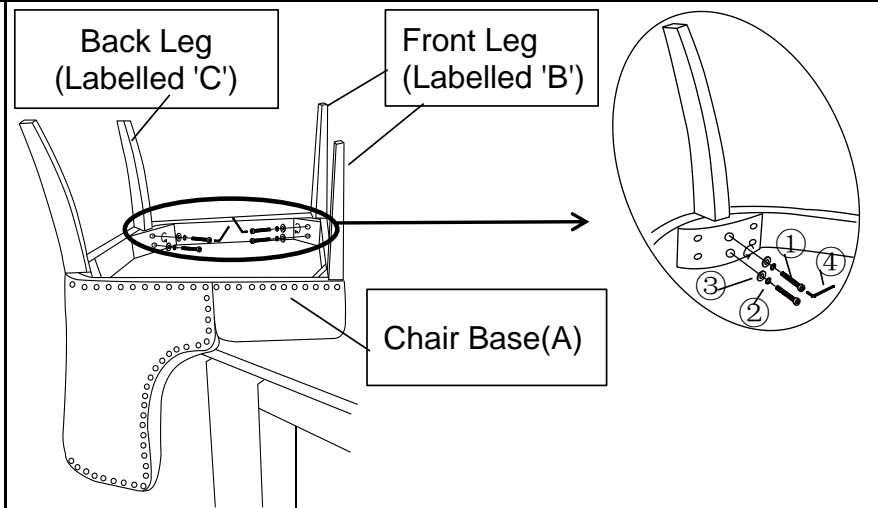


Insert the Front Leg(B) and Back Leg(C) into the mounting position of Chair base(A).

Attach the Front Leg(B) and Back Leg(C) using Bolts(①), Spring Washers(②) and Washers(③) with Allen Wrench(④).

At this stage, only loosely tighten the Bolts.

Step 3

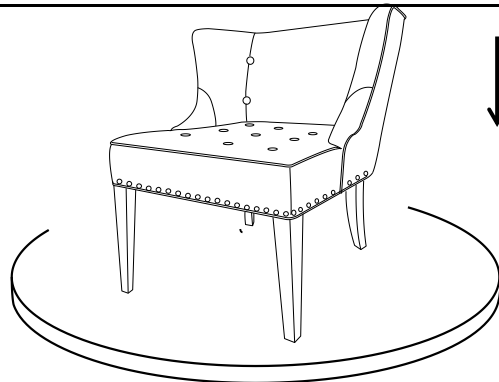

Place the chair on a **LEVEL SURFACE** to see if it wobbles.


If it wobbles, press firmly down on both armrests at the same time.

This will help to ensure all Bolts and gaps reach full alignment status.

If no wobbles found, proceed to tighten all the Bolts. **DO NOT** fully tighten a BOLT in one go and then move on to the next. Rather, in a sequential manner, gradually tighten each Bolt until all Bolts are evenly secured.


This methodology will ensure maximum evenness once all Bolts are fully tightened.

Step 4

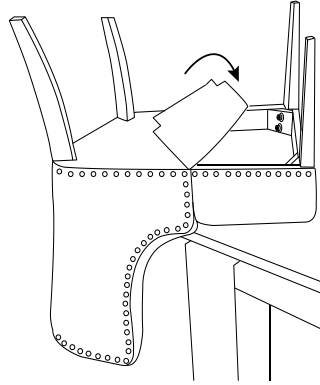





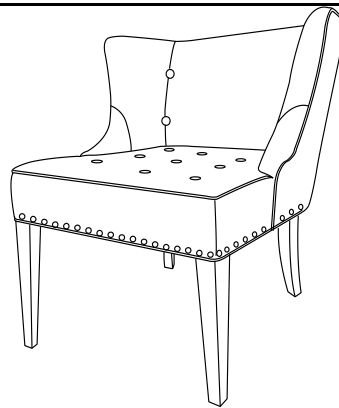






Smooth down the magic tape with your hand on all four sides at the edge of the seat box.

Step 5



Stand the Club Chair right side up.
Make sure all parts are connected and securely locked into position.
Your Club Chair is ready for use.
This Club Chair can only be used on a flat, level surface.

Care & Maintenance

- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Not for commercial use. For residential use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.