ASSEMBLY INSTRUCTIONS

ITEM #: WF303667AAK


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below


ASSEMBLY INSTRUCTION:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.

! WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.
- 3. Two persons are required for assembly.
- 4. Approximate assembly time: 1/2 hours
- 5. Component parts and fittings contained in the box.
 - Please sort out all parts before you begin to assemble the item.
 - This is to make sure you always use the correct part
- 6. It is STRONGLY RECOMMENDED that you ANCHOR this product.
 - Toppling furniture can cause serious injuries and death.
 - This product has not been fitted with an anchor strap.
 - To prevent your furniture from tipping forward it is strongly recommended
 - that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

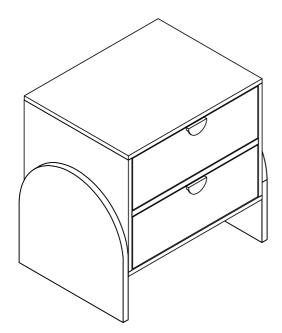

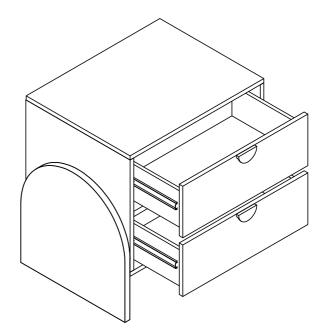


TOOLS NEEDED: Phillips Screwdriver

Wall Drill

Hammer



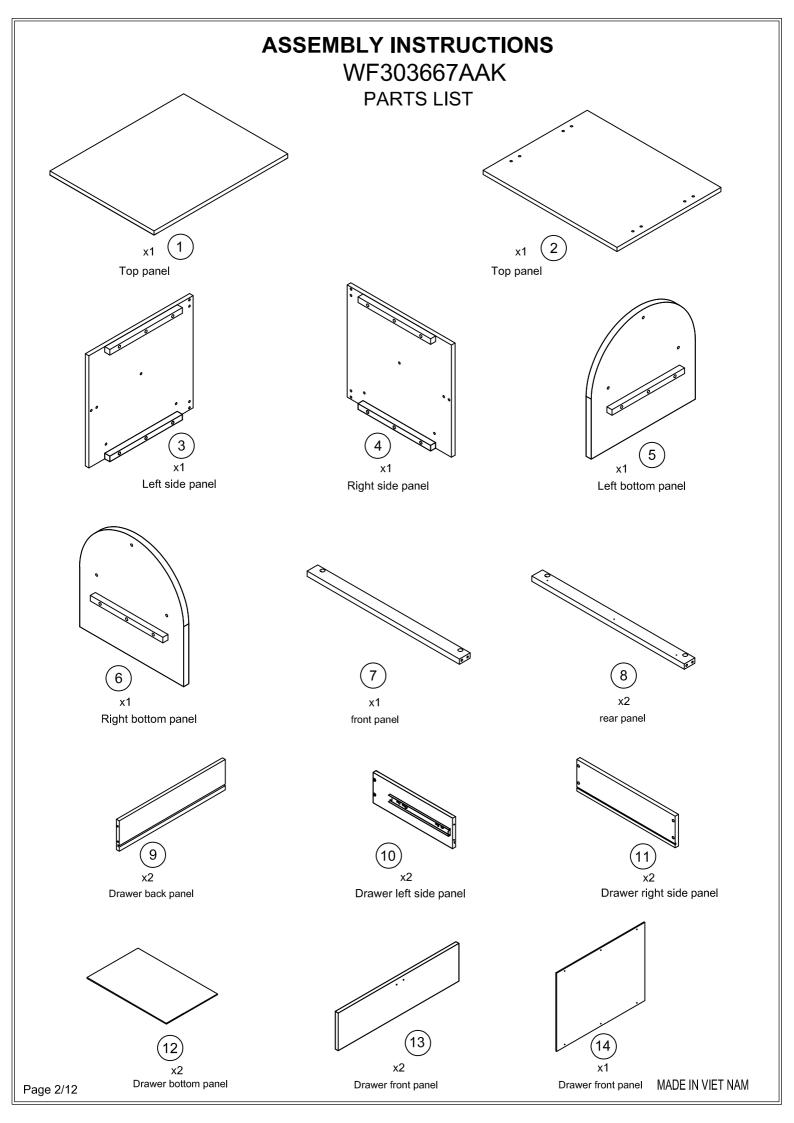

ASSEMBLY INSTRUCTIONS

WF303667AAK HARDWARE LIST





x14 Cam-bolts



Cam-locks

Ф8*3/4"



х8 Dowels

Ф8* 1-1/8"



Dowels

5/32"*7/8"





handle bolts



Handles

1/4" Ф8* 3/4"





x14 **Bolts**

Φ13* 1mm





x14 Flat Washer

Ф10* 1mm





Spring Washer

4mm



x1 Allen Key



Screws

Ф8*3/4"





х6 Screws





Hook

 


 



х4 Anchor





Plastic tie





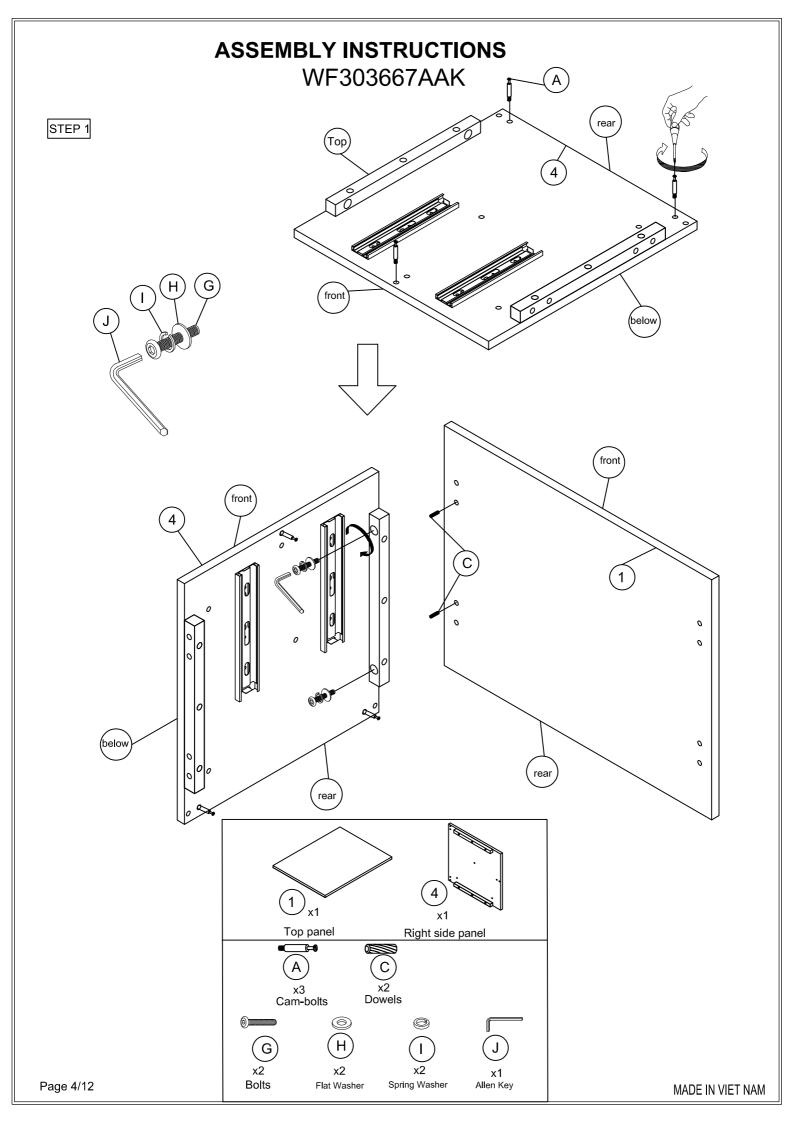


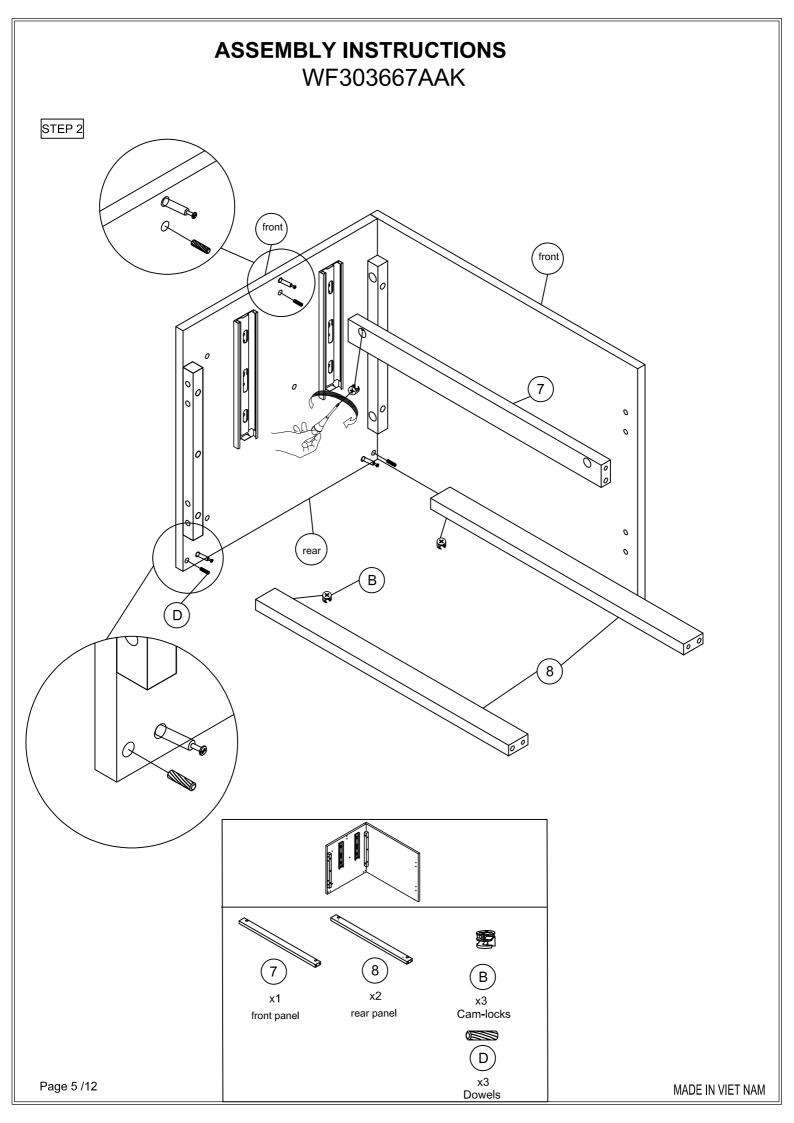


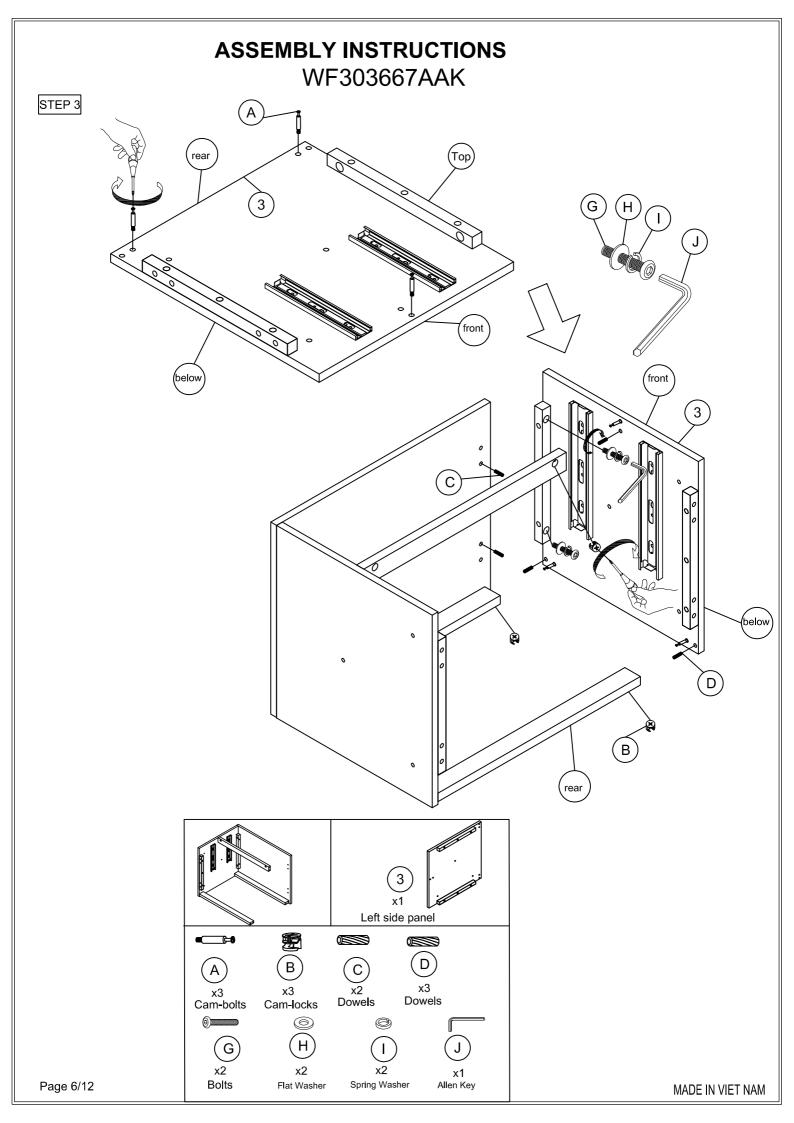

ASSEMBLY INSTRUCTIONS WF303667AAK




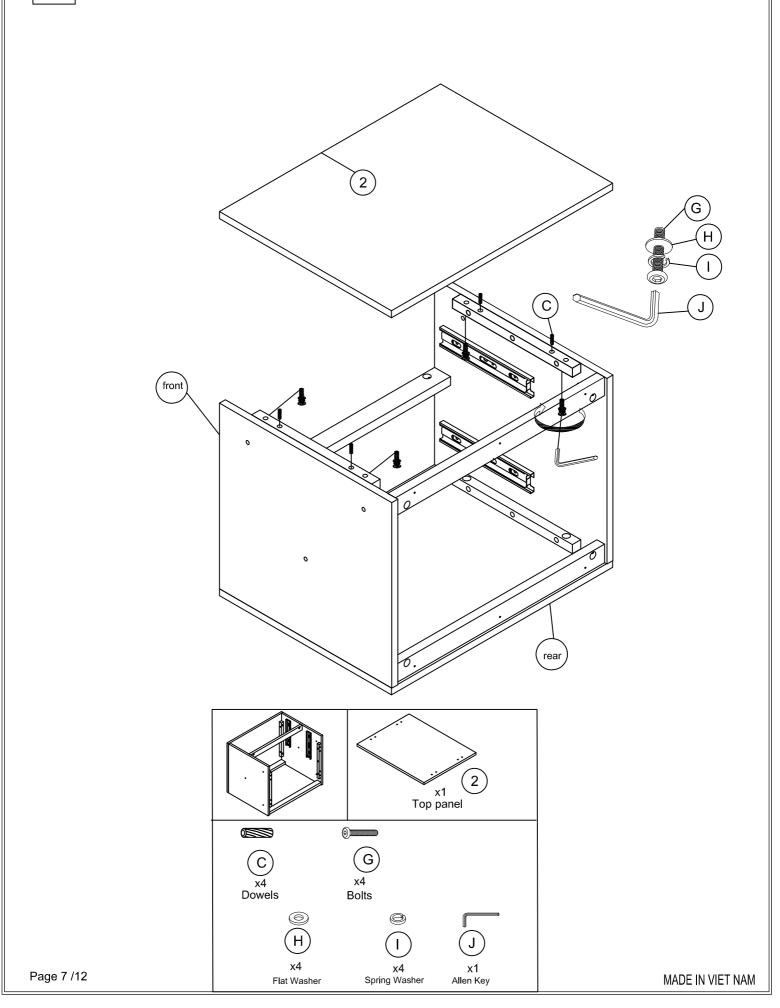


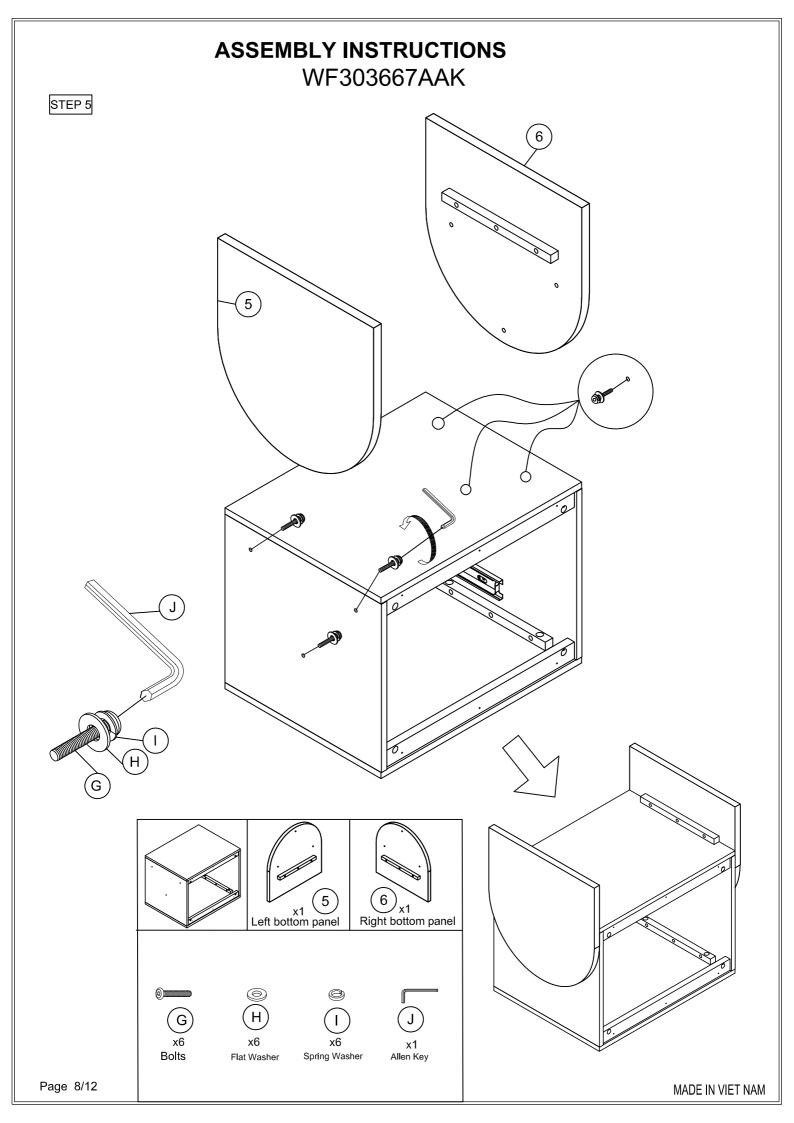

ASSEMBLY INSTRUCTIONS WF303667AAK




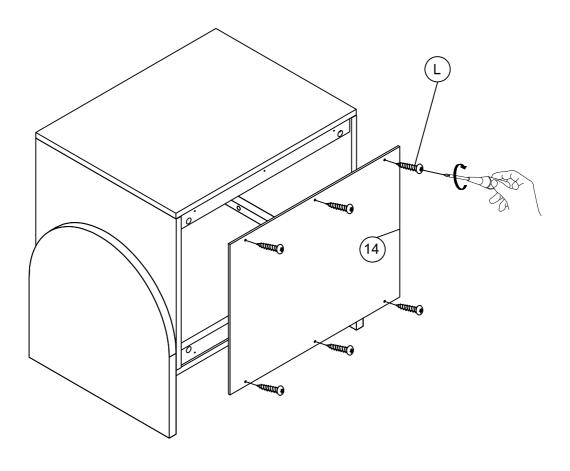


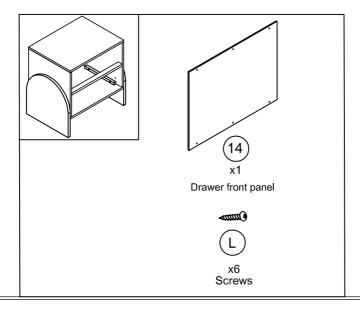

ASSEMBLY INSTRUCTIONS WF303667AAK

STEP 7

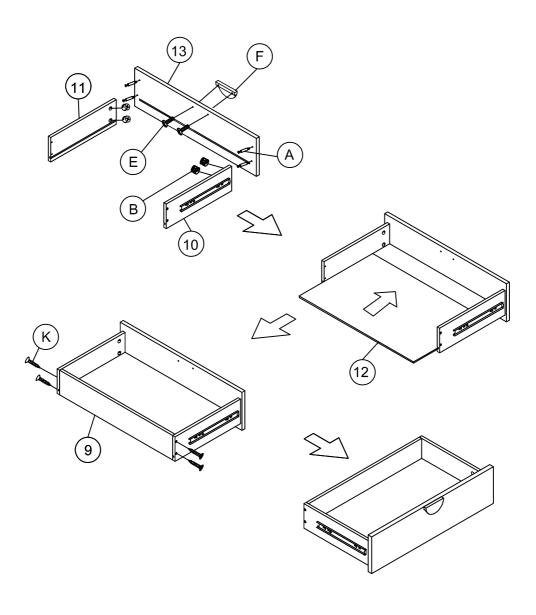

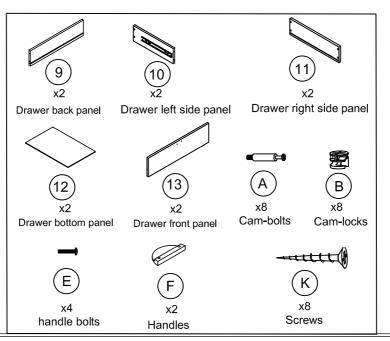

ASSEMBLY INSTRUCTIONS

STEP 8

Page 11/12

Plastic tie

WF303667AAK Place the Cabinet in the desired location against the wall. Mark the position of the attached Hooks on the wall and remove the Cabinet. Using one of the remaining Hooks (M) as a template, Place the Hook (M) under the marks on the wall and mark the two hole positions. Drill the holes for the Wall Drill Anchors (N) and insert the Anchors (N) into the wall. Attach the remaining Hooks (M) to the Anchors (M) with Screw (P). Fully tighten the screws. Return the Cabinet to the selected WALL position and connect the Hooks (M) together with Plastic Tie (O). Assembly is now complete. NOT INCLUDED NOT INCLUDED Hook Anchor

Screws

Screws

MADE IN VIET NAM

ASSEMBLY INSTRUCTIONS WF303667AAK STEP 9 =2pcsPage 12/12 MADE IN VIET NAM