


ASSEMBLY INSTRUCTION

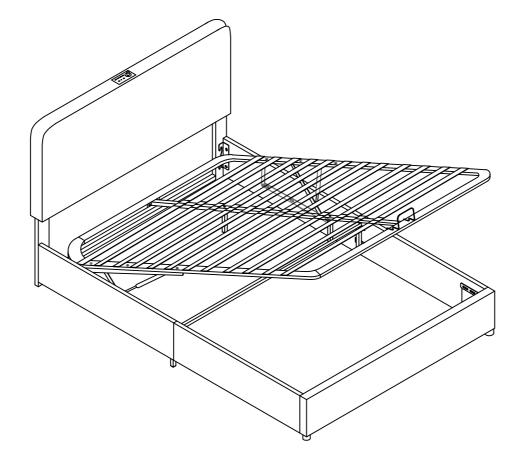

N701P170777

Detail View

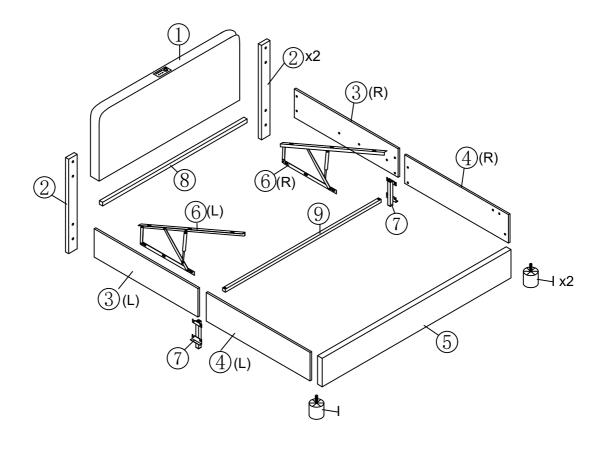


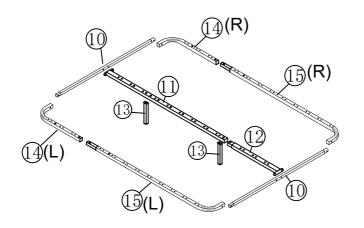




Part List + Hardware List

N701P170777

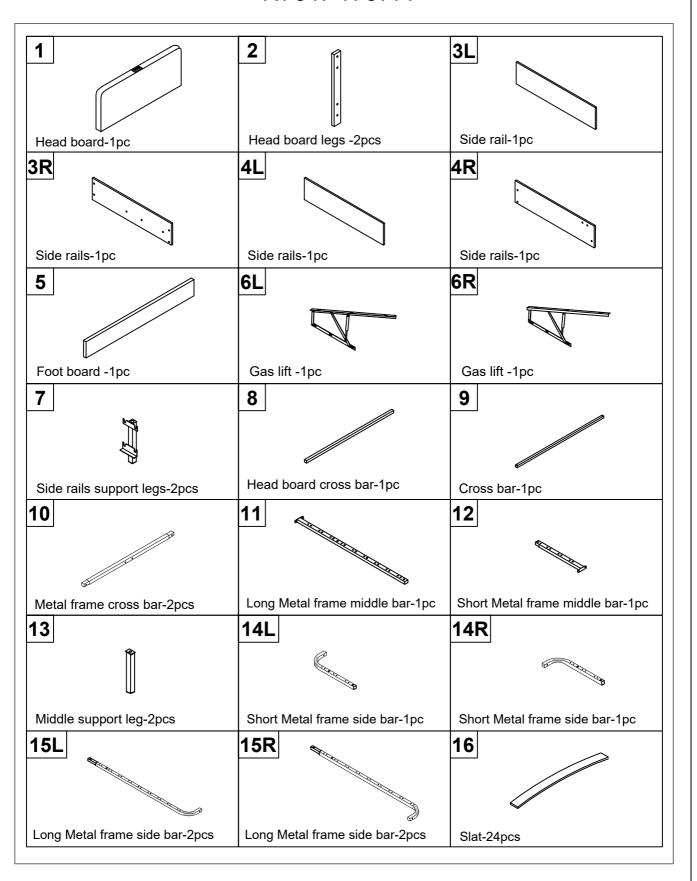



Hardware List


N701P170777

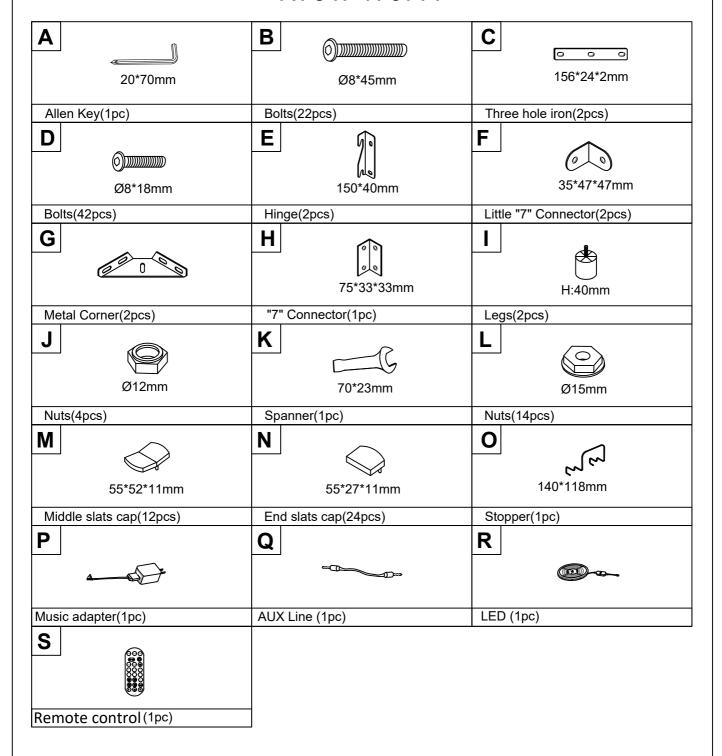



Remark: We recommend you assemble your bed in the flat ground.

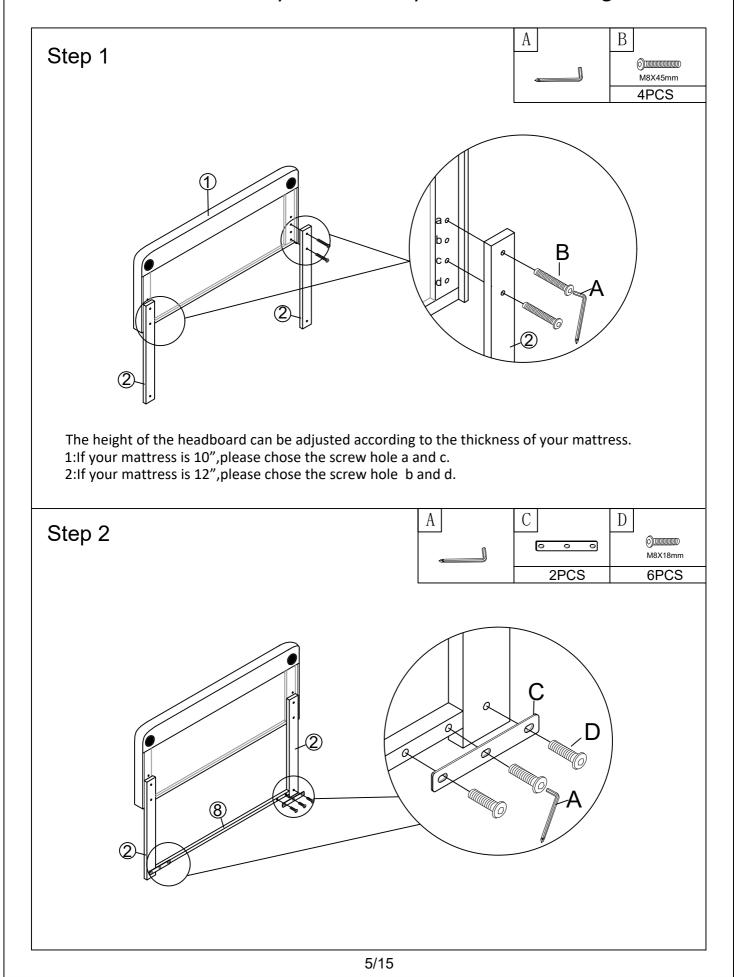


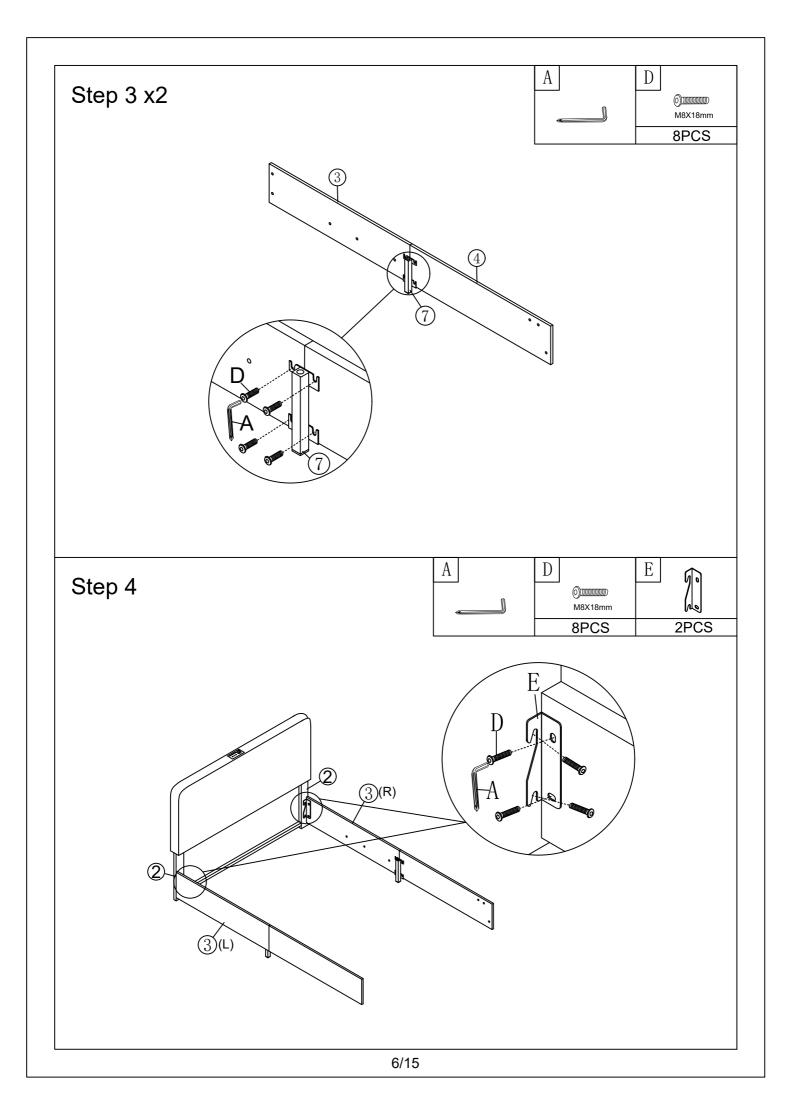


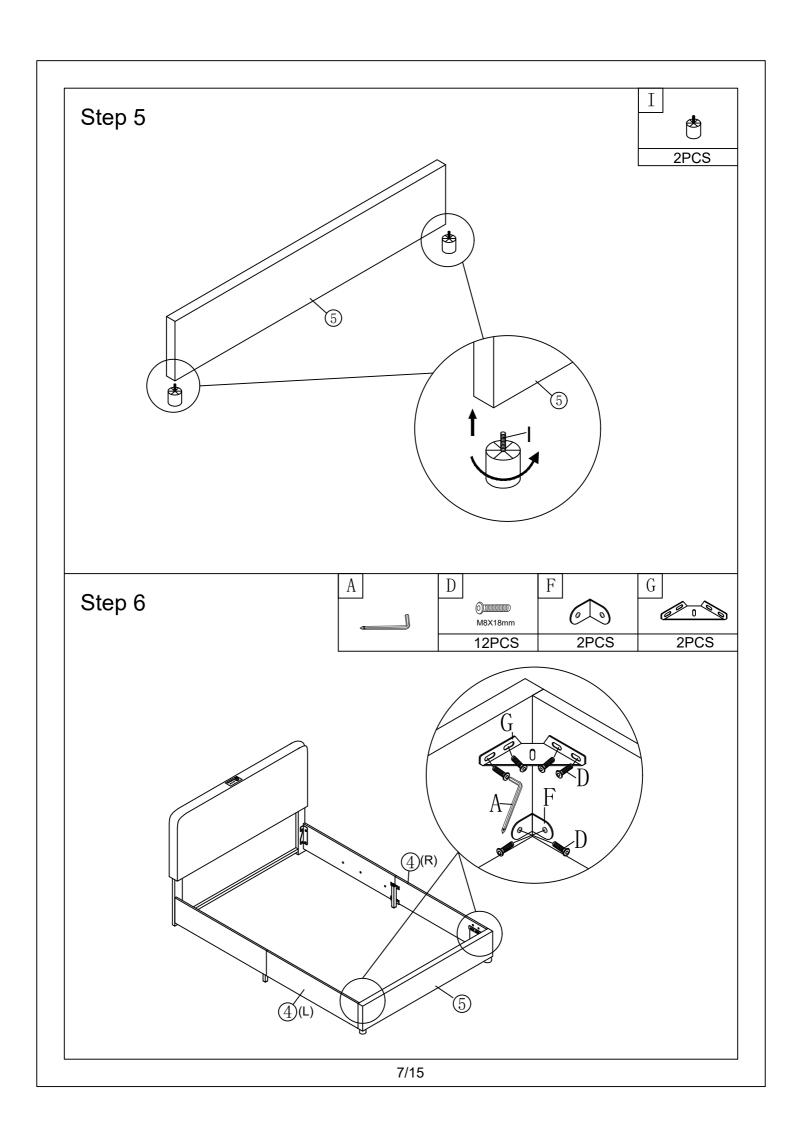


 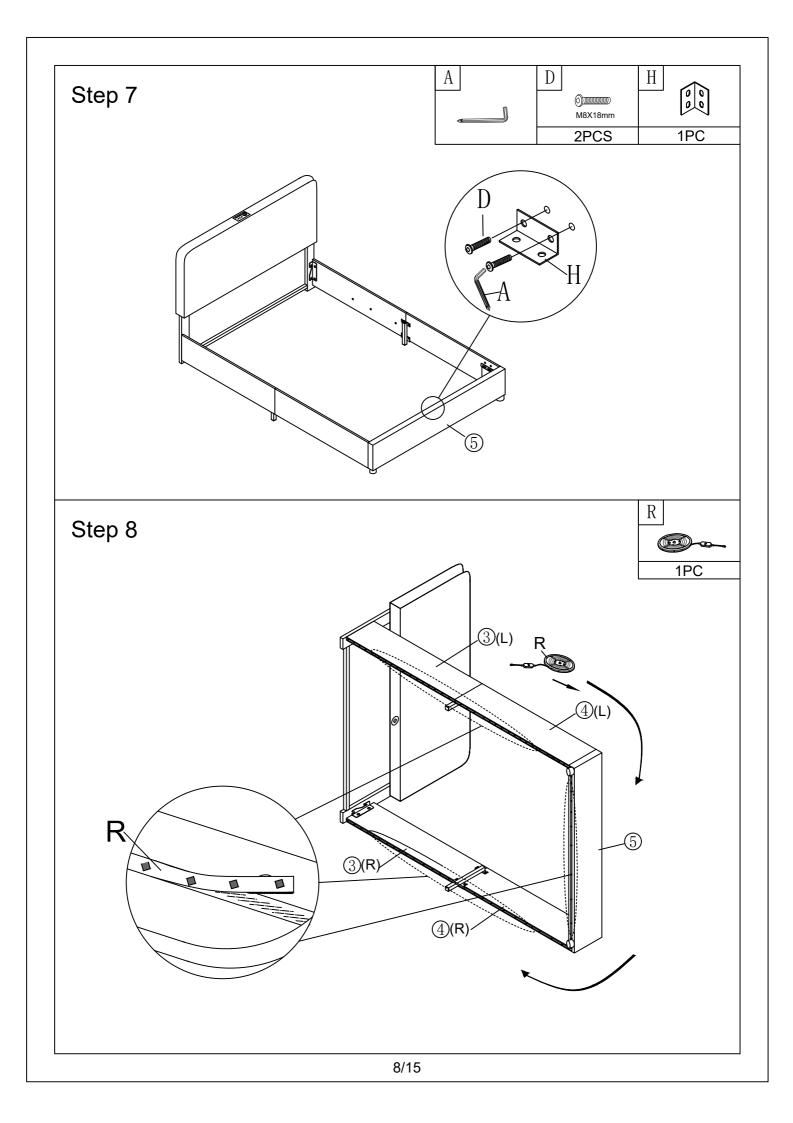


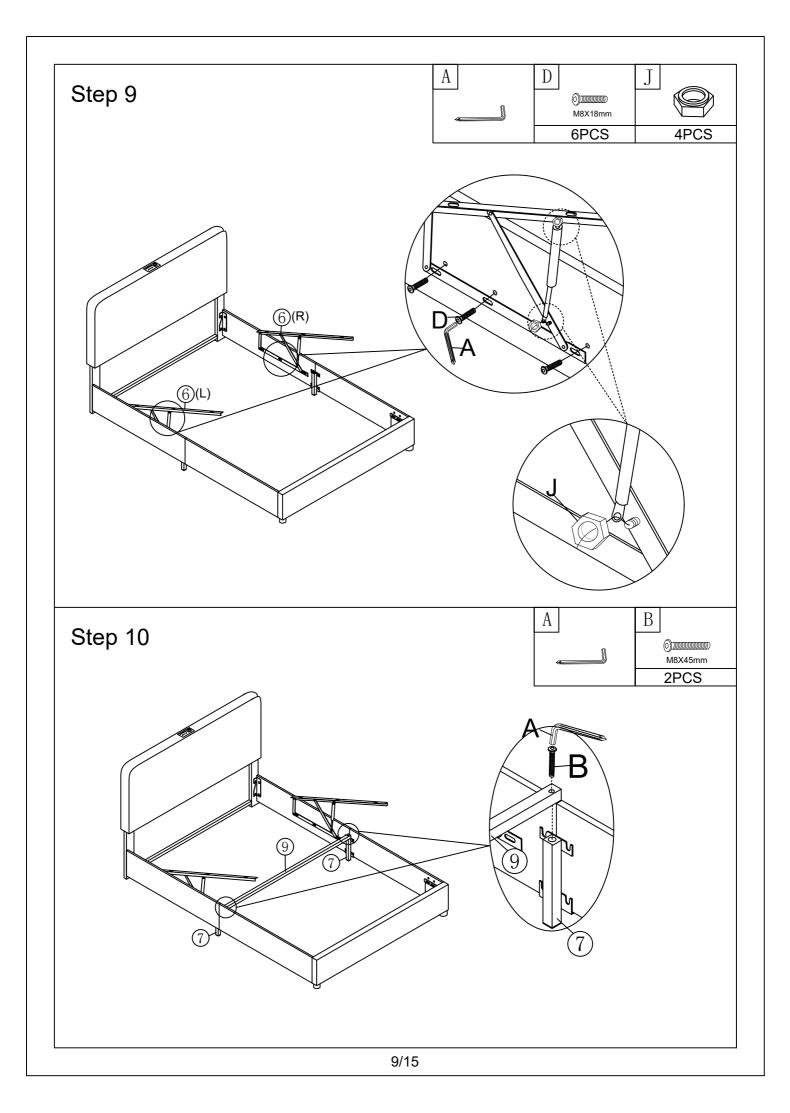


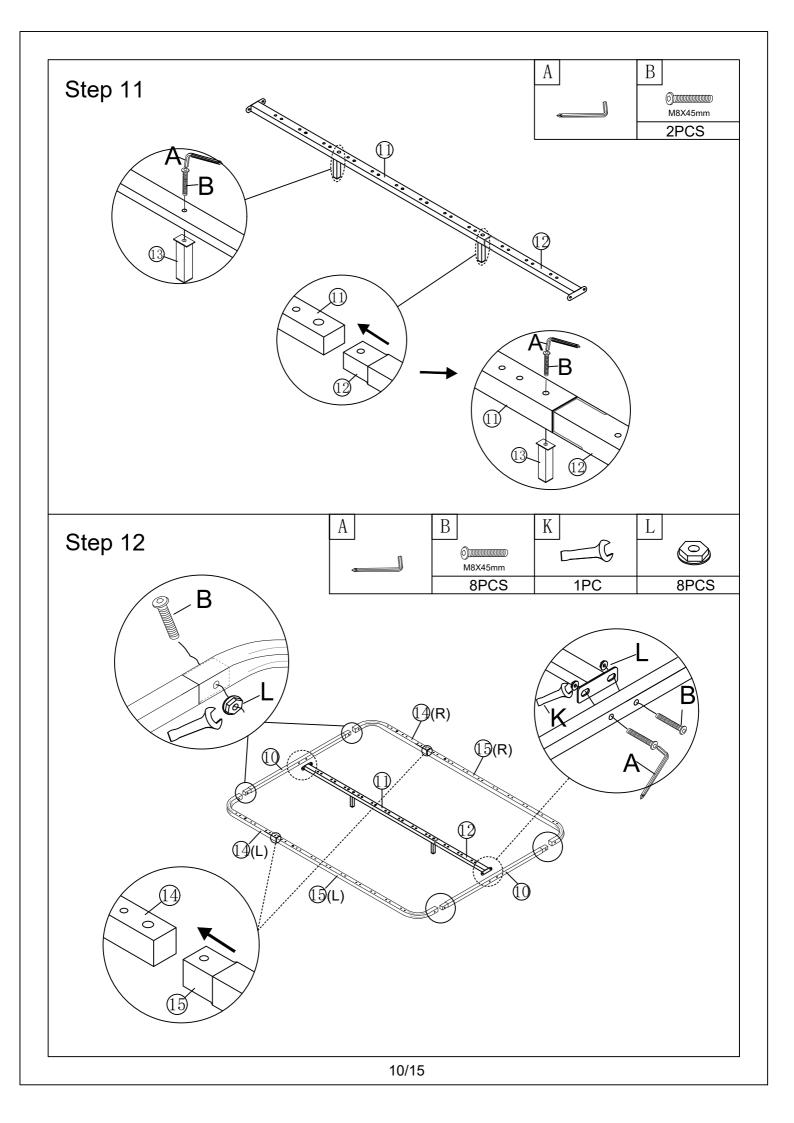

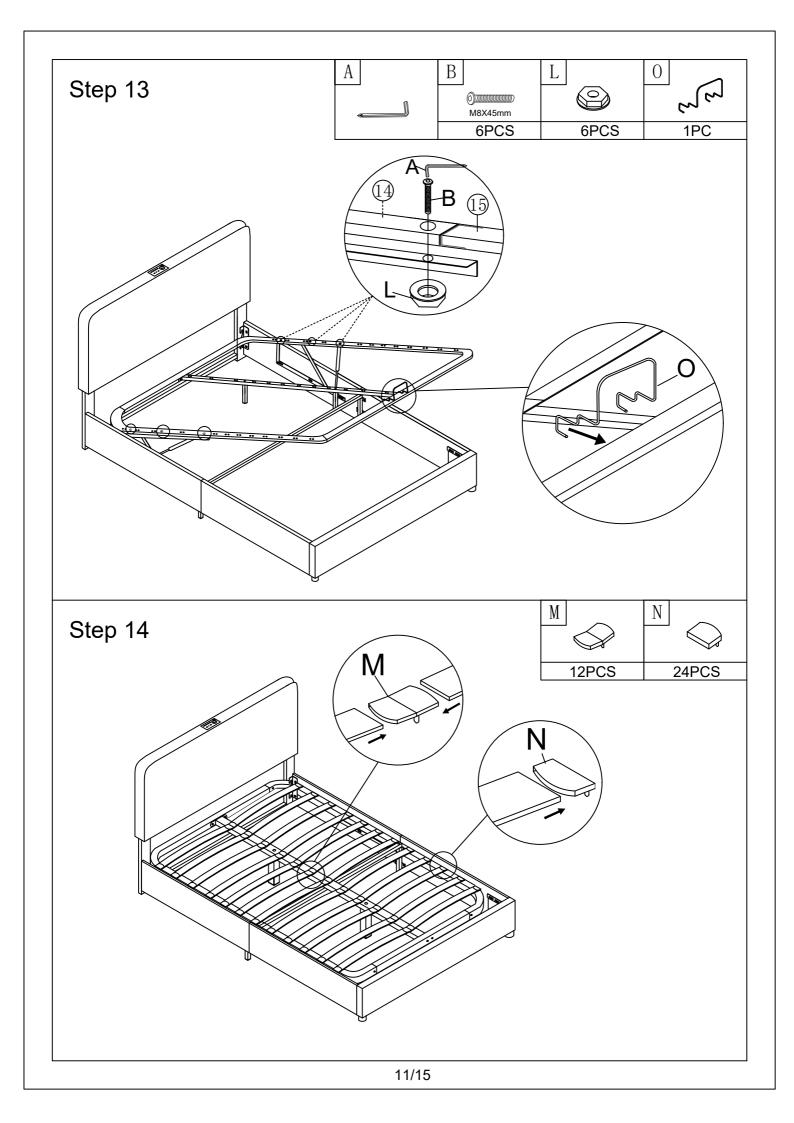

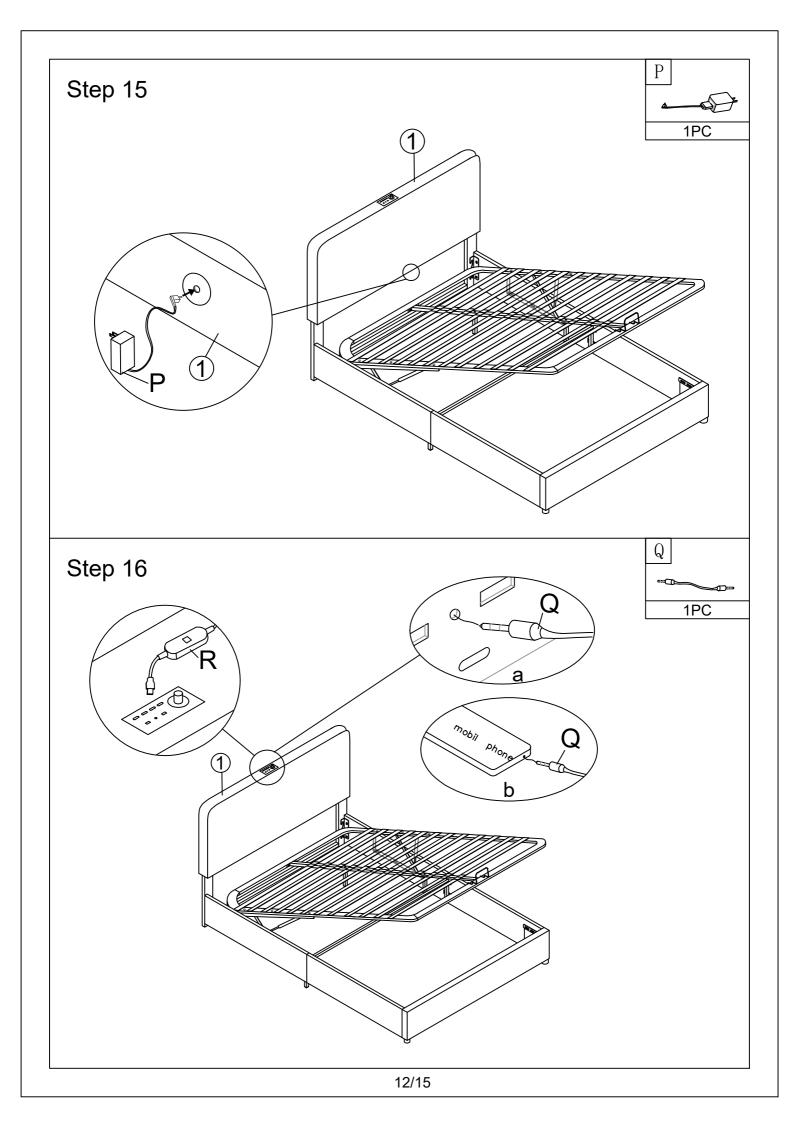




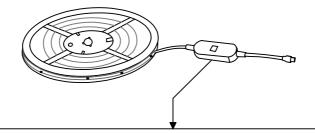

NOTICE:

You can scan the QR code here and download an app that can control the color of the light strip like a remote control. When your phone plays music through the app, the color of the light strip will also change according to the strength of the music.

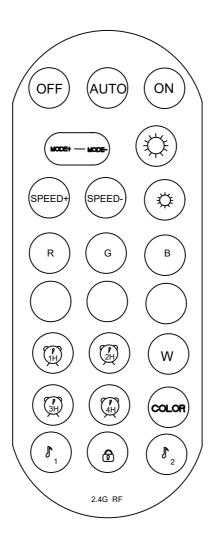

Bluetooth speaker Startup instructions

Find the audio power interface and plug in the power supply (5V2A). After connecting the power supply, turn on the main controller-4 .turn on the power by Turning the volume knob to the right to hear a "click" . turn off the power by Turning the volume knob to the left to hear a "click" .when The indicator light is on, the default is Bluetooth mode (note the use of power supply: the audio power supply can only use the audio dedicated power supply 5V2A) * Bluetooth mode instructions

- 1.The Bluetooth mode is set by default. After startup, The voice prompt: "Bluetooth mode, waiting for connection", Turn on the phone settings to find Bluetooth. Open the search and pairing (device name:Linon poweLL) connection. After The voice prompt "Bluetooth connected", you can play music. please pull out the audio cable / USB flash disk when using Bluetooth mode.
- 2. The indicator light is always on, if the device is turned off or not in the connecting range, the connection fails, you need to search again. The voice will prompt "Bluetooth disconnected"
- 3.when playing in Bluetooth mode, you can control the playing by pressing the "Previous track" / "next track" / "play" /" pause" on-screen buttons on your mobile phone.
- * USB mode instructions
- 1. Please unplug the audio cable first and then plugged in the USB device. The file will be loaded (file loading completed) and the playback indicator will flash automatically for 1 second, and the voice prompts "USB play mode"
- 2. In the "USB" playing state, short press the "play / pause" button to enter the pause state, the system will automatically mute. The indicator light is always on.
- 3. Short press the "Previous track" and "Next track" buttons on the panel to select the previous or the next song.

* AUX mode instructions

- 1. Please pull out the USB device precede Inserting the 3.5 audio cable to switch to the "AUX" state, the blue indicator flashes for 3 seconds, and the voice prompts "external audio mode".
- 2. In the "AUX" playing state, press "Any key" the system will be silent, you need to pull out the 3.5 audio cable before the next operation.
- 3. In AUX mode, playing can only be controlled by the volume of the source device.

Problem: :	Solution
No sound	The volume setting is too low or the speakers are not well connected. Please
	check the volume of the phone / sound knob and the power supply wire
Cannot turn on	The power supply is not well plugged in. If it is confirmed that there is a
	problem with the power supply, replace the power supply. If there is no
	problem with the power supply, the control box may be faulty. Replace the
	control box
The device	Please turn the power off and restart it, check whether the audio power is
does not	connected, whether the Bluetooth model is connected to 916, and the USB
respond	device / AUX should be connected separately
The buttons	please try again after power off, do not press hard, check if there is any
does not work	foreign matter or water, please restart the machine and try again.
music	Make sure the buttons are clean. Do not press the buttons hard
stuttering	
Bluetooth	Please turn off all other paired Bluetooth devices, restart and search. Check
cannot be	if the Bluetooth search device menu is full, delete useless Bluetooth and
paired	connect again. Search and connect Bluetooth model "Linon — poweLL"
	Please make sure that the volume of the source device TV or mobile phone
No sound in	is turned on and available to play music, check whether the audio cable is
AUX mode	plugged in steady. Please pull out the USB device when connecting to
	AUX
Remarks	Any other abnormalities, please contact the manufacturer for help