





Assembly Instructions

Warning : You must read this before you proceed


Club Chair

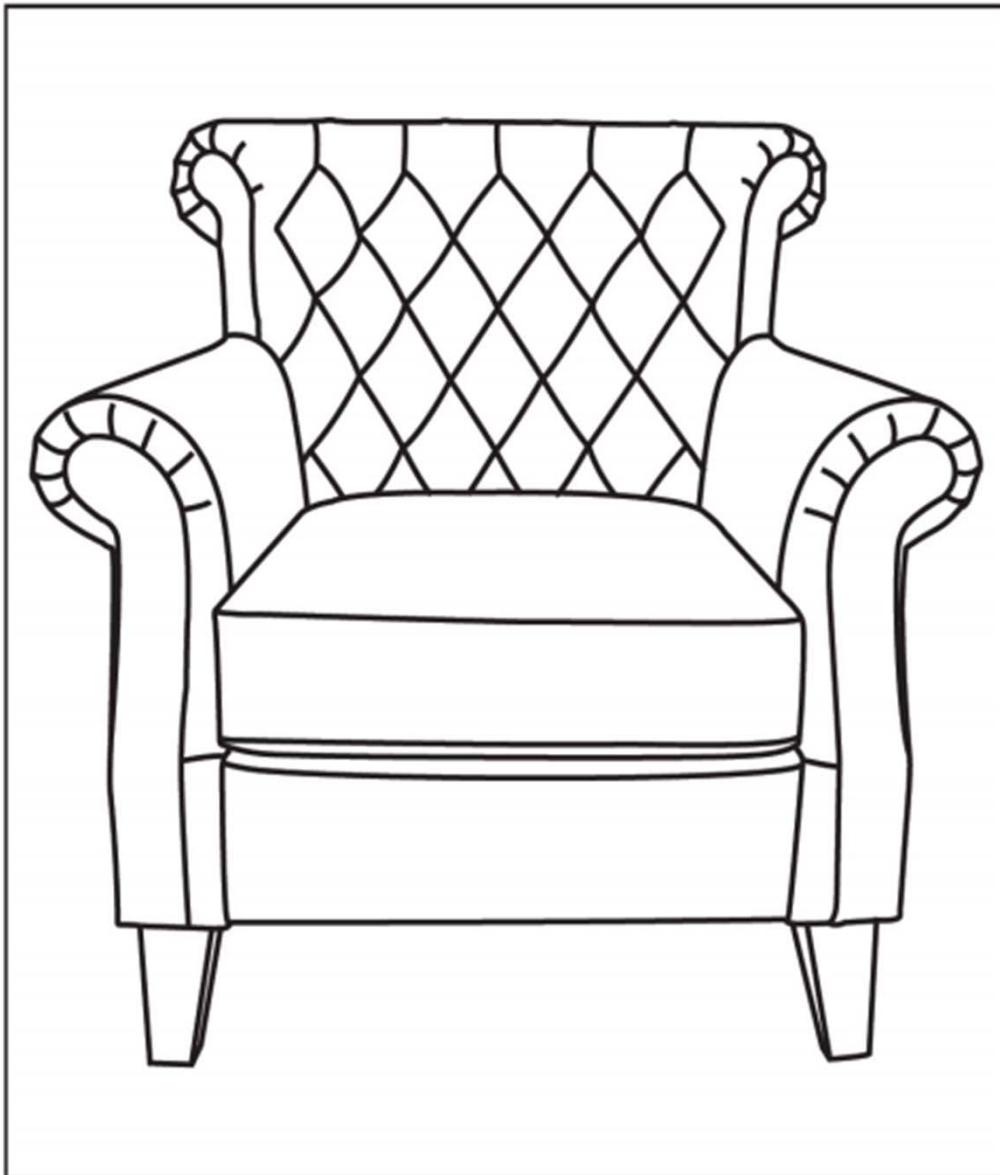

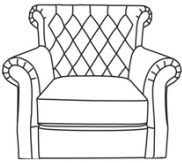Parts List



Label	Picture	Description	QTY
A		CHAIR	1
B		WOODEN LEG (FRONT)	2
C		WOODEN LEG (BACK)	2

Hardware

Label	Picture	Description	QTY
1		WASHER RING	7

Assembly Preparation

Before Beginning Assembly:

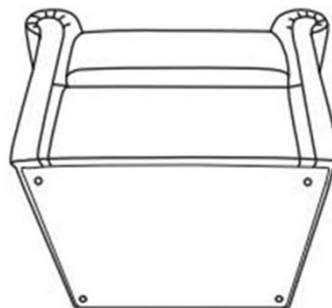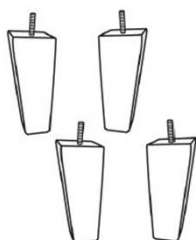

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Step 1

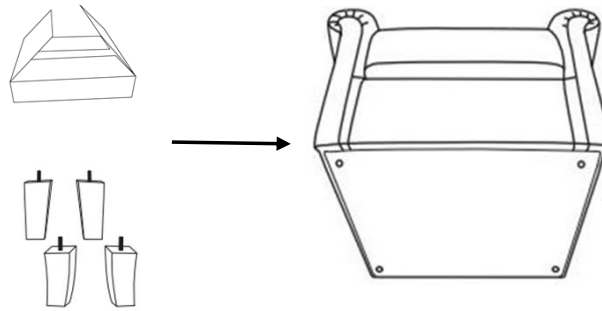

Position the Chair on its back, as shown on a surface that won't scratch the upholstery. Open the inner box and take out the 4 Wooden Legs provided

Assembly Steps

Step 2

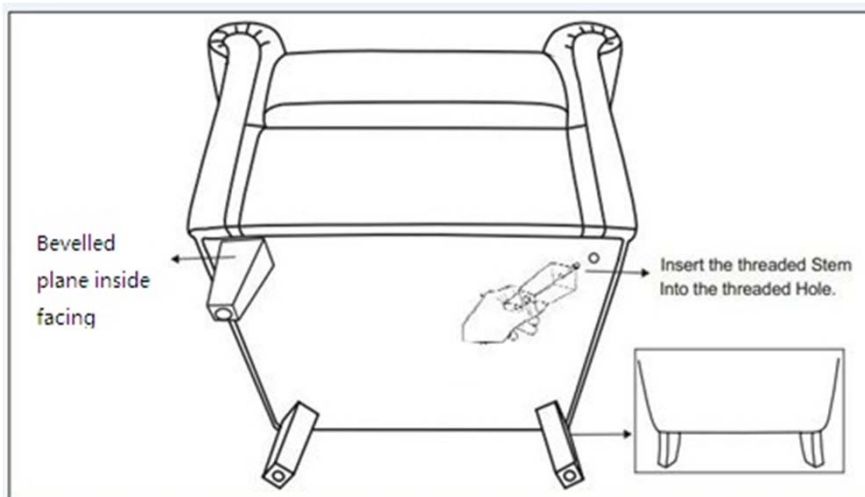

Install the first leg into the bottom of the chair by placing 1 plastic washer ring (improves tightness and security of leg) onto the threaded stem.

(The use of washer rings are OPTIONAL and is especially useful to help alleviate slight wobbleness).

Insert the leg into the bolt point at the base of the chair.

Tighten by turning the leg clockwise.

Repeat the same steps to install the three remaining legs.

Step 3



Make sure all parts are connected and securely locked into position.
Your chair is ready for use.

Care & Maintenance



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside. For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.