

# WARNING !!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at [tip\\_restraint\\_help@Noblehousefurniture.com](mailto:tip_restraint_help@Noblehousefurniture.com)

**NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.**

In addition to installing the restrains, to help prevent tip-over

1. For use with televisions weighing X lbs or fewer. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. NEVER use with CRT televisions .
2. Do not stand on the product.

 
<b>⚠ WARNING</b>	
	<p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"><li>• ALWAYS install tipover restraint provided.</li><li>• For use with televisions weighing X lbs or fewer. Use with heavier televisions may result in instability causing tipover resulting in death or serious injury. NEVER use with CRT TVs.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heaviest items in the lowest drawers.</li><li>• Do not defeat or remove the drawer interlock system.</li></ul> <p><i>This is a permanent label. Do not remove!</i></p>

# Assembly Instruction

**Caution: You must read this before you proceed**

 


 

 
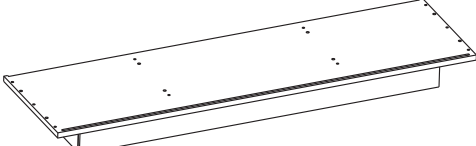 
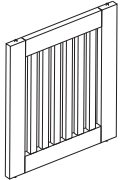 
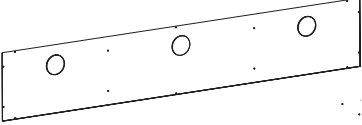 
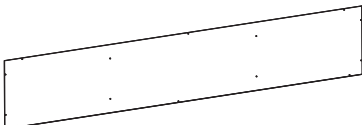 

**Please look insert carton box for hardware pack**
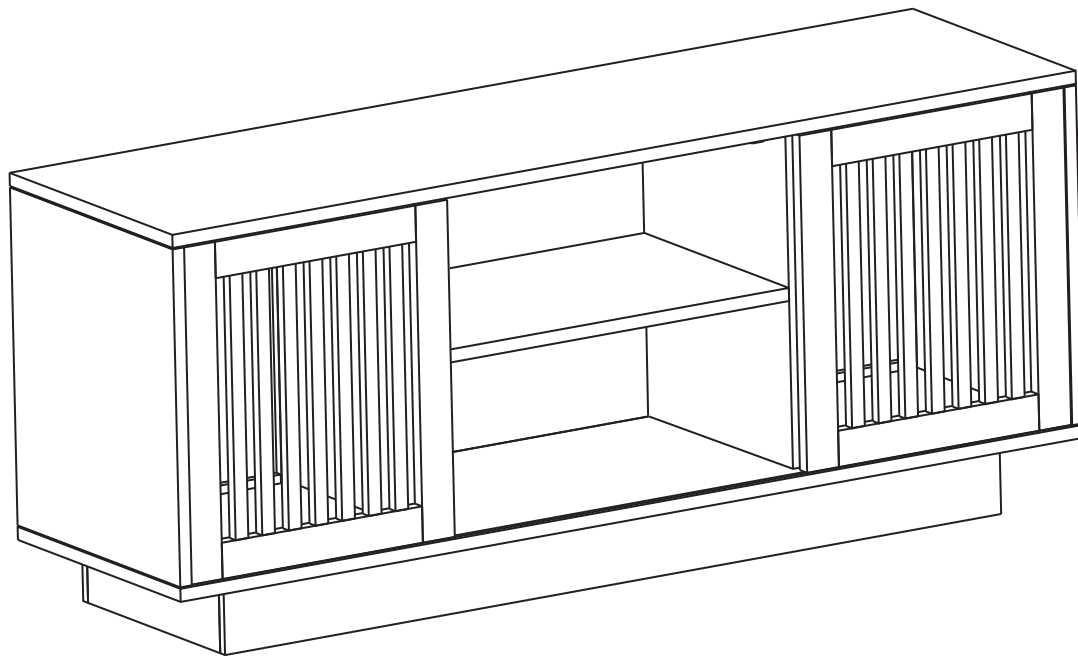
## **TV STAND**





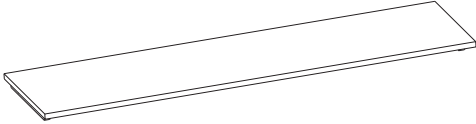




 



**Caution:** This TV Stand is NOT a TOY.  
Keep your child/children at bay during the assembly process.  
The TV Stand and its parts are heavy, whenever lifting or moving them, two adults are needed to execute these actions.

# Parts List

 
Label	Picture	Description	QTY
A		Top Panel	1
B		Left Panel	1
C		Left Floor Panel	1
D		Right Floor Panel	1
E		Right Panel	1
F		Floor Panel	1
G		Bottom Panel	1
H		Door	2
I		Upper Back Panel	1
J		Lower Back Panel	1
K		Back Bar	2




 







# Hardware

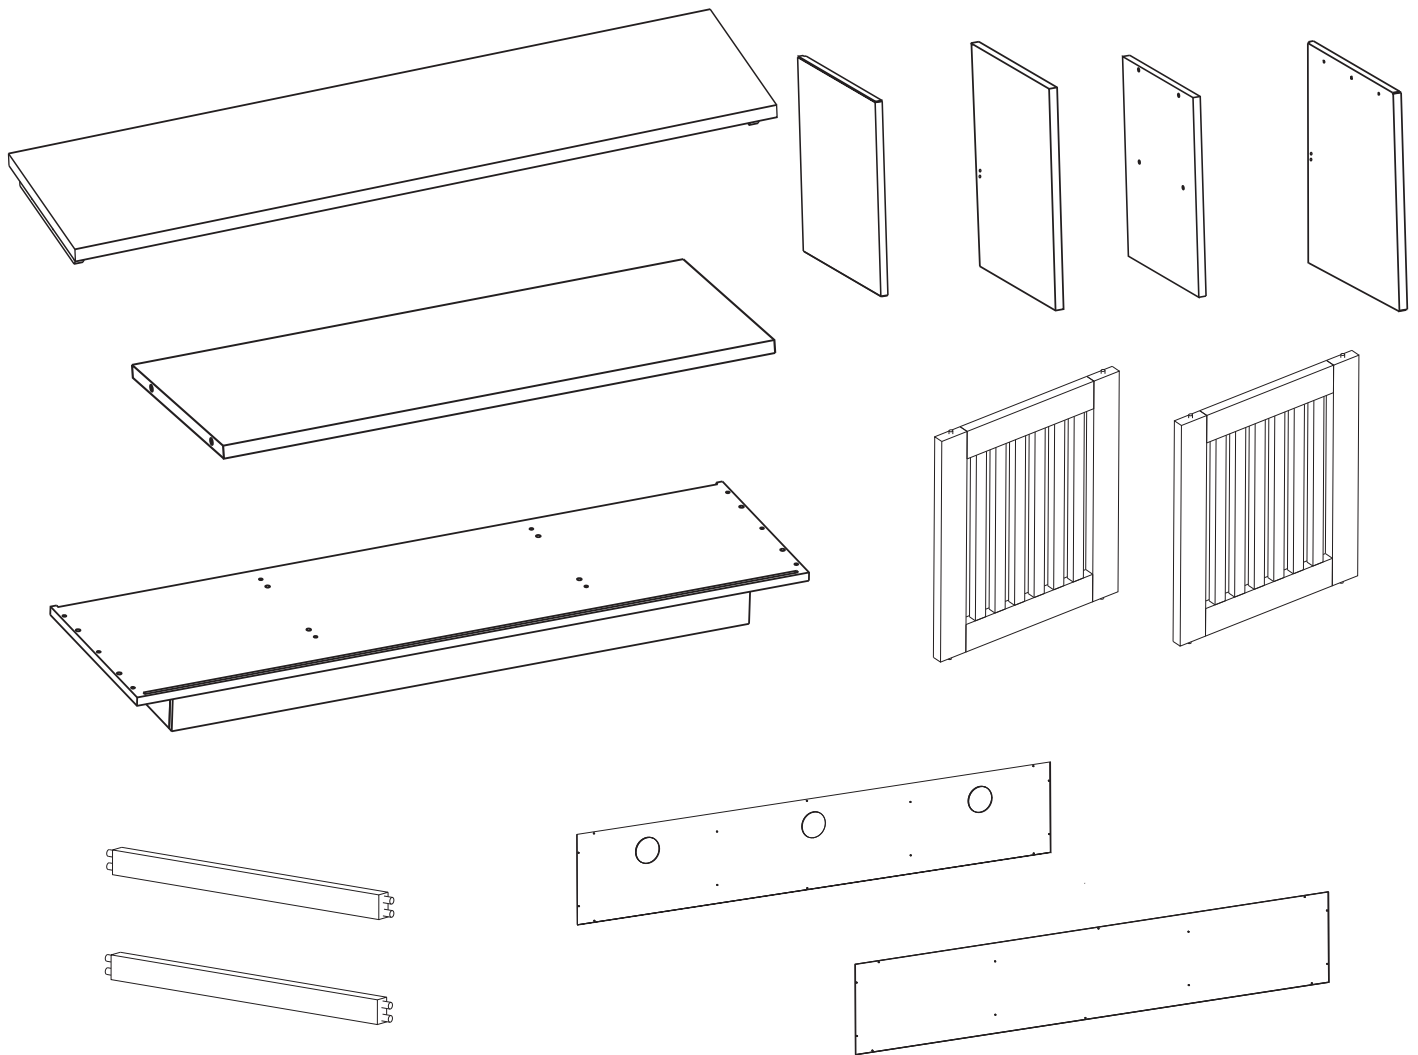Label	Picture	Description	QTY
①		Screw (M6x50mm)	11
②		Screw (M6x30mm)	11
③		Wooden Dowel (φ8x25mm)	13
④		Allen Key	1
⑤		Screw (M3.5x10mm)	29
⑥		Screwdriver (No Provide)	1
⑦		Plastic Washer	5
⑧		Small Self Tapping Screw	2
⑨		Big Self Tapping Screw	2
⑩		Metal Bracket	4
⑪		TV Stand Restraint Strap	2

# Assembly Preparation

  Before Beginning Assembly:



	x11		x1		x2
	x11		x29		x2
	x13		x1		x4
			x5		x2



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-

## Before Beginning Assembly:

 
### OVERVIEW

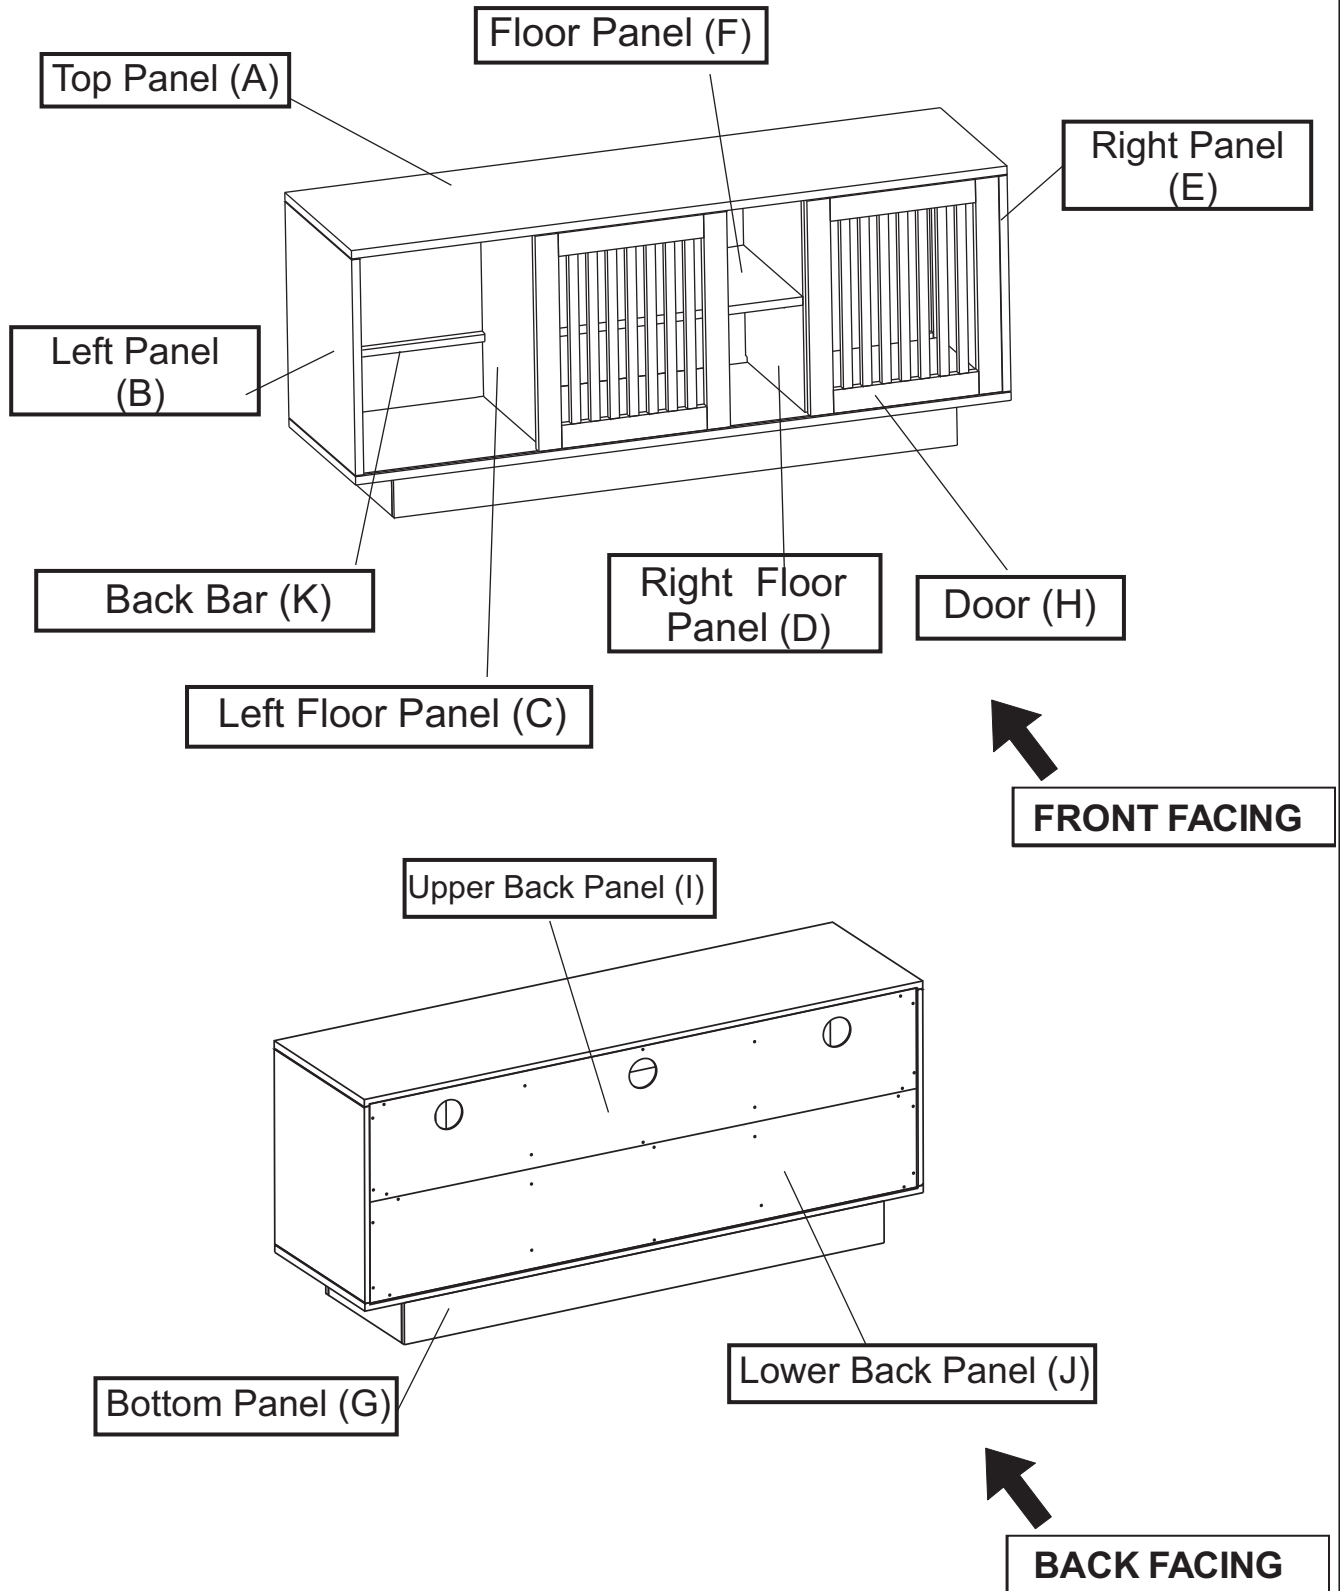

This TV Stand has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the TV Stand parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


# Assembly Steps

## Step 1

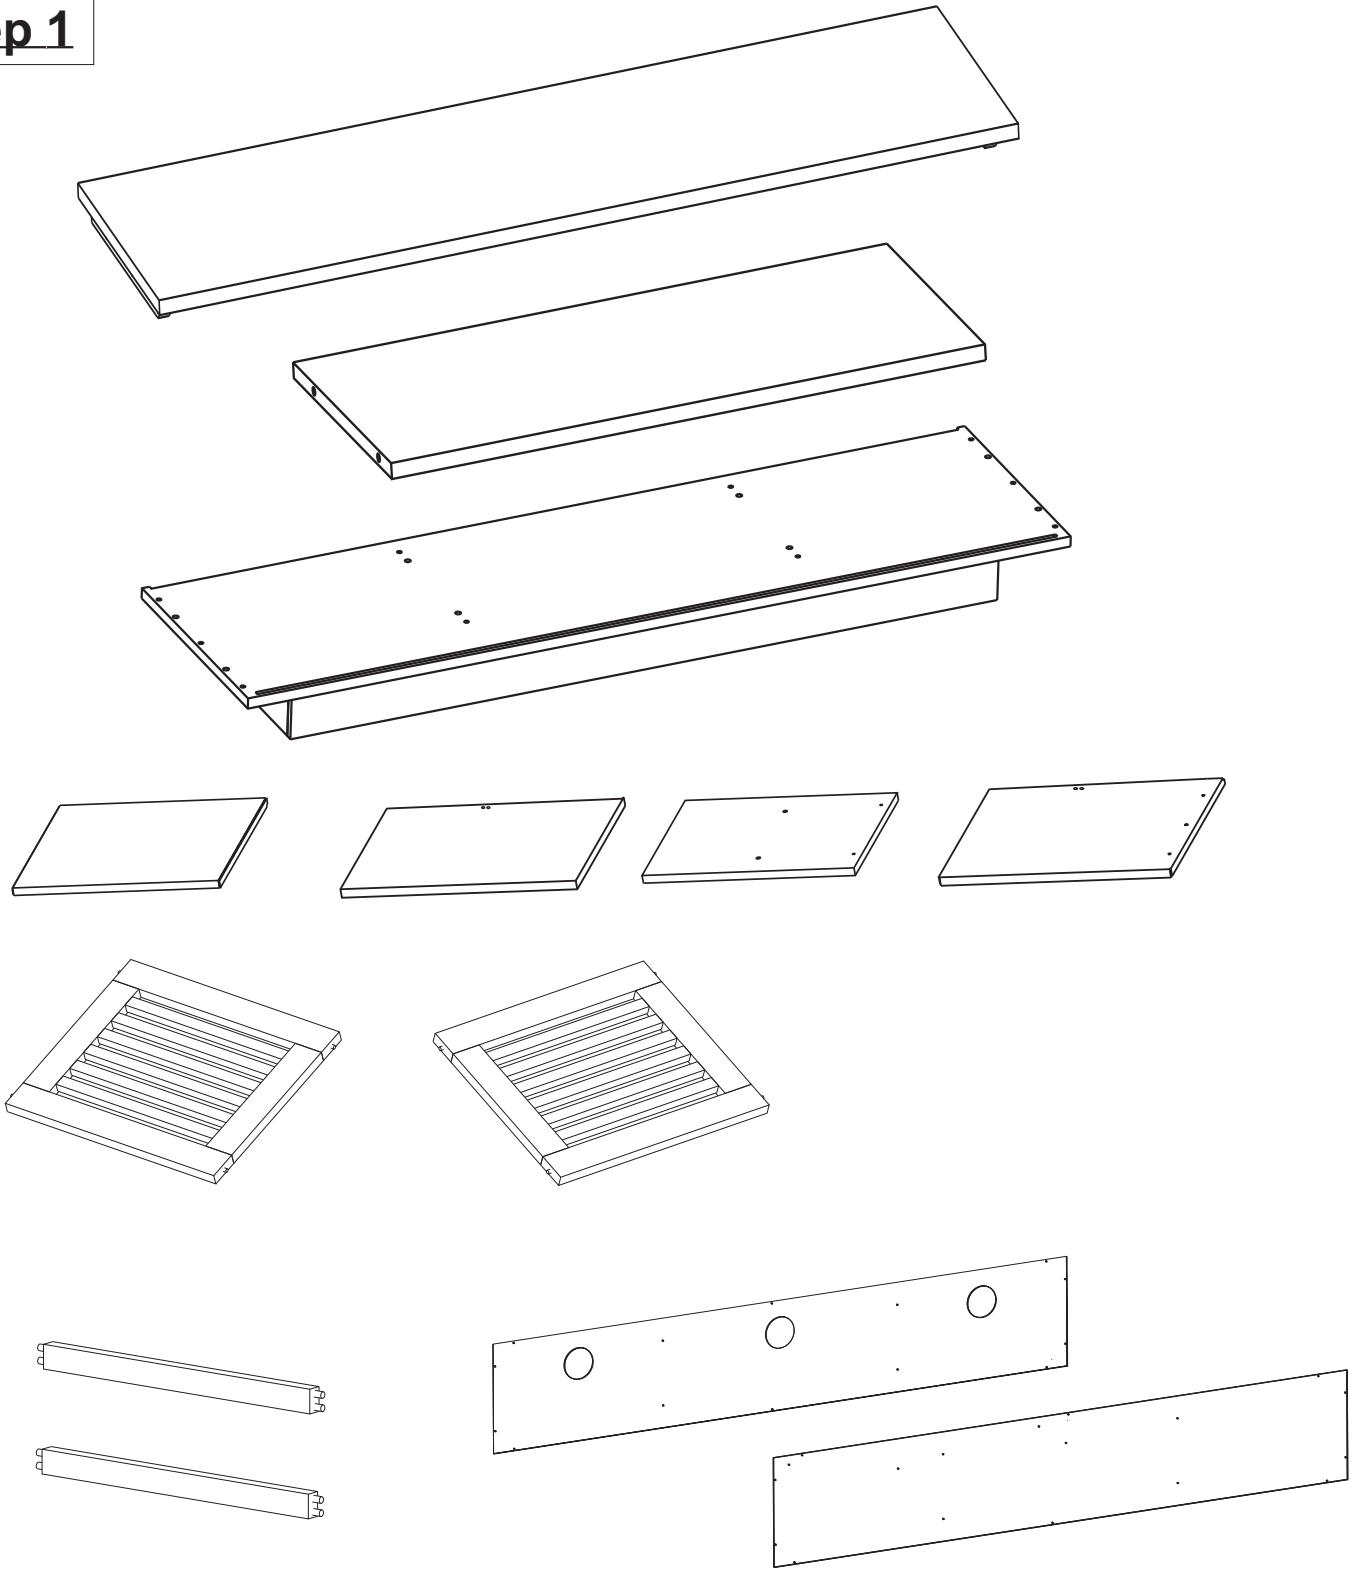


Unpack and place all parts on a clean, non-marring surface.

## Step 2

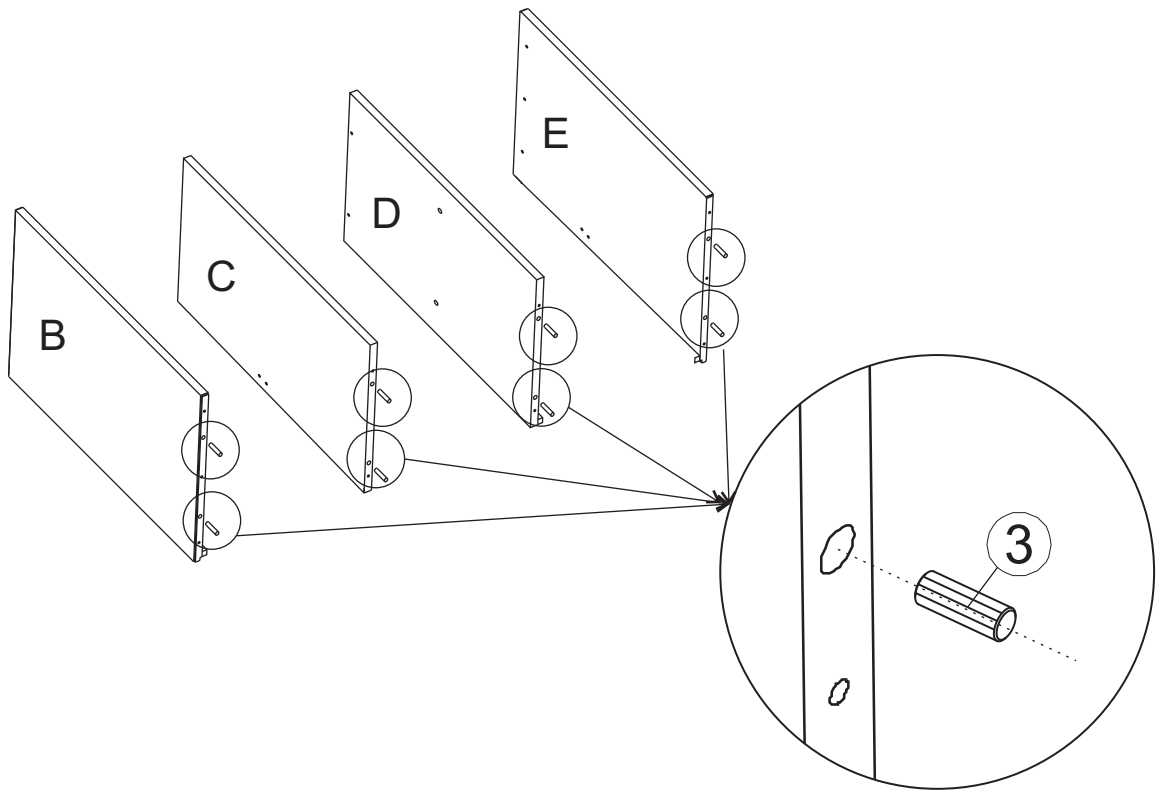

By hand, attach Wooden Dowel (③) to Left Panel (B), Left Floor Panel (C), Right Floor Panel (D), Right Panel (E) as shown above

## Step 3

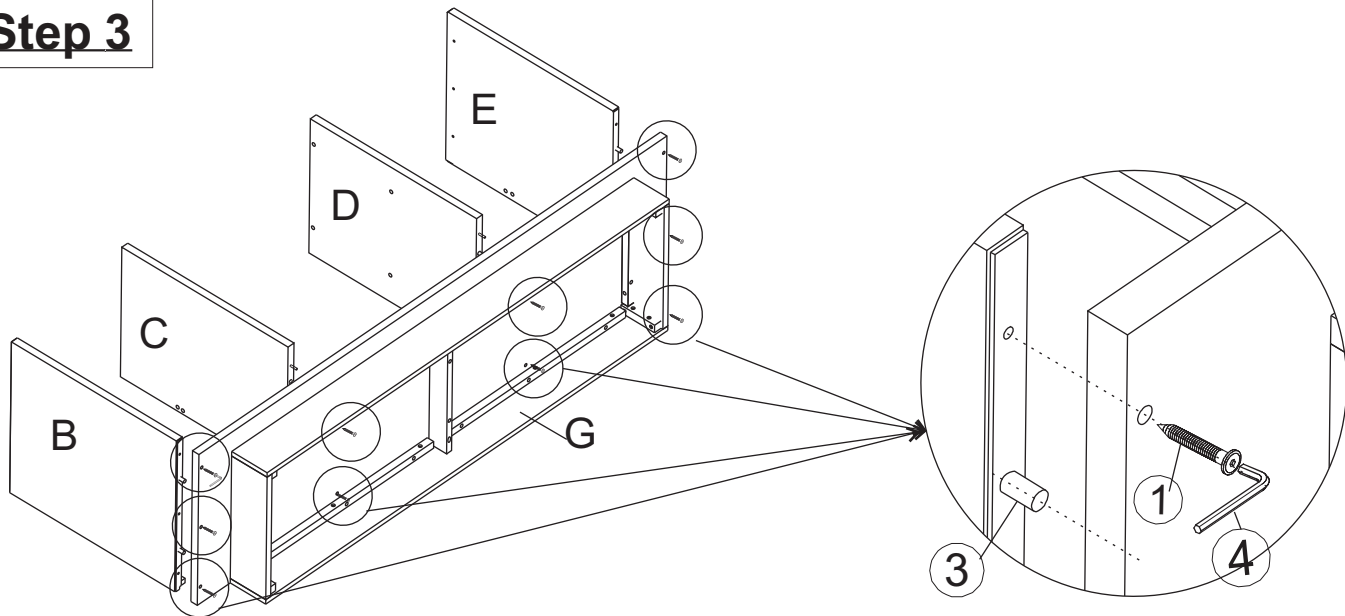


With the help of your adult partner, insert the Wooden Dowel (③) on Left Panel (B), Left Floor Panel (C), Right Floor Panel (D), Right Panel (E) into the hole of Bottom Panel (G) as shown above  
Then secure Left Panel (B), Left Floor Panel (C), Right Floor Panel (D), Right Panel (E) to Bottom Panel (G) using Screw (①) and Allen Key (④) as shown above.

**Do not fully tighten the Screws.**




### Step 4

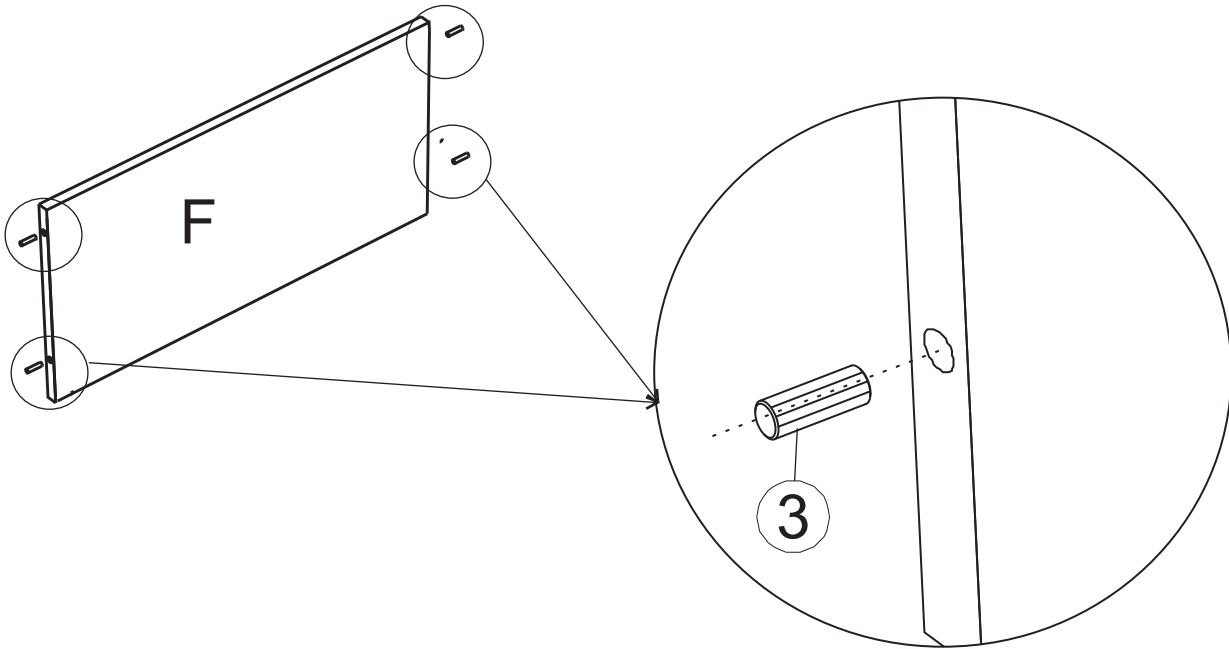

By hand, attach Wooden Dowel (③) to Floor Panel (F) as shown above


### Step 5

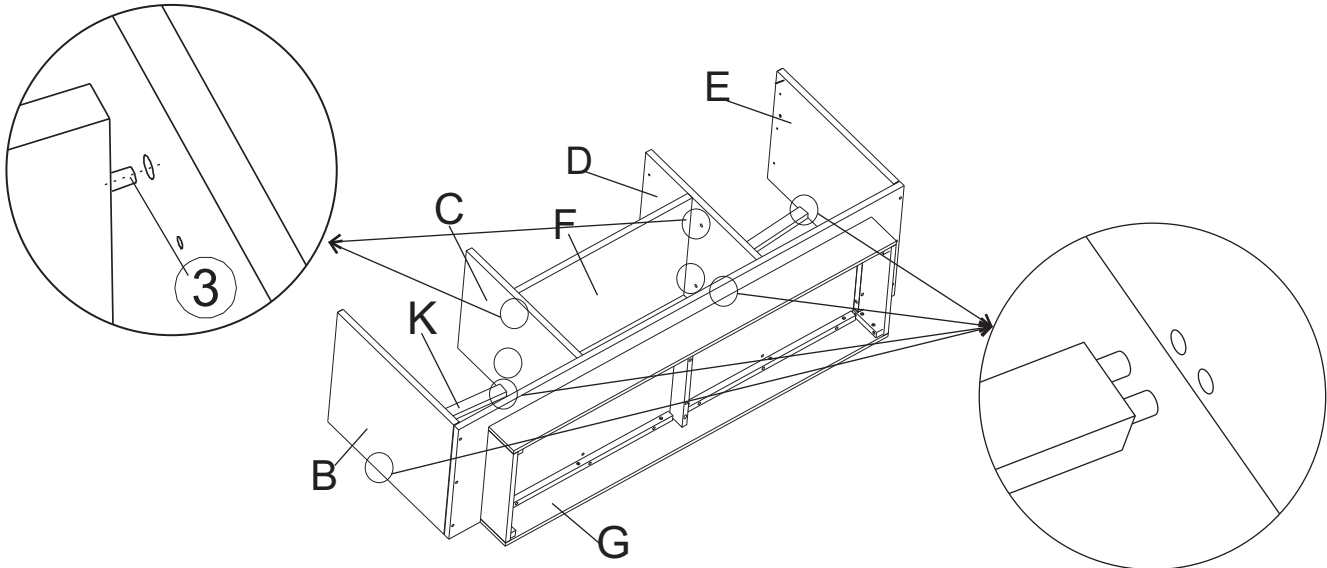

With the help of your adult partner, position Wooden Dowel (③) on Floor Panel (F) into the hole of Left Floor Panel (C) and Right Floor Panel (D) of frame on step 3 as shown above.


Fix wooden dowel on Back Bar (K) into the hole of Left Panel (B) Left Floor Panel (C). Repeat this step to fix another Back Bar (K) on product, as shown above.

### Step 7

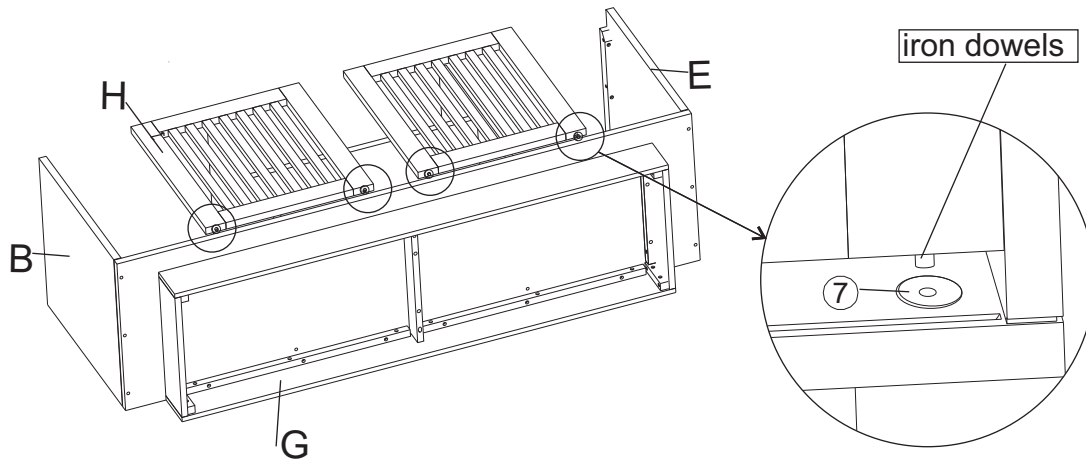


With the help of your adult partner, insert 4 Plastic Washer (⑦) to the iron dowels on Door, put the iron dowels on Door (H) into the rail of Bottom Panel (G) of frame in step 6 as shown above

### Step 8

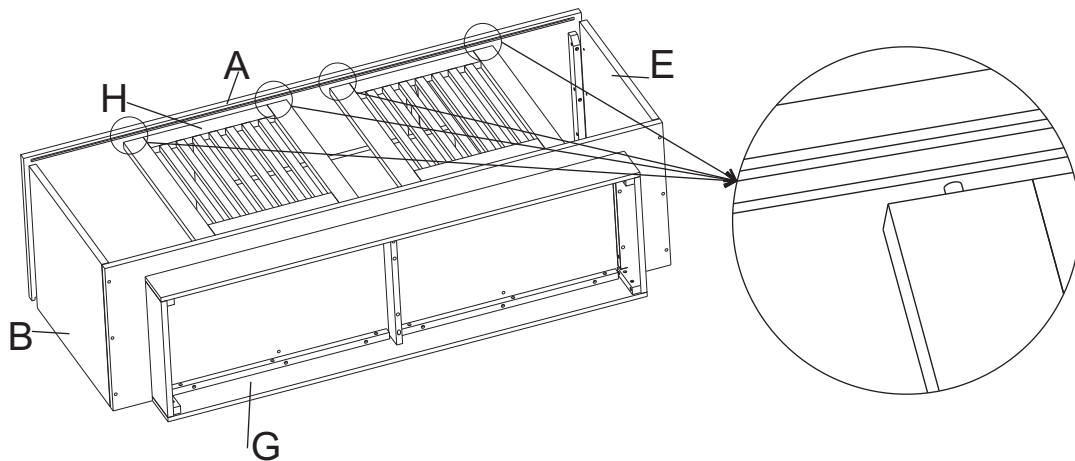

With the help of your adult partner, put the iron dowels on Door (H) into the rail Top Panel (A) as shown above


### Step 9

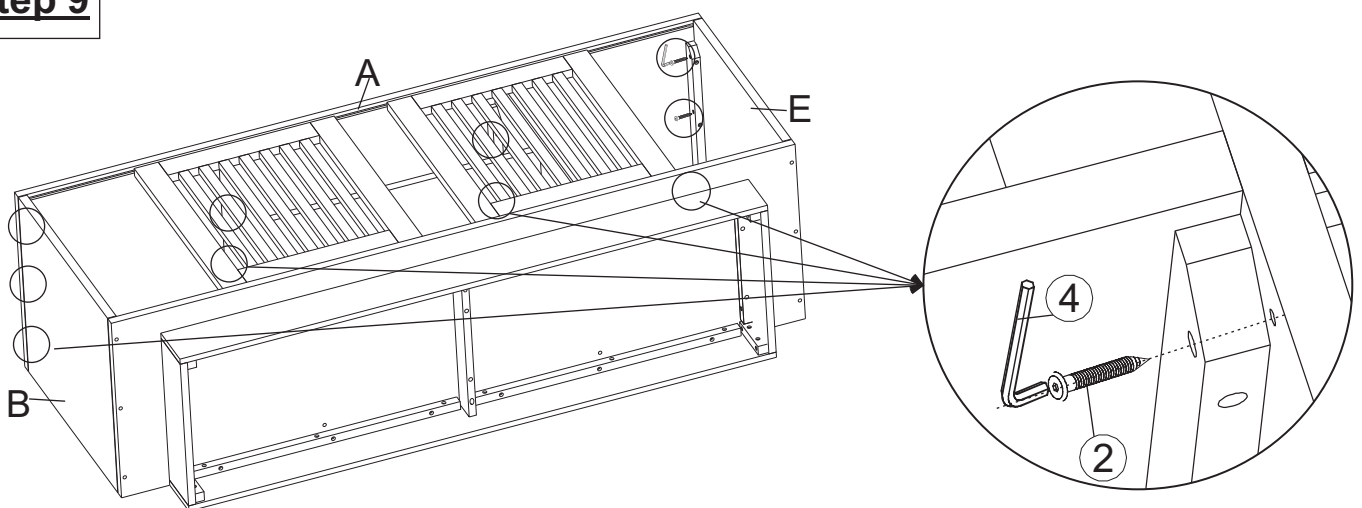

With the help of your adult partner, secure the Top Panel (A) to the Left Floor Panel (C) and Right Floor Panel (D) of frame on step 8 using Screw (②) and Allen Key (④) as shown above.


**Do not fully tighten the Screws**

## Step 10

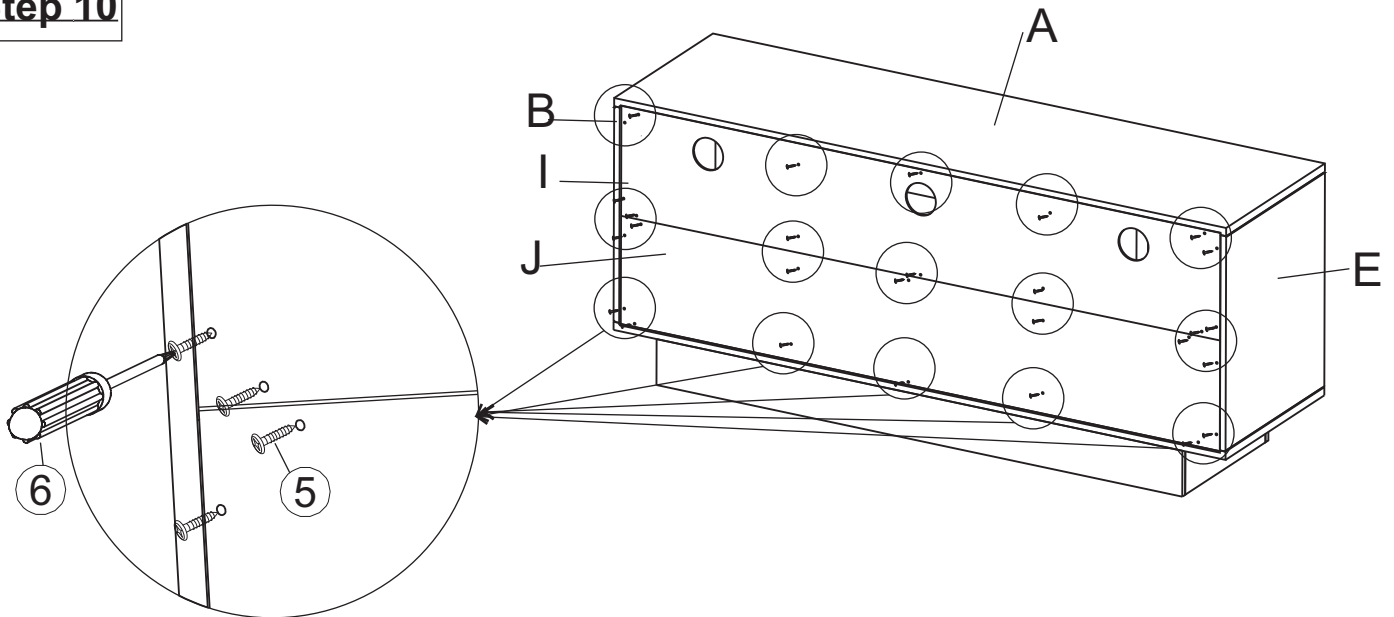

With the help of your adult partner, attach Upper Back Panel (I) and Lower Back Panel (J) to back of TV Stand using Screw (⑤), and Screwdriver (⑥).  
**Do not fully tighten the Screws**


## Step 11

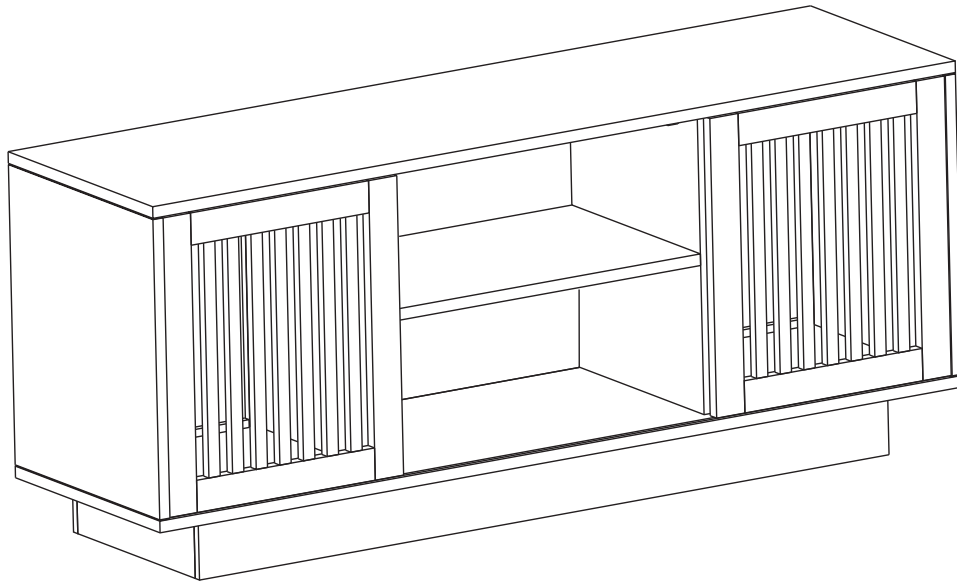

Exert pressure floorwards, onto the TV Stand with both your hands.  
This pressure will help the Legs and TV Stand Top reach full alignment status.  
Check for wobbles on a LEVEL surface.  
If no wobbles are found proceed to tighten Bolts in a sequential manner, until evenly secured.  
When tightening Bolts tighten sequentially.  
Do not tighten any Bolt fully and then move on towards the next one.  
If there are still wobbles, loosen Bolts and execute the same above process.  
If the TV Stand is not STV Stand, it could lead to damage to the product.  
**Your TV Stand is ready for use.**  
This TV Stand can only be used on a flat, level surface.


 **WARNING**

Serious or fatal crushing injuries can occur from tipping furniture.  
To help prevent tip-over: ALWAYS secure this furniture to the wall using TV Stand Restraint Device.  
See product instructions for more ways to help prevent furniture tip-over.

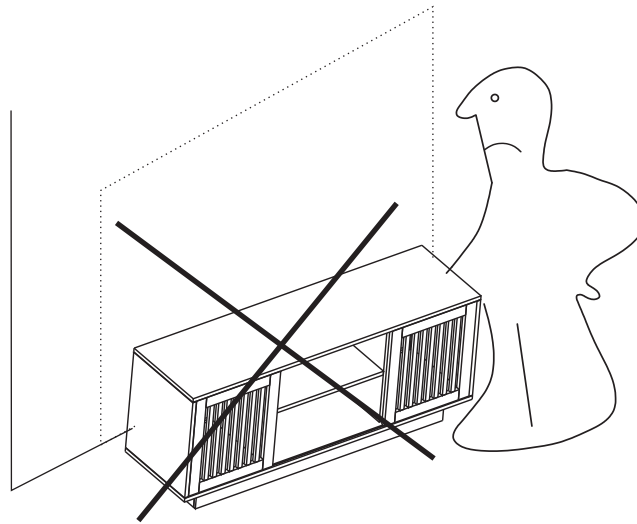

**Usage For TV Stand Restraint Device :**

 For TV Stand against wall, fix 2pcs Metal Brackets ( ⑨ ) on wall and 2pcs Metal Brackets(9) on product, use TV Stand Restraint Strap(10) to connect the Metal Bracket(⑨) on wall and product. Find details as below:

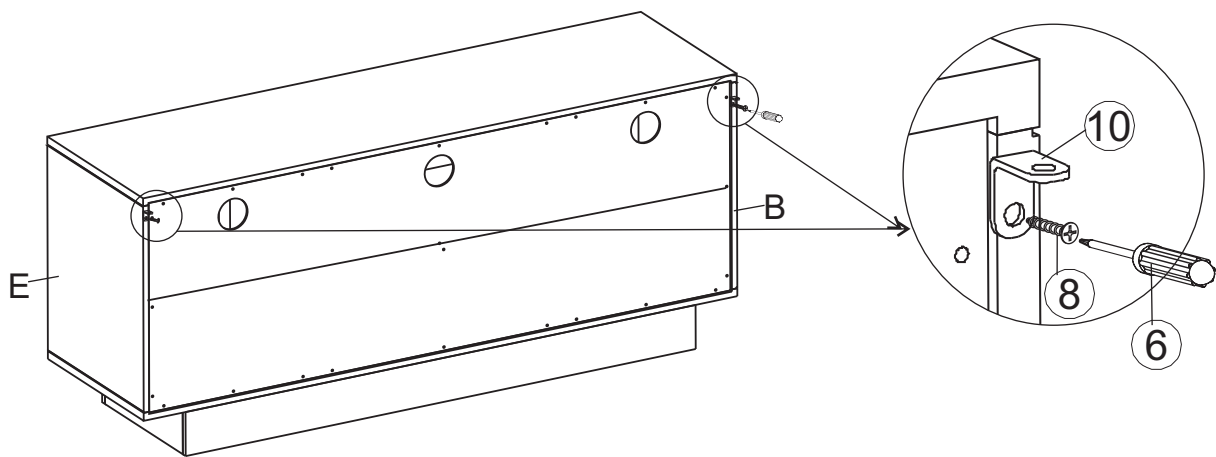


**A:** Firstly, turn back the TV Stand outwards as shown above.

Then fix one Metal Bracket (⑩) on the Left Panel ( B ) of TV Stand by the 2cm Small Self Tapping Screws ( ⑧ ) .

The distance between the top edge of the Left Panel ( B ) and bracket is 0.3 inch.

The distance between the top edge of the Right Panel ( E ) and bracket is 0.3 inch. Repeat this step to fix another Metal Bracket (⑩) on product, as shown above.

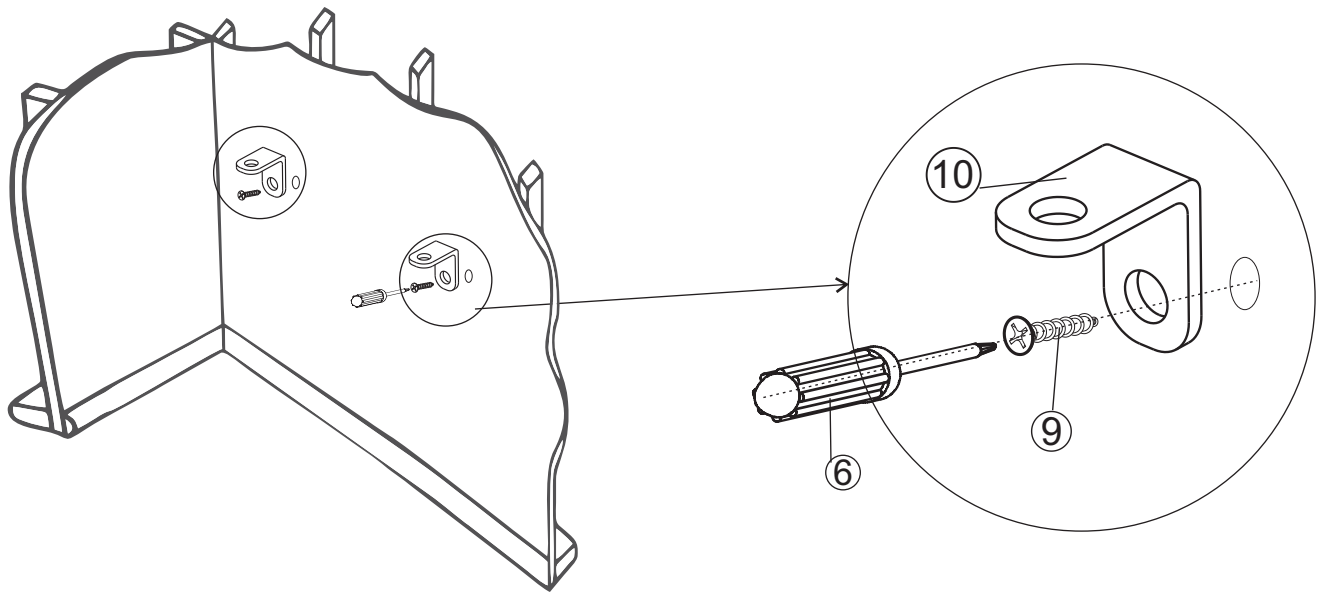


**B:** Find out the screw holes on the wall.

First, mark the point at same height on the wall as Metal Bracket (10) on product. You can find these same points in two ways as below:

1. Move the TV Stand back to the wall, make these points on the wall and product are at same height.
2. Measure the height of the Metal Bracket and the wall by ruler, keep them are accurately and same height.

(Caution: The TV Stand Restraint Strap (11) between Metal Brackets (9) on product and wall should be within 3.5").



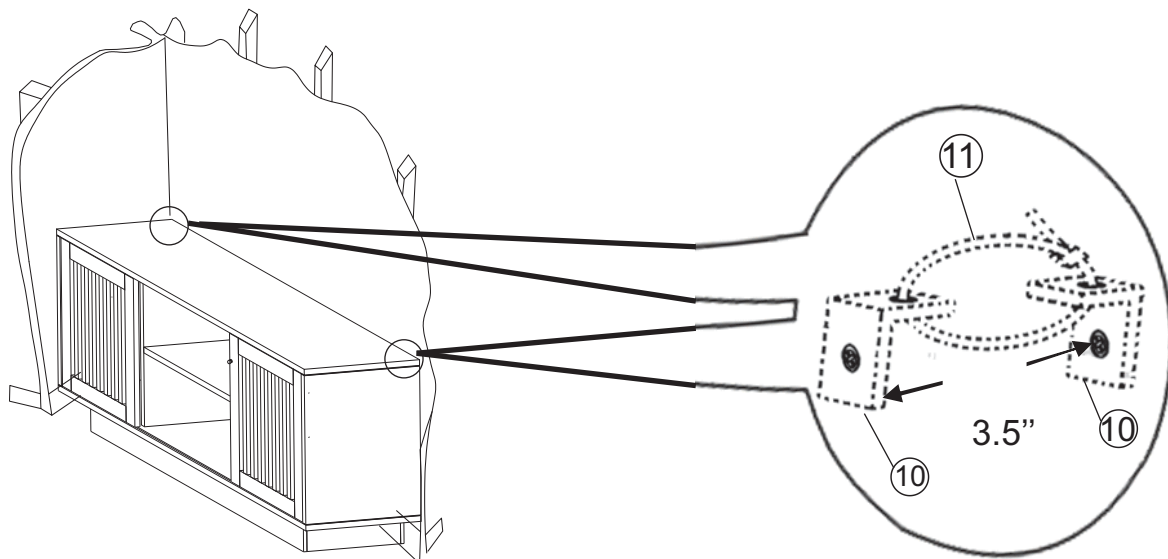
























Then fix one Metal Bracket (9) on the mark on wall by the 5cm Big Self Tapping Screws (9). Repeat this step to fix another Metal Bracket (9) on wall, as shown above.



**C :** Move the TV Stand against the wall. Then pull the TV Stand Restraint Strap (11) through two Metal Brackets (10) one by one, lock tight the TV Stand Restraint Strap (11) as shown above.

TV Stand Restraint Device is installed and TV Stand is ready for use.

## Care & Maintenance

-    Do not put hot items directly on furniture surface
-    Do not clean furniture with harsh cleansers or polish.
-    Do not place furniture under direct sunlight.
-    Do not place furniture near heating or cooling vents.
-    Do not write on furniture without a padded barrier to protect the surface.
-    Do not place furniture outside . For indoor use only .
-    Not for commercial use. For residential use only .
-    Stains may be removed with mild soap solution and damp cloth.
-    Children should not climb or jump on the furniture.

- 
-    Dust and pick-up spills using a clean, non-colored, lint-free cloth .