

# Assembly instructions

**Warnings:** You must read this before you proceed.

## **Dining Chair**



**CAUTION :** This chair is NOT a TOY. Keep your child / children at bay in the process of assembly.

## Assembly Preparation

Before Beginning Assembly:



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-









- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

## Parts list


NO.	Picture	Description	QTY
A		Backrest	1
B		Seat	1
C		Right arm	1
D		Left arm	1
E		Hind leg	2
F		Front leg(with figure)	2

## Hard ware

①		Washers(6mm)	7
		Spring washer(6mm)	7
		Nuts(6mm)	7
②		Washers(8mm)	12
		Spring washer(8mm)	12
		Nuts(8mm)	12
③		Bolts(6*30)	3
④		Bolts(6*25)	5
⑤		Caps(6mm)	3
⑥		Spanner	1
⑦		Screwdriver	1

## Assembly Step

### Overview

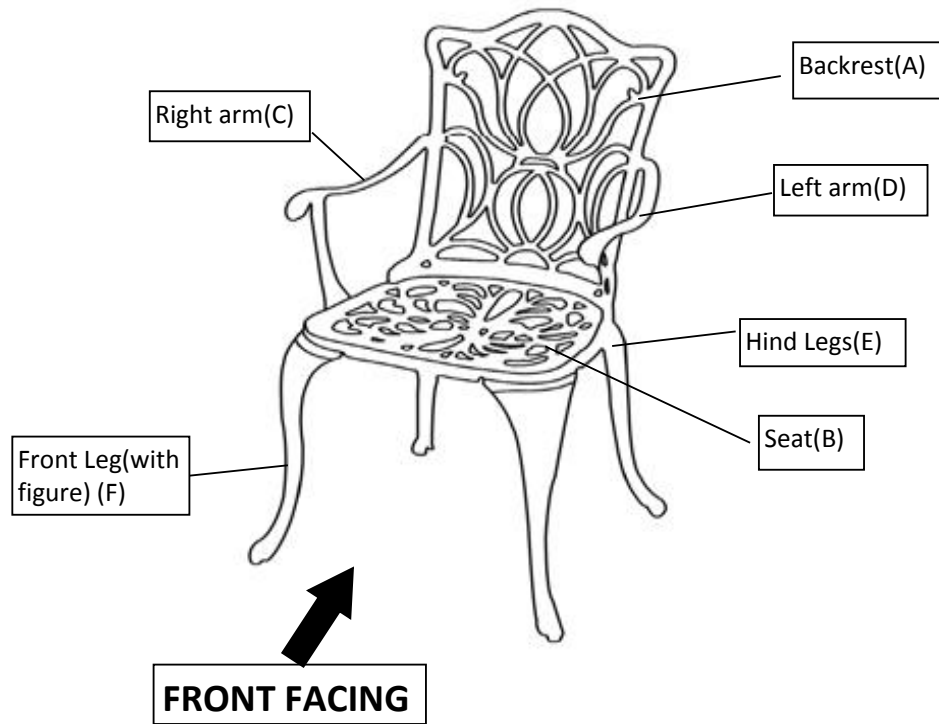


This chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

### Step 1



Unpack and place all parts onto a clean soft surface.


### Step 2

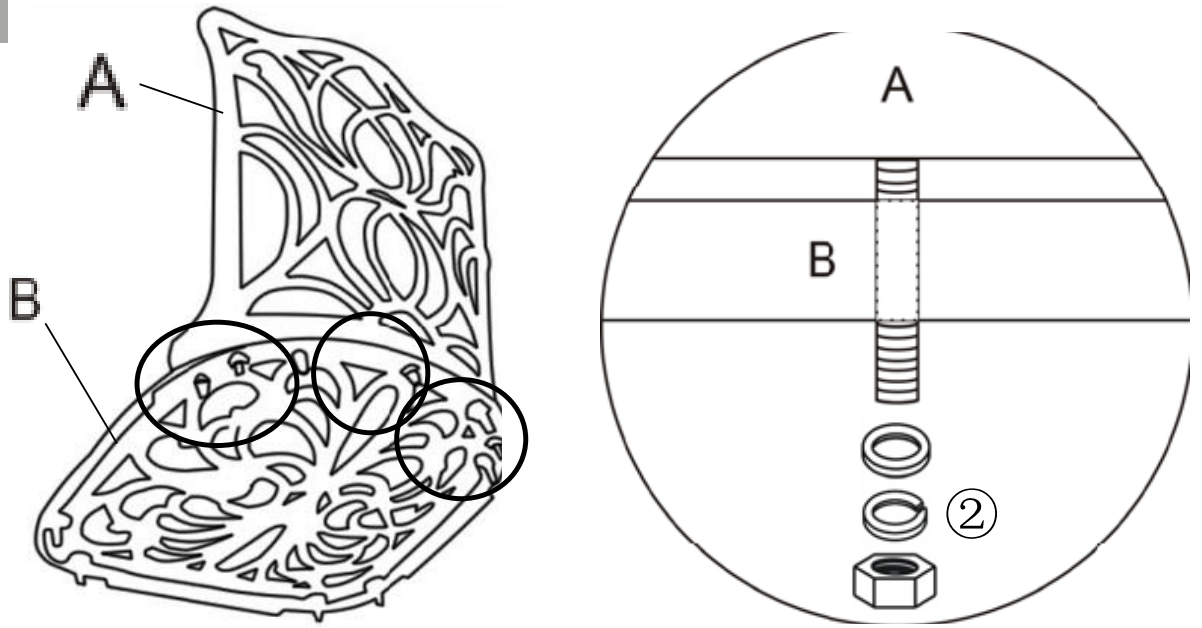

Attach the backrest (A) to the studs contact points on the chair seat(B) with Washers, Spring washers and Nuts (8mm)(②) using the wrench (⑥).

**DO NOT over tighten .**


### Step 3

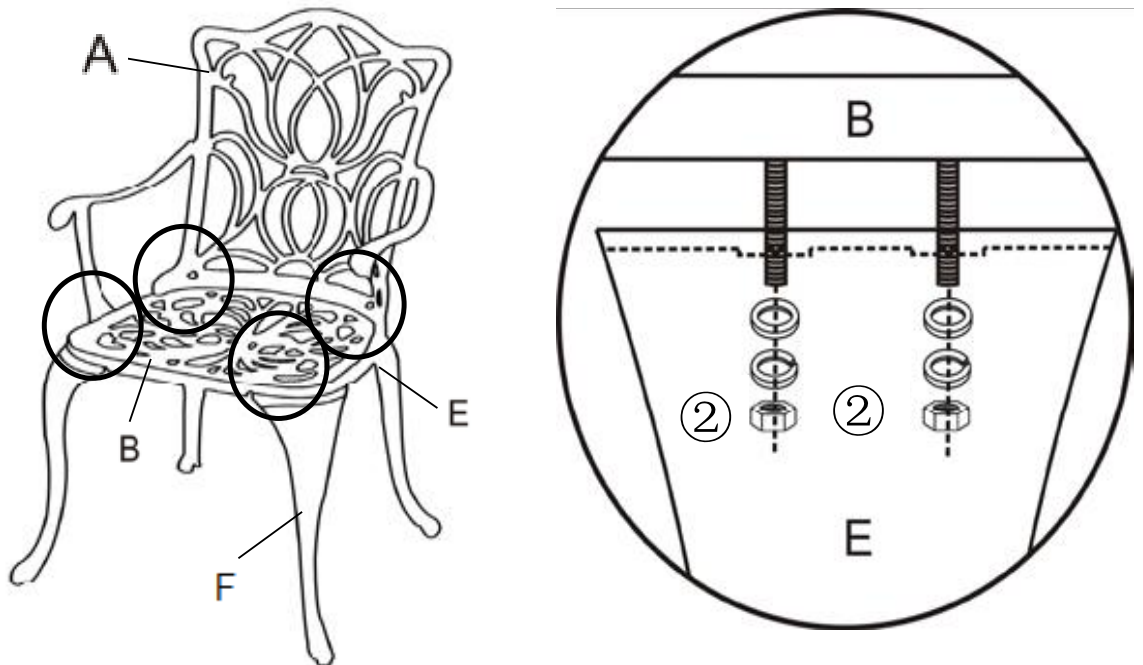

Attach the Hind Legs (E) and Front legs (F) onto the Seat (B) with Washers, Spring washers and Nuts (8mm) (②) using the wrench (⑥).

**DO NOT over tighten.**

## Step 4

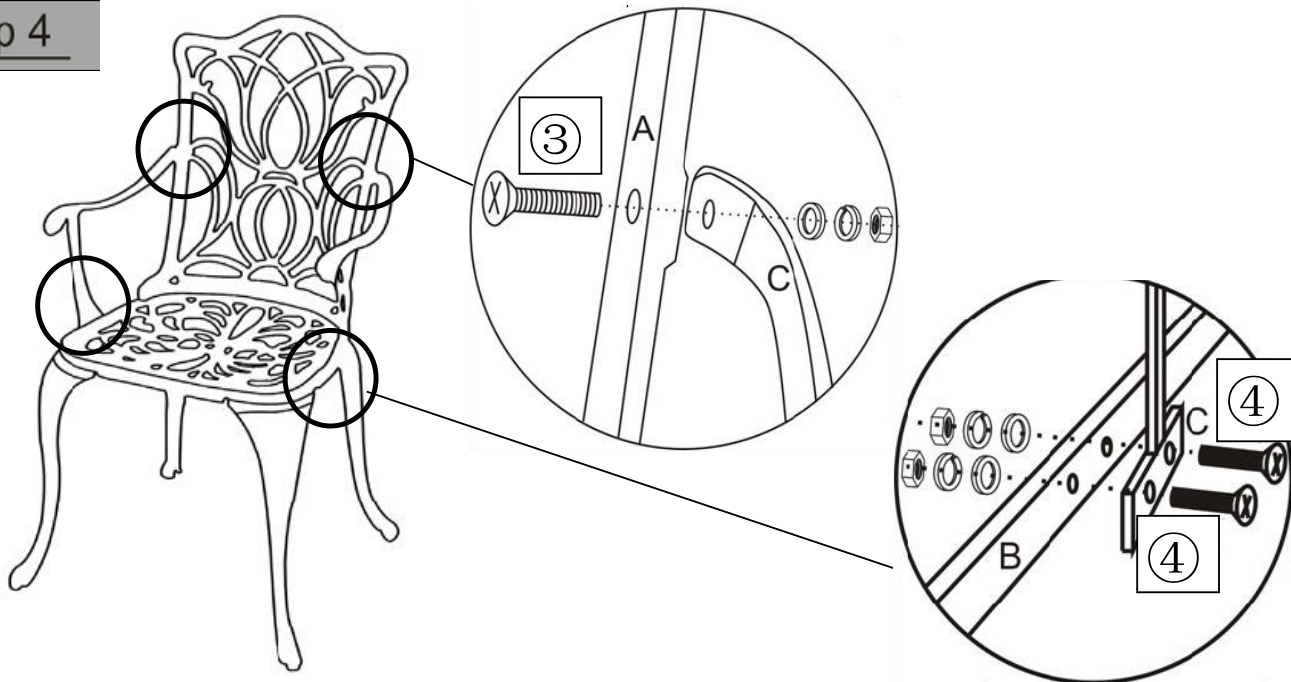

The next step is to connect the Arms(C&D) to seat Backrest(A) and to the Seat(B). Tighten the bolts gently to get Arms(C&D) into position.

Connect the Left arm(D) and Right arm (C) to the Seat(B) with Bolt(6\*25)(④), Washers, Spring washers and Nuts (6mm)(①) , using the wrench (⑥) and screwdriver(⑦). Connect the Left arm(D) and Right arm (C) to the Backrest (A) with Bolt (6\*30)(③) Washers, Spring washers and Nuts (6mm)(①) , using the wrench (⑥) and screwdriver(⑦). Once all 4 (four ) points are in position, tighten all bolts, sequentially. Then, use two Plastic Caps ( 6mm )(⑤) to cover the 6mm nuts at the back of Backrest(A).

## Step 5





















Turn the chair right side up. Adjust the pre-installed Rubber Caps until the chair is level with the ground .

When dining chair is leveled and fully assembled, now FULLY TIGHTEN all screws and bolts.

Your Chair is ready for use.

**This Table can only be used on a flat, level surface.**

## Care & Maintenance

-   ● Do not put hot items directly on furniture surface
  -   ● Do not clean furniture with harsh cleansers or polish.
  -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
  -   ● Children should not climb or jump on the furniture.
  -   ● Do not write on furniture without a padded barrier to protect the surface.
  -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
  -   ● Not for commercial use. For residential use only .
  -   ● Stains may be removed with mild soap solution and damp cloth.
- 
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .

### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

### Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

### Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

### Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

