



Assembly Instructions



Caution : You must read this before you proceed

DINING TABLE

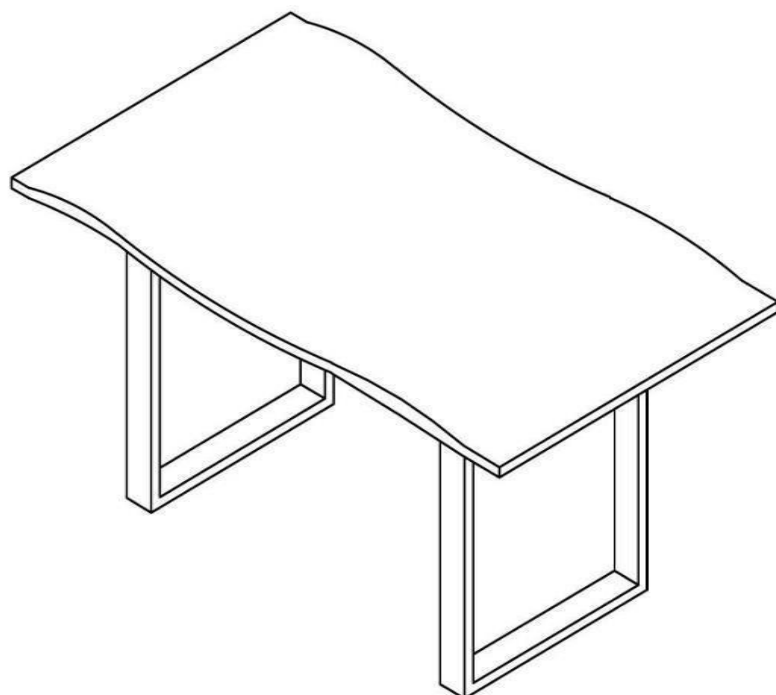



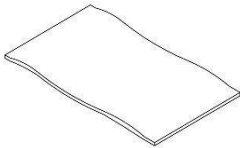
Parts List

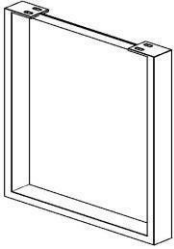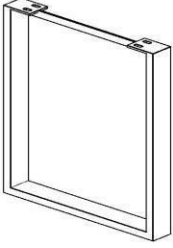
Label	Picture	Description	QTY
A		Wooden Table Top	1

B		Right- Leg Frame	1
C		Left- Leg Frame	1

Hardware

Label	Picture	Description	QTY
①		Flat Head Allen Bolt (M8x25mm)	9
②		Allen Wrench (5 MM)	1
③		Washer	9

Assembly Preparation
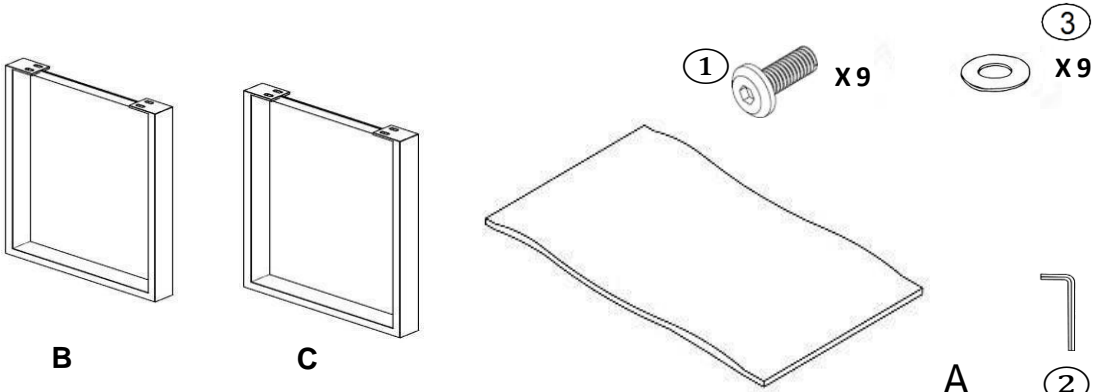
<p>Before Beginning Assembly:</p>	 <p>The diagram shows the assembly preparation stage. On the left, two leg frames are labeled B and C. In the center is a large rectangular panel labeled A. To the right of panel A are the hardware components: 9 flat head Allen bolts (labeled ① x9), 9 washers (labeled ③ x9), and 1 Allen wrench (labeled ②).</p>
-----------------------------------	---



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly preparation

Overview

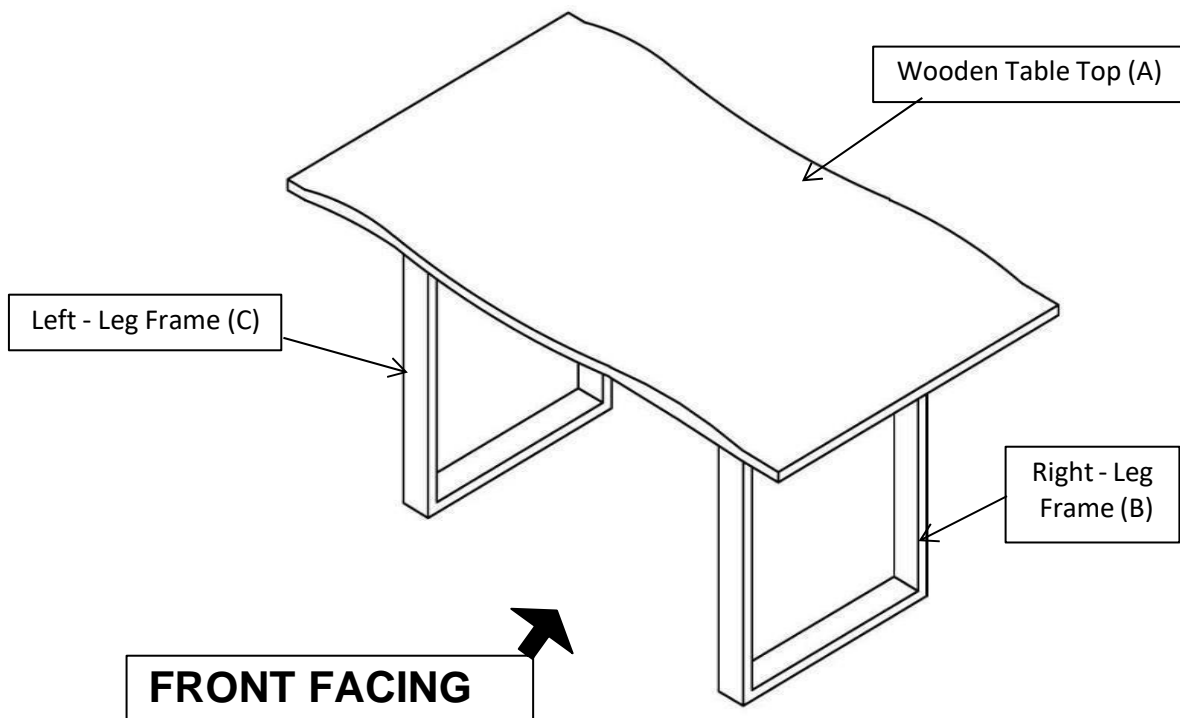


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarise the parts and steps before assembly.

Step 1

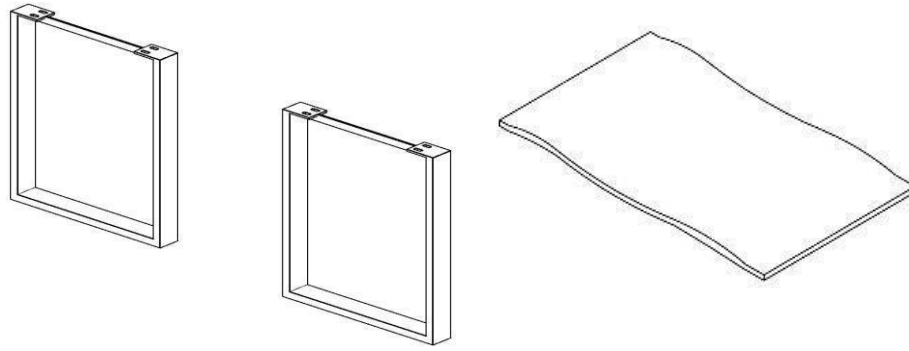

Unpack and place all parts on a clean, non-marring surface.


Step 2

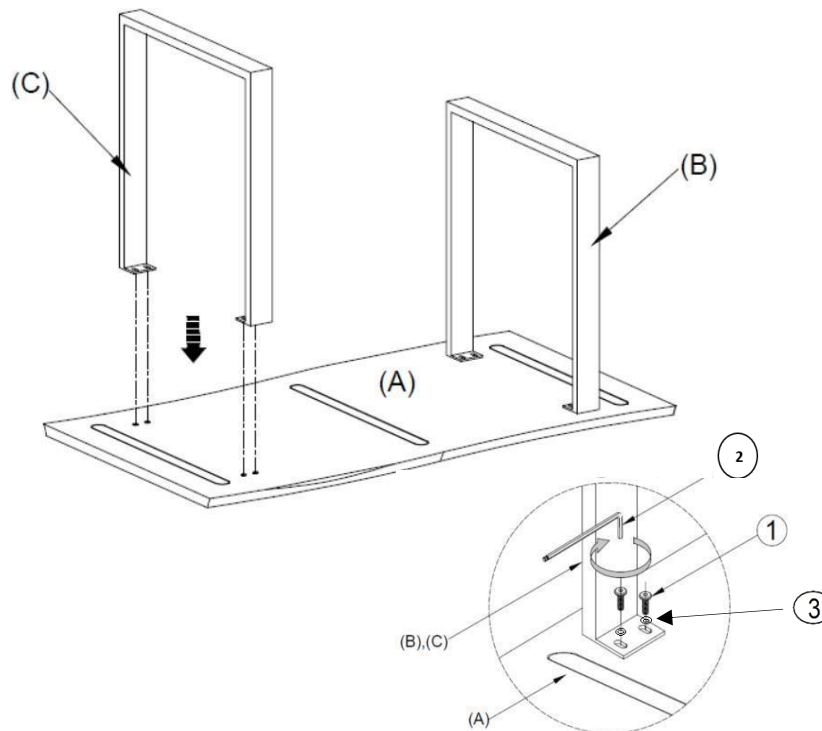

Place the Table top (A) from the bottom side with clean, soft surface to avoid any scratches or damages to the product.
Align the Right-Leg Frame (B) as shown above. Then, affix the Table top (A) with Right-Leg Frame (B) using Flat Head Allen Bolt (①) and Allen Wrench (②). Repeat the same step to attach Left- Leg Frame (C) to the Table Top (A).

DO NOT FULLY TIGHTEN ALLEN BOLTS.

Step 3

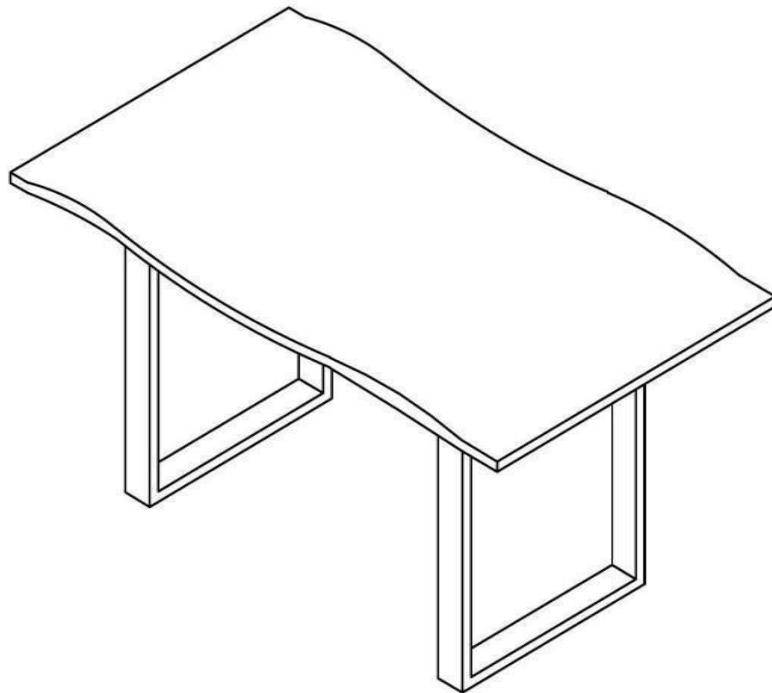

Turn the Dining Table right side up.
Place the Dining Table on a **LEVEL SURFACE**.
Inspect it and make sure all parts are adequately connected.
This would help to align all the parts at all the joint areas.

In a sequential manner, proceed to tighten all Bolts.
To tighten the Bolts at the base of the Dining Table, do secure assistance from your adult partner(s).
You may be required to turn the Dining Table, to gain easy access to the secure points.
Turn the Dining Table in a synchronised manner.

CAUTION 1: When tightening these Bolts, tighten sequentially.
DO NOT tighten any Bolts fully and then towards the next one.
This would cause the frame to warp.
If there is still wobble, loosen the Bolts and execute this same process.
WARNING!! IF Dining Table IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all Bolts are fully locked into position.
The Dining Table is ready to be used.
CAUTION 2: This Dining Table can only be used on a flat, level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.