



Open the carton and place all parts onto a clean, non-marring surface. Place the Right Leg Frame(C) on it's side as shown. Attach the top Wooden Tray(A) to the Right Leg Frame(C) using Bolts(③) with Allen Key(④). **Do not fully tighten the Bolts.**

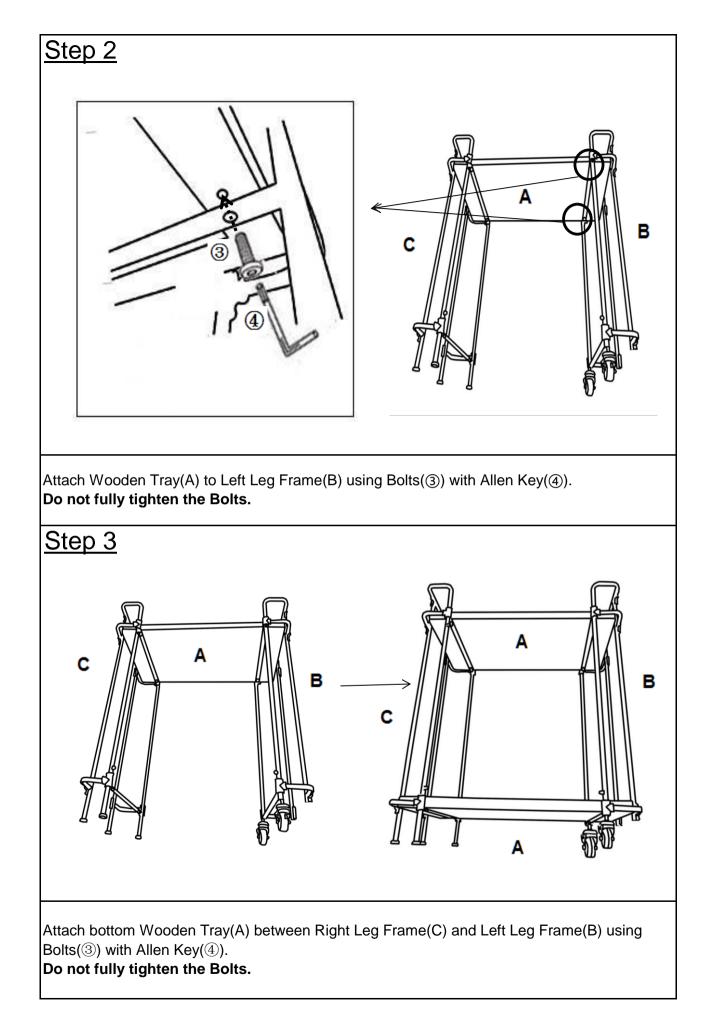

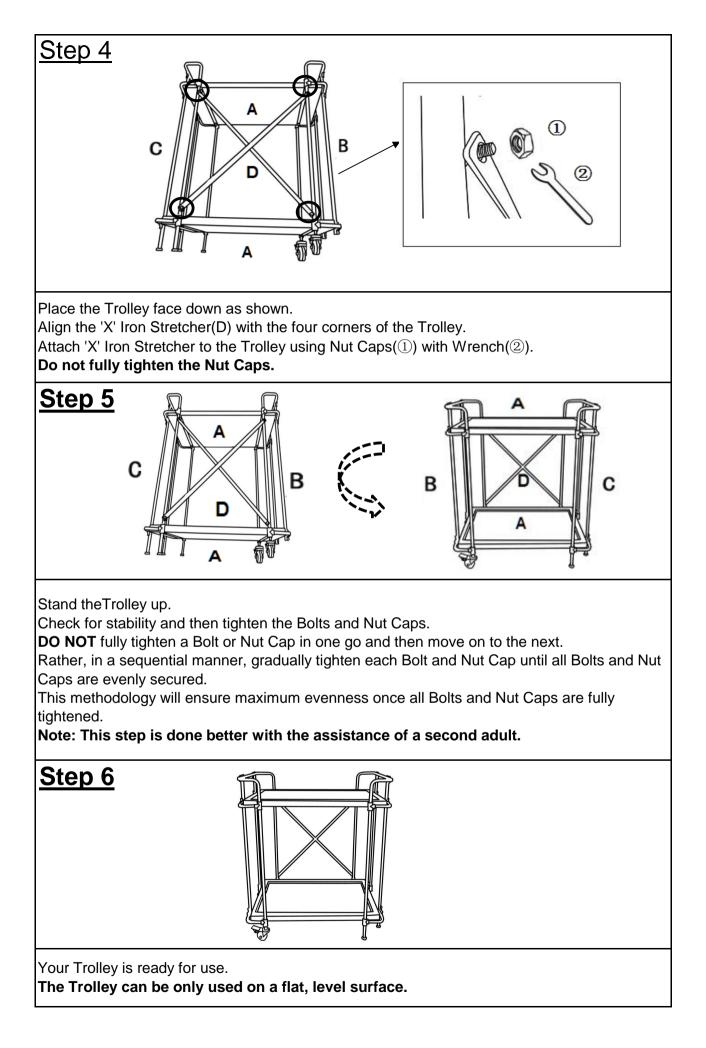

Care & Maintenance
S SS ■ Do not put hot items directly on furniture surface
 Do not clean furniture with harsh cleansers or polish.
To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.
 Children should not climb or jump on the furniture.
Do not write on furniture without a padded barrier to protect the surface.
 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
S → Not for commercial use. For residential use only .
 Stains may be removed with mild soap solution and damp cloth.
✓