WARNING!!


Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at **tip restraint help@Noblehousefurniture.com**

NEVER allow children to climb or hang on furniture , including drawers or cabinet doors.


In addition to installing the restrains. To help prevent tip-over 1. **NEVER** put a **TV** or other heavy objects on top of this product".


2. Do not stand on the products.




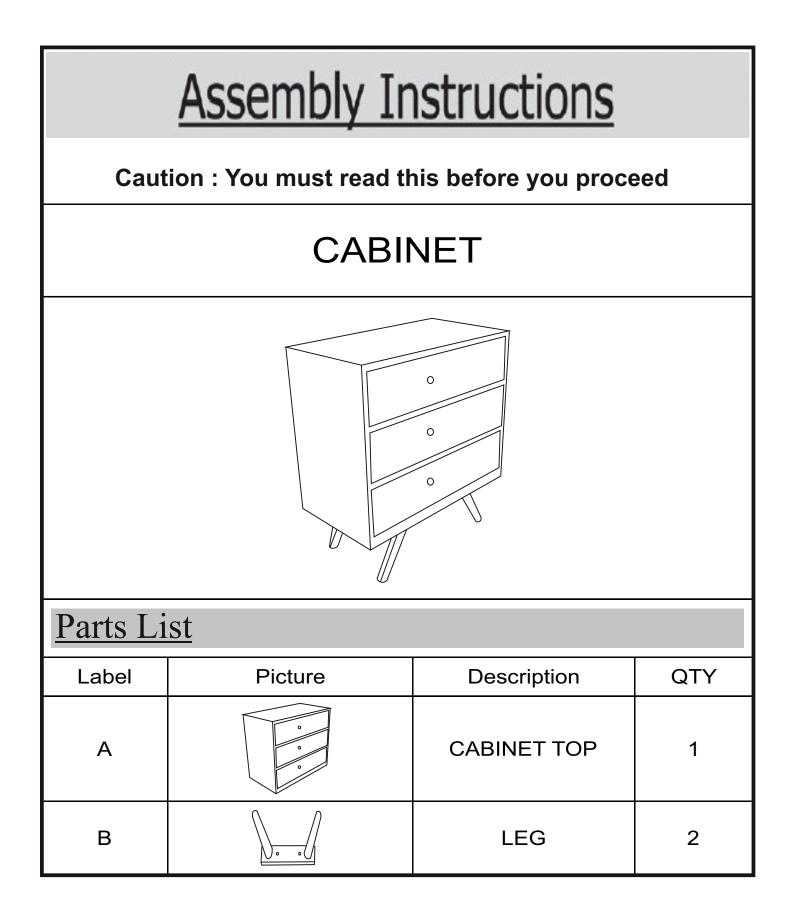


Hardware			
Label	Picture	Description	QTY
1	0	Washer (20mmx20mm)	5
2		Bolt (M15mmx35mm)	5
3		Allen Wrench	1
4		Screwdriver (Not Provided)	1
5		Hammer (Not Provided)	1
6		Power Drill (Not Provided)	1
Ø		Metal Bracket	2
8		Wall Plug Screw (M3x30mm)	3
9		Wall Plug (30mmx5mm)	2
10	\bigcirc	Washer	3
Ũ		Knob	3
12		Product Screw (M3X12mm)	3

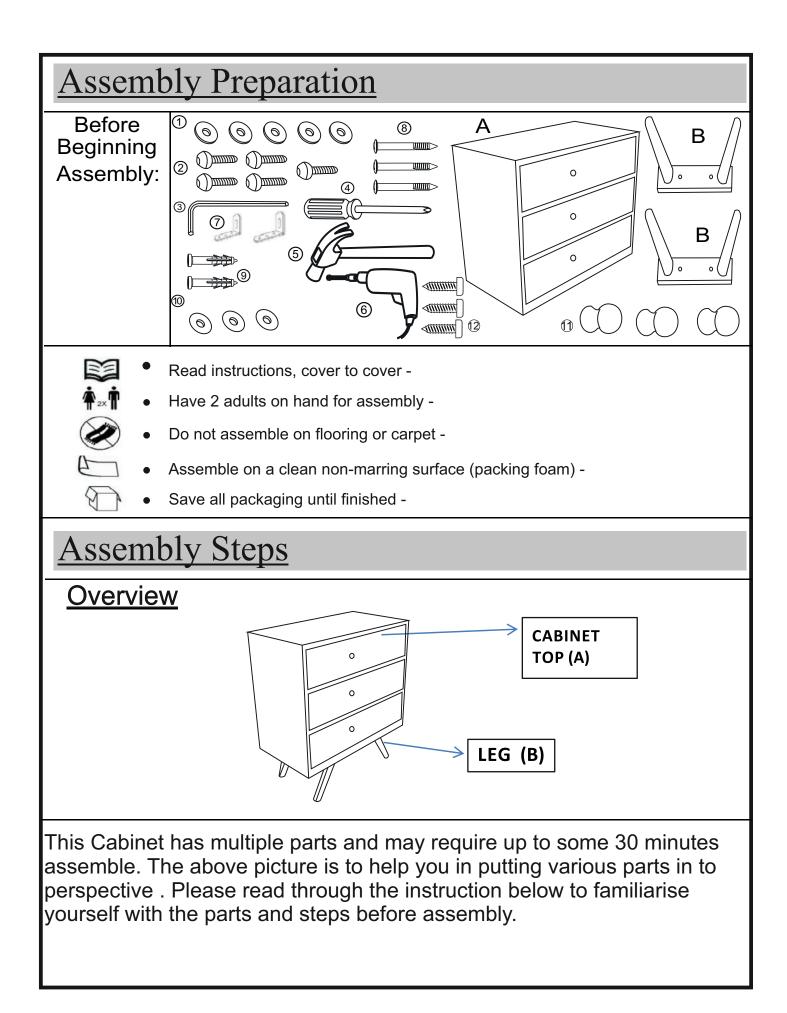

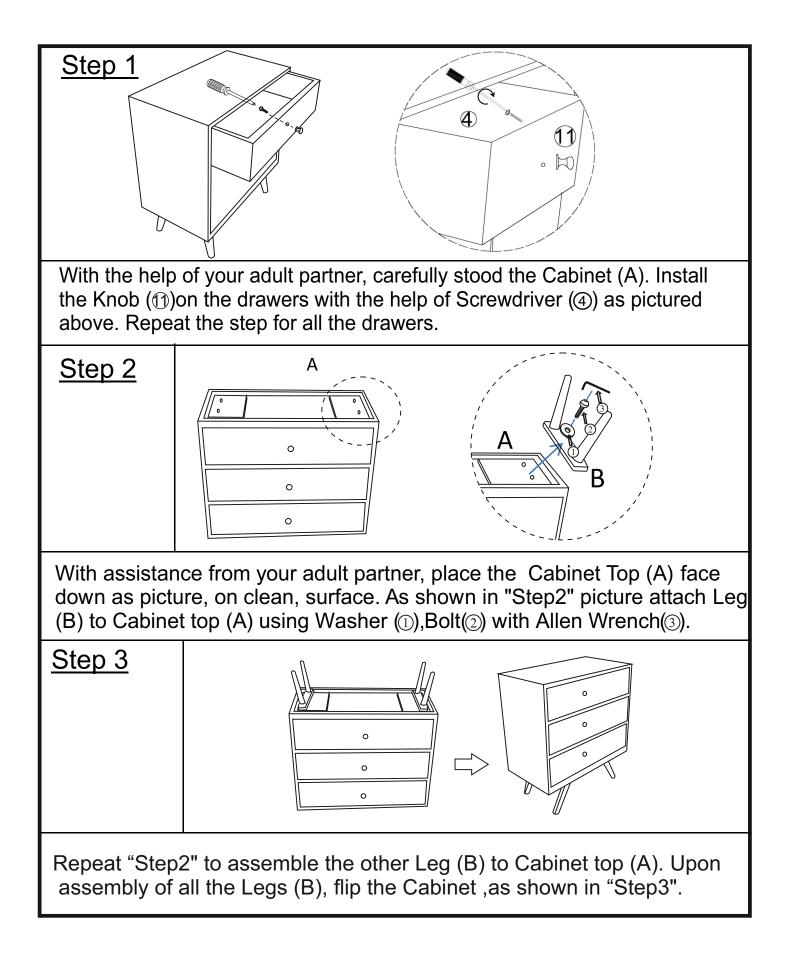

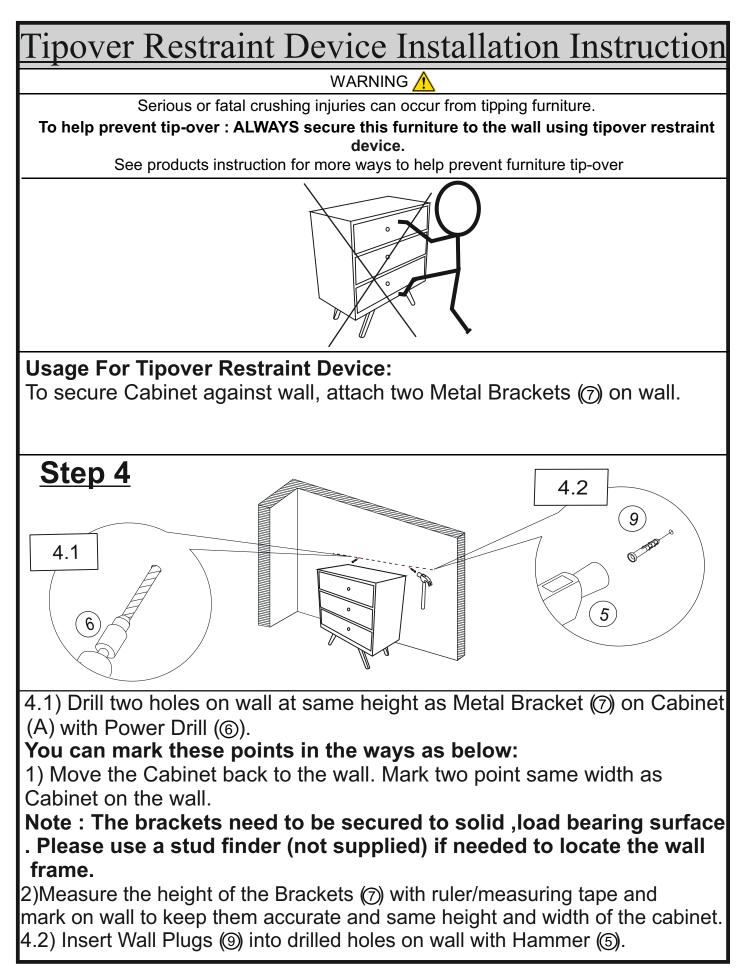

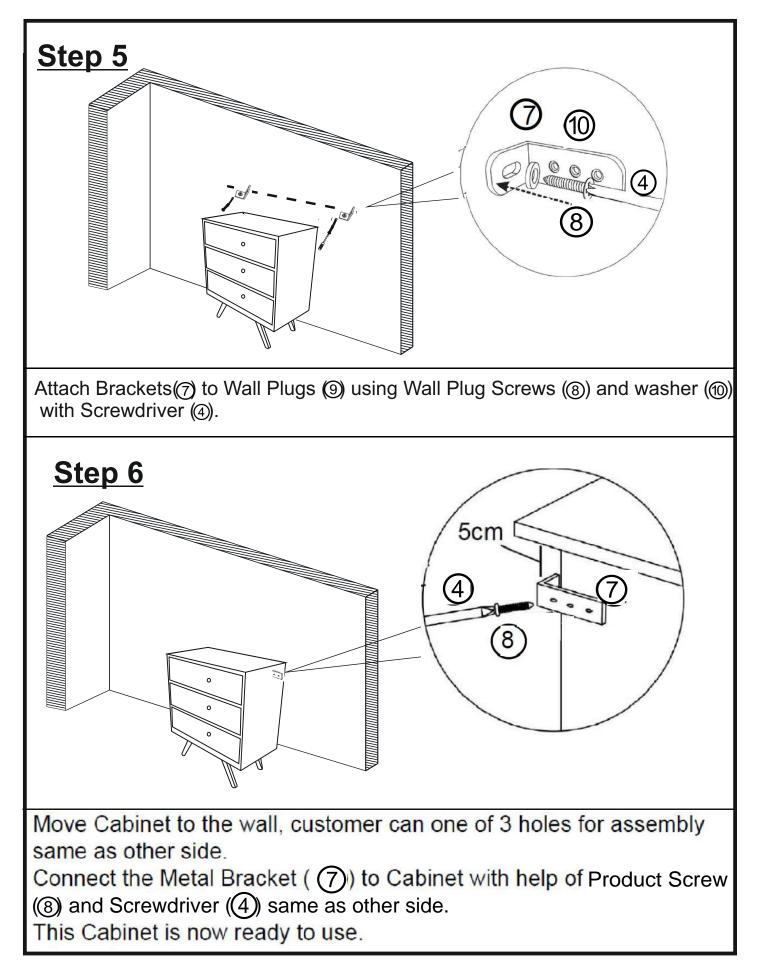

Care And Maintence

- ✓ Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- S → Do not put hot items directly on furniture surface.
- O Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- $_{\odot}$ \bigwedge Do not write on furniture without a padded barrier to protect the surface.
- Solution States States and Sta
- Not for commercial use . For residential use only.
- Stains may be removed with mild soup solution and damp cloth.
- Similar Children should not climb or jump on the furniture.
- ✓ Dust and pick-up spills using a clean, non-colored lint-free cloth.