 





Assembly Instructions

  
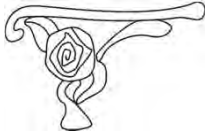 

Caution : You must read this before you proceed

GARDEN BENCH

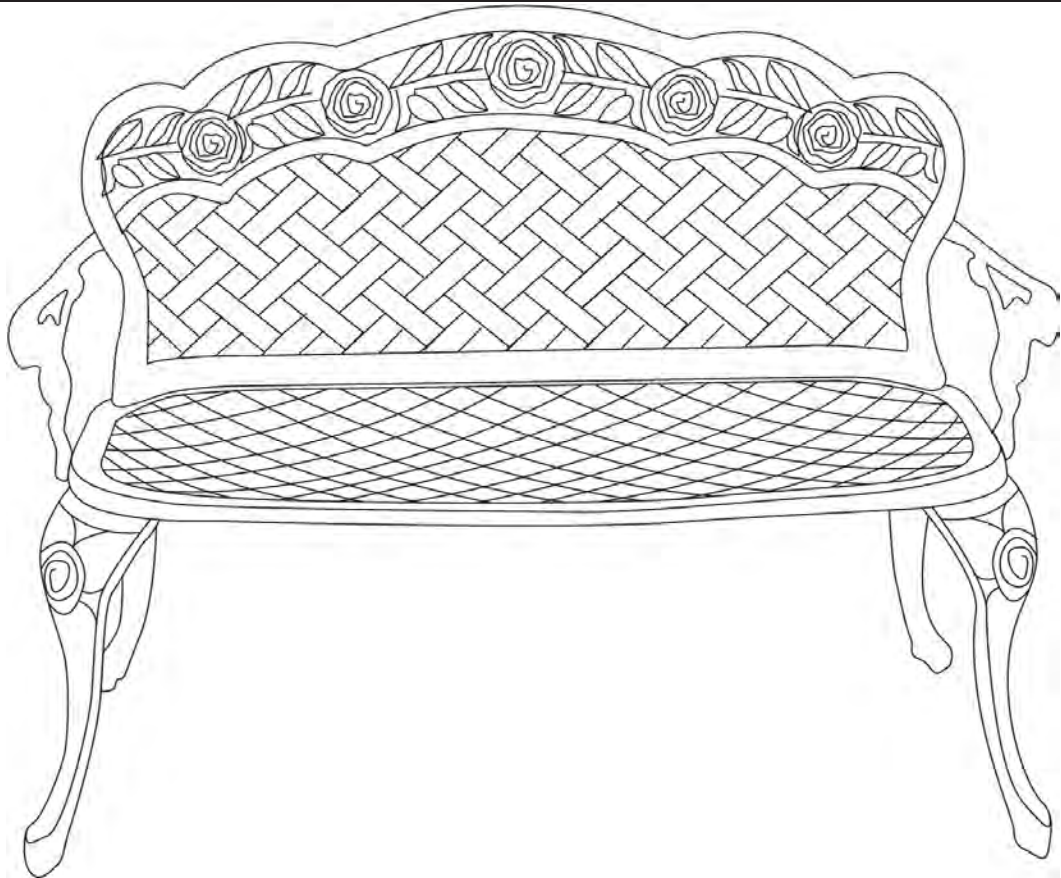 


 

 
 


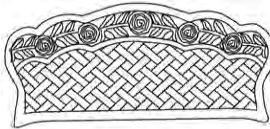
Parts List


Label	Picture	Description	QTY
A		Backrest Panel	1
B		Chair Seat Panel	1
C		Hind legs	2

D		Front legs	2
E		Right arm	1
F		Left arm	1

Hardware

Label	Picture	Description	QTY
①		Bolts(M6*15mm)	3
②		Washers (8mm)	14
		Springs Washers (8mm)	14
		Nuts (8mm)	14
③		Bolts (M6*30mm)	5
		Washers (6mm)	5
		Spring Washers (6mm)	5
		Nuts (6mm)	5
④		Studs (M8*40mm)	14
⑤		Spanner	1
⑥		Screwdriver	1

 Assembly Preparation
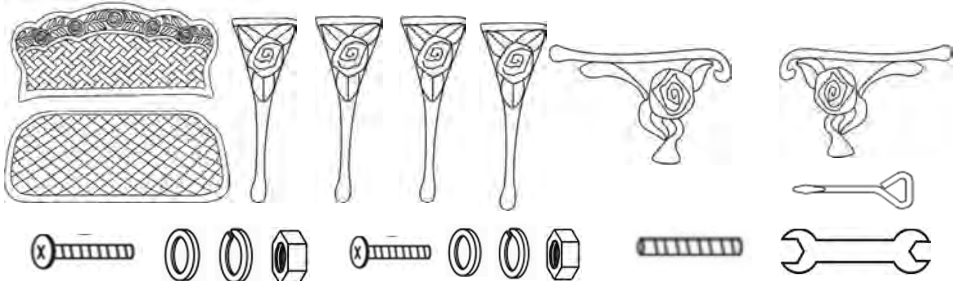
<p>Before Beginning Assembly:</p>	
-----------------------------------	--



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

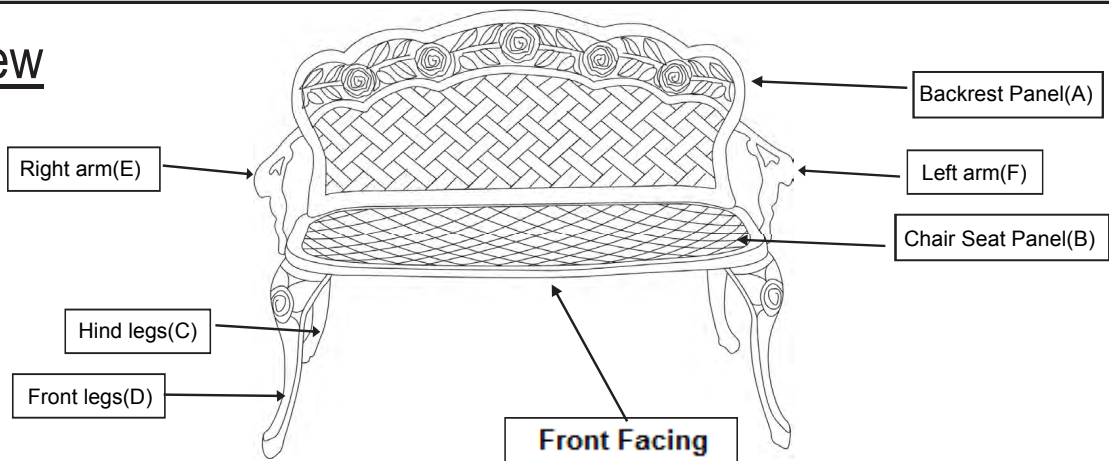


This Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the 6 parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

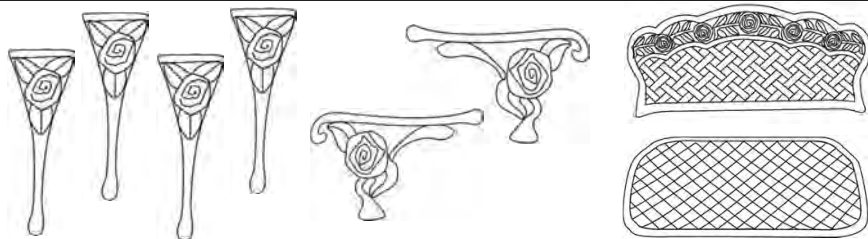

Place all parts on a clean soft surface.

 
Step 2

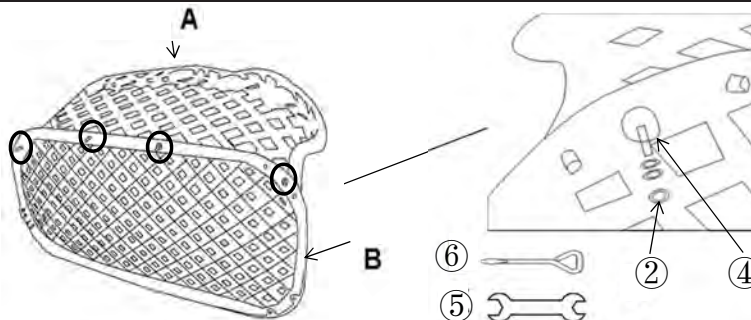

Place the Seat and Backrest panels as shown in above pictorial. Attach the Studs (④)((M8*40mm)) into the contact points on the Chair Back Panel (A) using the Screwdriver (⑥).


Then attach the Seat Panel (B) to the the Chair Back Panel (A) using Washers, Spring Washers and Nuts (8mm)(②).
Tighten the Nuts using the Spanner (⑤).
DO NOT tighten down the screws/bolts until all are in place.

 Step 3

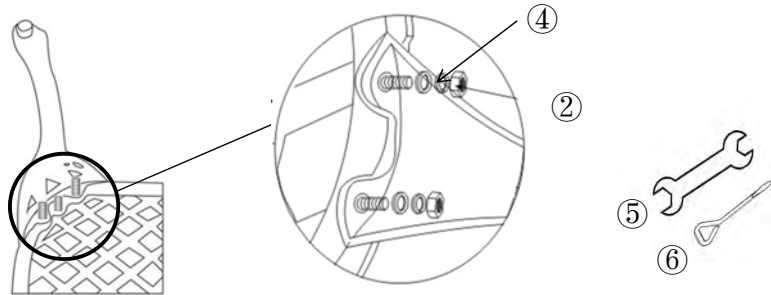

Attach the Studs(④)(M8*40mm) to the contact points on Chair Seat Panel (B) using the Screwdriver (⑥) .
Then attach the Hind legs (C) and Front legs (D) onto the Chair Seat (B) using the Washers, Spring washers and Nuts(8mm) (②).
Tighten the Nuts using the Spanner (⑤).
DO NOT tighten down the screws/bolts until all are in place.
Repeat this procedure for the remaining Legs .

 Step 4

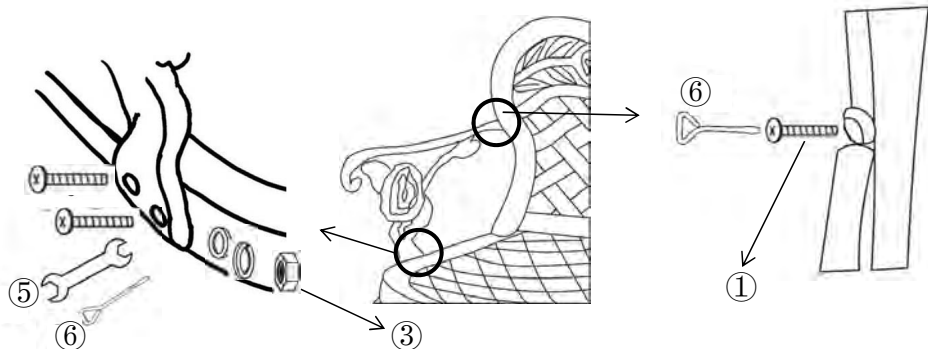



















Connect the Right arm(E) and Left arm (F) to Seat Panel (B) using Bolts, Washers, Spring washers and Nuts (6mm)(③).
Use the Spanner (⑤) to hold the bolt, and with the Screwdriver (⑥), turn in the Nut(③).
Connect Right arm(E) and Left arm (F) to the side of Backrest Panel(A) using Bolt (6mm) (①) with the Screwdriver (⑥) .
DO NOT tighten down the screws/bolts until all are in place.

Step 5



Turn the Bench rightside.
Adjust the pre-installed Rubber Caps until the bench is level with the ground .
Now, fully and securely, tighten all screws and bolts, at all joints.
Once completed this action, this Garden Bench is ready for use.
This Chair can only be used on a flat,level surface.

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   ● Children should not climb or jump on the furniture.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

