WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip restraint help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over


- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product



Assembly Instructions

Caution: You must read this before you proceed

3 Drawer Wide Chest

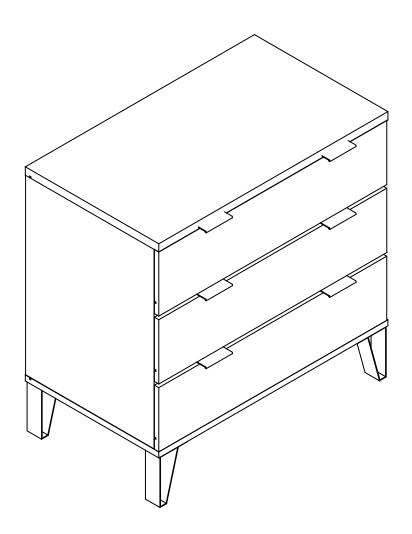

Parts List			
Label	Picture	Description	QTY
А		Side Panel Left	1
В		Side Panel Right	1
С		Top Panel	1
D		Bottom Panel	1
E		Support Panel Lower (Back)	1
F		Support Panel Lower (Front)	1
G		Support Panel Upper	1
Н		Drawer Front	3

I		Drawer Side Left	3
J		Drawer Side Right	3
К		Drawer Back	3
L		Drawer Support	3
М	<u>©∞000 00 00 00 000000000</u>	Drawer Slide (CL)(350mm)	3
N	<u>0 00000 00 0 00 00 00 00 00 00 00 00 00</u>	Drawer Slide (CR)(350mm)	3
О	(Drawer Slide (DL)(350mm)	3


Р	<u> </u>	Drawer Slide (DR)(350mm)	3
Q		Metal Leg (150mm)	4
Y		Back Panel	1
Z		Drawer Bottom (1S)	3

<u>Hardware</u>			
Label	Picture	Description	QTY
1)		Cam Bolt	15
2		Cam Lock (12/15)	9
3		Cam Lock (9/15)	7
4		Wood Dowel (D6x30mm)	37
(5)	%	Csk Screw (M3.5x15mm)	43
6	a	Euro Screw (M6x9mm)	13
7	@mmmmm>	Csk Screw (M4.7x38mm)	13
8		L-Shape Handle	6
9		Unitar Screw (M6.3x40mm)	5
10)		Backply Stopper	8
11)	X	Csk Screw (M3.1x20mm)	8

(12)	0	Nail Pin	5
(13)	(a)	Csk Screw (4.0 x 30mm)	3
<u>(14)</u>		Allen Wrench (M4)	1
(15)		Power Drill (not provided)	1
<u>16</u>		Hammer(not provided)	1
(17)		Screwdriver(not provided)	1
	Tipover Rest	raint Device Hardware	
18	00	Metal Bracket	4
19	(4(4(m 1 m)	Wall Plug (25mm)	2
20	(2000000000)>	Pan Head Screw (M4 x 25)	2
21)		Tipover Restraint Strap	2
	•		•

Assembly Preparation

Before Beginning Assembly:

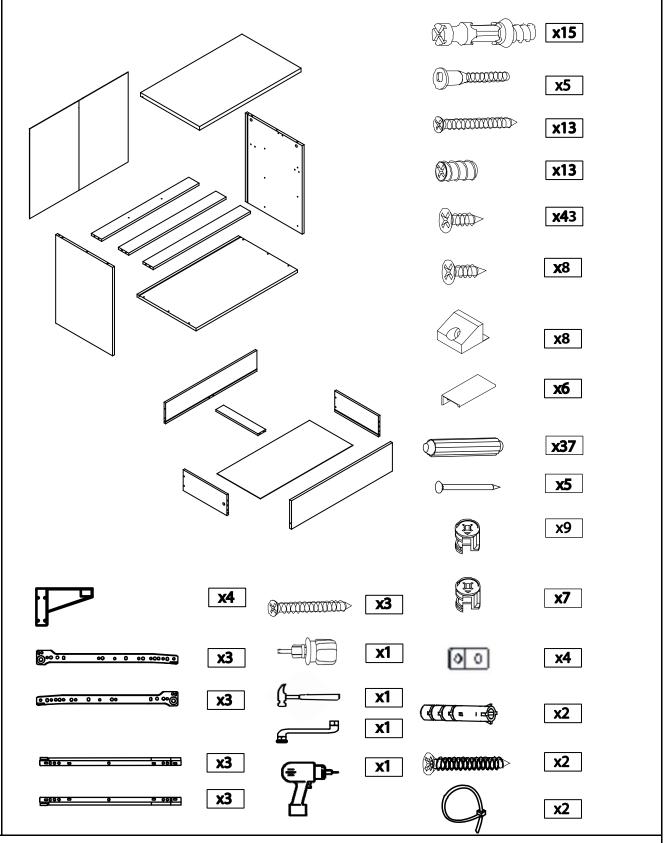




- Read instructions, cover to cover-
- **★**2×**↑**
 - Have 2 adults on hand for assembly-
- 4
- Do not assemble on flooring or carpet-
- A
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps


Overview

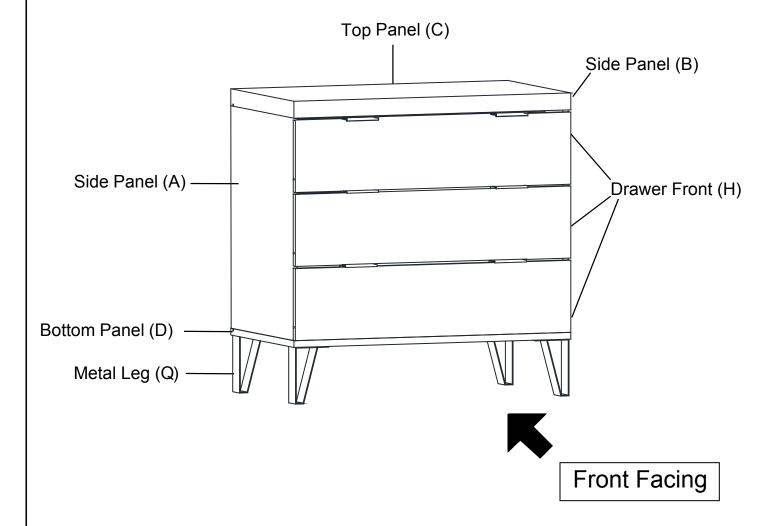

This Drawer Chest has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Drawer Chest parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Assembly Steps

Step 1

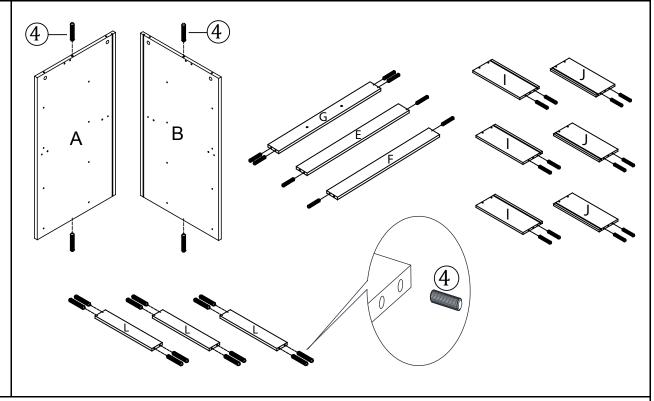


Unpack and place all parts on a clean, non-marring surface. Insert the positioning Dowels (4) into the mounting positions the Side Panel (A), Side Panel (B), Support Panel (E), Support Panel (F), Support Panel (G), Drawer Side Left (I), Drawer Side Right (J) and Drawer Support (L).

Step 2

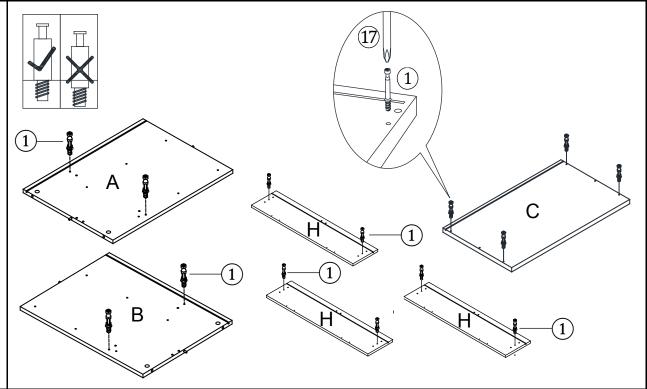


Insert Cam Bolts (1) into the mounting positions on the Side Panel (A), Side Panel (B), Top Panel (C) and Drawer Front (H) with a Screwdriver (17)

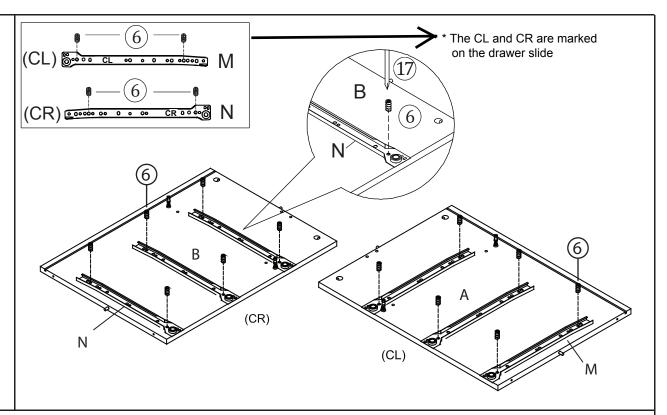


Attach Drawer Slide CL (M)onto Side Panel (A) and attach Drawer Slide CR (N)onto Side Panel (B). Then, use Euro Screws (6) to attach the Drawer Slides to the Side Panels.

Step 4

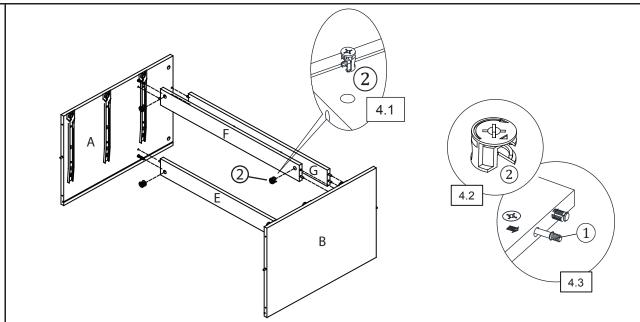


- 4.1) Insert Cam Locks(2) into the mounting positions on the Support Panel (E) and Support Panel (F), and Support Panel (G) by hand.
- 4.2) Position the Cam Locks arrow (2) so it is directed towards the hole where the Cam Bolts (1) will be inserted.
- 4.3) Insert the Cam Bolts (1) to attach the Side Panel (A) and Side Panel (B) to the mounting positions of the Support Panel (E), Support Panel (F) and Support Panel (G) on both side. Then, position Cam Locks (2) arrow away from the direction of the hole, using the Screwdriver (17).

Tighten the Screws fully in a sequential manner

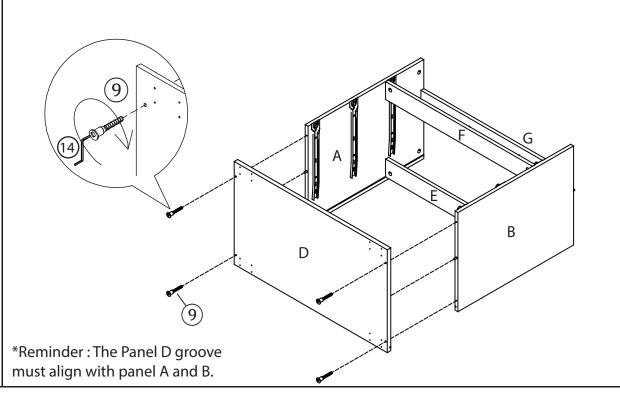


Make sure all panels which have grooves are facing each other Attach the Bottom Panel (D) to the Panel (A) and Panel (B) using the Unitar Screws(9) and the Allen Wrench (14).

Step 6

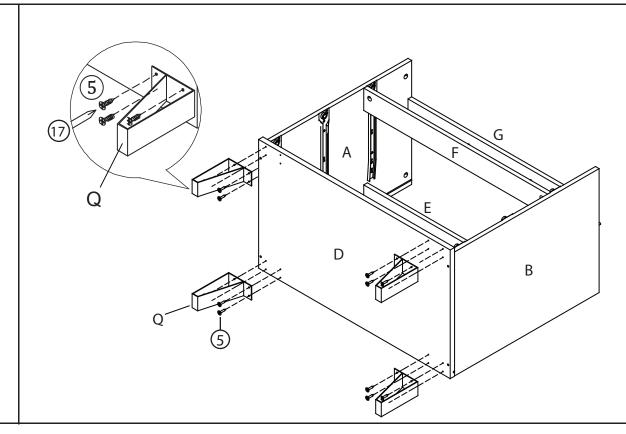


Follow the preholes at the Bottom Panel (D), then attach the Metal Legs (Q) by screwing in four Csk Screws (5) using the Screwdriver (17).

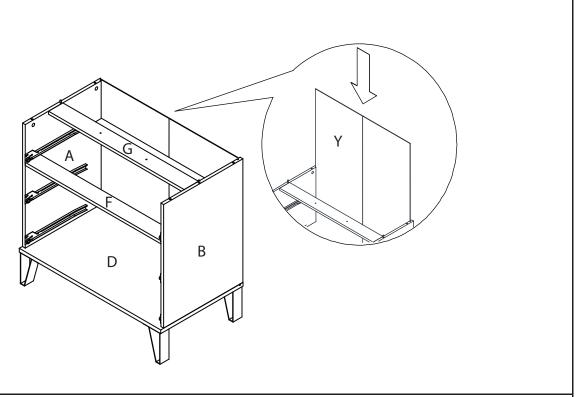


Insert the Back Panel (Y) along the slots on the Side Panel (A) and Side Panel (B).

Step 8

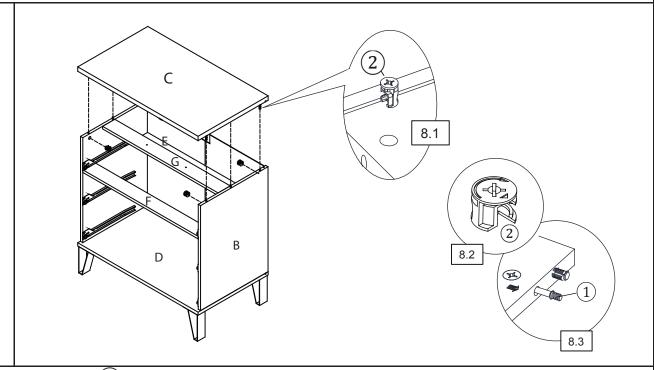


- 8.1) Insert Cam Locks(2) into the mounting positions on the Side Panel (A) and Side Panel (B) by hand.
- 8.2) Position the Cam Locks arrow (2) so it is directed towards the hole where the Cam Bolts (1) will be inserted.
- 8.3) Insert the Cam bolts (1) that attach at the Top Panel (C) to the mounting positions on Side Panel (A) and Side Panel (B) on both sides. Then, position the Cam Locks (2) arrow again away from the direction of the hole, using a Screwdriver (17). **Tighten the Screws fully in a sequential manner**

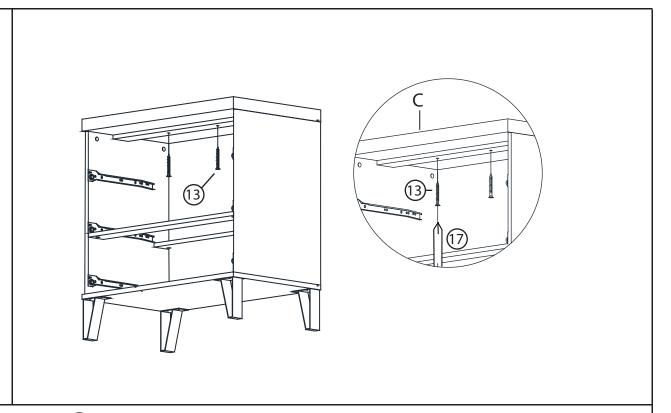


Insert Csk Screws (13) into the Support Panel (G) and attach to the Top Panel (C) using the Screwdriver (17).

Step 10

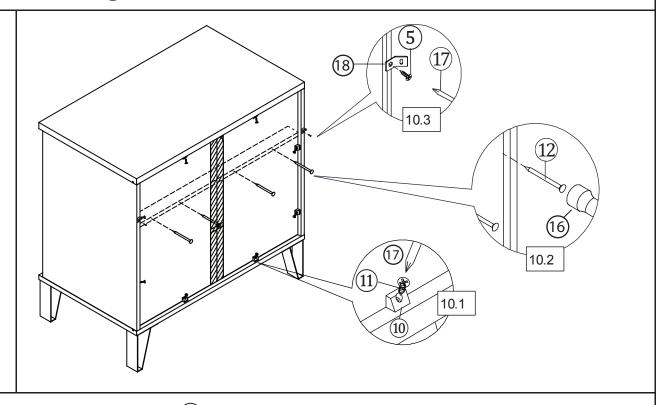


- 10.1) Attach Backply Stoppers (10) to the Back Panel (Y) using Csk Screws.
- 10.2) Hammer the Nail Pins ((12)) into the Back Panel (Y) to secure the position, using Hammer((16)).
- 10.3) Attach Metal Brackets ((8)) to the edge of the prehole on Side Panel (A) and (B) using CSK Screws ((5)) and the Screwdriver ((17)).

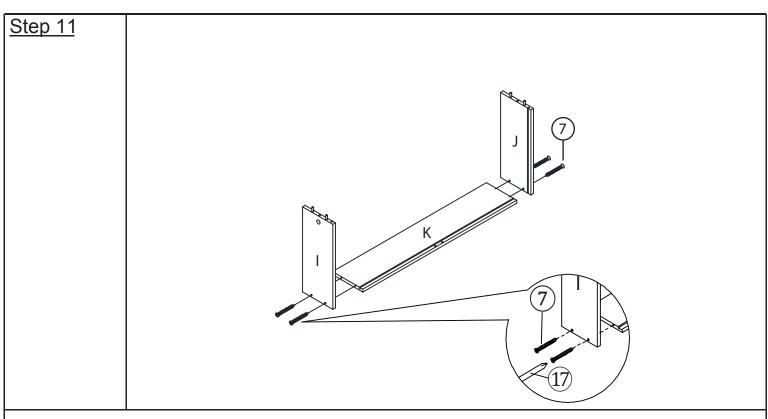

Attach Drawer Side Right (J) and Drawer Side Left (I) to Drawer Back (K) using CSK Screws (7) and the Screwdriver (17).


<u>Step 12</u>

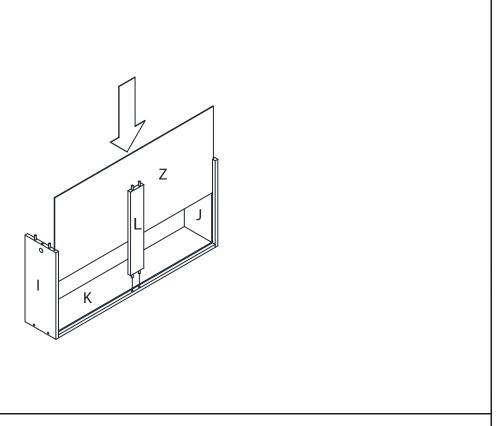

Insert the Drawer Bottom (Z) and Drawer Support (L) along the slot on the Drawer Side Right (J) and Drawer Side Left (I).


- 13.1) Insert Cam Locks (3) into the mounting positions on the Drawer Side Right (J) and Drawer Side Left (I) by hand.
- 13.2) Position the Cam Locks arrow (3) so it is directed towards the hole where the Cam Bolts (1) will be inserted.
- 13.3) Insert the Cam Bolts (1) that attach at Drawer Front (H) to the mounting positions on the Drawer Side Right (J) and Drawer Side left (I). Then position the Cam Locks (3) arrow away from the direction of the hole, using the Screwdriver (17).

Tighten the screws fully in a sequential manner

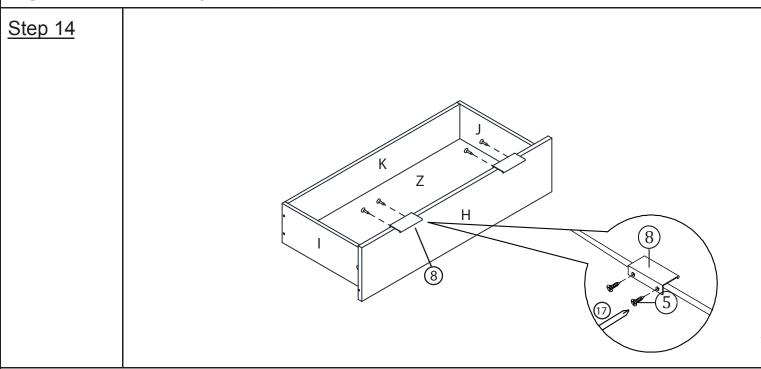


Follow the preholes, attach L-Shape Handle ((8)) onto the Drawer Front (H) and secure with two Csk Screws((5)) using Screwdriver ((7)) for each handle.

<u>Step 15</u>

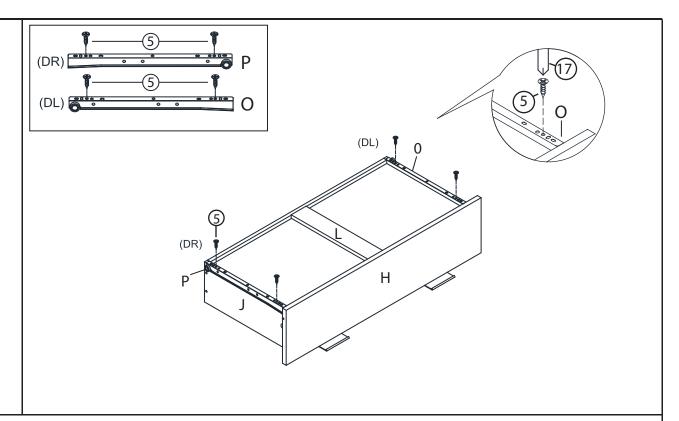


Place the Drawer Slide DR (P) onto the Side Drawer Right (J) and place Drawer Slide DL (O) onto the Drawer Side Left (I) and secure them using two Csk screws (5) and the Screwdriver (17) on each side.

<u>Step 16</u>

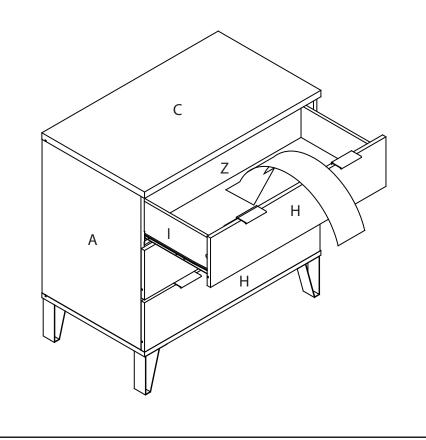

Slide each drawer into its place.

<u>Step 17</u>

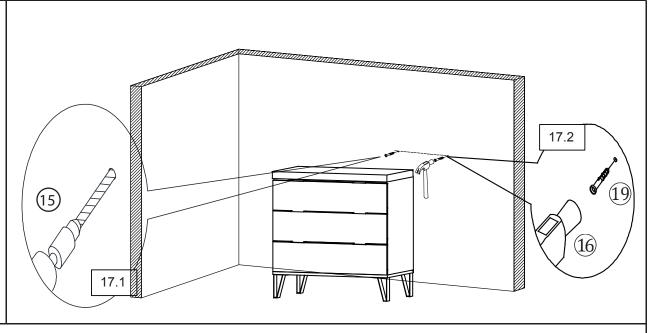


- 17.1) Using a Power Drill(15), Drill two holes into the wall at the same height the Metal Brackets(18) that you have placed on the 4 Drawer Wide Chest **You can mark these points in the following ways:**
- 1) Measure the height of the Metal Brackets(18) with a ruler/measuring tape and mark on the wall to keep them accurate and at the same height.
- 2) Mark two points on the wall, the same height as the Metal Brackets on the back side.


Note: The Metal Brackets need to be secured to a solid, load bearing surface. Please use a Stud Finder (not supplied) if needed to locate the Wall Frame

17.2) Insert the Wall Plugs(19) into the holes in the wall, using a Hammer(16).

Step 18

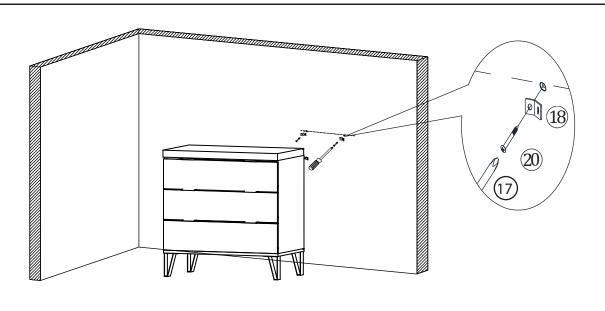

Attach the Metal Brackets(18) to the Wall Plugs(19) using Pan Head Screws(20) and a Screwdriver(17).

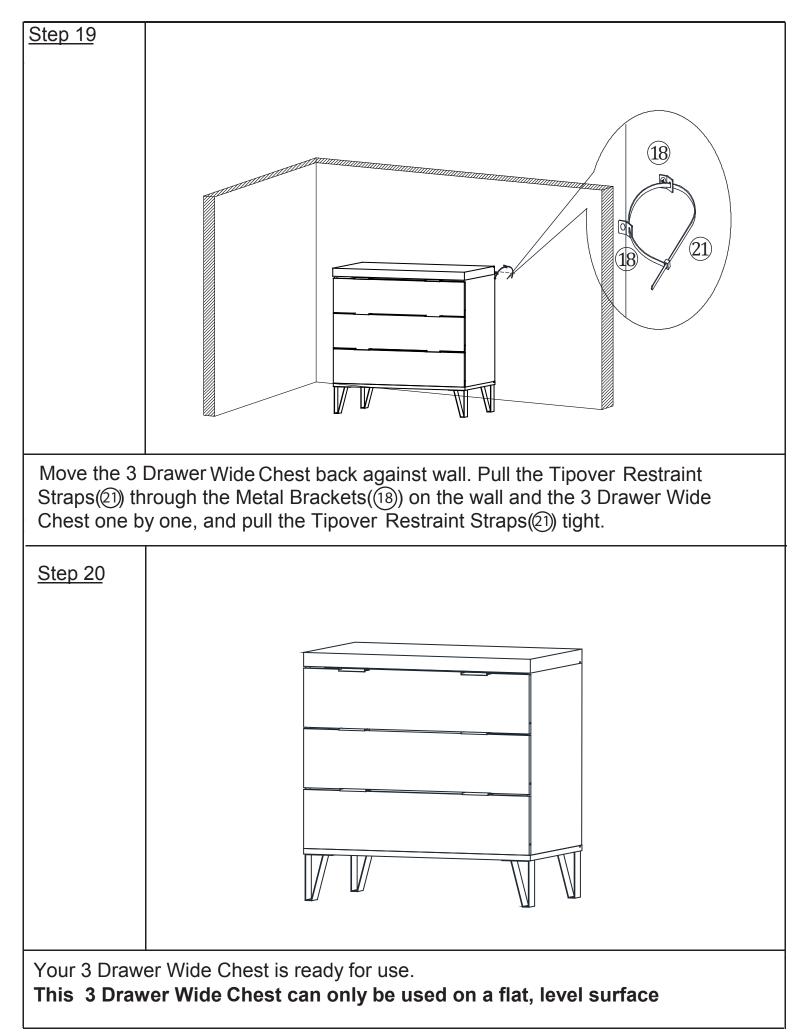

Care & Maintenance



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



• Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.