## ECHOSMILE POP UP TENT INSTRUCTIONS

## **Attention**

## Maintence method





<sup>①</sup>Tent X 1



③Ropes X 4





 
- 1. Make the tent free from sharp objects, such as stones, grass roots, nails, etc. 2. Do not set up the tent near the fire
- 3. Please set up the tent on the flat ground 1. 3. Please store it separately to avoid pressure
- 4. Please check the tent accessories every time before you erect it
- 5. Tent entrances and exits should be free from the draught
- 1. Clean the tent, poles, pegs and other accessories after use
- 2. Please keep it in a dry and clean place
- 4. Do not use detergent to clean

 
strap

5. Do not use washing machine for cleaning



Throw it into an open area, it will be opened automatically in second!








1.Get the tent ready and fold 4 poles together.



 2.Holding the tent upright(with the black straps facing down).






3.Bend the top of the tent inwards towards the centre of the tent.




4. Continue to tuck the top into the base to form two large circles.

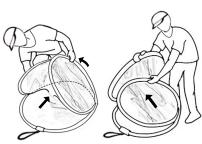

5.Bend inward to avoid rebound. Release one circle on your left hand and then push it under the other circle.



6.Press down the top circle directly.

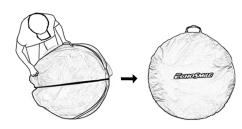

7. Find the tent strap and fix it around the middle of the tent. Then place the tent into the carry bag.

## **WARNING:**

- riangle Do not use this product in bad weather, riangle Children and minors should use it under such as strong winds, heavy rain, hail, etc.  $\triangle$  Tent pegs and ropes may cause tripping.  $\triangle$  Please take care of your belongings and Please pay attention to the surrounding environment and make warning signs
  - the supervision of adults
  - pay attention to personal safety when camping



EchoSmile offers you 100% Satisfaction Guarantee. If there is any question or if there are any problems with the product, please contact us via Amazon email, we will be sure to address any issues as soon as possible.