

# ECHOSMILE POP UP TENT INSTRUCTIONS

## Contents



① Tent X 1



② Peg bag X 1



③ Ropes X 4



④ Tent Pegs X 8


## Attention

1. Make the tent free from sharp objects, such as stones, grass roots, nails, etc.
2. Do not set up the tent near the fire
3. Please set up the tent on the flat ground
4. Please check the tent accessories every time before you erect it
5. Tent entrances and exits should be free from the draught

## Maintenance method

1. Clean the tent, poles, pegs and other accessories after use
2. Please keep it in a dry and clean place
3. Please store it separately to avoid pressure
4. Do not use detergent to clean
5. Do not use washing machine for cleaning


## How to set up

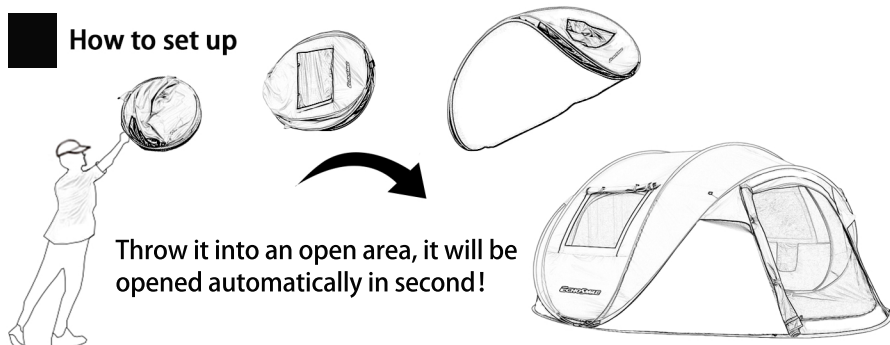

Throw it into an open area, it will be opened automatically in second!


⚠ The tent will automatically open after being unfastened. Please throw it toward empty areas after unfastening the straps to guarantee the safety of yourself and the people around you!

## How to fold

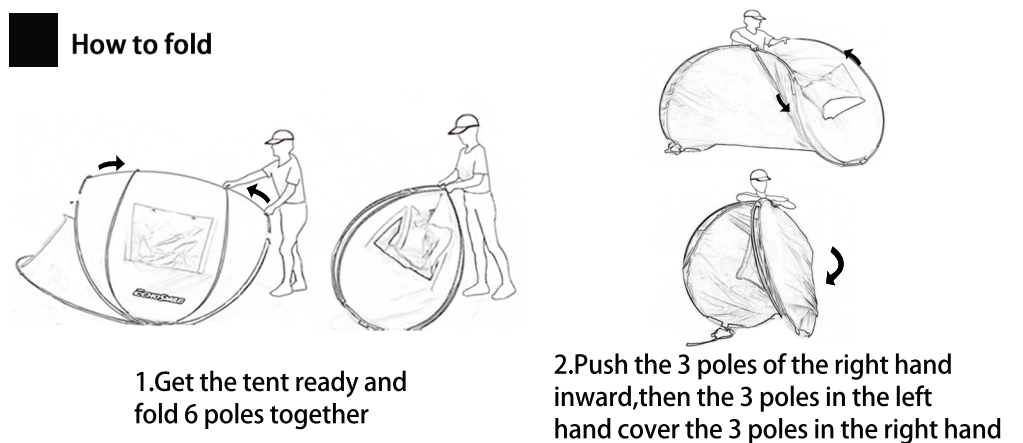


1. Get the tent ready and fold 6 poles together

2. Push the 3 poles of the right hand inward, then the 3 poles in the left hand cover the 3 poles in the right hand

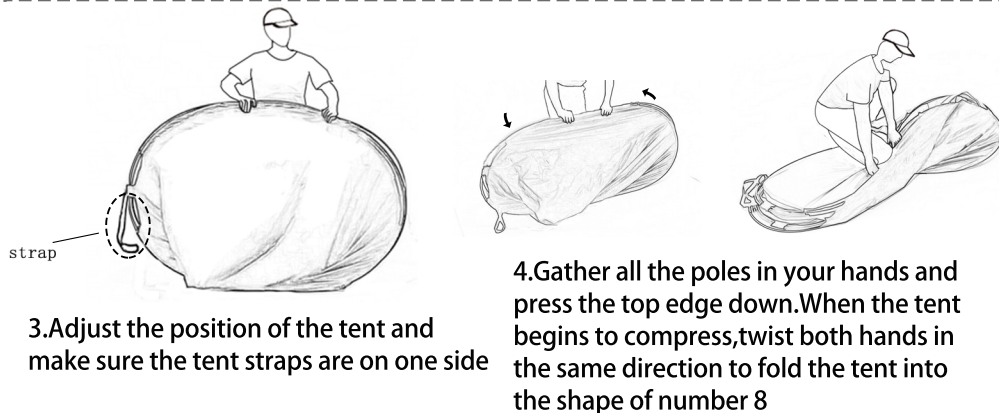

3. Adjust the position of the tent and make sure the tent straps are on one side

4. Gather all the poles in your hands and press the top edge down. When the tent begins to compress, twist both hands in the same direction to fold the tent into the shape of number 8

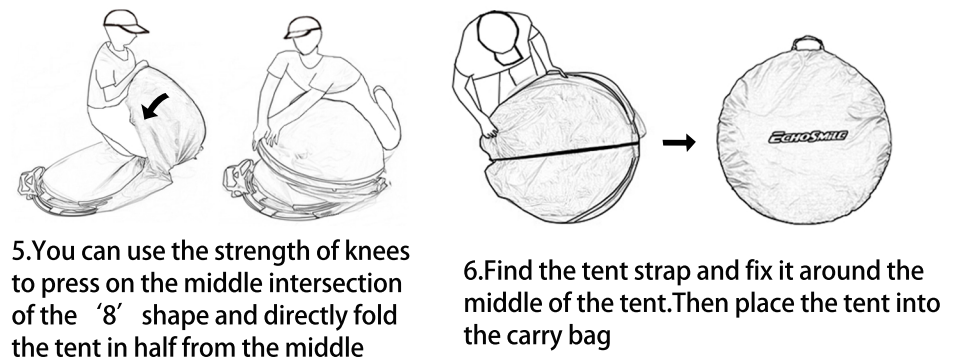

5. You can use the strength of knees to press on the middle intersection of the '8' shape and directly fold the tent in half from the middle

6. Find the tent strap and fix it around the middle of the tent. Then place the tent into the carry bag

## WARNING:

- ⚠ Do not use this product in bad weather, such as strong winds, heavy rain, hail, etc.
- ⚠ Tent pegs and ropes may cause tripping. Please pay attention to the surrounding environment and make warning signs
- ⚠ Children and minors should use it under the supervision of adults
- ⚠ Please take care of your belongings and pay attention to personal safety when camping

**ECHOSMILE**  
THE MEANING OF LIFE

EchoSmile offers you 100% Satisfaction Guarantee. If there is any question or if there are any problems with the product, please contact us via Amazon email, we will be sure to address any issues as soon as possible.