



ASSEMBLY INSTRUCTION

▽ PARTS*QTY

▽ ASSEMBLY STEPS

<p>STEP 1</p>	<p>STEP 2</p>	<p>STEP 3</p>	<p>STEP 4</p>
<p>STEP 5</p>	<p>STEP 6</p>	<p>STEP 7</p>	<p>FINISH</p>

<p>Ax1</p>	<p>Hx2</p>
<p>Bx1</p>	<p>Ix1</p>
<p>Cx1</p>	<p>Jx2</p> <p>M8x40mm</p>
<p>Dx1</p>	<p>Kx2</p> <p>M8x50mm</p>
<p>Ex1</p>	<p>Lx2</p> <p>M8x60mm</p>
<p>Fx5</p>	<p>Mx2</p>
<p>Gx2</p>	<p>Nx1</p> <p>Px1</p> <p>M8</p>

Please feel free to contact us when you have any question: HESLSERVICE@outlook.com