




 
 




 





 




 
 
 
	2PCS	A+A1		4PCS	I		54PCS	R
	2PCS	B+B1		2PCS	J		10PCS	S
	2PCS	C+C1		2PCS	K		1PCS	T
	2PCS	D		8PCS	L		1PCS	U
	2PCS	E		8PCS	N		1PCS	W
	4PCS	F		8PCS	O		1PCS	X
	4PCS	G+G1		38PCS	P		1PCS	M
	1PCS	H		8PCS	Q		1PCS	V

 
Schritt 1:

 


*Schritt 2:*

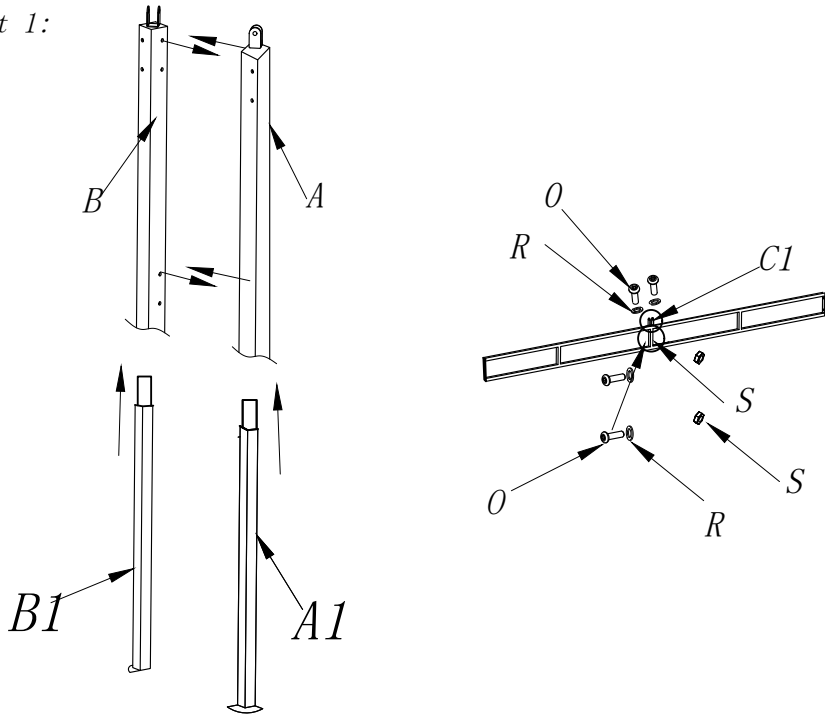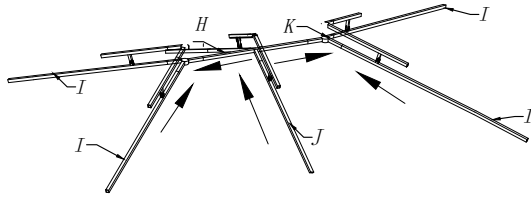

 
*Schritt 3:*

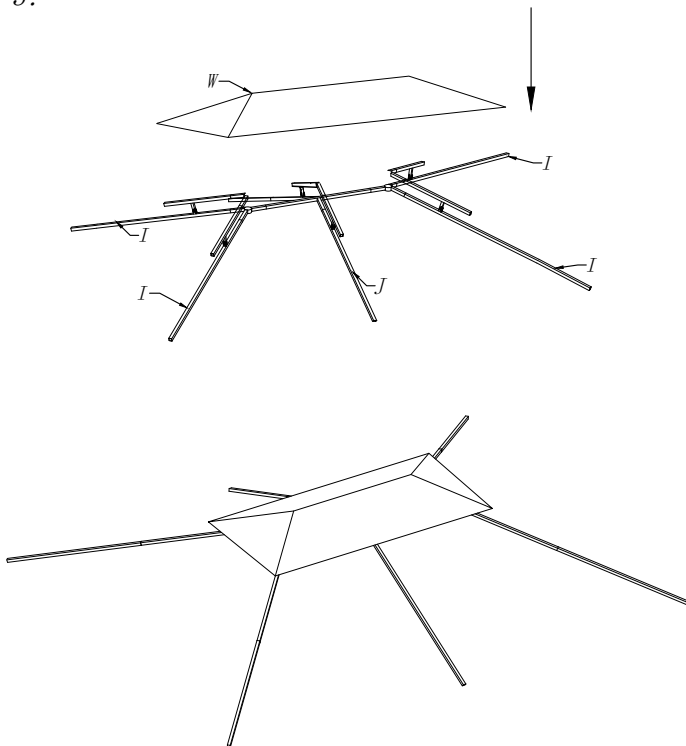

 
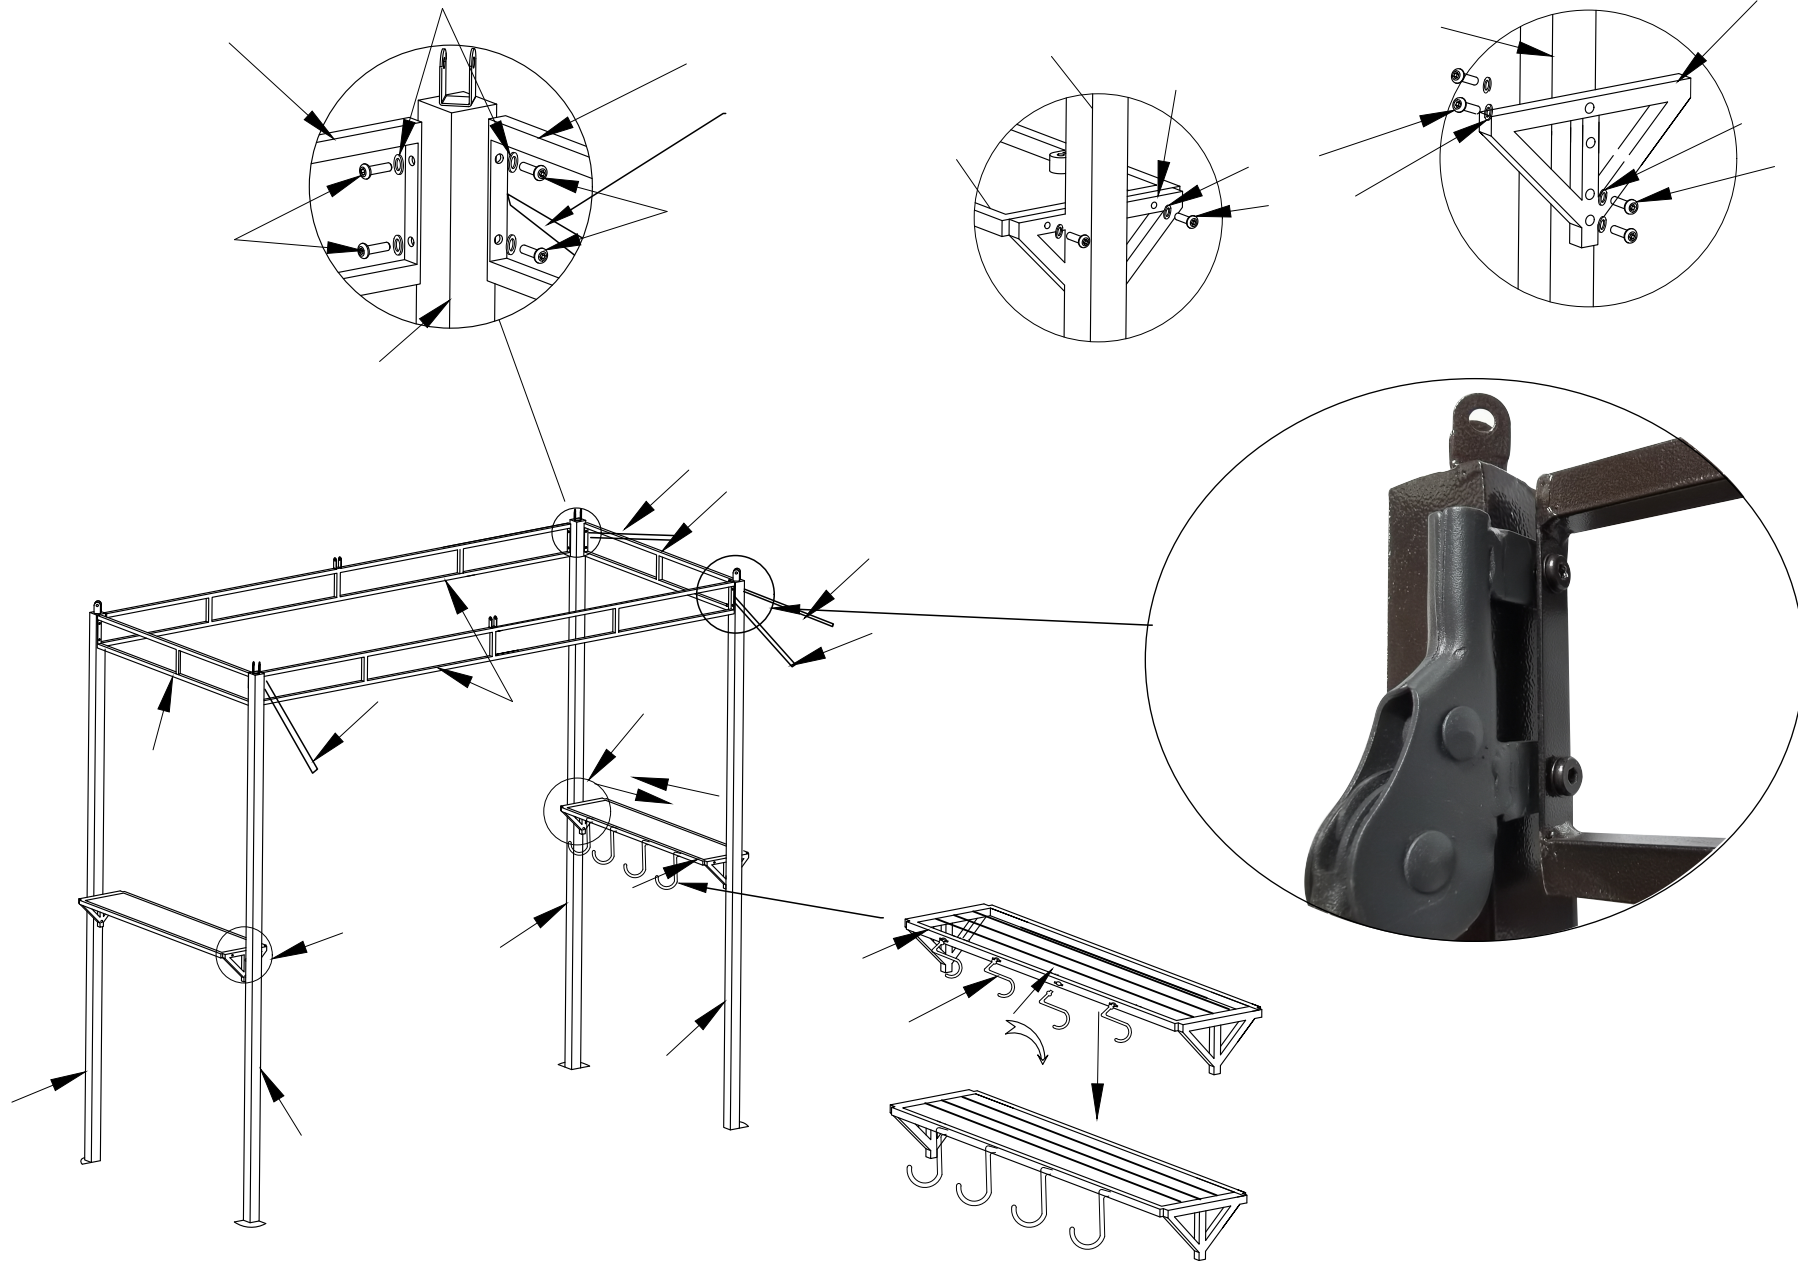 


*Schritt 8:*

*Schritt 6:*

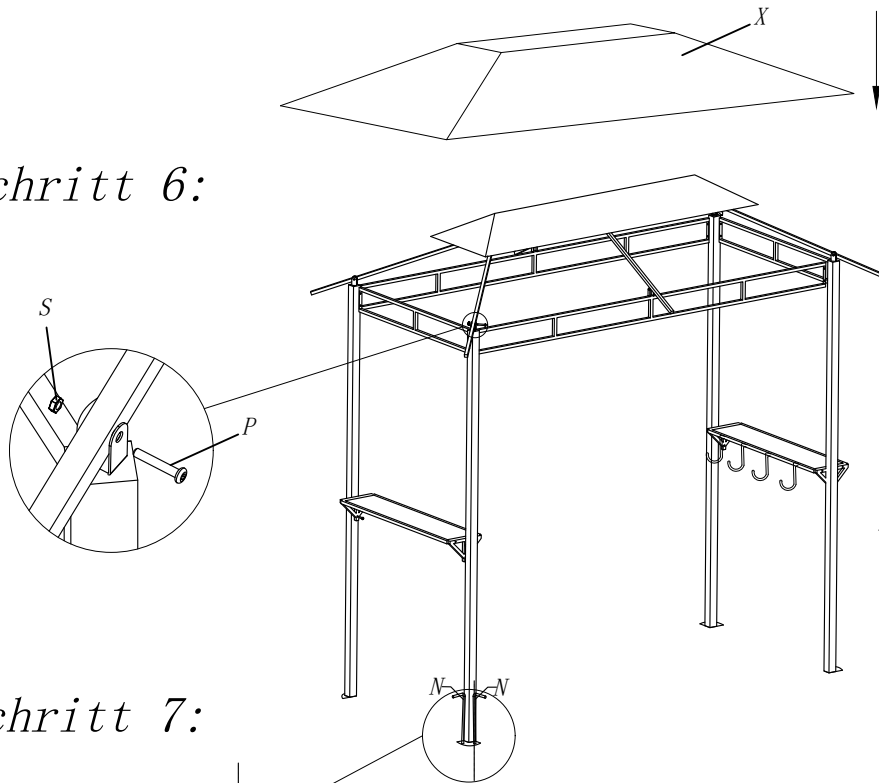

*Schritt 7:*

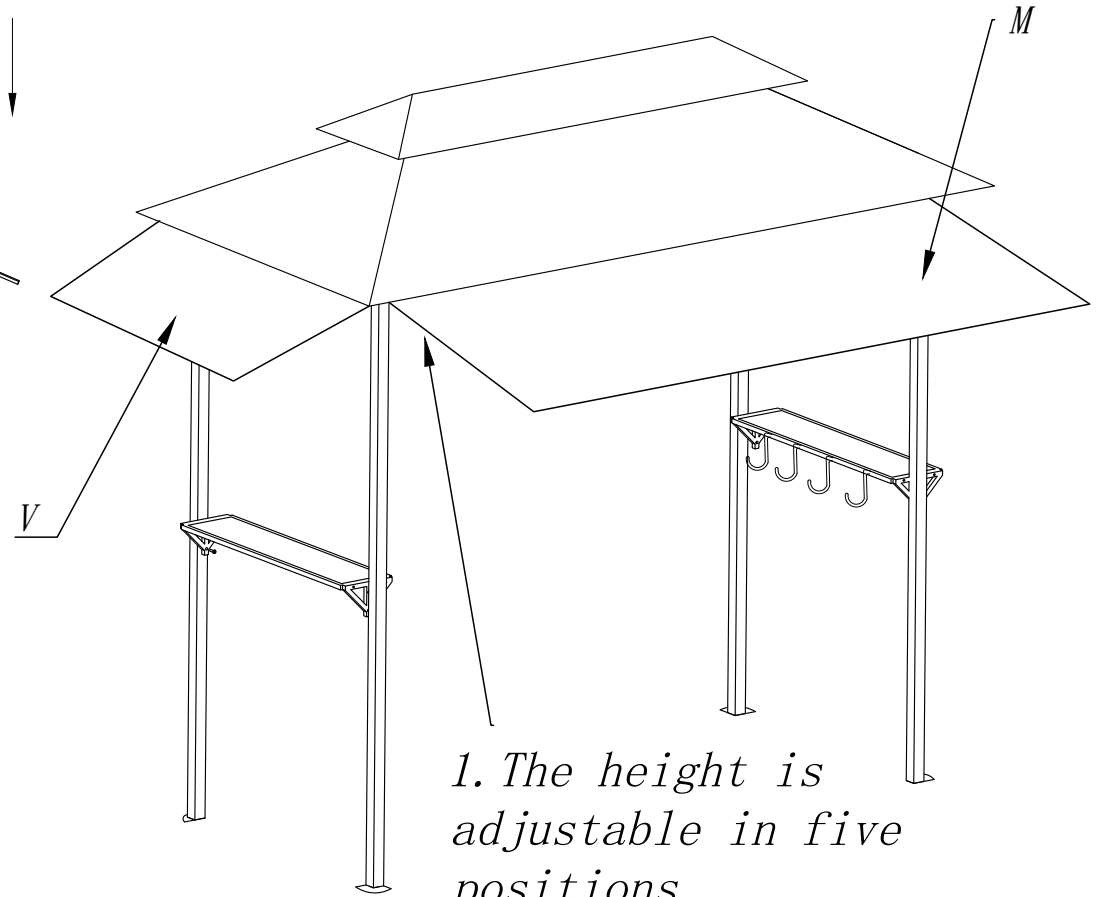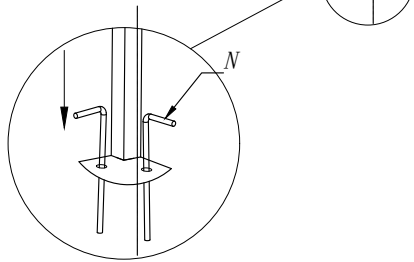

*1. The height is adjustable in five positions.*

*2. It can be reset only after rising to the highest point position.*