
Assembly Instructions

Caution: You must read this before you proceed

Chair

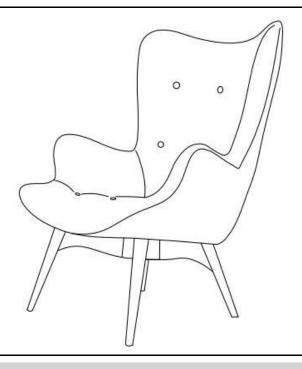


Parts List				
Label	Picture	Description	QTY	
А		Chair	1	
В		Chair Base	1	
<u>Hardware</u>				
Label	Picture	Description	QTY	
1)		Long Bolt (M8*55mm)	5	
② Noble House Home Furnish	lings LLC	Allen Key	1	

3	Washer	5
4	Spring Washer	5

Assembly Preparation

Before Beginning Assembly:

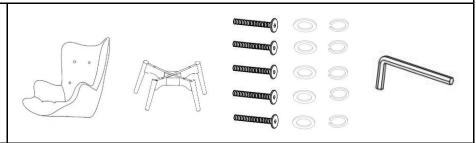



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

<u>Overview</u>

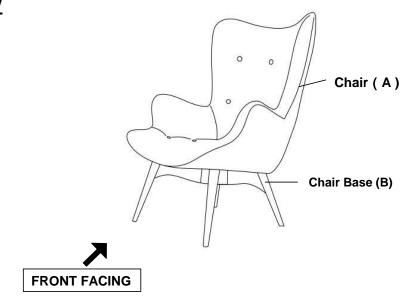


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

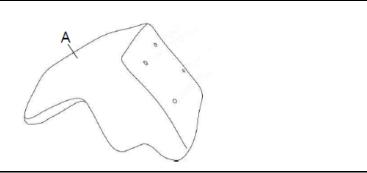

With assistance from your adult partners, Turn the Chair(A) face down on a clean, non-marring surface as shown in picture.

Step 2

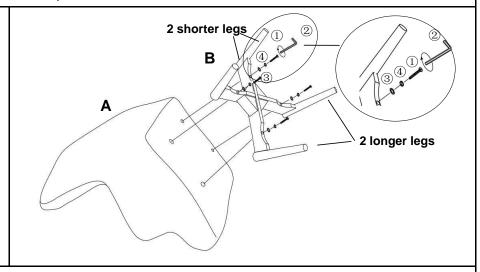

Attach Chair Base(B) onto the bottom of the Chair(A) using Bolts(1) \checkmark Spring Washer(4) \checkmark Washer(3) with Allen Key(2).


Note: The 2 shorter legs and 2 longer legs should be at the right direction as pictured above.

When tightening the Bolts, tighten sequentially.

DO NOT tighten any Bolt fully and then move towards the next one.

This could cause the other Bolts and mounting points to be out of alignment.

Step 3

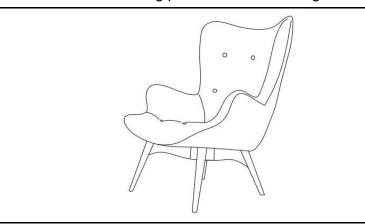

Ensure that all the Bolts are not fully driven in.

Stand the Chair right side up and ensure it is stable.

Place the Chair on a level Surface to check if it wobbles.

If it wobbles, it's very likely that the Chair Base is not fixed perfectly. Please remove the Chair Base Bolts and make a little adjustment. Then reattach.

If no wobbles are found, proceed to tighten all the Bolts.

Your Chair is ready for use.

Caution: This Chair can only be used on a flat, level surface.

Care & Maintenance

Do not put hot items directly on furniture surface

Do not clean furniture with harsh cleansers or polish.

Do not place furniture under direct sunlight.

Do not place furniture near heating or cooling vents.

Do not write on furniture without a padded barrier to protect the surface.

Do not place furniture outside . For indoor use only .

Not for commercial use. For residential use only .

Stains may be removed with mild soap solution and damp cloth.

Children should not climb or jump on the furniture.

✓ Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

