

 


MESH OFFICE-PC CHAIR

MODEL RTA-380C

ASSEMBLY INSTRUCTIONS


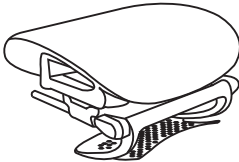 
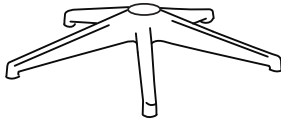 
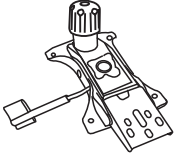 


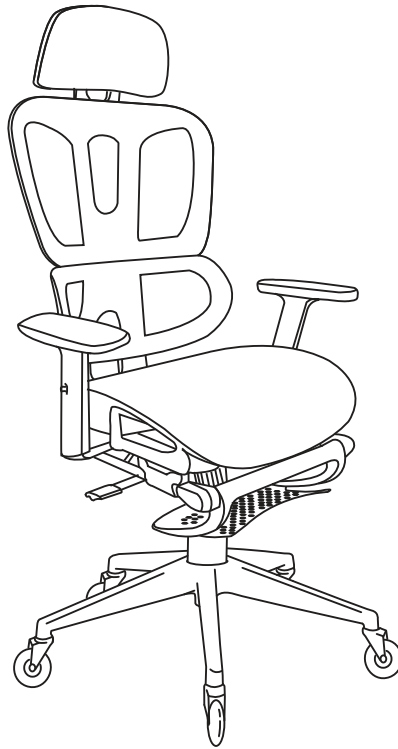






REV.ZK-1-8070-0424





 
 
 
Thank you for purchasing our product

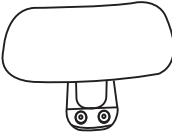


<p>Do a quick inventory of all the parts and hardware listed below.</p> 	<p>For Support, assembly questions & Replacement Parts within the 48 Contiguous United States:</p> <p>Please email us at: support@rtaproducts.com</p> 	<p>Replacement Parts for International Customers & AK-HI-PR orders: RTA Products will replace the part free of charge, while the customer is responsible for shipping costs plus any International local taxes or duties.</p>
---	---	---

MAIN PARTS LIST				
A x1 Backrest 	B x1 Seat with retractable foot rest 	C x1 5-Leg star nylon base 	D x1 Multi-function Mechanism 	
E x1 Lift cylinder 	F x5 Rollerbade Caster 	G-L x1 Left armrest  (Front) Sitting on the chair, not looking at it	G-R x1 Right armrest  (Front) Sitting on the chair, not looking at it	
H x1 Lift cover, SET of 3 cones 	I x1 Support for backrest 	J x1 Headrest 	K x1 Backrest cover 	L x1 Headrest cover 

HARDWARE LIST


Part #	QTY	SIZE/Description	Item
M	9	M6x20	
N	6	M6x30	
O	3	M8x20	
P	6	Ø8.5, Ø17, 1mm Metal washer	
Q	2	Ø10, Ø23, 6mm Plastic washer	

 
INCLUDED TOOLS


M5 Allen Wrench	
-----------------	---

IMPORTANT NOTES

- Do not discard this manual or any of the packaging material until the unit is completely assembled.

 
- Read the assembly instructions thoroughly and follow them step by step.



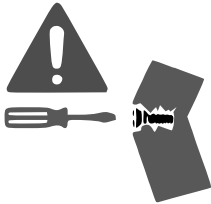

- Do not overtighten or force the screws as they might break, strip, damage the threads of the holes, or get stuck inside the parts.



ASSEMBLY STEPS

STEP 1

Hardware

N		6 Pcs
P		6 Pcs
Q		2 Pcs

M5 

PLASTIC WASHERS FOR INNERMOST HOLES ONLY

 
 


Flip over the seat **B** and pull out the footrest to allow access to the side holes. Put the plastic washers **Q** over the **INNERMOST** holes, and assemble the armrests **G-L**, **G-R** in their respective sides with screws **N** and metal washers **P**.

PLEASE NOTE:

- The armrests lean forward towards the **FRONT** of the chair.
- The side (left or right) is defined with you sitting on the chair, not looking at it.

PULL OUT FOOTREST AND PLACE PLASTIC WASHERS

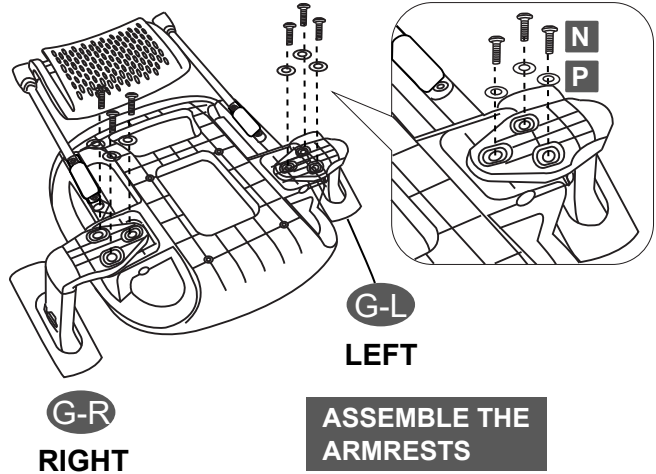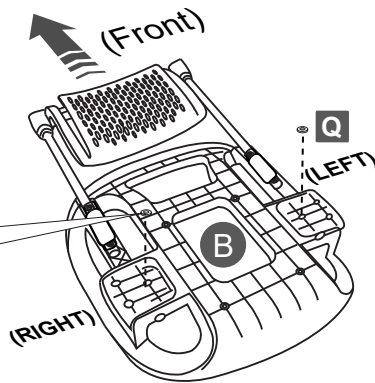



STEP 2

Hardware

M		4 Pcs
---	---	-------

M5 

  Place the mechanism **D** with its tilt knob facing towards the **FRONT**, and assemble it with screws **M**.

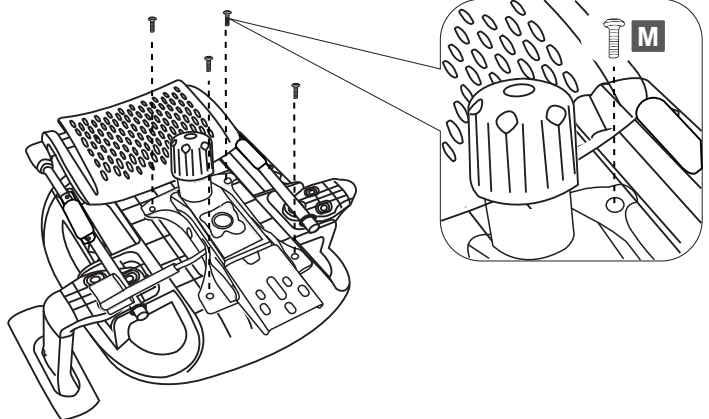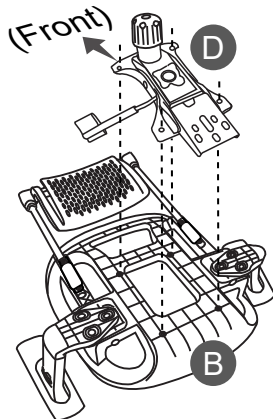



STEP 3

Hardware

O		3 Pcs
---	---	-------


M5 

  Assemble the support **I** under the plate of the mechanism **D** with screws **O**. The screws go through the plate and into the holes of **I**.

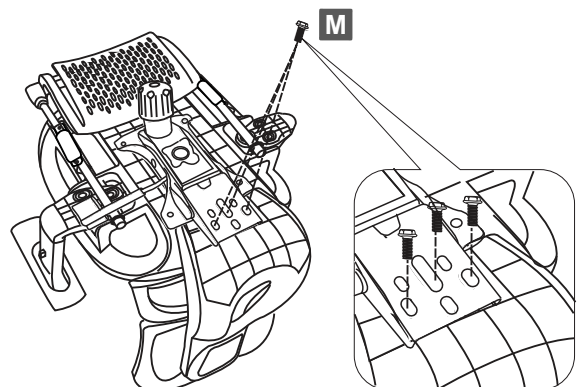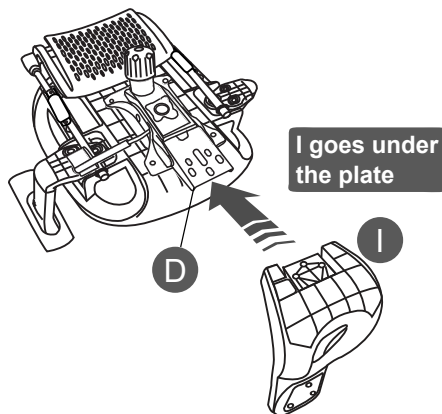


STEP 4

 Insert the casters **F** into each leg of the base **C** using pressure, then place the lift cylinder **E** in the middle of the base and cover it with **H**.

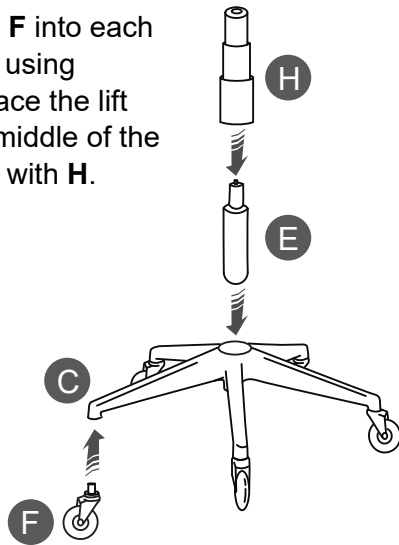

STEP 5

 Join the base parts to the seat making sure the tip of the lift **E** enters correctly into the hole of the mechanism **D**.

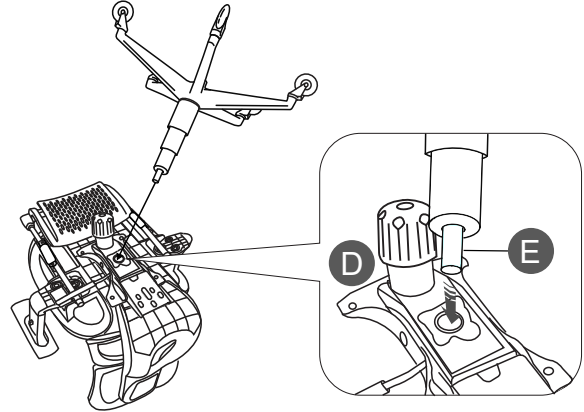



STEP 6

Hardware

M  **M6x20** 3 Pcs

M5 

  
Flip the unit upright and assemble the backrest **A** to the support **I** with screws **M**.

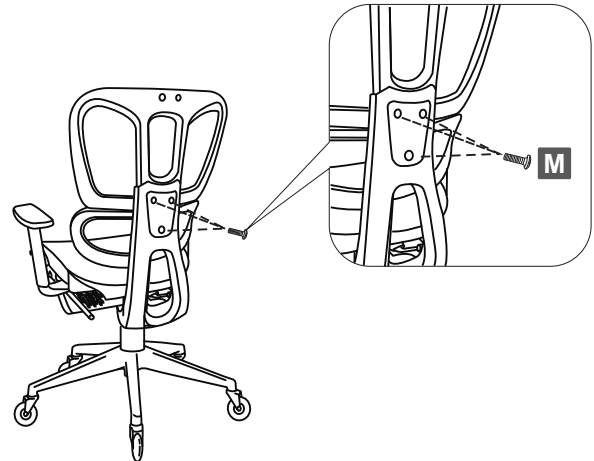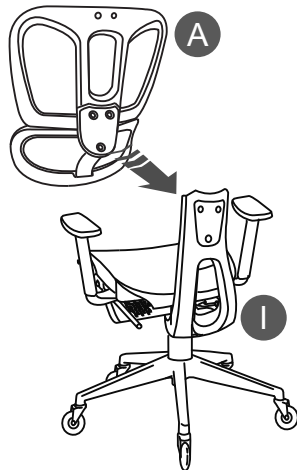


STEP 7

Hardware

M  **M6x20** 2 Pcs


M5 

 Assemble the headrest **J** to the backrest **A** with screws **M**.

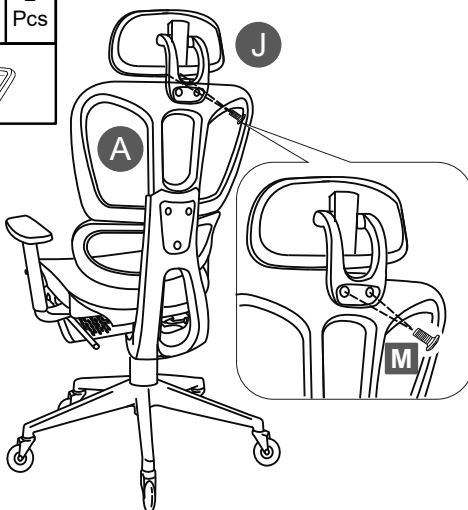

STEP 8

 
Attach the backrest cover **K** to the support **I** and the headrest cover **L** to the headrest **J**.

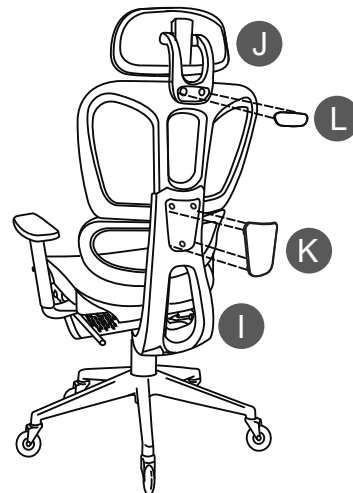


CHAIR'S FUNCTIONS

CHAIR HEIGHT:

 
Flip **DOWN** the handle on the lever that is under the seat on the right side. The chair goes down while sitting on it, or up if you lift your body.

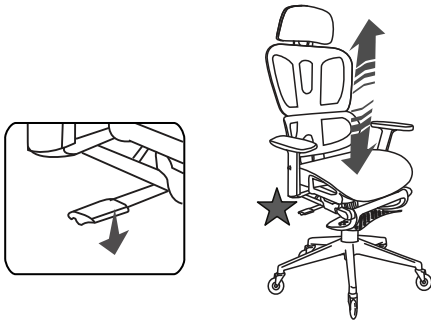**BACKREST RECLINING:**

 Pull **OUT** the same lever to **UNLOCK** and make the backrest recline freely. Push **IN** to lock at any angle.

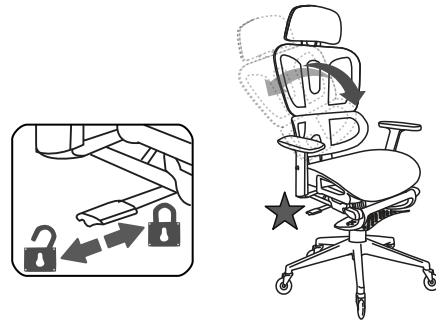
**RECLINING TENSION:**

 Turn the tension knob located at the front of the mechanism under the seat; turning **CLOCKWISE** will apply less tension, making the reclining feel easier, while turning **COUNTERCLOCKWISE** will apply more tension.

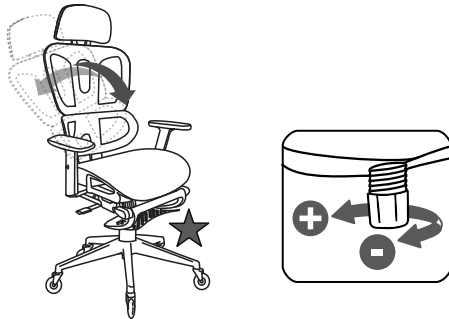
**FOOTREST:**

Pull it out from under the seat and flip it **UP**. **WARNING: NEVER try to get up from the chair while the footrest is OUT.**

 
To close it, flip it back **DOWN** and push it **IN** under the seat.

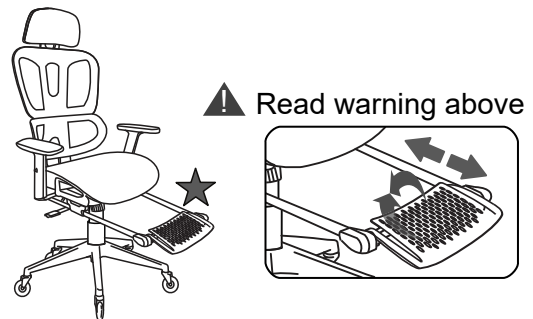**ARMRESTS HEIGHT:**

 
Press the button located on the outside of the armrest and release at the desired height.

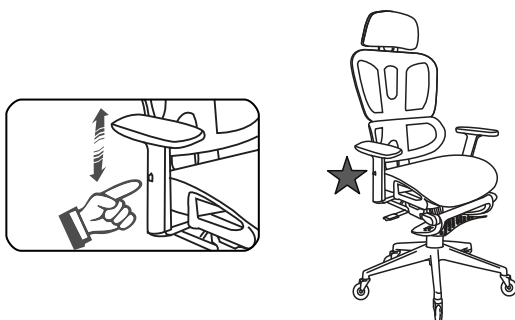**HEADREST ADJUSTMENTS:**

 For your comfort, the headrest can be manually adjusted **UP** and **DOWN** or tilted forward/backwards.

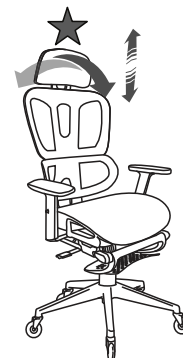

WARNINGS

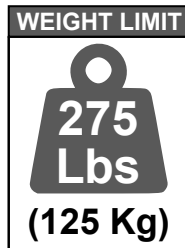 


Do not exceed Max. weight limit as indicated above.



Refrain from sitting on the edge of the seat to prevent the chair from tipping over.



 Only one person at a time.

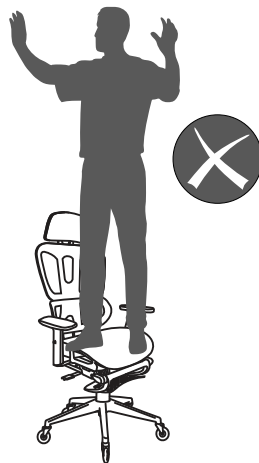

Do not stand or use the chair as ladder.



Do not leave babies or toddlers unattended while seated on the chair, always ensure adult supervision. Keep children from playing with the chair for their safety.



Do not use the chair if parts are bent, damaged, or if screws are loose or missing.

Not paying attention to the above warnings could result in injuries.

CARE AND MAINTENANCE

- To clean the chair it is recommended to use a soft cloth lightly dampened in a solution of smooth soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean any part of the chair.
- Before using a cleaning agent, test on a small hidden area of the chair, like underneath the seat.
- Do not expose the product to direct sunlight or to extreme environmental conditions.
- Inspect the chair completely every 4 months and make sure that all screws are tightened. Do not use if parts are bent, damaged, or if screws are loose or missing.

TECHNI MOBILI WARRANTY**EXECUTIVE/MANAGER CHAIR: 2-YEAR WARRANTY**

RTA Products, LLC has warranted the Techni Mobili office chairs to the original purchaser who acquired a new product from RTA Products or its authorized resellers of the product against defects in material or workmanship.

This warranty is expressly limited to the repair or replacement (at its option) of defective chair components or materials that fails under normal use as a result of a defect in materials or workmanship. This warranty is limited to merchandise purchased in the Continental United States, excludes AK, HI and PR. No assembly labor is included. The word "defects" as used in this warranty, is defined as imperfections that impair the utility of the product.

This warranty applies under conditions of normal use, but does not apply to defects that result from intentional damage, negligence, unreasonable use or exposure.

Liability for consequential damages is excluded to the extent exclusion is permitted by law. This warranty gives you specific legal rights, and you may have other rights that vary from State to State.

RTA Products does not warrant: a) natural variations in character marks b) changes in surface finishes due to aging or exposure to light c) marks, scars, or wrinkles occurring naturally in leather d) failure resulting from normal wear and tear e) the matching of colors, grains, or textures of natural materials f) the colorfastness or the matching of textiles, including an exact match to cuttings or to swatch cards g) damage, marking, or staining of veneer surfaces due to contact with rubber or similar compounds, damage from sharp objects or imprinting from writing instruments, or prolonged exposure to direct sunlight h) we do not warrant products that are exposed to extreme environmental conditions or that have been subject to improper storage.

RTA Products shall not be liable for loss of time, inconvenience, commercial loss, or incidental or consequential damages.

Any modification to the original product voids the warranty. We do not warrant the performance of the product when used in combination with other than original products.

This product has been designed for and is intended for office and home-office use only. This warranty is Original Purchaser's sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributed to abuse or misuse, products used for commercial or rental purposes, use modifications of, or attachments to the product, and products or parts not used, maintained, or extended hereunder is in lieu of any and all other warranties, express or implied, including without limitations any implied warranty or merchantability or of fitness for a particular purpose.

To file a Claim within the 48 contiguous United States: Email us to warranty@rtaproducts.com to explain the defect and provide your name, address, phone number, model number of our product, date and place, and proof of purchase. Please provide pictures of the damage or defect.

If we determine that a replacement will remedy the situation, and in order to determine the extent or the cause of the defect, purchaser may be requested to send the part in question at purchaser's expense. Once we receive the part, we will examine it and determine whether the claim is valid (or not), and then proceed to send the replacement. We will ship the replacement at our expense.

Replacement Parts for International Customers & AK-HI-PR orders: RTA Products will replace the part free of charge, while the customer is responsible for shipping costs plus any International local taxes or duties.