 


TOOLS REQUIRED



(Not Included)



Phillips Screwdriver

(Not Included)



2 - Persons Recommended

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

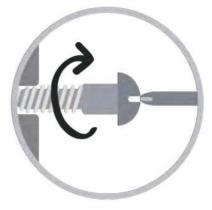

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam bolt




cam lock screwdriver

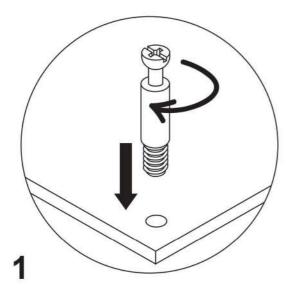


Screw the cam bolt into panel.

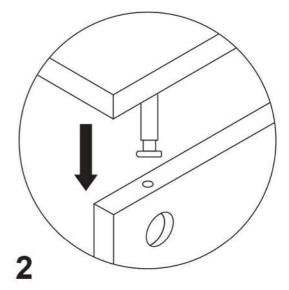

Insert the cam bolt into the bolt hole of joint panel.

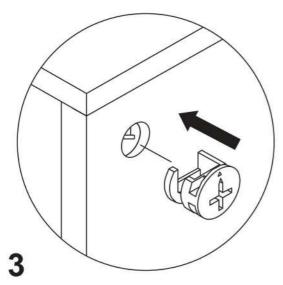


Align the cam lock with its side opening (or arrow) pointing to cam bolt.

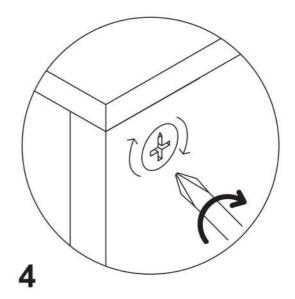

Turn the cam lock clockwise gently until it will not turn any more.

STORAGE CABINET



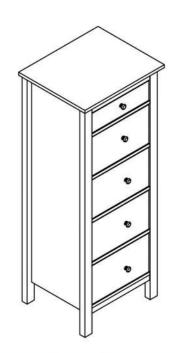

PARTS #1)5pcs #3)1pc (#2)1pc 1pc Drawer A Base Drawer A Rear Drawer A Right Side Drawer A Left Side #6)1pc (#5)1pc 4pcs #8)4pcs **Drawer A Front Back Cover** Drawer B Rear Drawer B Right Side #9)4pcs 4pcs 1pc 3pcs **Drawer B Front** Drawer B Left Side Panel A Panel B (#15) 1pc #14**)1**pc (#16) 1pc Panel C Panel E Panel D Panel F

PARTS





Panel G





Right Side Panel





Left Side Panel



Top Panel

HARDWARE





Cam Bolt L20





Cam Connector M12





Screw M4x30





Wood Dowel





Cam Bolt L29

(#F) 15pcs



Cam Connector M15





Screw / Washer





Knob

(#L) 2pcs

Bracket





Nail

1pc



Glue



The Restraint Strap

 $197 \times 5 \times 1$ mm





Plastic Plug Ø8x40



1pc




Small Screw **Ø**4x25mm




Wall Screw Ø5x40mm

1



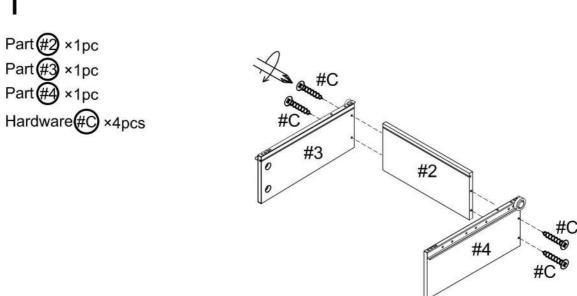


Tip: Place parts on the flat surface to ease alignment and assemble.

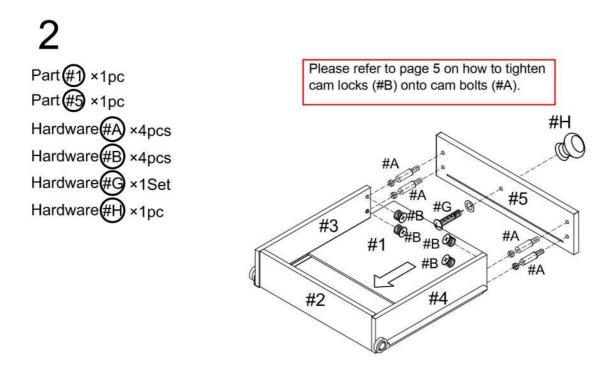


Note: Be aware direction of camlock opening before insertion.


3

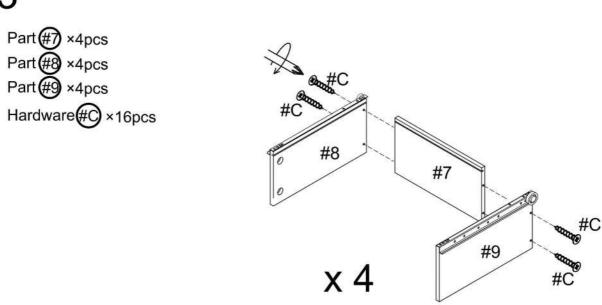


Tip: Place parts on the flat surface to ease alignment and assemble.

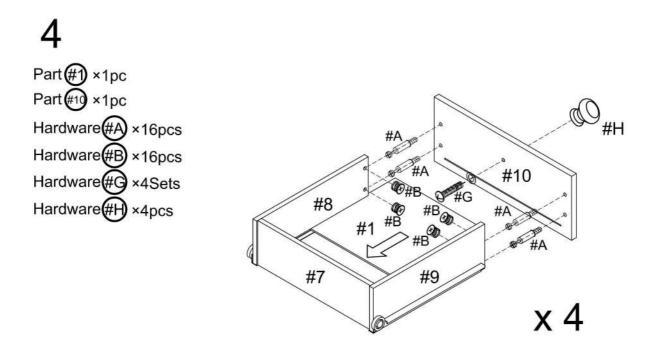

Note: Be aware direction of camlock opening before insertion.

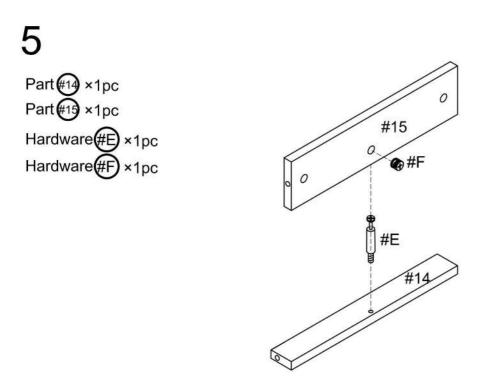


Note: Be aware direction of camlock opening before insertion.

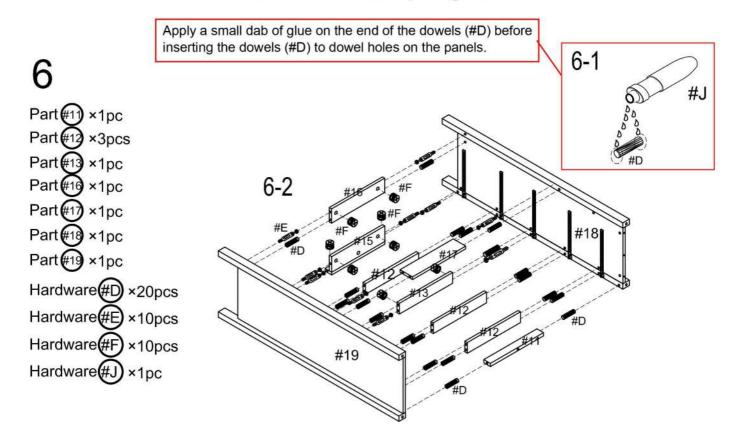


Note: Be aware direction of camlock opening before insertion.

Tip: Place parts on the flat surface to ease alignment and assemble.

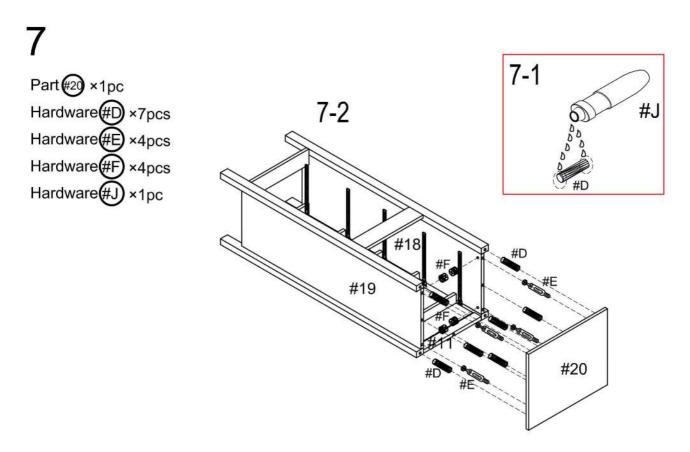

Note: Be aware direction of camlock opening before insertion.

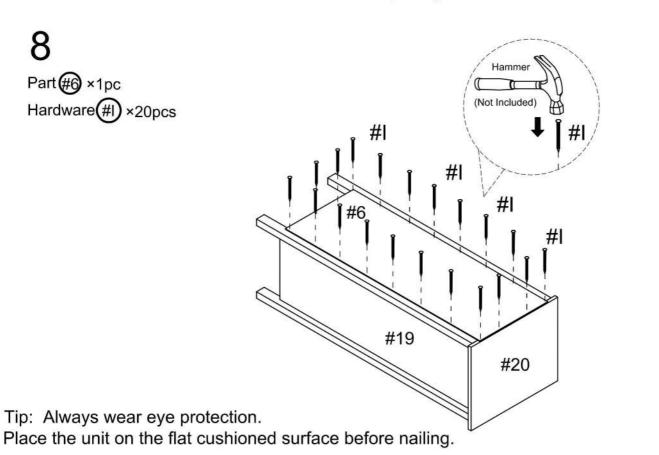

9


Hardware#X x 1pc

Hardware #L) x 2pcs

Hardware (#M) x1pc

Hardware (#N) x1pc

Hardware(#0) x1pc

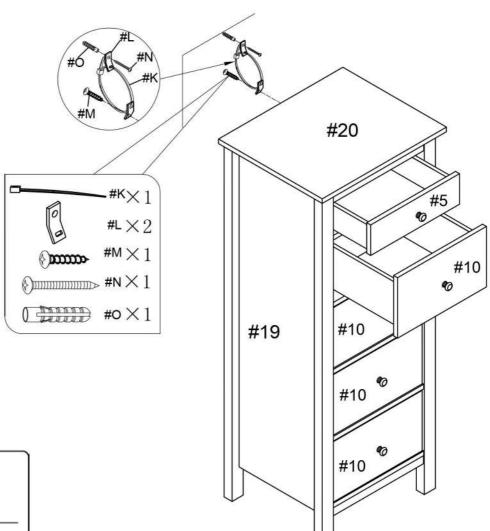

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

- Align product to the wall, than mark the wall on where the wall mount is going to be placed.
- 2) Use a drill to create a hole onto the marked wall that is no bigger than the plastic insert.
- 3) Insert in plastic inserts to the hole in the wall, then secure bracket to plastic insert by using screw.
- 4) Secure bracket onto product, then zip tie to the brackets of the product and wall.

Wall Mounting and Fixing



EXPANSION WALL ANCHOR

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. liability for product damage or failure due to using the incorrect anchors will fall on the installer.




CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

QUICK TIPS


1.If unsure of the proper size, always choose a larger screw and wall anchor.




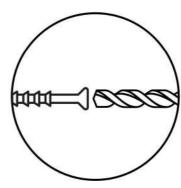

2. Match the drill bit to the wall anchor and hole size.

3. Only drill horizontally. Do not force the drill or enlarge the hole for the wall anchor.

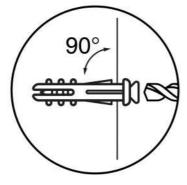

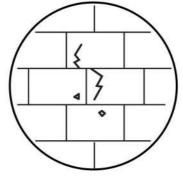

4. Take extra care when drilling into high walls or ceramic tiles. Wall anchors should be a tight fit for the hole. Never use wall anchors in ceilings.





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.