


 


 
Hardware installation example \prod This part cannot be separated, not included please install in strict Tool accordance with the assembly requirements \prod IV

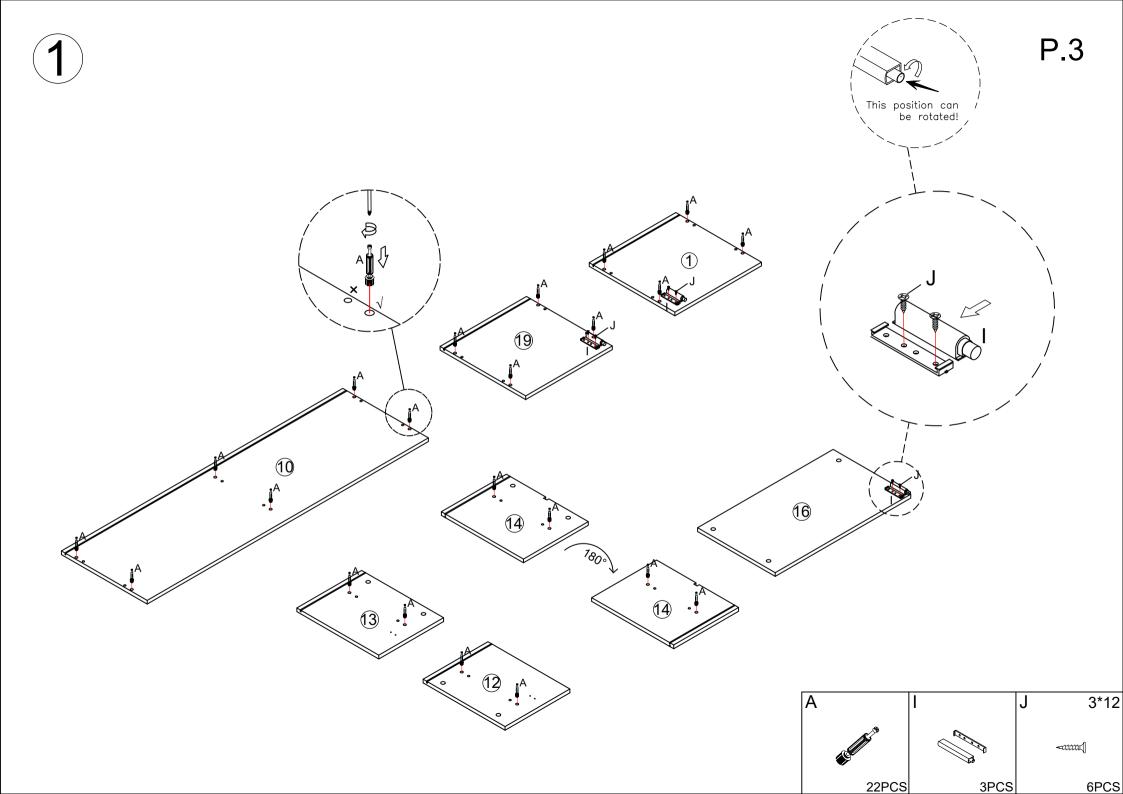

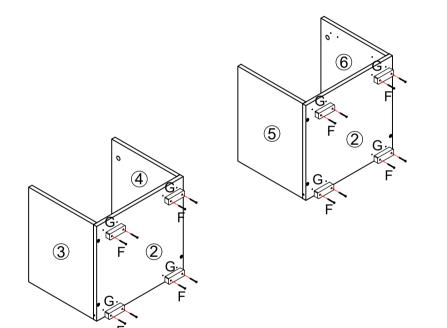


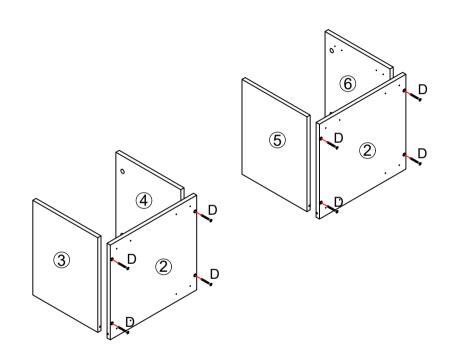





P.5

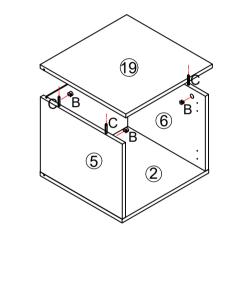


В


8PCS


С

8*40

8PCS

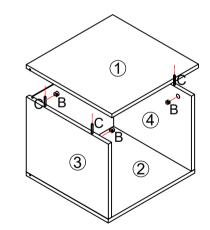

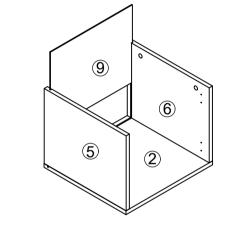

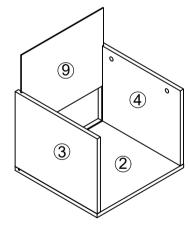




8*40

8PCS

8PCS

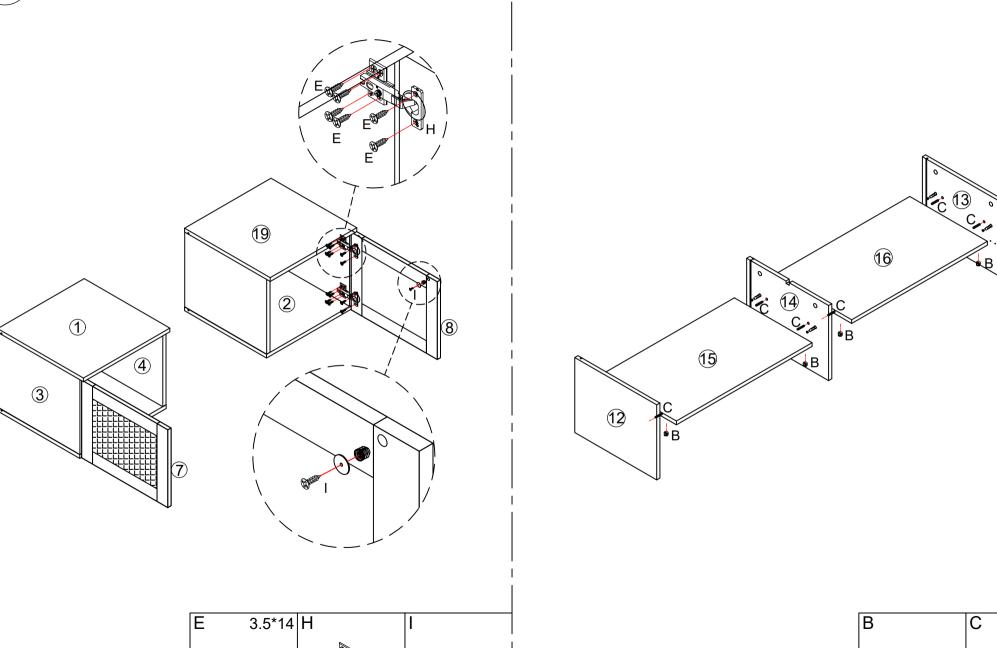



2PCS


24PCS

 
4PCS



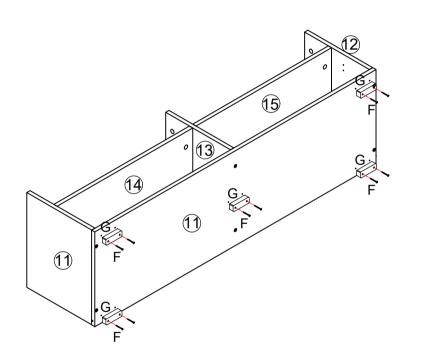

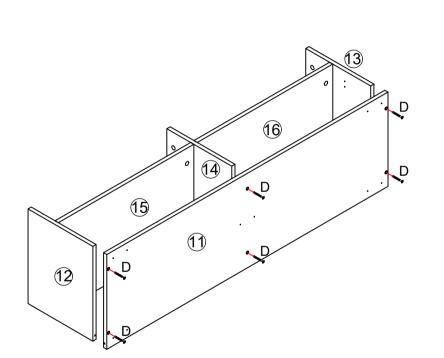



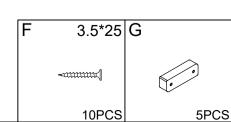


8*40 L

6PCS


6PCS

С

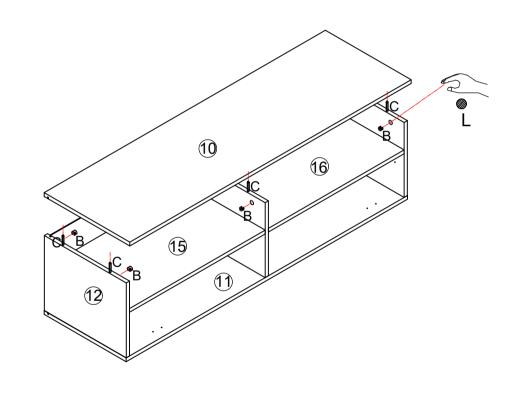


В


6PCS

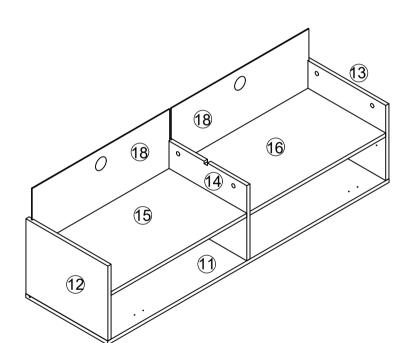




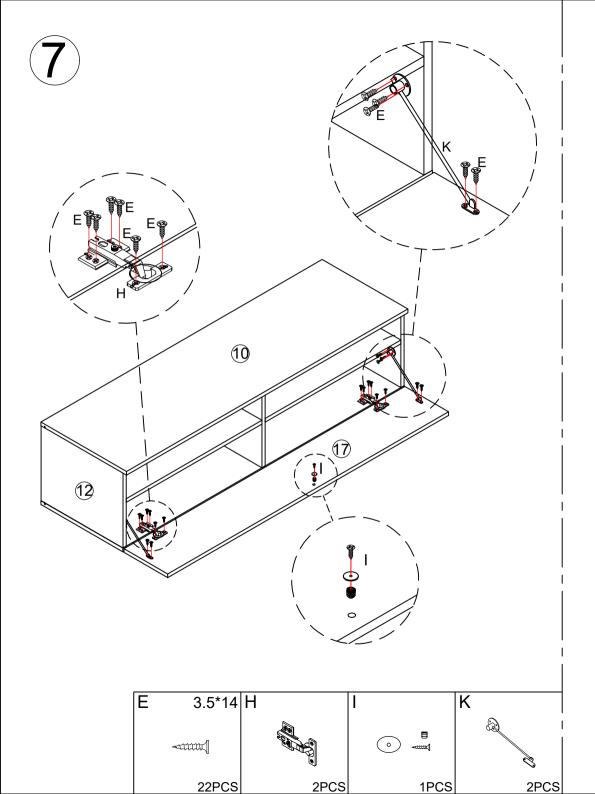

Please stick LED belt under part 10

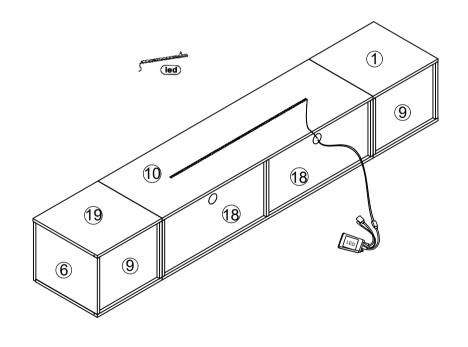

 

LED Light

If you can't let the lights work successfully, please check the following:

- 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
- 2. Please check the remote control, it needs you to tear down the plastic septum before use it. LED Light
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.
- 4. Please note that for transportation safety, the remote control does not contain batteries; the battery model is: CR2025

