



2PCS

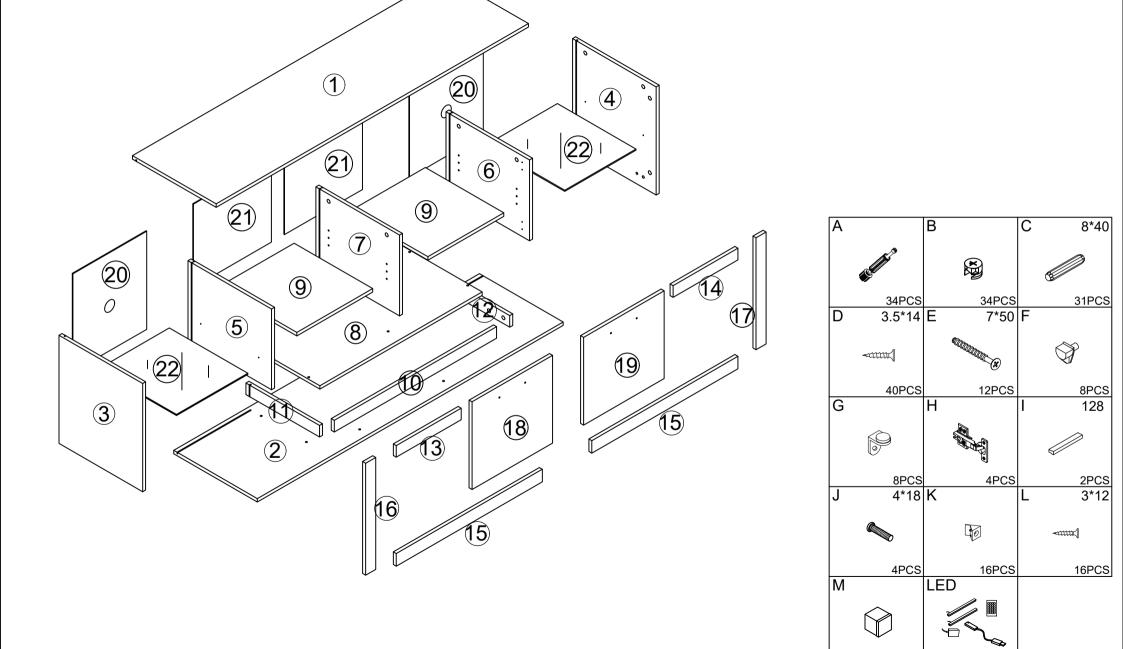

## Hardware installation example $\prod$ This part cannot be separated, not included please install in strict Tool accordance with the assembly requirements $\prod$ IV


8\*40

20PCS

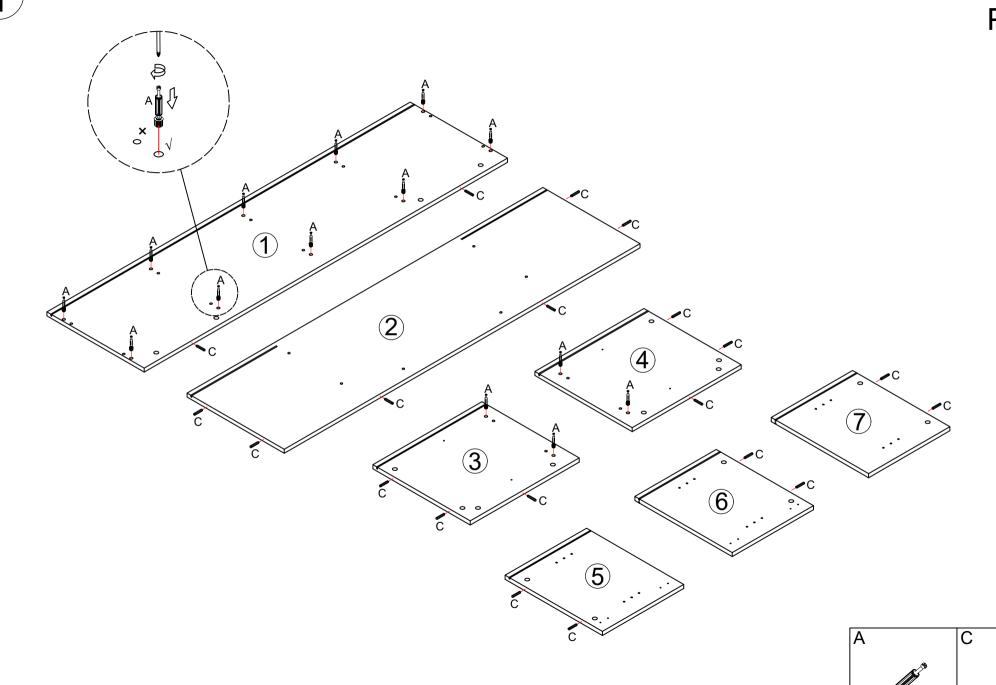

8\*40


11PCS

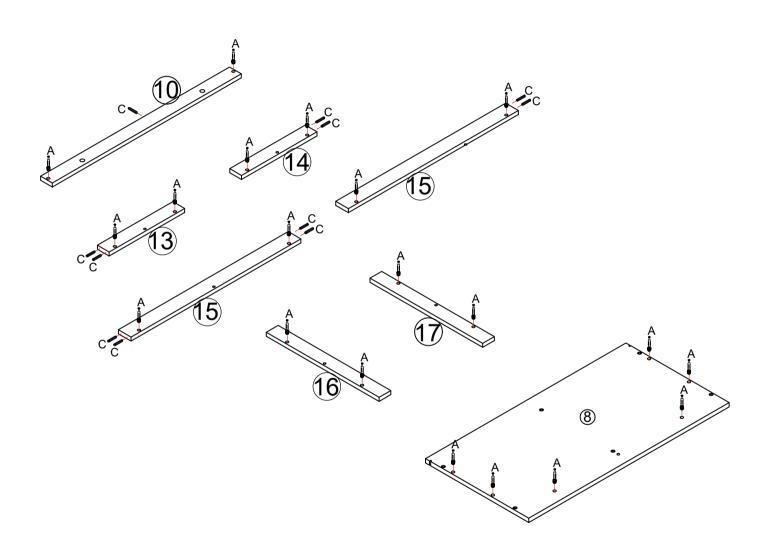




В

8PCS

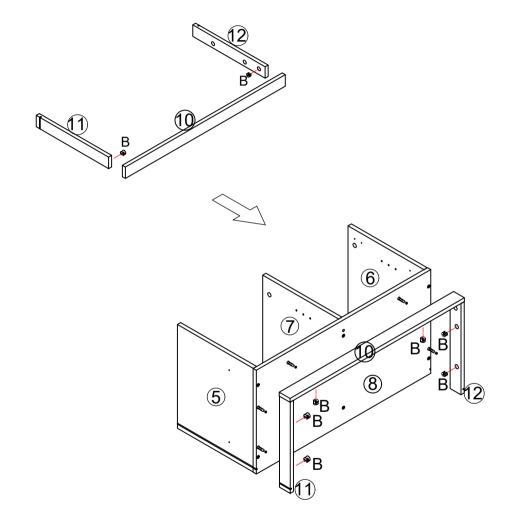


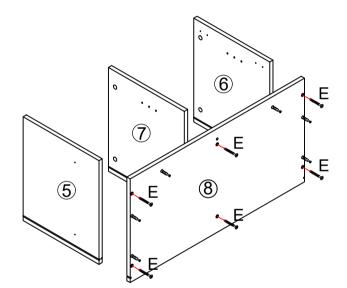



Ε

7\*50




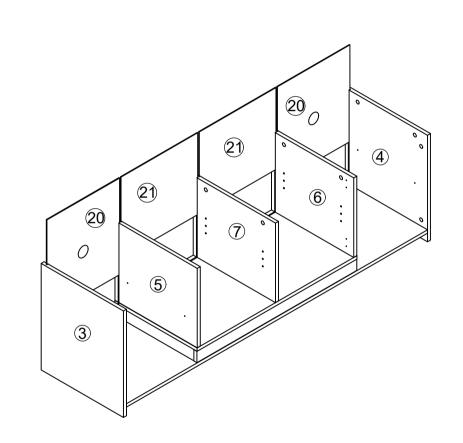


 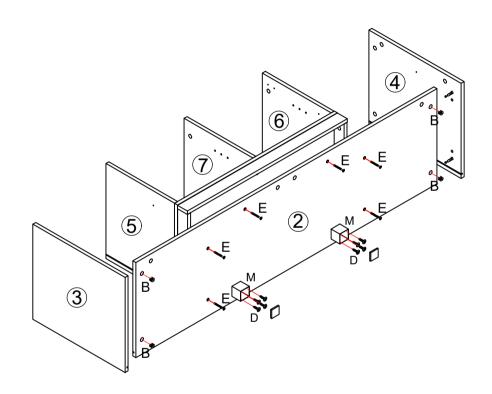


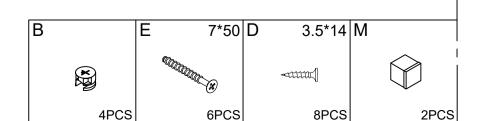




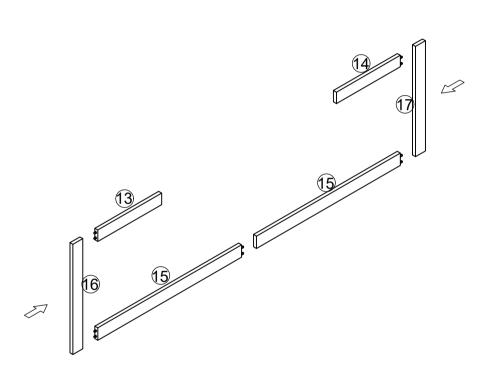

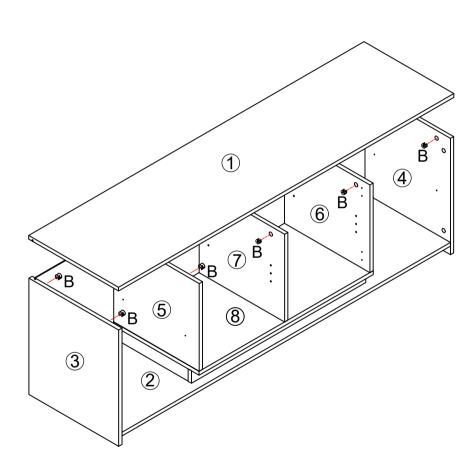



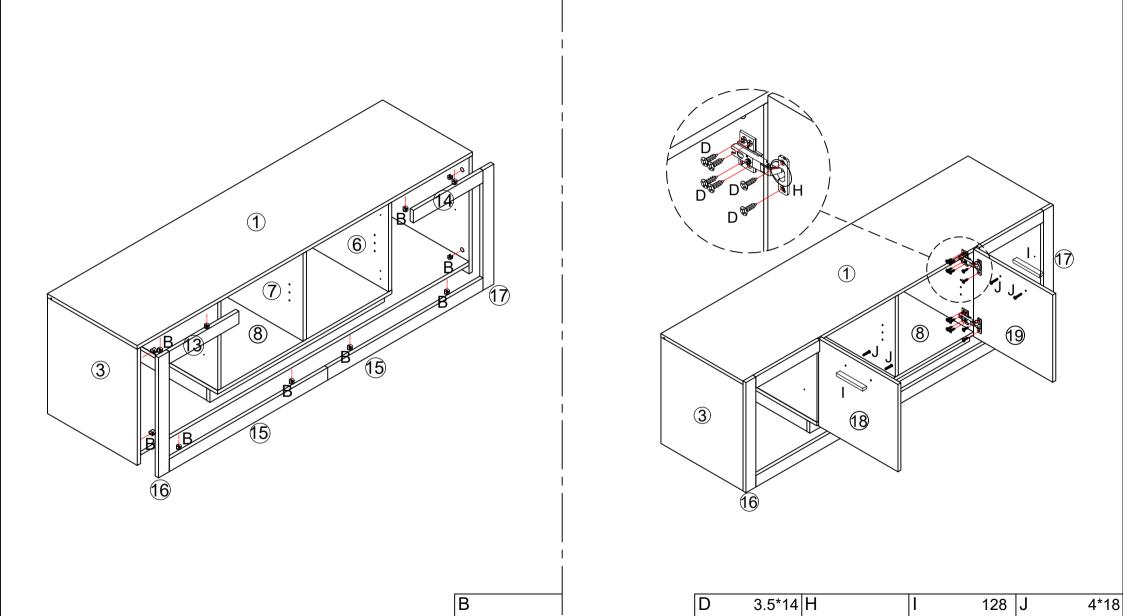



12PCS

24PCS


4PCS


2PCS

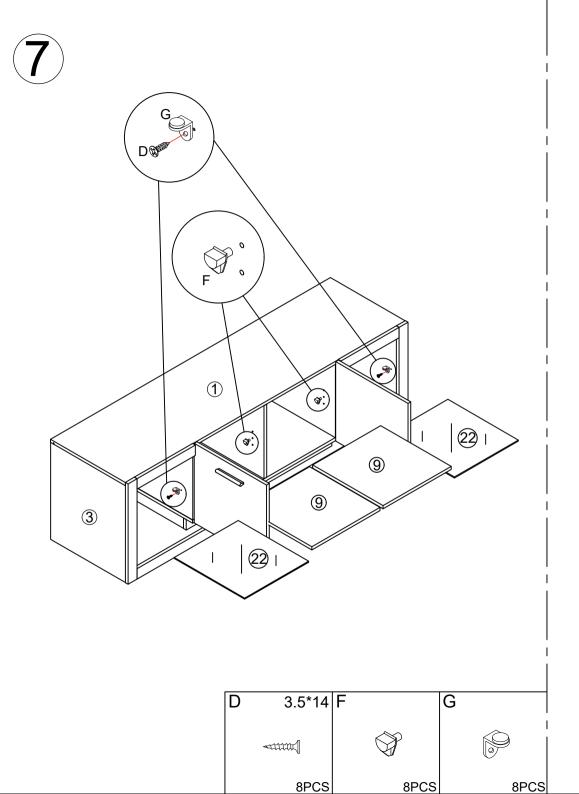


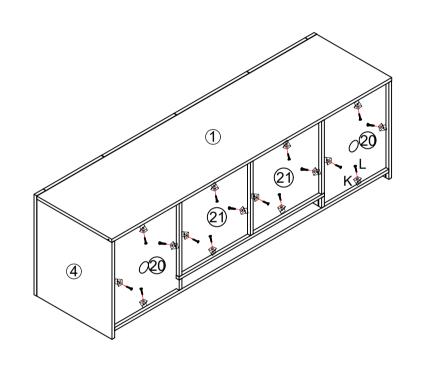

K L 3\*12

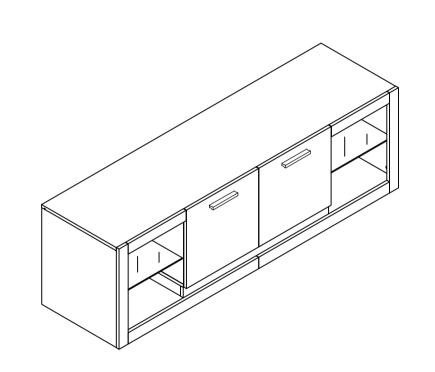

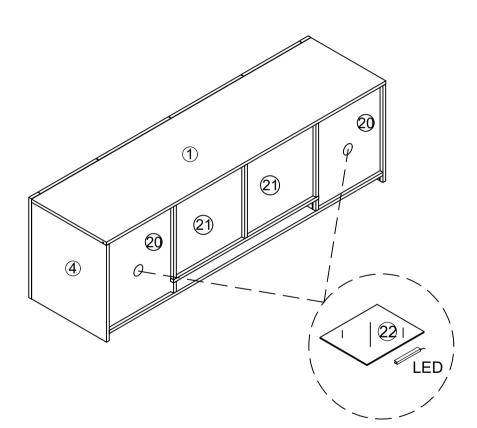

 



## **LED Light**

If you can't let the lights work successfully, please check the following:

- 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
- 2. Please check the remote control, it need you to tear down the plastic septum before use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

