
ASSEMBLY INSTRUCTIONS TV Stand ITEM# AM171002

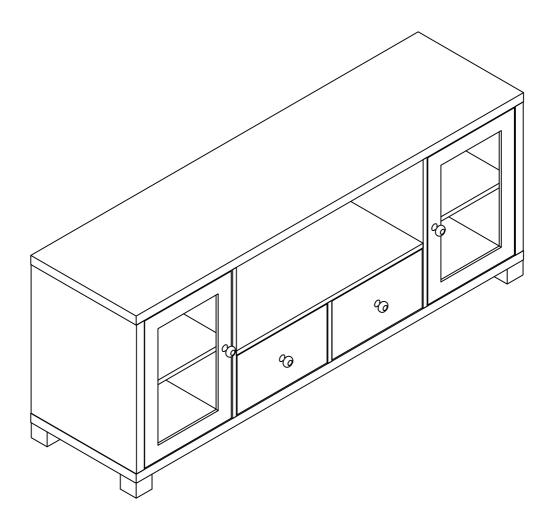


If you find any damage after opening, please be sure to take pictures of the damage and contact us. We will help you solve the problem as soon as possible.

THANK YOU

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)






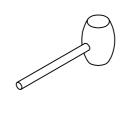



WOODEN DOWEL INSTALLATION PROCEDURE


Gently tap dowel into hole with rubber mallet

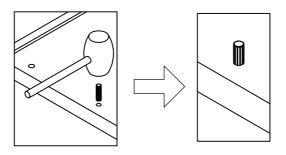


 HIDDEN CONNECTOR.....ASSEMBLY TECHNIQUES



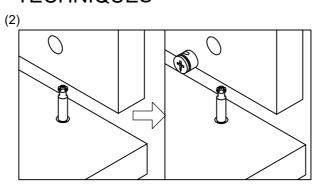


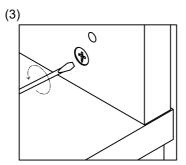

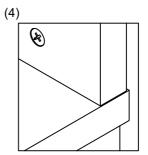

Note: Please don't over-tighten the cam lock, otherwise, it will be broken.

Disassemble the slide rail diagram

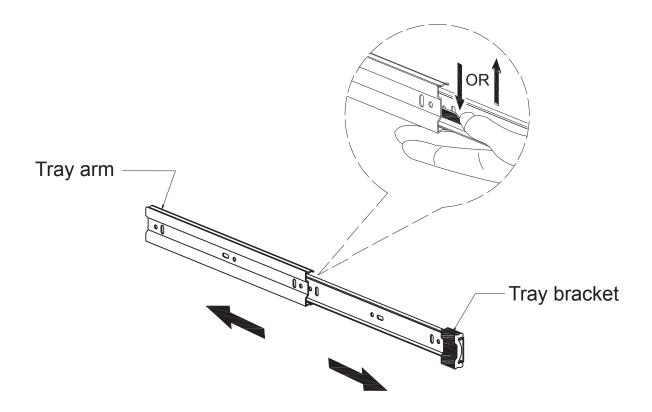

For disassemble drawer tray, by sliding the tray arm and the tray bracket out. Press and tick the small lever on the tray bracket and carefully pull the two piece apart.

PARTS LIST					
A Carton part list					
A:Top panel 1 pc	B:side panel 2 pc	C:Partition 1 pc	D: Fixed Shelf 1 pc		
E:Bottom panei 1 pc	F: shelf 2 pc	G:right mid panel 1 pc	H:left mid panel 1 pc		
I:Mid leg 1 pcs	J:Door 2 pcs	K:Drawer front panel 2 pcs	L:Drawer letf side 2 pcs		
M:Drawer right side 2 pcs	N:Drawer back 2 pcs	O:Drawer bottom 2 pcs	P:Left Back panel 1 pc		
Q:Right Back panel 1 pc	R: up Back panel 1 pcs	S: Lower Back panel 1 pcs	HARDWARE PKG 2 pc IA 1 pc		

PARTS LIST					
A Carton part list					
HARDWARE LIST					
1:Cam lock 32 pcs	2:Cam bolt 32 pcs	3:Wood plug 24 pcs	4:Wood screw 38pcs		
	Ø6*35		(8)		
Ø15*11.5 5.Sticker 24 pcs	6.Screw 8PC	7.leg 4pc	Ø3.0*12 8: Glue tube 3pc		
	!!!!!€<br Ø4x25		D(C)		
9:Pull knob 4 pcs	10:Screw 4 pcs	11.Hinge 4pcs	12.Screw 16 pcs		
6	(}		(3)		
Ø24*21	Ø4x18	Ø26	Ø4x12		
13:Wood screw 16 pcs	14.Shelf support pin 8pc				
Ø3.0*16	Ø8x5x16				

