NOTE:PLEASE AN ASSISTANT IS REQUIRED ES NECESARIO UN AYUDANTE UN ASSISTANT ESTNECESSAIRE.



Please scan the QR code to check the assemble video




Leading the Way in Safe Box Manufacturing Excellence!

- 01 PRODUCT STRUCTURE
- 02 FIRST-TIME OPENING AND BATTERY INSTALLATION
- 03 SETTING THE PASSWORD
- OPENING AND CLOSING THE SAFE
- 05 DUALALARM SYSTEM
- 06 CUSTOMER SUPPORT AND WARRANTY



**WARNING**•Tip over hazard: The cabinet can be tipped over by children or adults, please make sure the cabinet is mounted on the wall or floor.

Keep the keys in a secure place away from children.

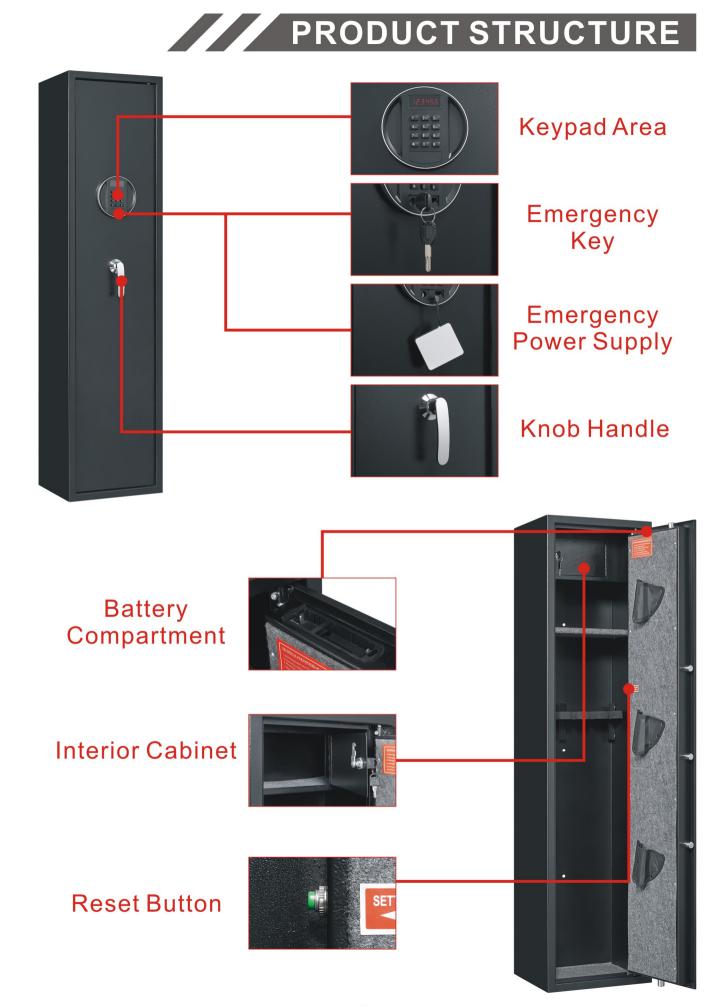

# FIRST-TIME OPENING



**STEP 1:** Open the nameplate on the panel to find the emergency key slot;

**STEP 2:** Insert the key into the keyhole and rotate it counterclockwise;



**STEP 3:** Simultaneously, turn the knob clockwise to open the safe;

**IMPORTANT NOTE:** The key must be fully inserted into the lock before rotating it

# BATTERY INSTALLATION

**STEP 1:** After opening the door, locate the battery compartment on the backside of the door panel;

**STEP 2:**Prepare four brand new AA batteries and insert them into the battery compartment, ensuring to observe the correct polarity. When you hear a "beep" sound, it indicates that the circuit is activated.



### **IMPORTANT NOTE:**

When the voltage is too low, the display screen shows "bt-Lo" with buzzer sounds to indicating the batteries are needed to be replaced by new ones to ensure normal use.

.3.



# SETTING THE PASSWORD

#### **IMPORTANT NOTES:**

**1:** Unlock the door with password: Press "#" to active the panel, the display screen lights up and shows "-----", input password and press "#" to confirm.

**2:**There are 2 initial passwords for this safe: "1234", "123456". Please change them according to your needs.

**3:**When setting a password, it must contain at least 3 characters and can have a maximum of 8 characters.

٠4٠

**4:** This safe allows the setup of 2 different password combinations.

### **SETTING THE FIRST PASSWORD:**

**STEP 1:** Press the setting button, the display screen lights up and shows "-----" with a buzzer sound.

**STEP 2:**Enter your new password and press "#" to confirm.

**STEP 3:**With a long "beep" sound, new password is set successfully.





**STEP 2~3:**All the same with setting your first password.

#### **IMPORTANT NOTES:**

- **1.**On the first consecutive attempt of entering an incorrect password for three times, the buzzer will continuously sound for 20 seconds without interruption.
- **2.**On the second consecutive attempt of entering an incorrect password for three times, the buzzer will continuously sound for 5 minutes without interruption. (You can stop the sound by opening the safe with the key and removing the batteries.)





# OPENING THE SAFE

### THREE UNLOCKING METHODS:

- **1.**The first unlocking method: Using the emergency key;
- 2. The second unlocking method: Using the keypad password;
- **3.**The third unlocking method: Using the emergency battery box+password.

### VIBRATIONALARM

The alarm can be lifted by entering correct password.

- **1.**The vibration alarm can be actived by pressing "\*" button more than 3 seconds till the screen lights up and shows "BE-ON".
- 2. When powering on, the system defaults to turn off the alarm.
- **3.**The alarm will be deactived once the door is opened. If it's needed, please re-active the alarm as step 1.



- **1.**Press and hold the set button for about 3 seconds (do not release) until the digital tube displays "SUCESS" and the buzzer makes a long "beep --" sound.
- **2.**The guest password is initialized to "1234" and the master password is initialized to "123456".