


INSTRUCTION MANUAL
MODEL:1272-2LM

Edition:20230817825Z


Assembly Instruction

Ax1

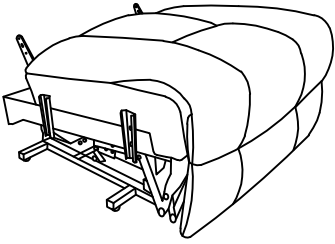


Seat

Gx1

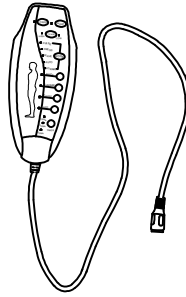


Massager remote control board

Ix1

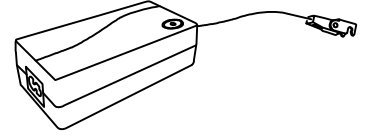


Power supply

Jx2

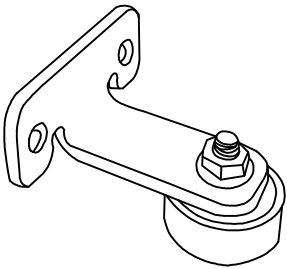


Foot support frame

Kx4

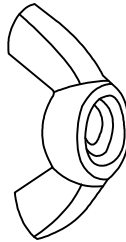


M6 claw nut

Lx5




screw M6 * 40mm

Xx1



Power line

Bx1

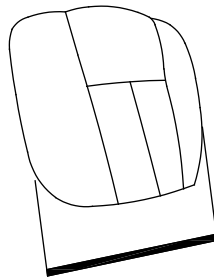

Back

F(L)x1



(L)

handrail


F(R)x1




(R)

handrail


Step 1 Turn the screw L through the support frame J and seat cushion frame in succession, then secure it with the nut K and the screw L.

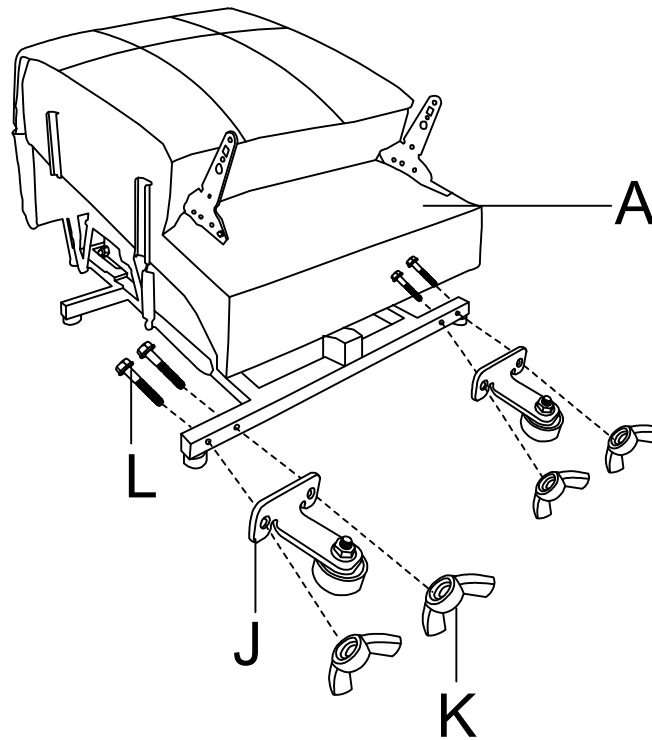


Step 2 Insert the arms into the seat in a way that they fit properly .
You will hear a click when they are securely engaged.

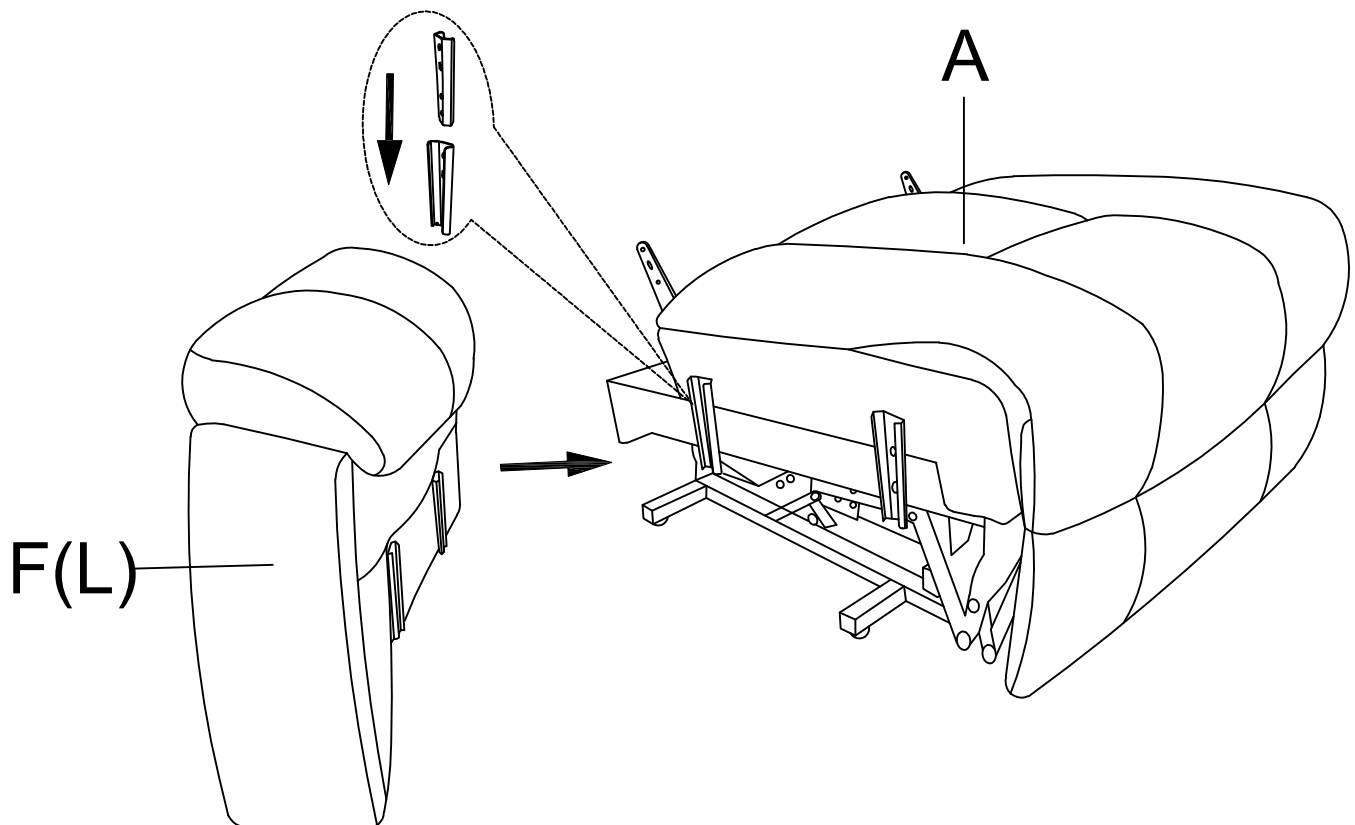


Step 3 Repeat Step 2.

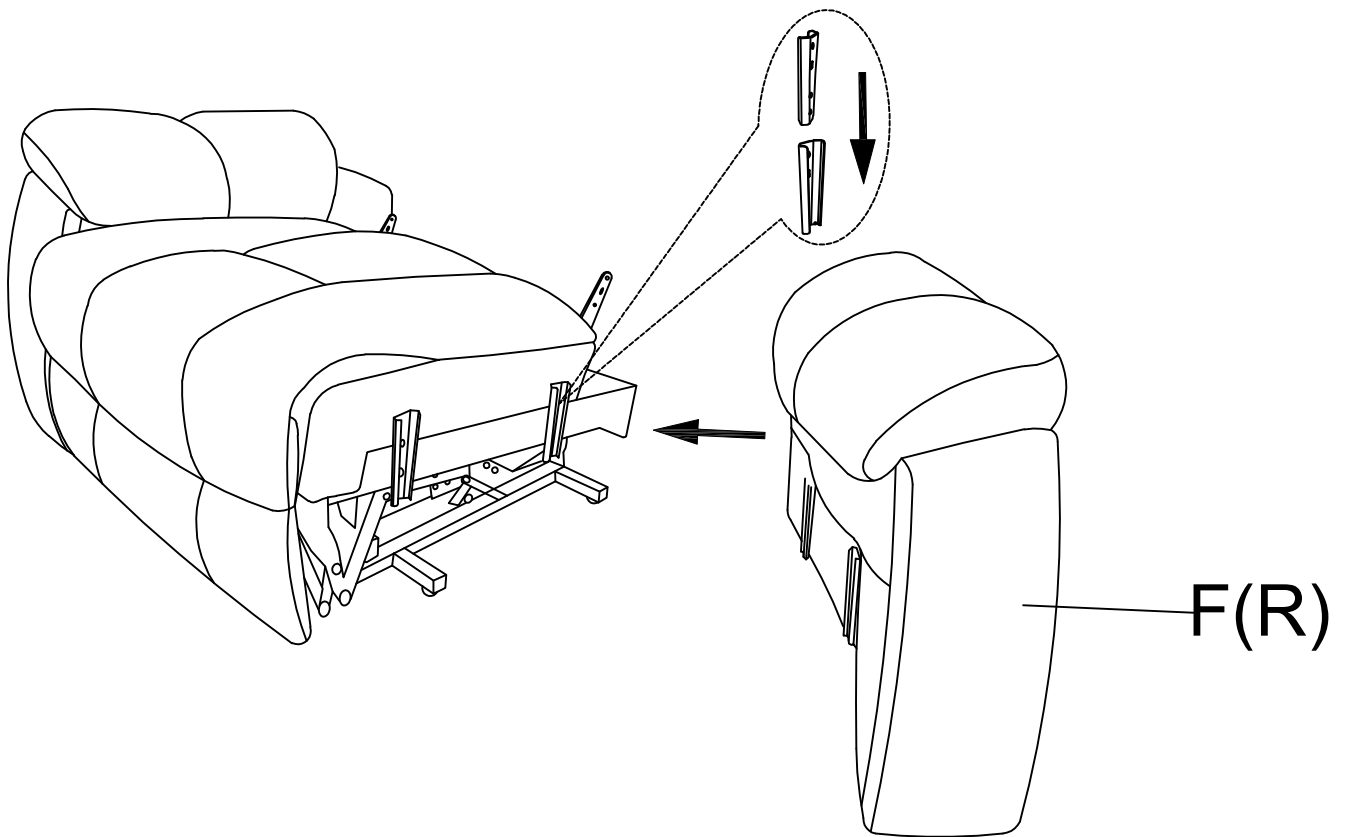


Step 4 Plug the back pad into the seat frame , then connect the massager lines: white with white , red with red , black with the power lines , connect the massage line with the hand controller.

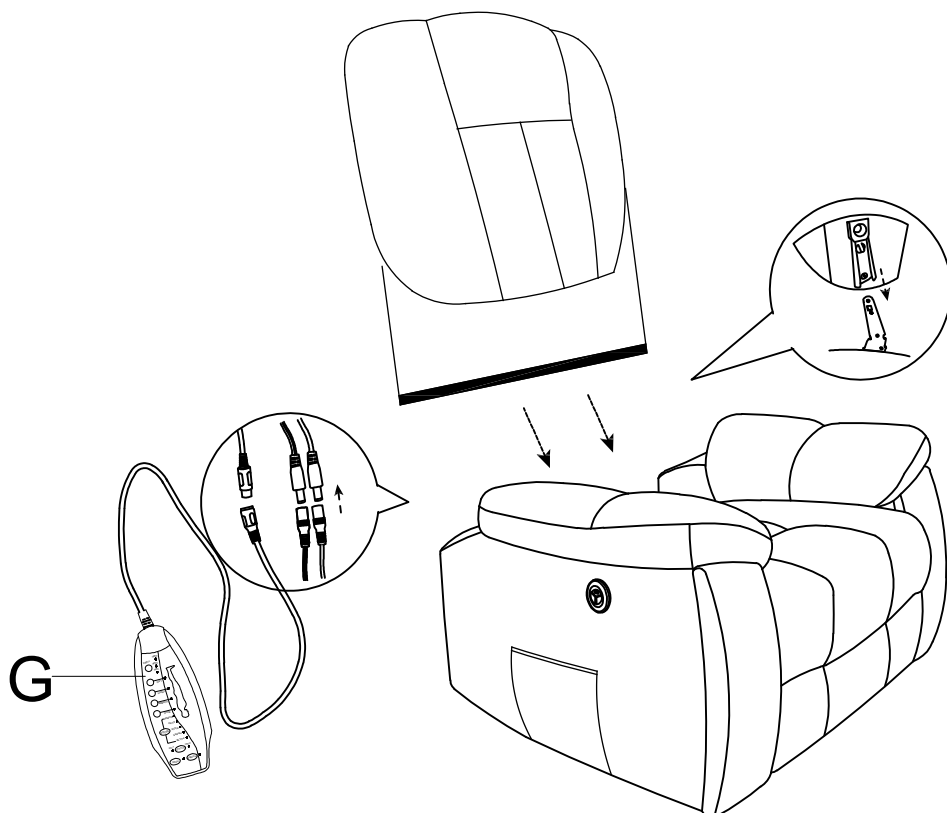


Step 5 Connect the power adapter to the motor cable, connect the cable on the armrest side to a suitable plug, connect the backrest power cable to the remaining plug, and lock all locking cables. Finally, connect the power cord to the power adapter.

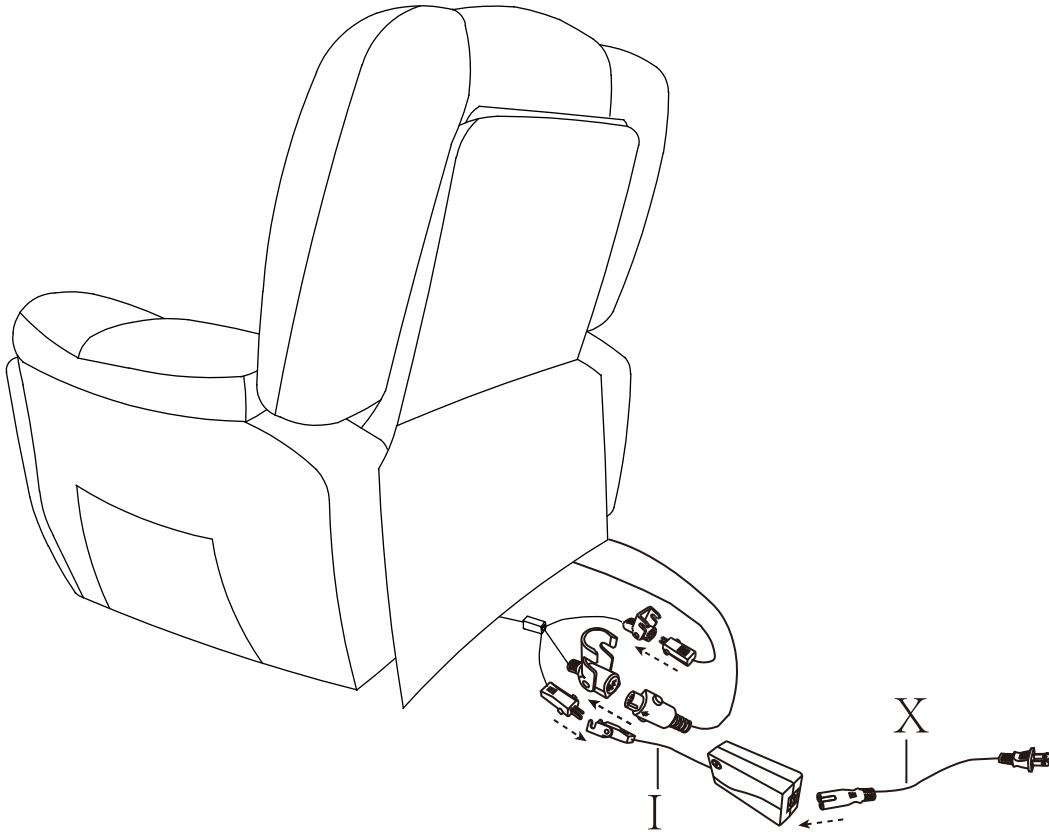


Step 6 Stick the Velcro on the back tightly under the seat.

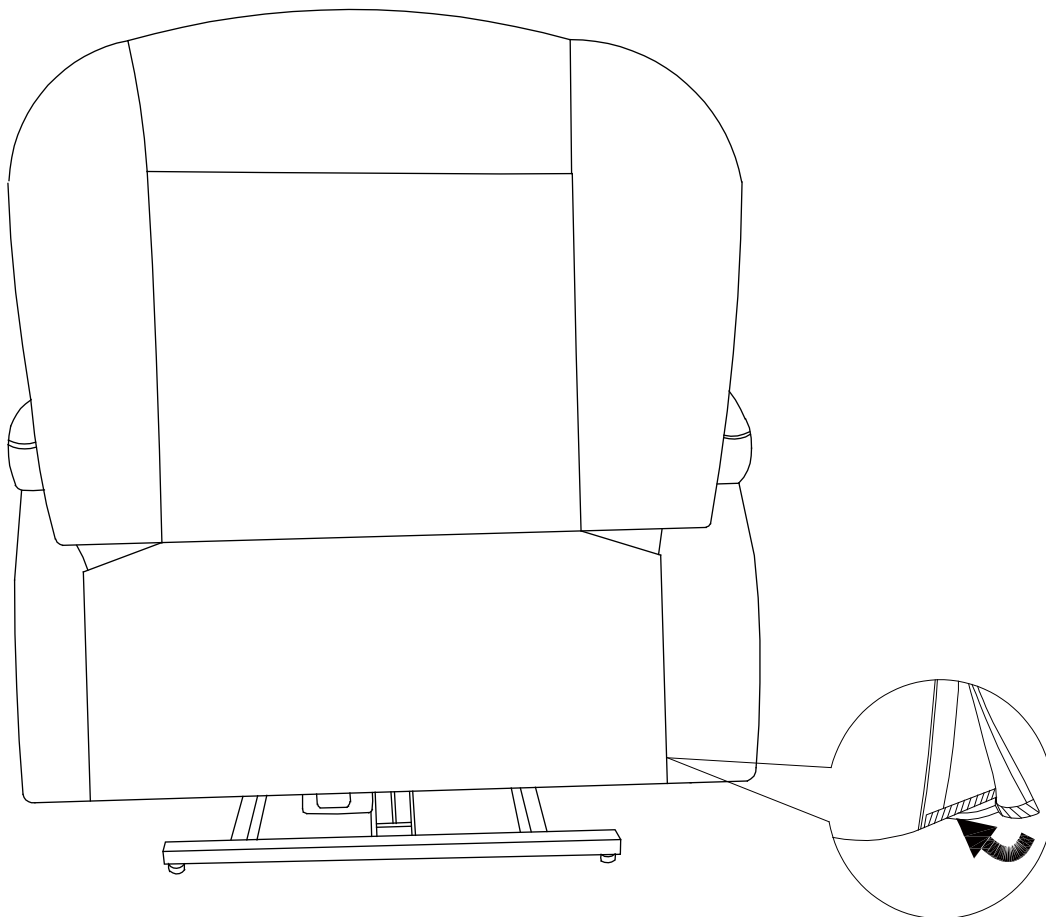


Step 7 Recline the chair.

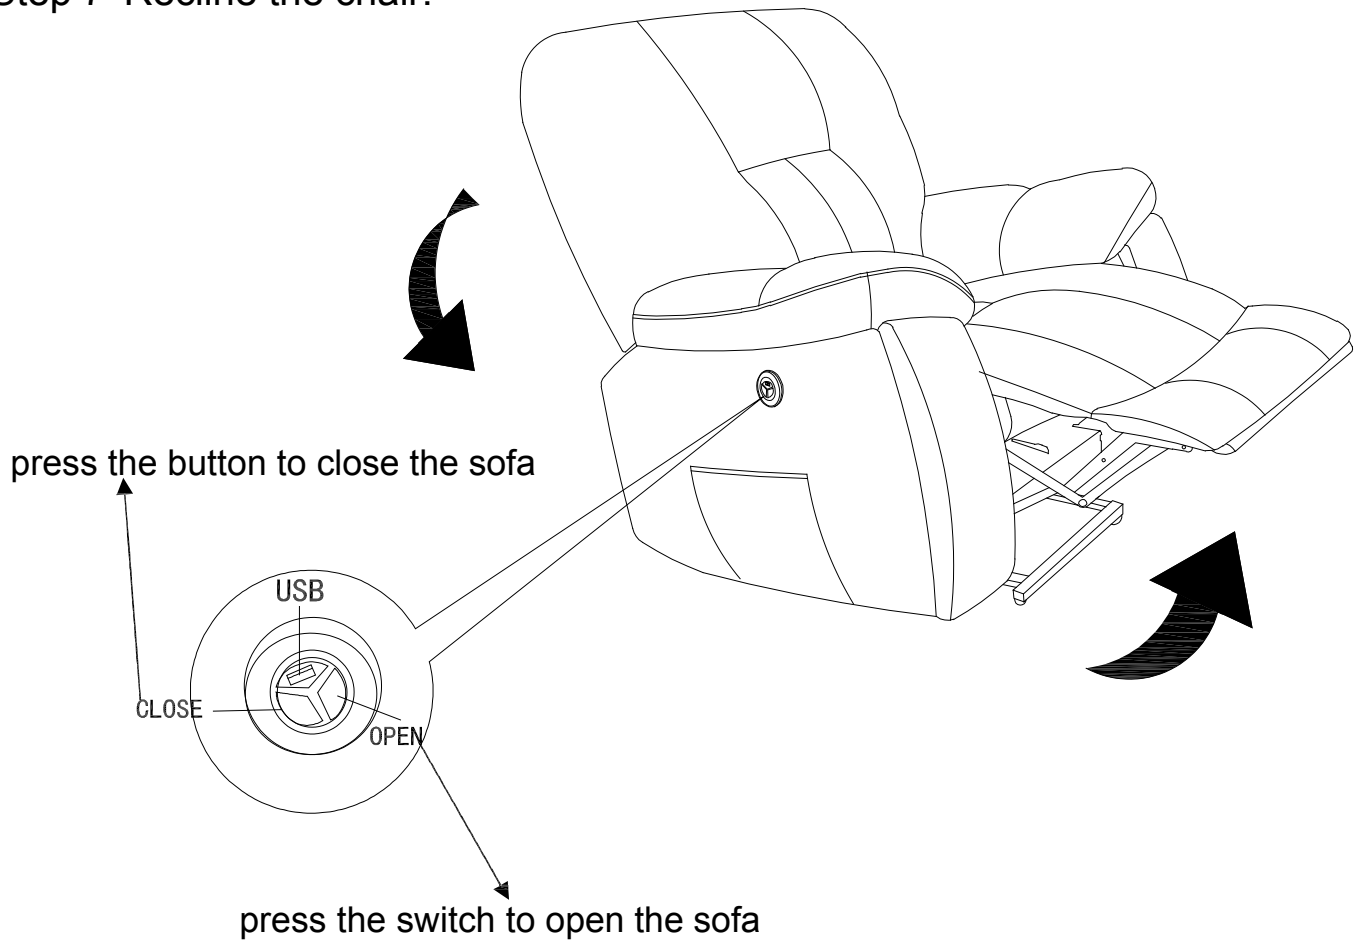


Step 8 Recline the chair.

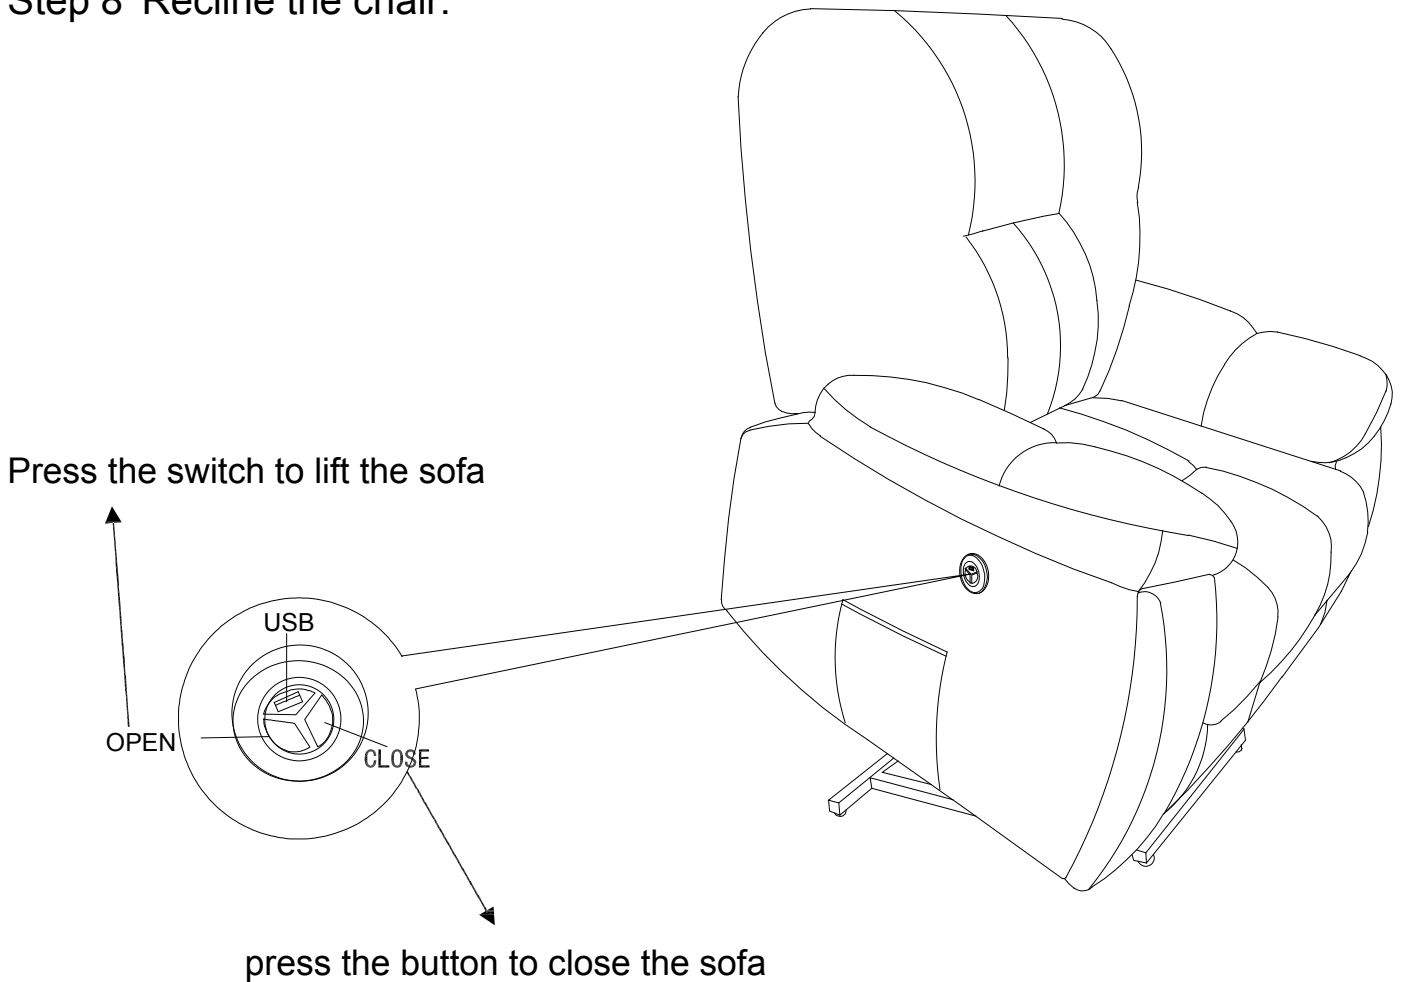


Step 9 Foot rest retraction

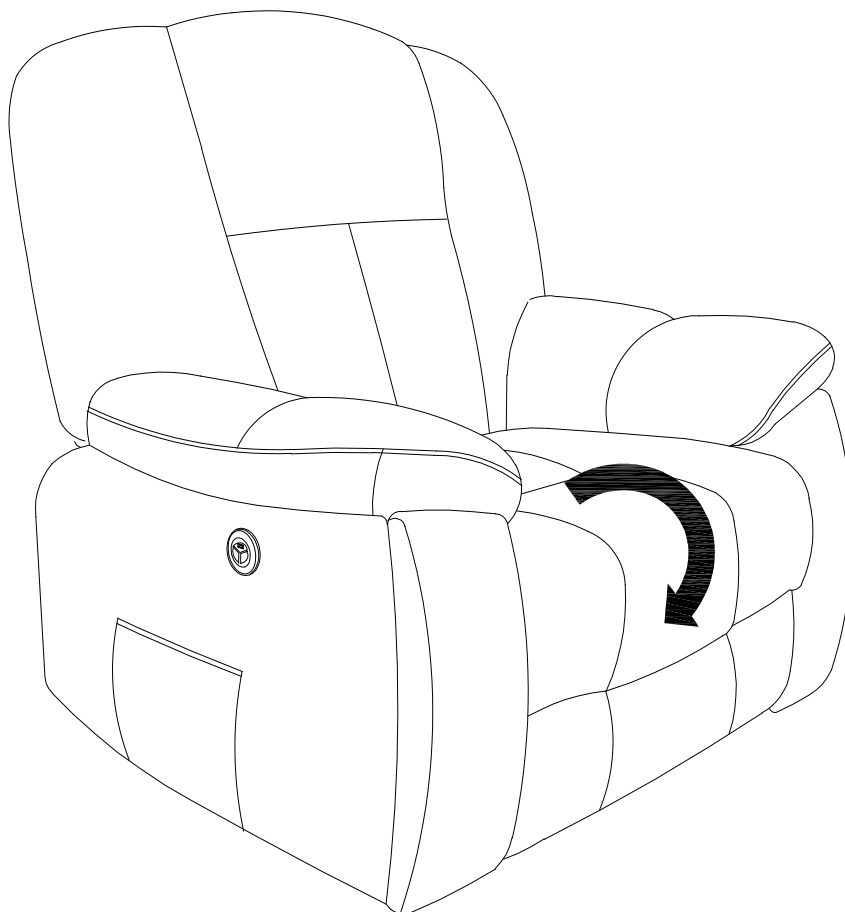

Step 10 Cup holder pulled out

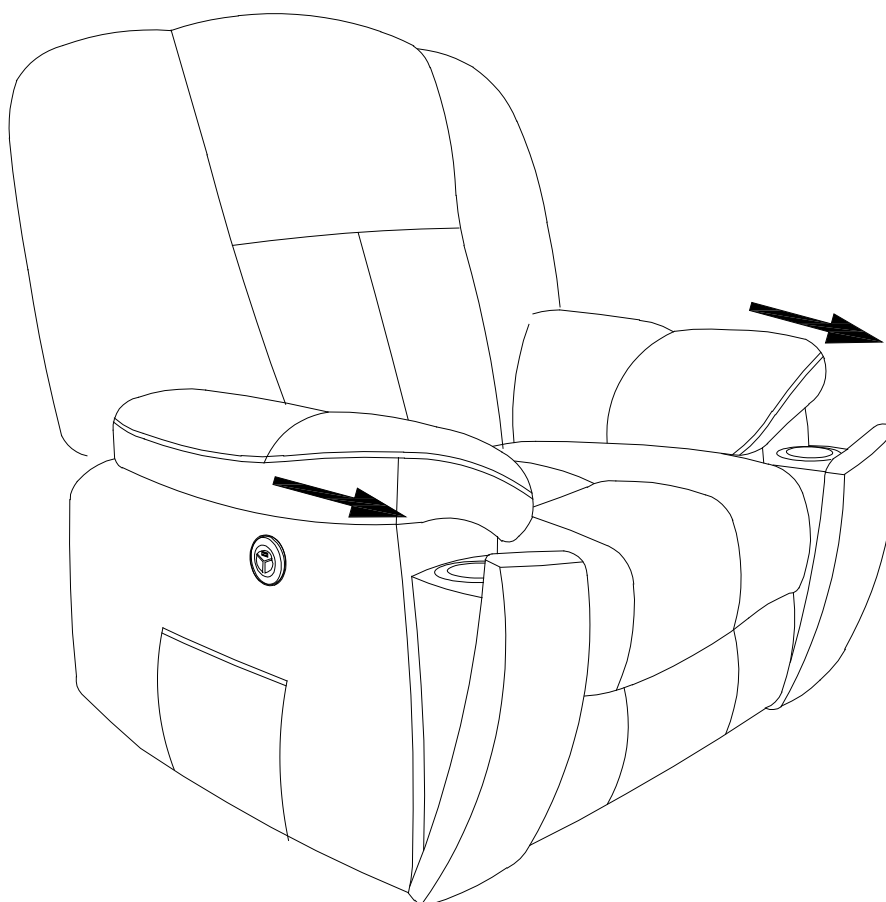

Done!

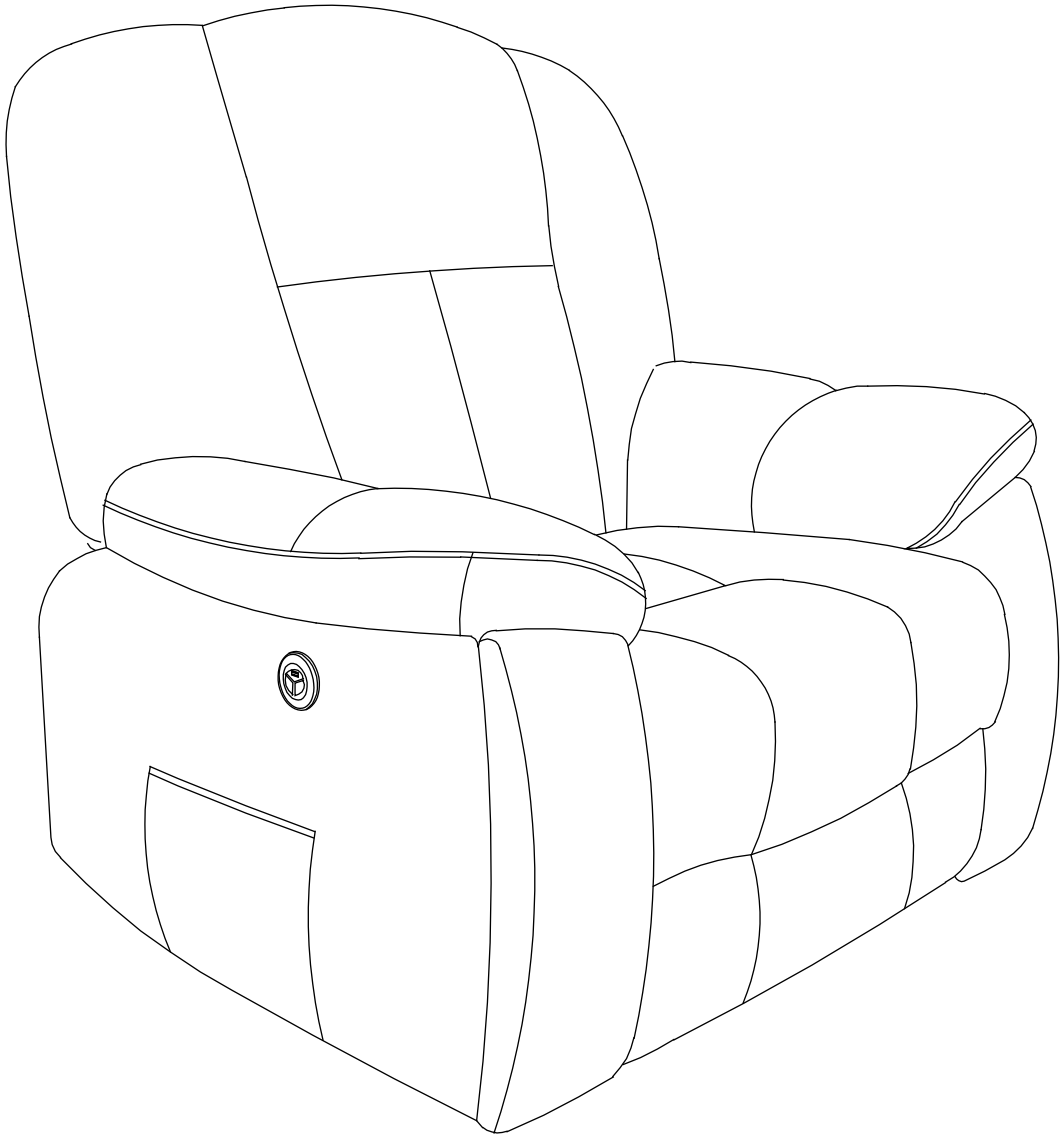


MASSAGE CHAIR

READ ALL INSTRUCTIONS

BEFORE USING THE ITEM

REMOTE CONTROL

Function of remote

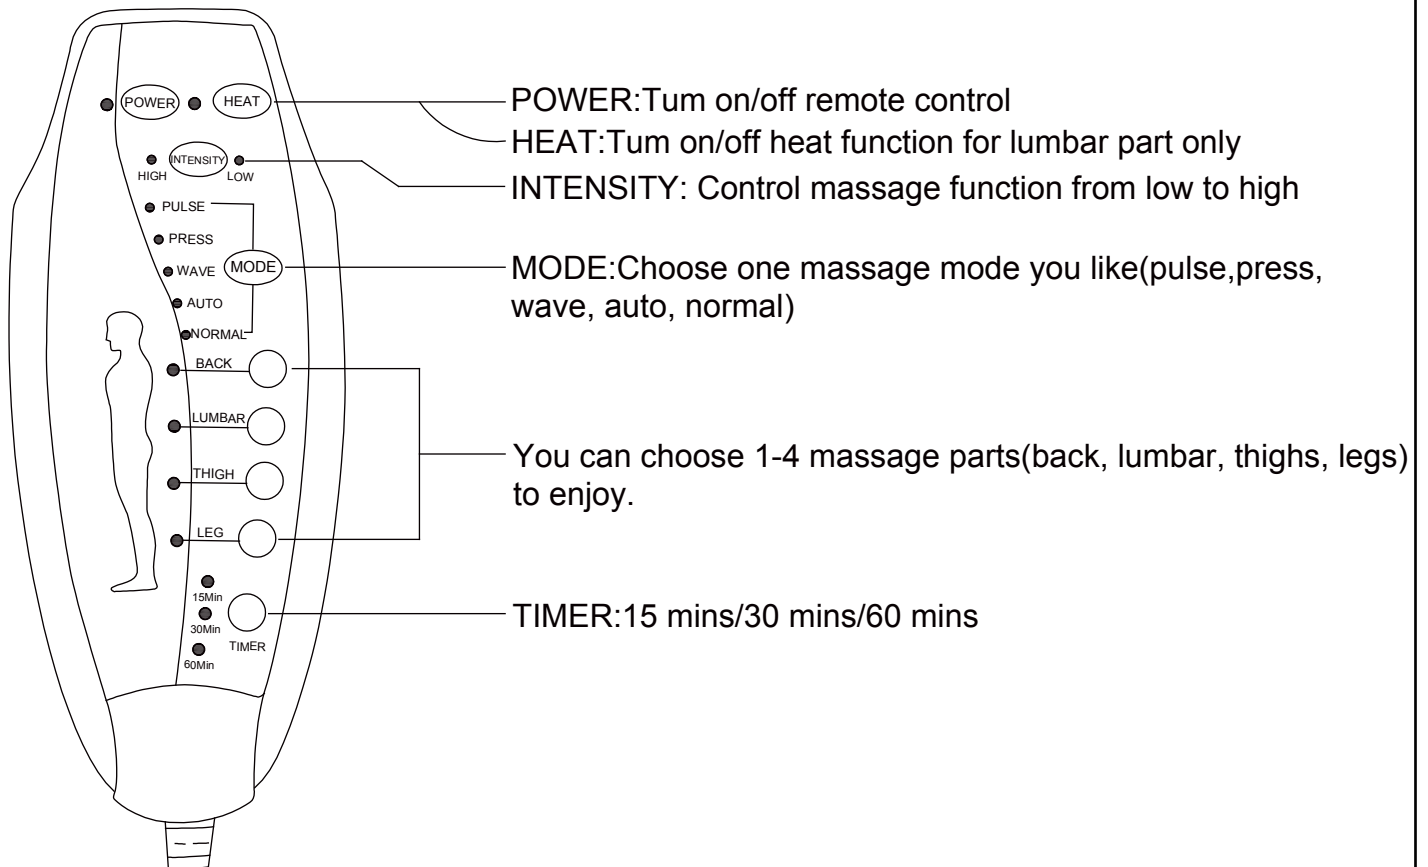

I 、 Specifications of power adapter

Power on in standby state. The user can realize the function through the hand controller controller control

Input :AC 100-240V, 50Hz/60HZ; Output: DC12V1A.

II 、 Product features

- 1、 4 way vibration motor
- 2、 Five vibration modes
- 3、 Vibration intensity of the second gear
- 4、 3 Set the timed shutdown duration
- 5、 1 way can be separate switch heating plate

III、 Function details

- 1、 Click on the switch cycle
- 2、 Switch point by vibration intensity (strong/weak)
- 3、 Click heating switch circulation
- 4、 Tap the five vibration modes to switch (Pulse/Press/Wvae/Auto/Normal)
- 5、 Back massage switch
- 6、 Lumbar massage switch
- 7、 Thigh massage switch
- 8、 Leg massage switch
- 9、 Positioning cycle by massage time (10/30/60 min)