

INSTRUCTION MANUAL MODEL:1264-2GSM

Edition:20230905750Z

Assembly Guide


Congratulations, you now have a new function sofa with massage.

Before enjoy the comfort chair, you have to put it together. This Assembly Guide will take you through the basic assembly process. To make sure your assembly goes smoothly, please follow the assembly instructions, and especially the important safety information.

Also, while it is possible to assemble the chair on your own, having a second person to help you makes it even easier.

Before you begin, please check if there are any missing parts from the package. Should there be any issues, please don't hesitate to drop us an email and we'l help you out ASAP.


Assembly Instruction

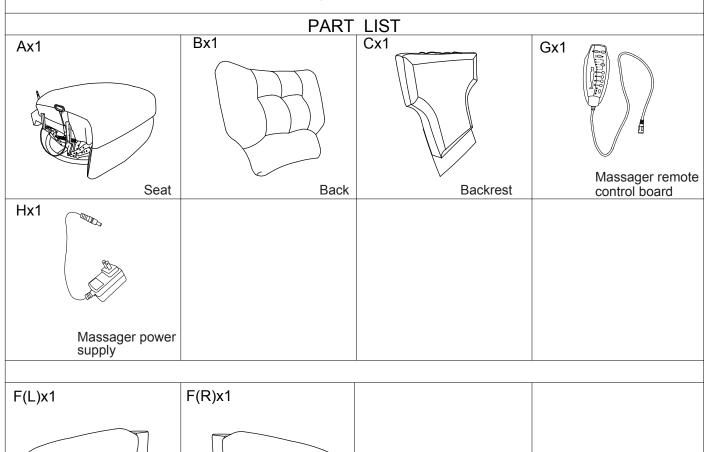


Step 1 Zip up the backpack to the back frame ,then connect the backpack and back frame with velcro.

Handrail bag


Handrail bag

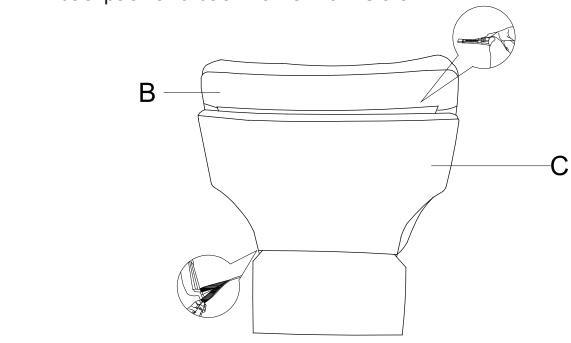


Step 2 Insert the arms into the seat in a way that they fit properly . You will hear a click when they are securely engaged.

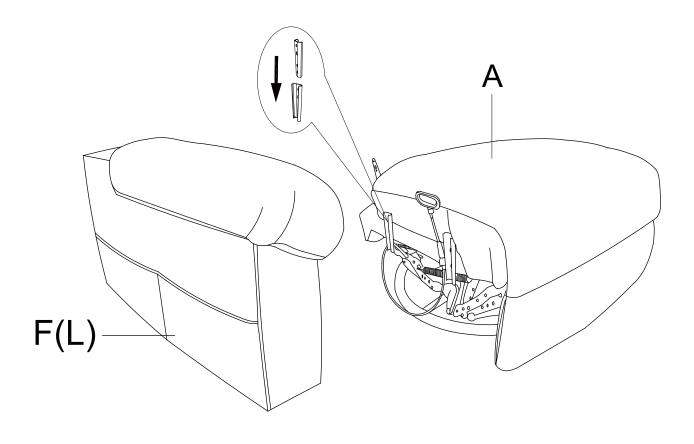


Step 3 Repeat Step 2.

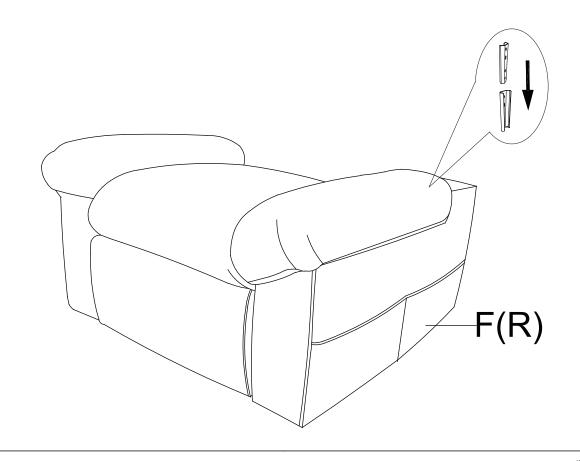


Step 4 Plug the back pad into the seat frame, then connect the massager lines: white with white, red with red, black with the power lines, connect the massage line with the hand controller.

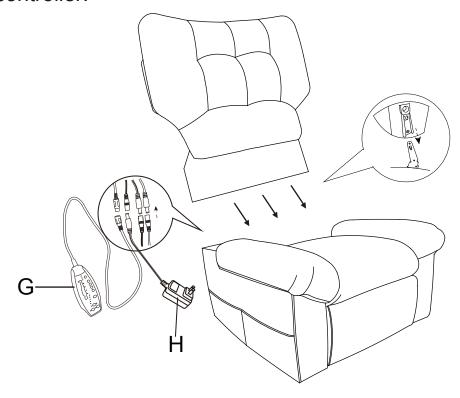



Step 5 Stick the velcro from the back frame to the seat frame.

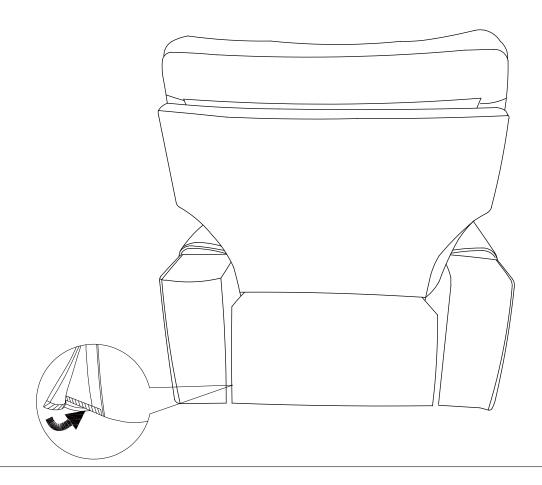

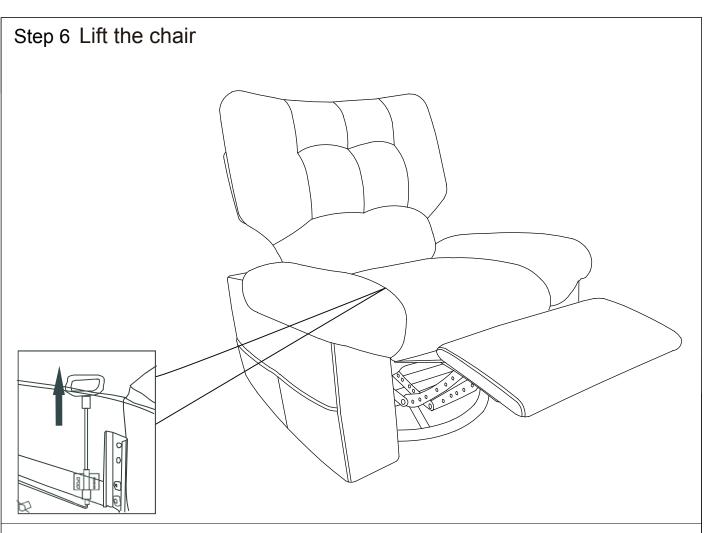

Step 7 Put down the chair

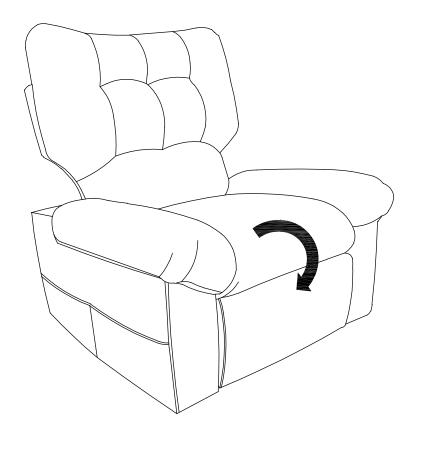


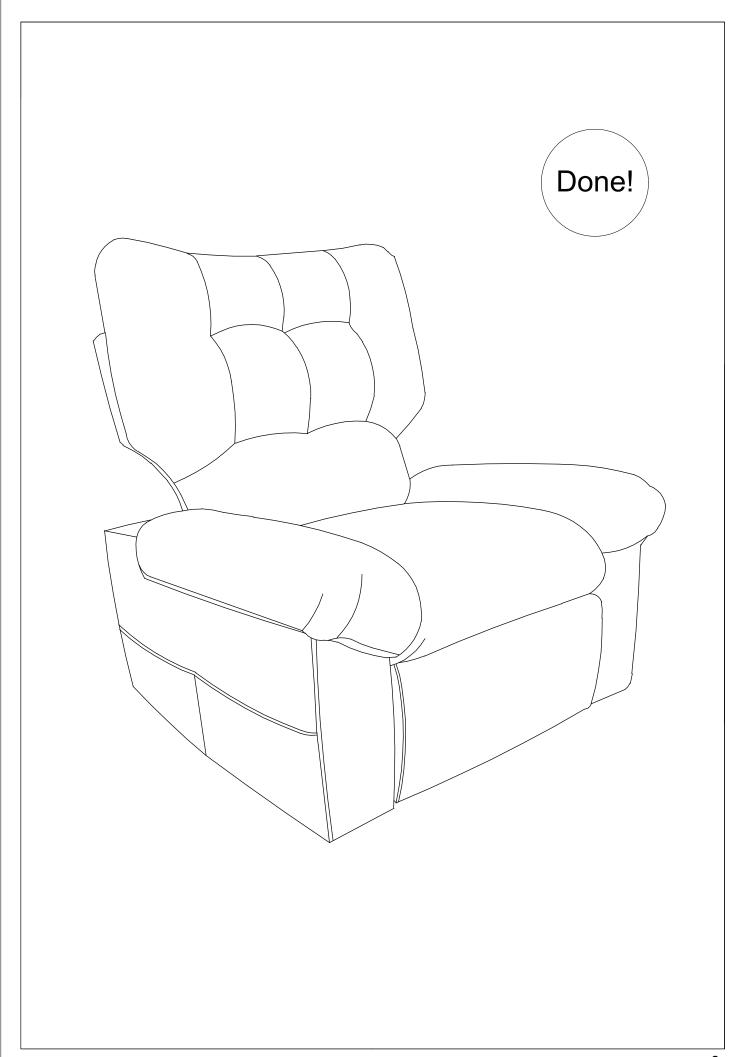

MASSAGE CHAIR

READ ALL INSTRUCTIONS BEFORE USING THE ITEM

REMOTE CONTROL Function of remote

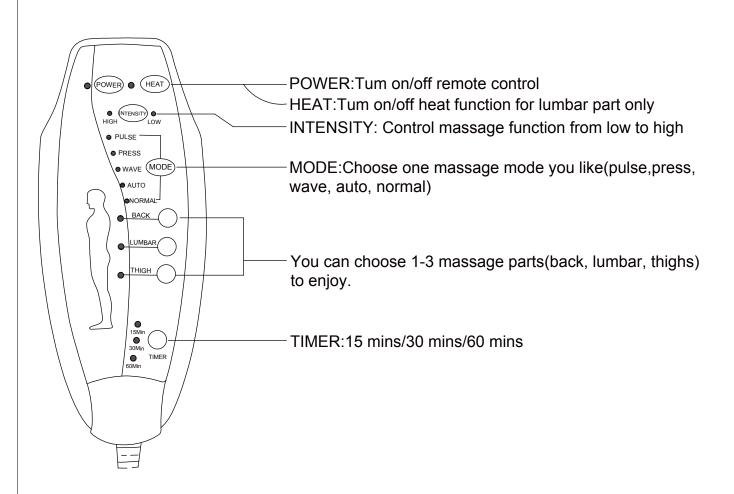

I 、 Specifications of the Power Adapter

The power is on in the standby state. The user can activate the function via the hand controller.

Input: AC 100-240V, 50HZ / 60HZ; Output:DC12VIA.

II 、Product features

- 1. Four-way vibration motor
- 2. Five vibration modes
- 3. Two levels of vibration intensity
- 4. Three preset durations for timed shutdown
- 5. One-way switch for independent heating plate operation

III Function details

- 1. Click to cycle through the switch options
- 2. Adjust the vibration intensity switch (strong/weak)
- 3. Click to cycle through the heating switch options
- 4. Tap to switch between the five vibration modes (Pulse / Press/ Wave / Auto / Normal)
- 5. Back massage switch
- 6. Lumbar massage switch
- 7. Thigh massage switch
- 8. Cycle through massage times by positioning (10 /30 / 60 min)

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1. This product is for use on a 12V circuit Make sure that the product is connected to an outlet having the same configuration as the plug.
- 2. Always unplug the massager from the power source after use,and before cleaning.
- 3. Do not reach for massager ifit has fallen into water. Unplug immediately.
- 4. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
- 5. Do not use outdoors.
- 6. Do not carry this appliance by supplied cord as a handle.
- 7. Keep the cord away from heated surfaces.
- 8. Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
- 9. This unit is not a toy. Children should not use it or play with it.
- 10. Do not operate where aerosol (spray)products are being used or where oxygen is being administered.
- 11. Do not use near eyes or other highly sensitive areas.
- 12. To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
- 13. Use this appliance only for its intended use as described in this manual.Do not use attachments not provided with the unit.

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time.
 Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:Place unit in its box or safe,dry,cool place.Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric.Do not wrap power cord around the unit.Do not hang the unit by power cord.

TO CLEAN:

- Ensure the unit is unplugged from the power source, and allow the unit to cool down before cleaning.
- Do not use any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat with clean, dry cloth.
- Do not use any abrasive cleaners, brushes, gasoline, kerosene, glass furniture polish, paint thinner or water hotter than 120°F to clean the unit

Warnings

- Sit down in the chair gently. To avoid tipping over, do not throw yourself into the chair. Move the chair into the reclining position slowly, making sure that no children or pets are in close proximity. Do not allow children to play on or around the chair, particularly when it is in an open position.
- Close the recliner completely before getting out of it.
- Never sit on the footrest when it is open, even if it is a child.
- To eliminate the risk of tipping over, do not sit on the arms or footrest of the chair.
- This chair is designed to be used by 1 adult at a time.
- Maximum weight capacity is 330LBS, Do not allow any person who over 330LBS to sit on the recliner.
- Please forbid people with the following ailments from using this sofa: Those people with severe symptoms of heart disease, high blood pressure, cerebral thrombosis and others who are sensitive to heat or completely insensitive to heat, those with brittle bones or have issues with waist support pregnant women, children and others where it has been determined they are not suitable to use this product under the guidance of doctors.
- To fully recline the sofa, ensure the sofa well, you need to put the sofa at least 19 inches away from the wall or any other obstacle.
- Product cannot touch water, fire, etc. Product can also not come in contact with sharp objects (knives, nails, etc.)

Maintenance Manual Instructions

- To avoid dropping, you should carry the sofa carefully.
- If you find dirt and or stains on the chair, spray the sofa with a sofa specific cleaner then use a sponge or cloth to wipe the dirt away. Do not use water, soapy water or cleaner with waxed wooden areas. Take care to wipe the sofa carefully and gently.
- Do not put the sofa in an area with direct sunlight and do not put the sofa directly in front of an air conditioner, this will fade the upholstery and make it brittle.