

Swing & Slide Set

USER MANUAL



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

SAFETY & WARNINGS

ADULT ASSEMBLY REQUIRED.

- Keep these instructions for future reference.
- This product is intended for indoor, outdoor, family, domestic use only.
- Place this product on level ground and at least 6.6' away from a fence, building, overhead branches, laundry lines or electrical wires. This product should be placed away from furniture that could cause injury if a fall occurs.
- Ensure the installation area is ventilated.
- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check that all parts are assembled well and are stable before use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- When temperatures fall below freezing (0°C/32°F), outdoor use of this product is not recommended. In extreme cold, plastic materials lose resilience and may become brittle and crack with impact. Store product in a warmer, protected place.
- Keep away from fire or any source of ignition.
- Packing materials are not toys, keep them away from children.
- Instruct children on proper use of this product: only after properly assembled and installed, and not in a manner other than intended.
- Dress children appropriately: do not allow children to wear loose-fitting clothing including ponchos, scarves and garments with drawstrings. Well-fitting shoes must be worn at all times.
- Avoid placing equipment in direct sunlight as hot surfaces could cause serious burns.
- Provide adult supervision at all times.

PLEASE DO NOT RETURN TO STORE




**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

PART LIST


					
Slide Extension x 1	Slide x 1	Slide Handrail A x 2	Slide Handrail B x 2		
					
Side Panel A x 3	Swing Arm x 2	Swing Seat x 1	Seat Armrest x 1		
					
Tread x 3	Swing Pedal x 1	Swing Bar x 1	Swing Base x 2	Base Feet x 2	
					
Football Goal x 1	Football Net x 1	Lift Bar x 1	Basketball Board x 1		
					
Basketball Hoop x 2	Basketball Net x 2	Ball x 2	Screw A x 16	Screw B x 17	
					
Screw C x 2	Screw D x 13	Screw E x 2	Metal Screw x 2	Safety Belt x 2	
					
Buckle x 12	Water Plug x 2	Ring x 3	Plug x 1	Screwdriver A x 1	Screwdriver B x 1

ASSEMBLY

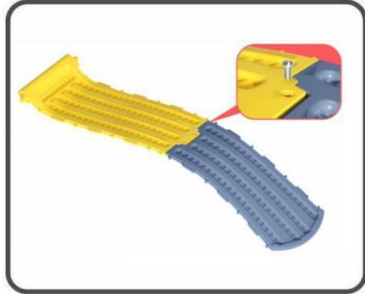


Step1

Connect the Slide Extension to Slide, secure with 2 Metal Screws.

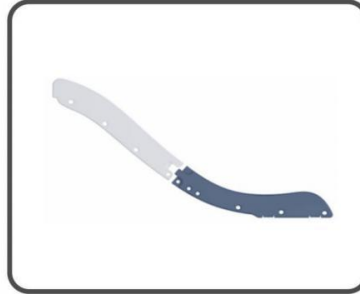


Step2

Attach the Handrail A to the Handrail B, secure with 1 Screw E and 1 Screw A on each side.

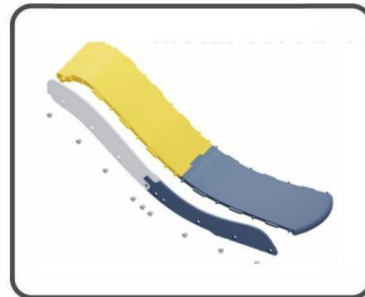

Step3

Connect the Step 2 assembled parts to Step 1 assembled parts, secure with 7 Screws A.

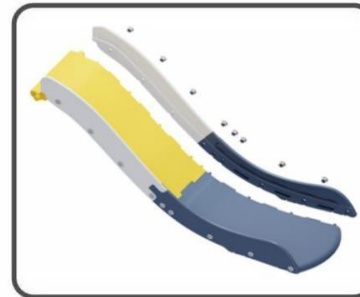

Step4

The same as Step 3.



Step5

Folding the Seat to 90°, then insert the Seat Armrest into the Swing Seat, Secure with 1 screw D. Connect the assembled part and Swing Pedal to the

Swing Arm, secure with 4 Screws D, 1 Screw B.

ASSEMBLY



Step 6

Connect the other Swing Arm to the Step 5 assembled parts, secure with 4 Screws D and 1 Screw B.



Step 7

Connect the Tread to the Side Panel A, secure with 3 Screws B. Then connect the Slide to the Side Panel A, secure with 1 Screw C.



Step 8

Connect the other Side Panel A to the Step 7 assembled parts, secure with 3 Screws B and 1 Screw C.



Step 9

Connect the Swing Bar and Swing Base to the Side Panel A, secure with 3 Screws B. Then connect another Side Panel A to the assembled parts, secure with 3 Screws B.



Step 10

Hang the Step 6 assembled parts to the swing bar with 2 Swing Belts.

ASSEMBLY



Step 11

Connect basketball hoop to the Side Panel A, secure with 1 Screws B.



Step 12

Connect the Base Feet to the Football Goal, secure with 4 Screws D. Then connect the buckles as shown.



Step 13

Hooked the Football Net on Buckles.



Step 14

Connect the Lift Bar and Peg to the Football Goal, secure with 1 Screw B.



Step 15

Connect the Basketball Board and Basketball Hoop on the top of the lift bar, secure with 1 Screw B.



GENERAL SAFETY INSTRUCTIONS

This product is intended for indoor, outdoor, home, domestic use only. It is not suitable for commercial or medical use.

The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.

Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.

Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.

Use the product only on even and non-slip surfaces. Keep sufficient space around for safety.

Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.

After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.

Do not make alterations to the product. Only use original spare parts. Only qualified technicians should carry out repairs - improper repairs can lead to danger for the user. Use this product only as described in this manual.

IMPORTANT

The owner's manual contains safety, assembly, use and maintenance instructions. The product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

OPERATION INSTRUCTIONS

Provide adult supervision at all times.

The disassembled product contains small parts which pose a choking hazard to children under 3.

Dress children appropriately, including wearing well-fitting shoes that fully protect feet.

Instruct children:

- to sit in the center of the swings with their full weight on the seats,
- to avoid swinging empty seats,
- to slide feet first; one child down slide at a time,
- to remove articles, before playing on equipment, that create hazards when they get tangled and caught.
- not to walk close to, in front of, behind, or between moving items,
- not to get off equipment while it is in motion.

Never allow children to use the equipment in a manner other than intended. Do not swing while standing or slide down head first.