












Assembly Instructions


Caution : You must read this before you proceed

Care & Maintenance






- ⊘  ● Not for commercial use. For residential use only.
- ✓  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ⊘  ● Do not place furniture outside . For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Chair Seat for hardware pack and legs.




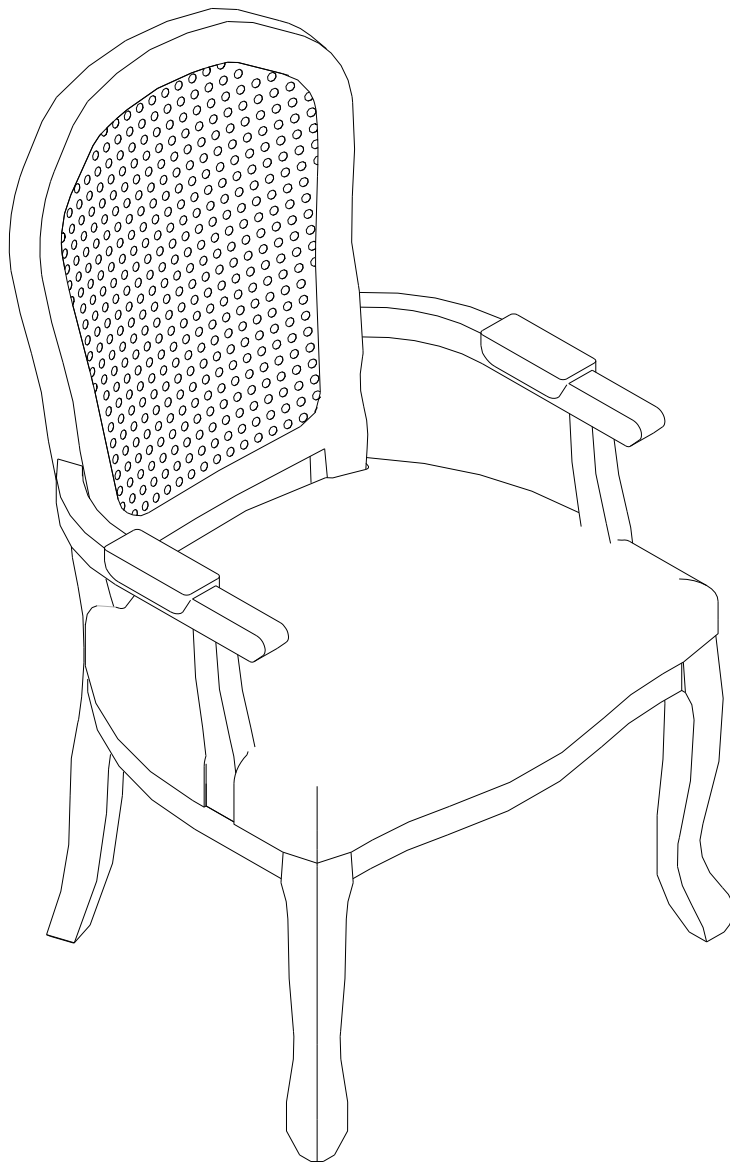







Dining Chair



Parts List


| Label | Picture | Description | QTY |
|-------|-----------------------------------------------------------------------------------|-------------|-----|
| A |  | Chair Back | 1 |
| B |  | Chair Seat | 1 |
| C |  | Front Leg | 2 |
| D |  | Arm-Left | 1 |
| E |  | Arm-Right | 1 |

Hardware

| Label | Picture | Description | QTY |
|-------|-------------------------------------------------------------------------------------|--------------------|-----|
| ① |  | Bolt (M8*43mm) | 4 |
| ② |  | Bolt (M8*57mm) | 5 |
| ③ |  | Bolt (M8*70mm) | 5 |
| ④ |  | Spring Washer (M8) | 14 |
| ⑤ |  | Flat Washer (M8) | 14 |
| ⑥ |  | Bolt (M6*43mm) | 3 |
| ⑦ |  | Spring Washer (M6) | 3 |
| ⑧ |  | Flat Washer (M6) | 3 |
| ⑨ |  | 5mm Allen Wrench | 1 |
| ⑩ |  | 4mm Allen Wrench | 1 |
| ⑪ |  | Plug | 3 |

Assembly Preparation

Before Beginning Assembly:

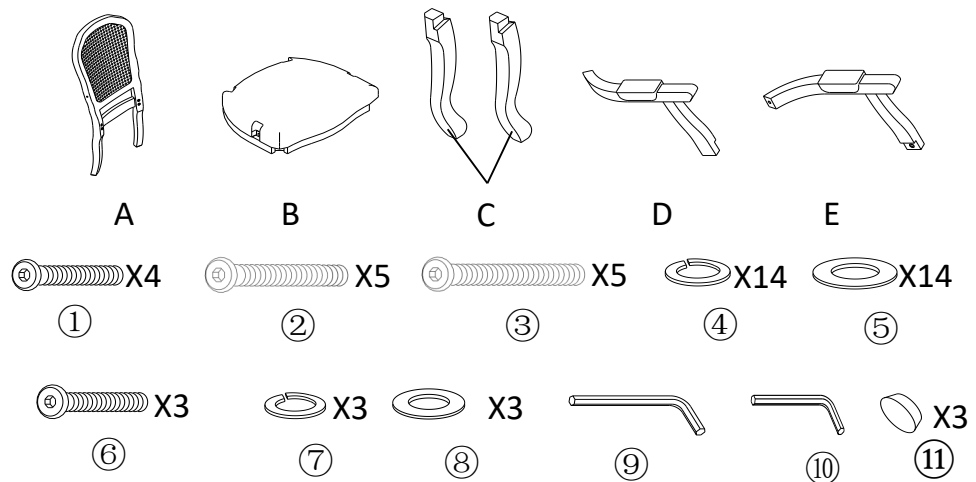

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

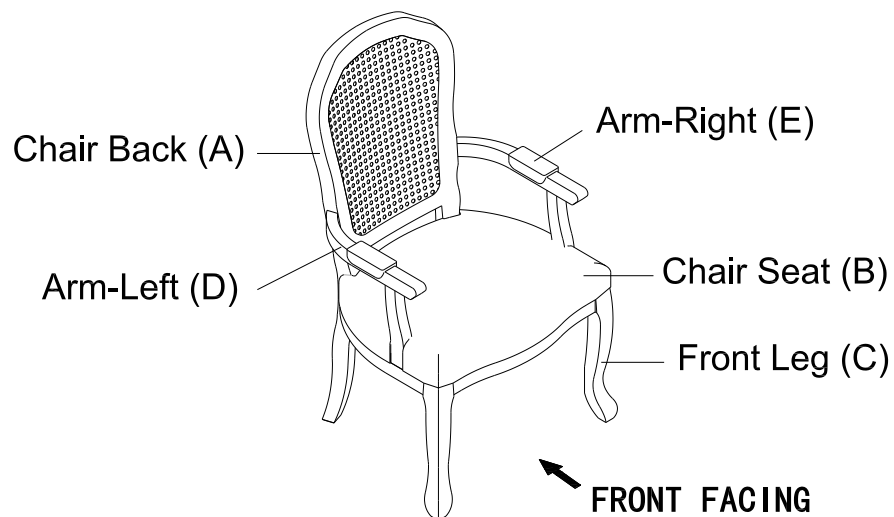


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

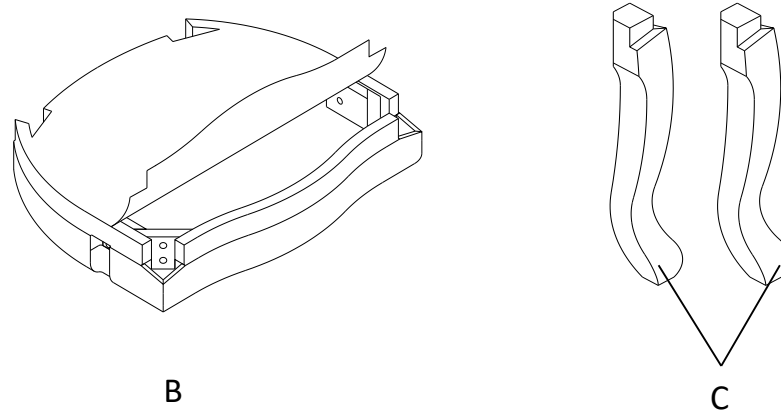

REMOVE the Seat Base Cover from the Chair Seat(B), and take out the front legs(C).
Place all the parts on a clean, non-marring surface.

Step 2

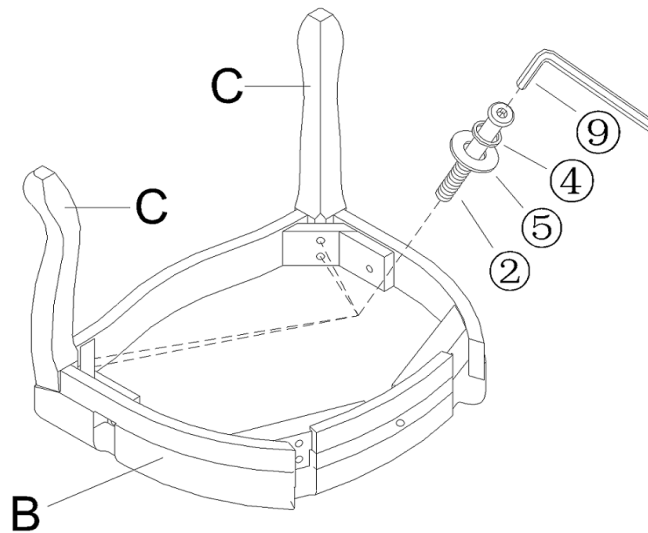


Place the Chair Seat bottom (B) facing upwards.

Insert the Front Legs(C) completely vertical into the seat frame corner and attach them using 4 Bolts 57mm② + 4 Spring Washers④+ 4 Flat Washers⑤ and Allen Wrench⑨.

At this point in the assembly, DO NOT fully tighten the bolts.

Step 3

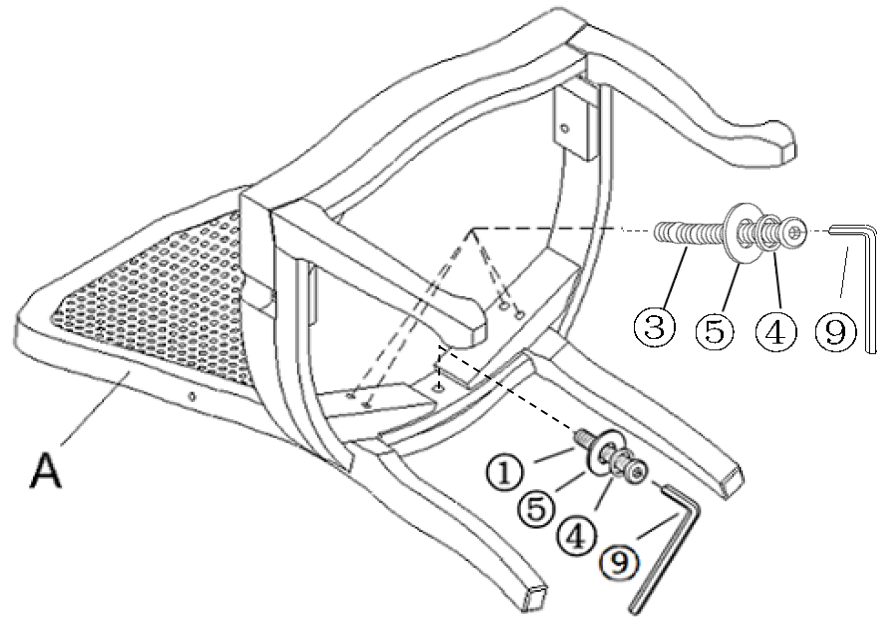

Place the Chair Back(A) onto a clean, non-marring surface.

With assistance from a second adult, attach the Chair Seat(B) to the Chair Back(A).

Secure them in the middle mounting position where indicated, using 1 Bolt 43mm①+1 Spring Washer④, 1 Flat Washer ⑤ and Allen Wrench ⑨.


Secure them in the four corner mounting positions using 4 Bolts 70mm ③+4 Spring Washers④ +4 Flat Washers⑤ and Allen Wrench⑨, as shown in the picture above.

A Friendly notice:

If the mounting positions cannot be aligned well, hindering the installation, then sway the Seat(A) lightly when locking in the Bolts. This action could help avoid the Bolts from getting stuck and ensure a smooth assembly.

Do not fully tighten the Bolts at this time.

Step 4

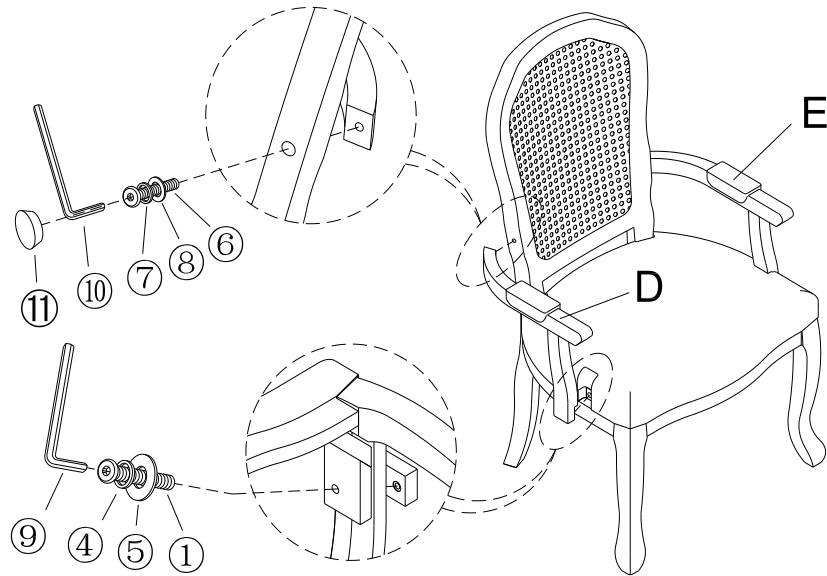

Position the Chair as shown in the picture.

Align the mounting positions of the Arm(D&E) with the Chair Back(A).


Secure them in the Backrest position using 2 Bolts 43mm⑥ + 2 Spring Washers⑦+ 2 Flat Washers⑧ and Allen Wrench⑩. Press a Plug⑪ into the position as indicated above.

Secure them in the Seat frame position using 2 Bolts 43mm①+ 2 Spring Washers④+ 2 Flat Washers⑤ and Allen Wrench⑨.

Repeat the same process with the Right Arm(E).


Note: DO NOT fully tighten the Bolts at this time.

Step 5

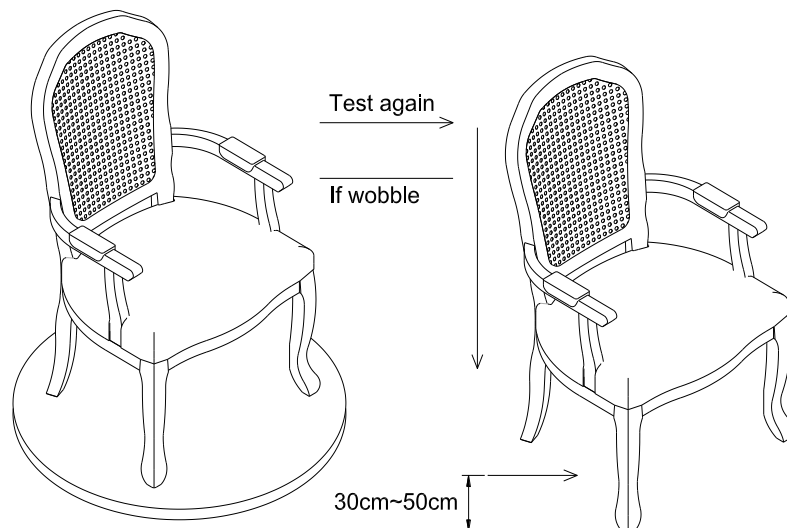


Place the Chair on a level Surface to check for wobbles.
 If it wobbles, lift the Chair some 30cm to 50cm high from the ground.
 Keep your feet and toes well away from the drop zone.
 Drop the Chair freely and vertically, with all four legs hitting the ground at the same time.
 This Drop Test will help to ensure that all Bolts and gaps reach full alignment status.
 Test again for evenness on a Level Surface.
 If no wobbles are found, proceed to tighten all the Bolts.
 When tightening the Bolts, tighten sequentially.
 Do not fully tighten any Bolt fully and then move on towards the next one. This may cause the frame to warp.
 If there are still wobbles, loosen the Bolts and execute this same drop test.

Step 6

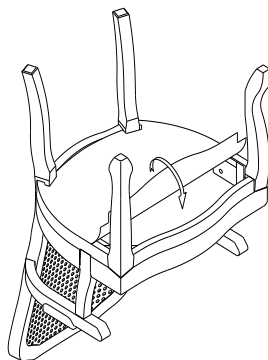

Place the Seat Base Cover back as shown in picture.
 Smooth the Magic Tape down, Make sure all parts are connected and securely locked into position.

Step 7

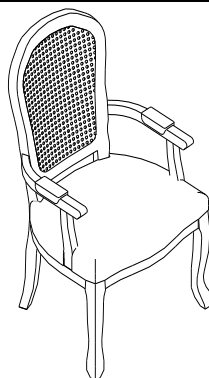

Your Chair is ready for use.
 This Dining Chair can only be used on a flat, level surface.