Assembly Instructions

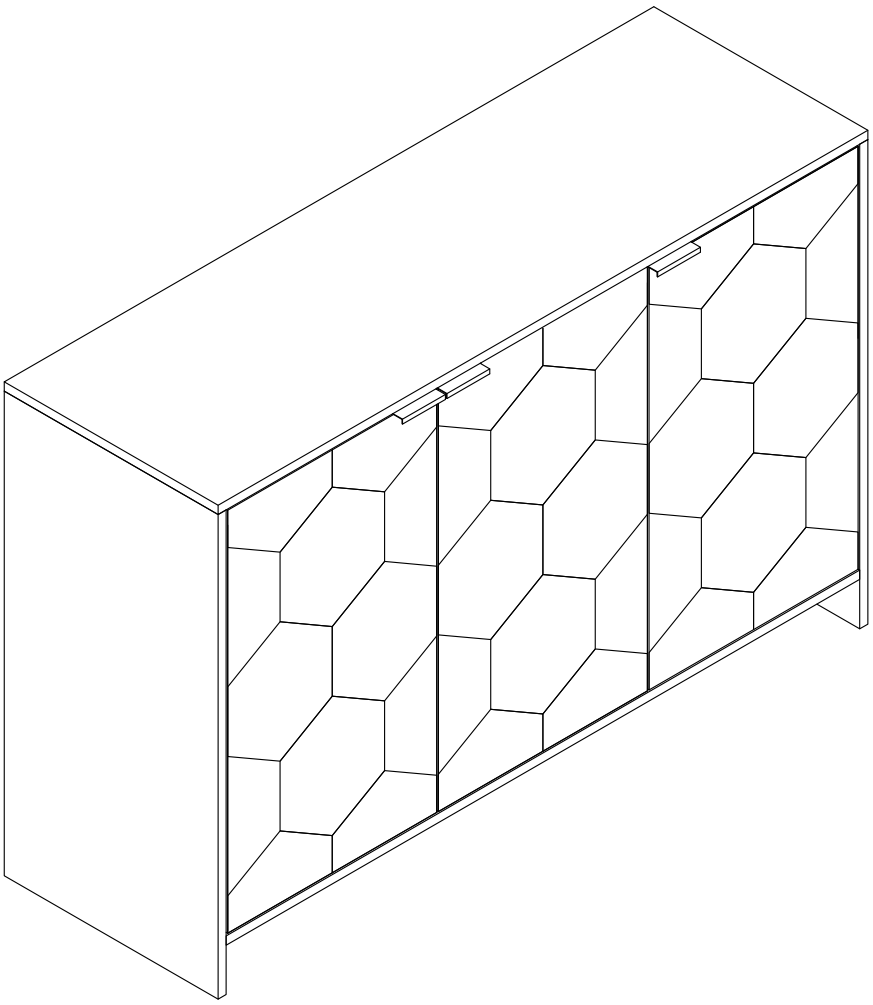

Parts List

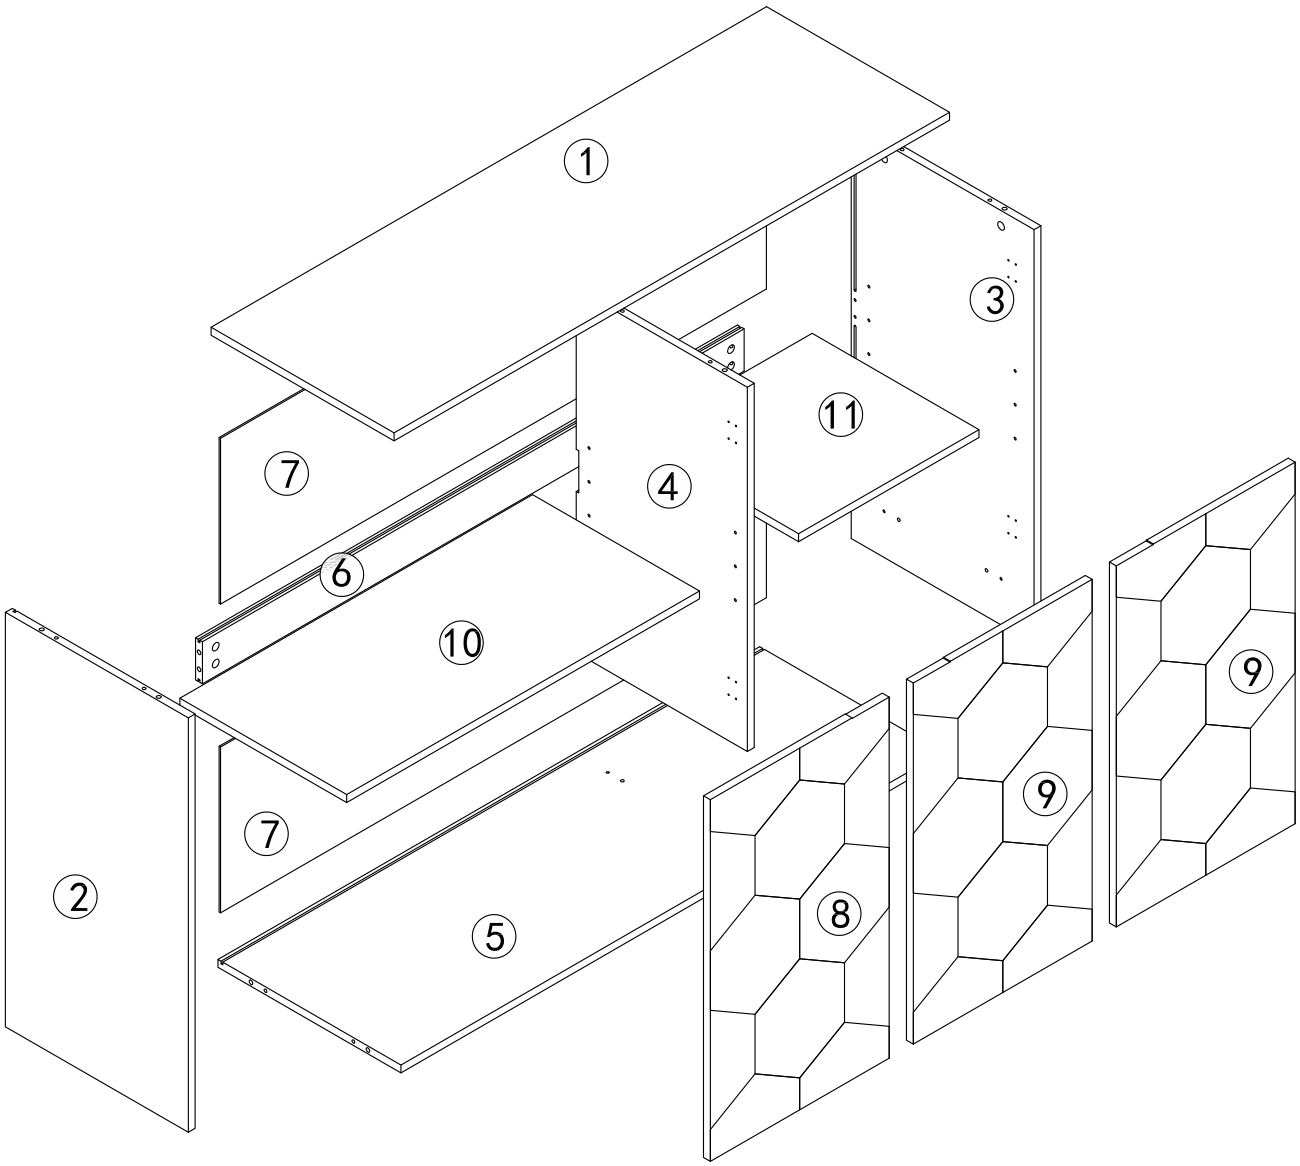

A 16pcs	B 16pcs	C  12pcs	D  6pcs	E 55pcs
F 8pcs	G  2pcs	H  3pcs	I  2pcs	J 8pcs
K 2pcs	L 1pc	M  1pc	N  1pc	

Step 1:

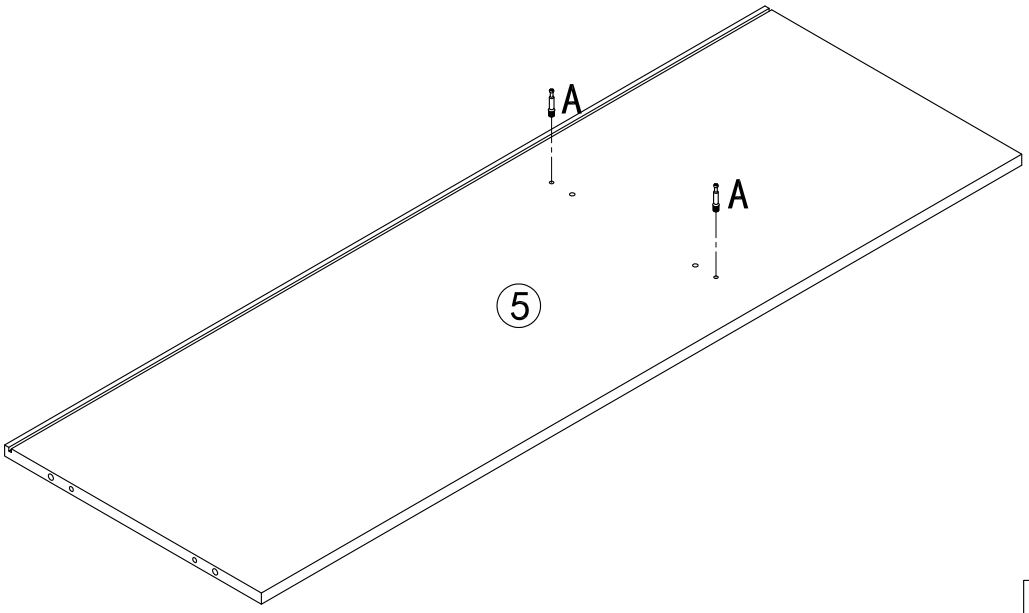

A

2pcs

Step 2:

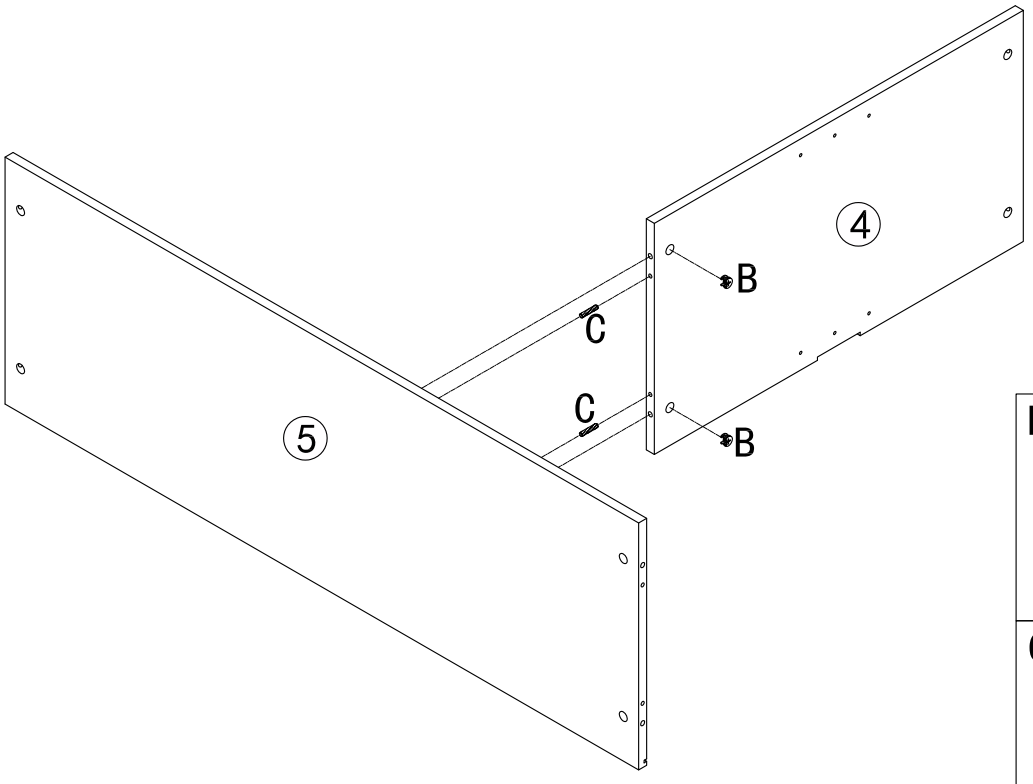

B

2pcs

C



2pcs

Step 3:

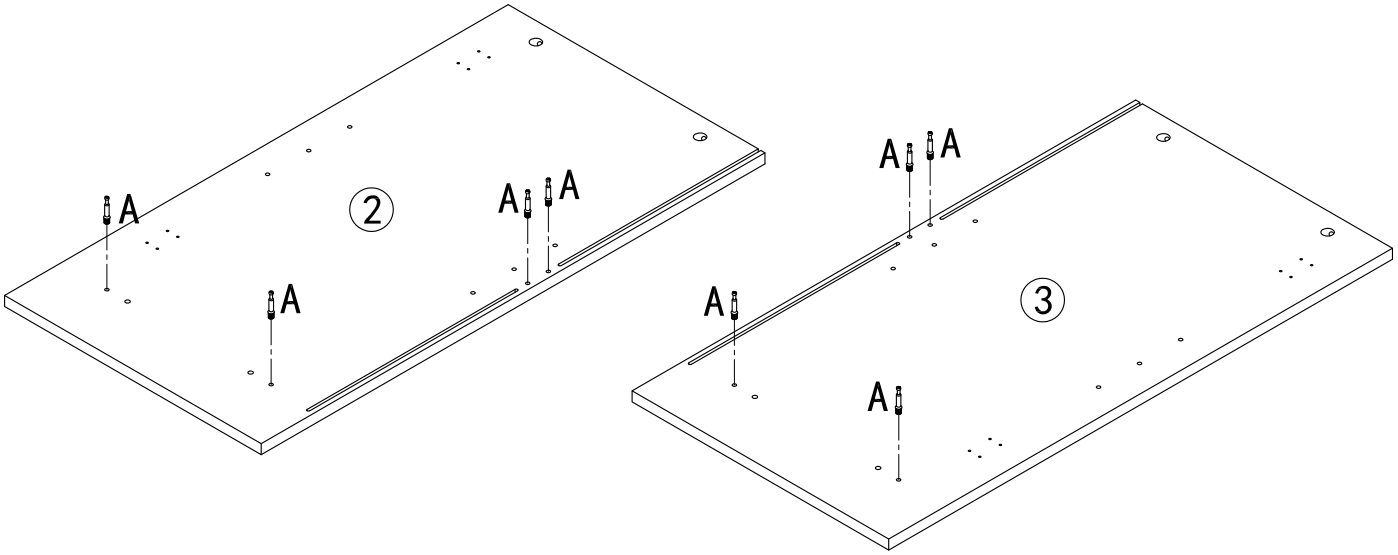

A



8pcs

Step 4:

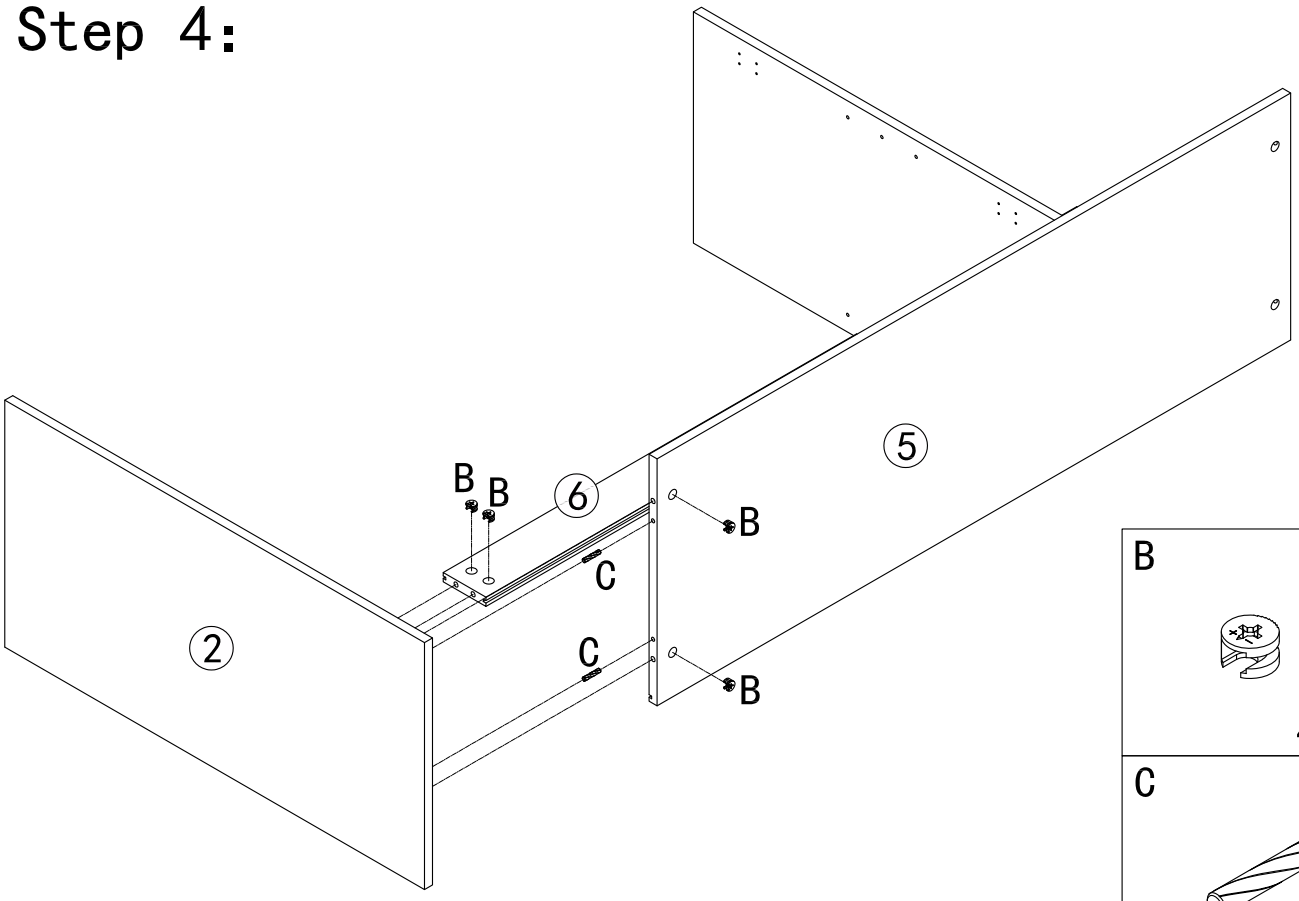

B

4pcs

C



2pcs

Step 5:

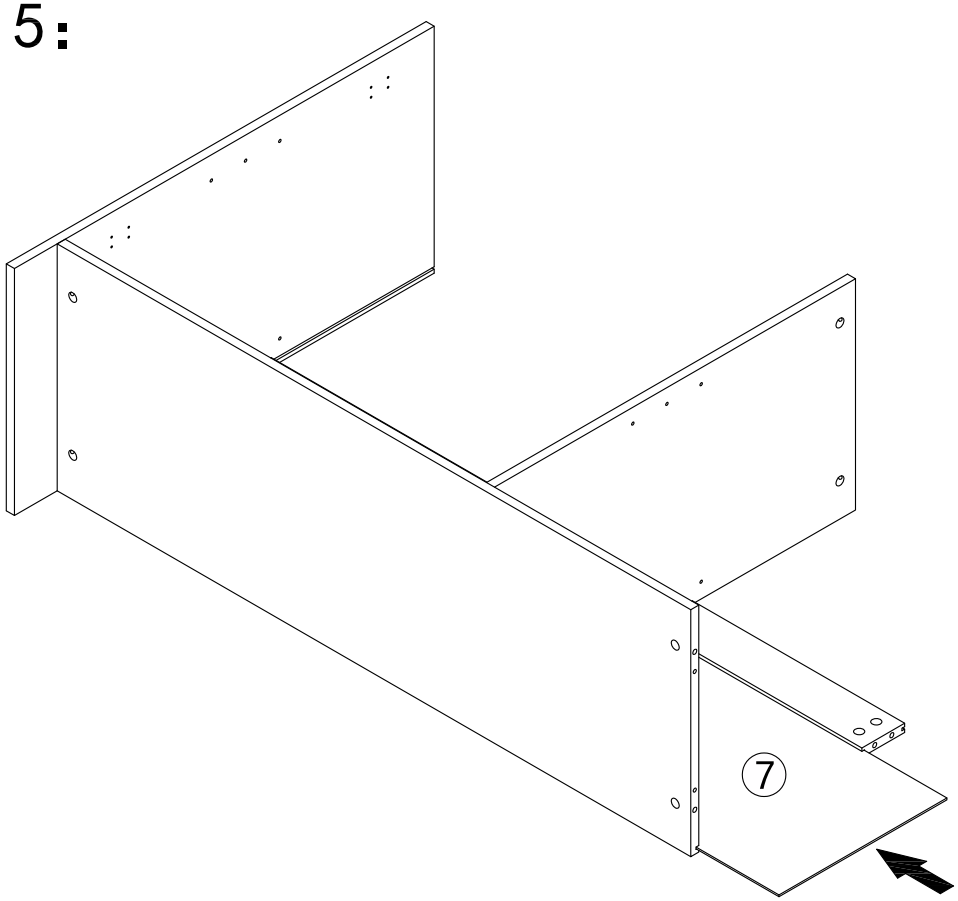

Step 6:

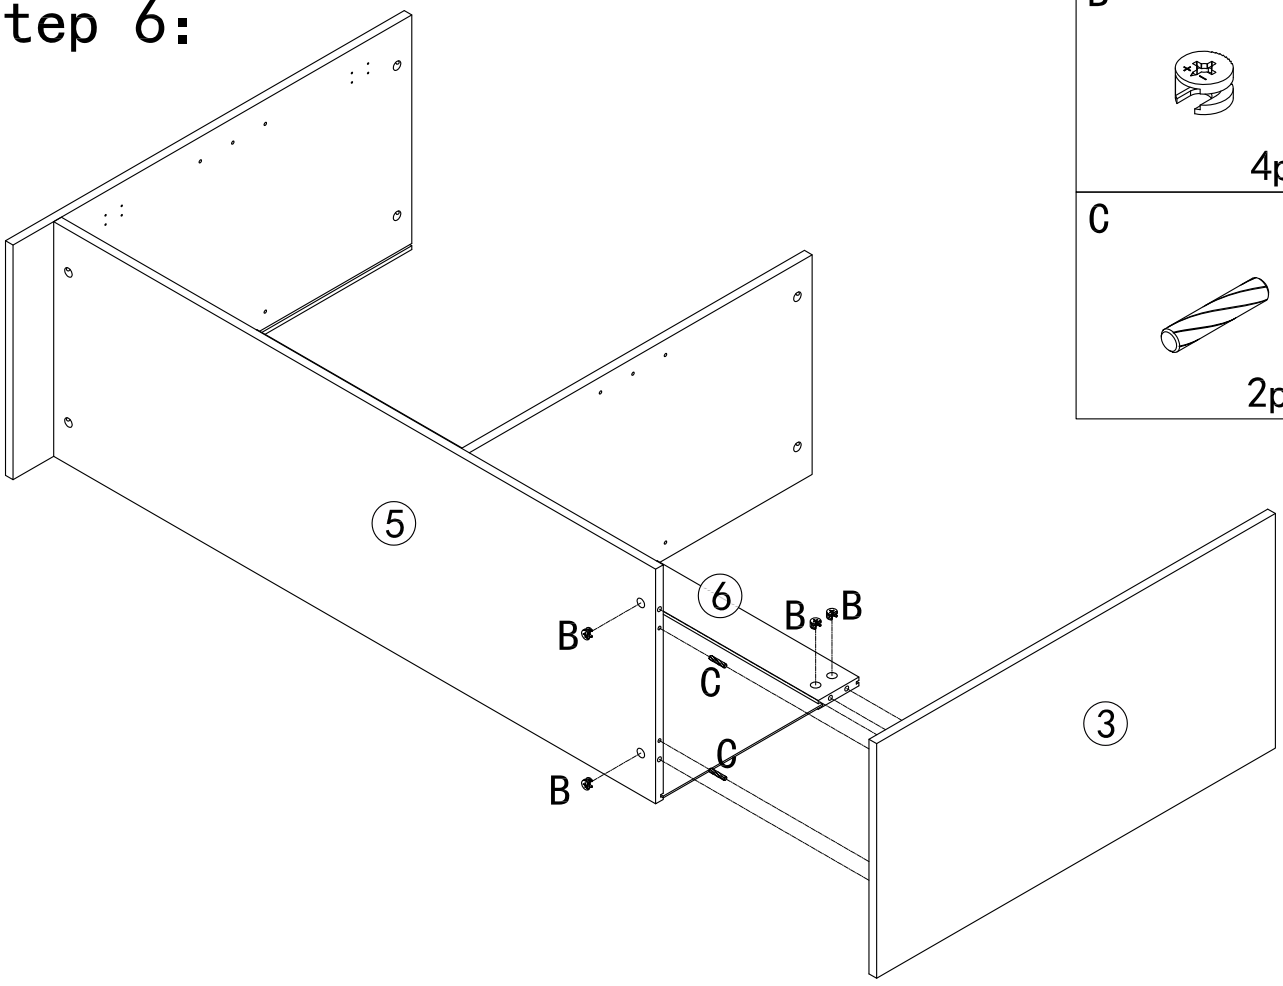

B

4pcs

C

2pcs

Step 7:

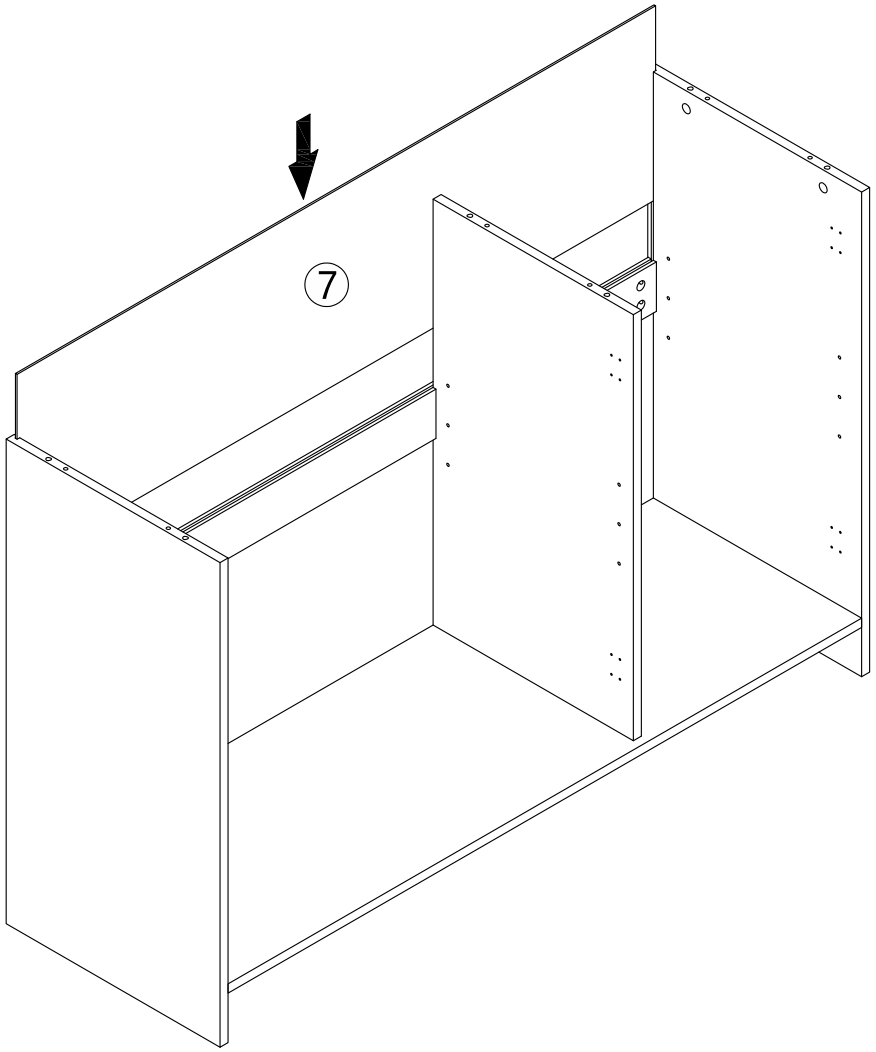

Step 8:

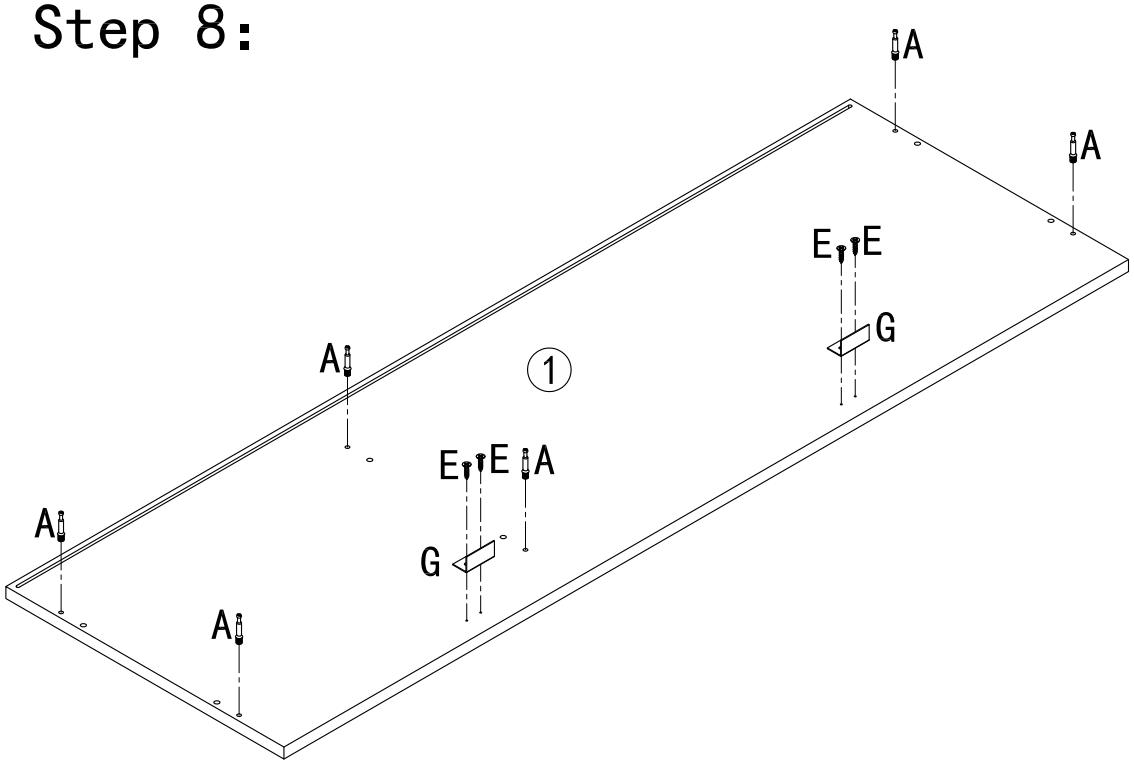

A



6pcs

G



2pcs

E

4pcs

Step 9:

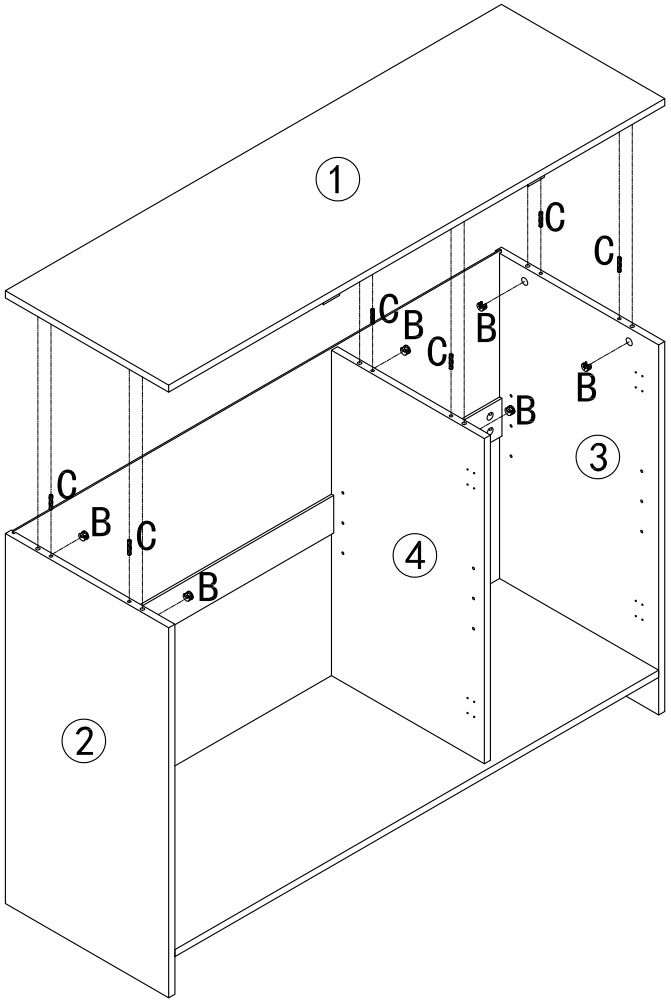

B

6pcs

C



6pcs

Step 10:

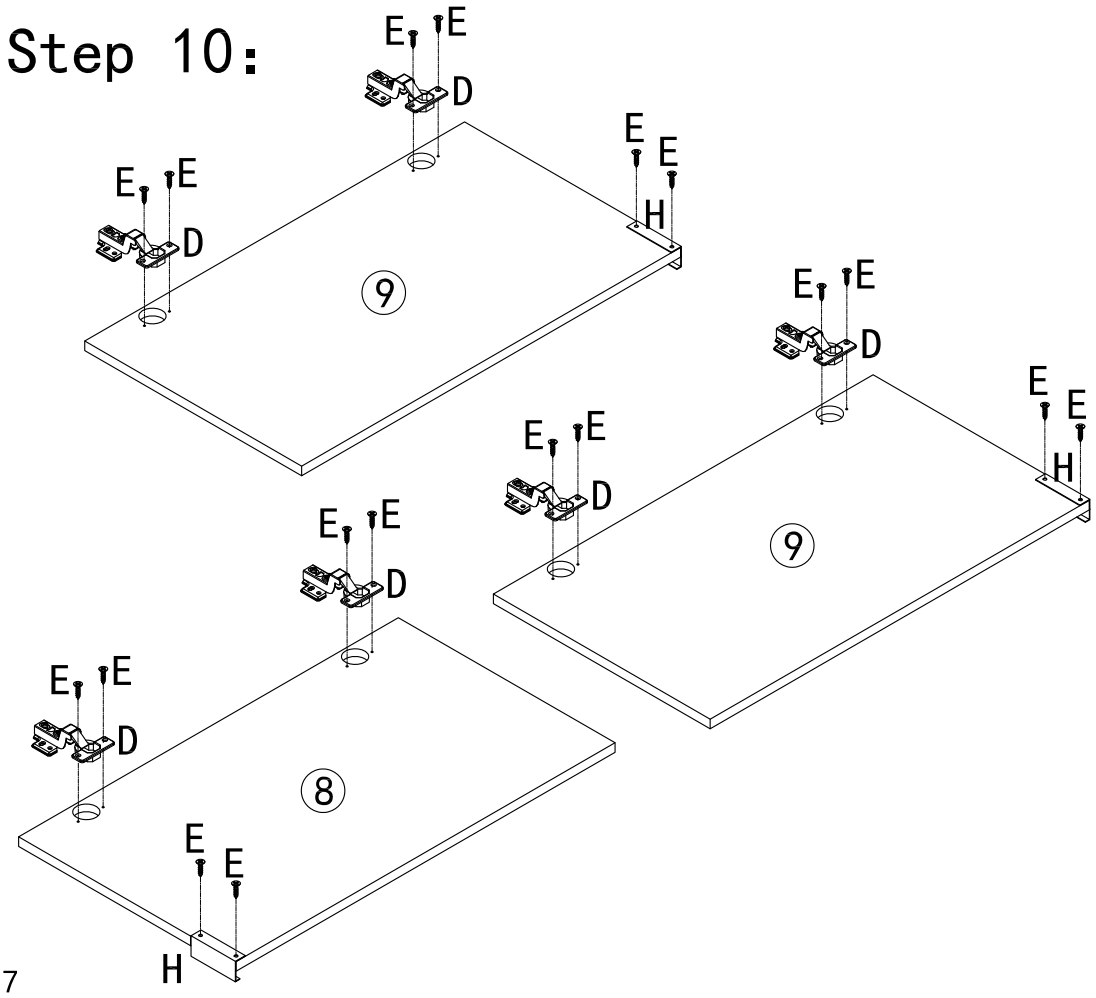

D



6pcs

E

18pcs

H



3pcs

Step 11:

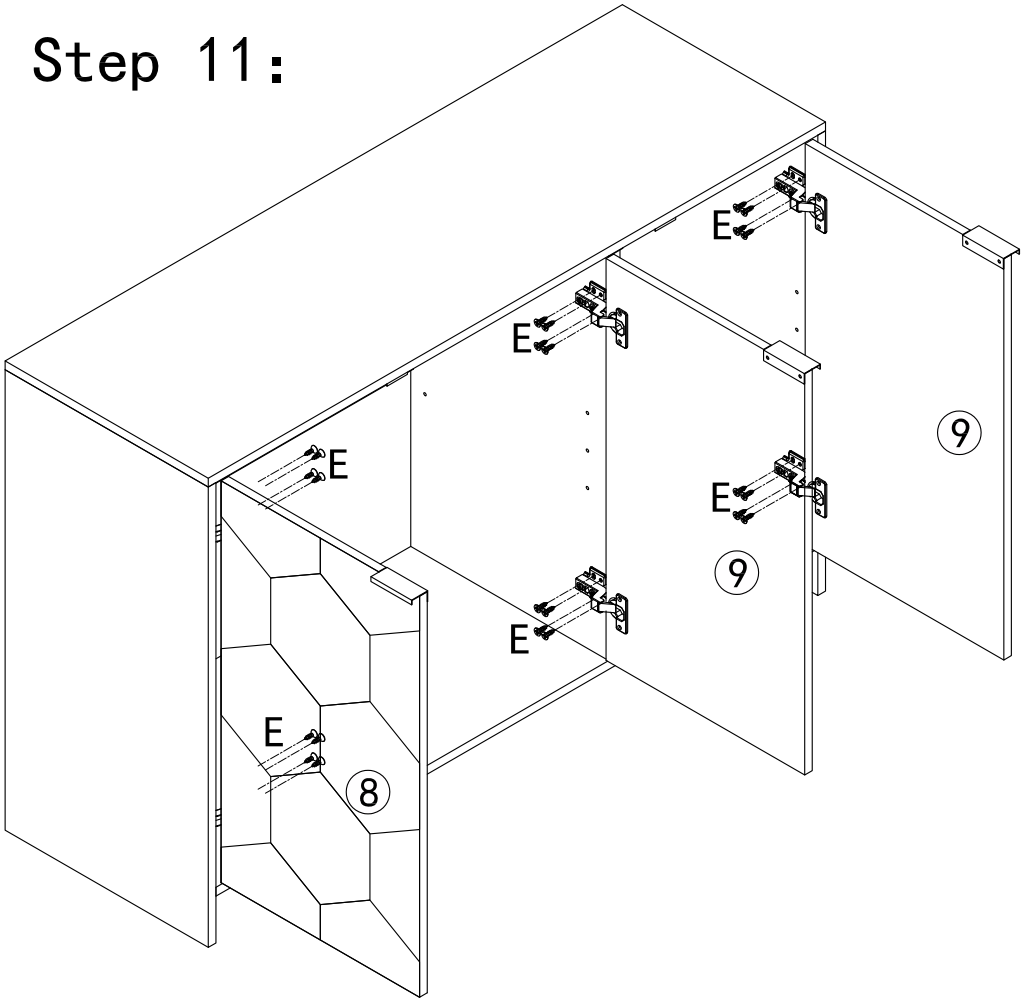

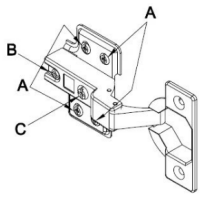

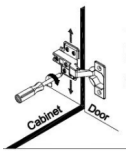

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

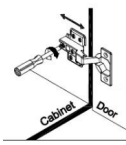

To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

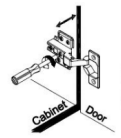

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

E

24pcs

Step 12:

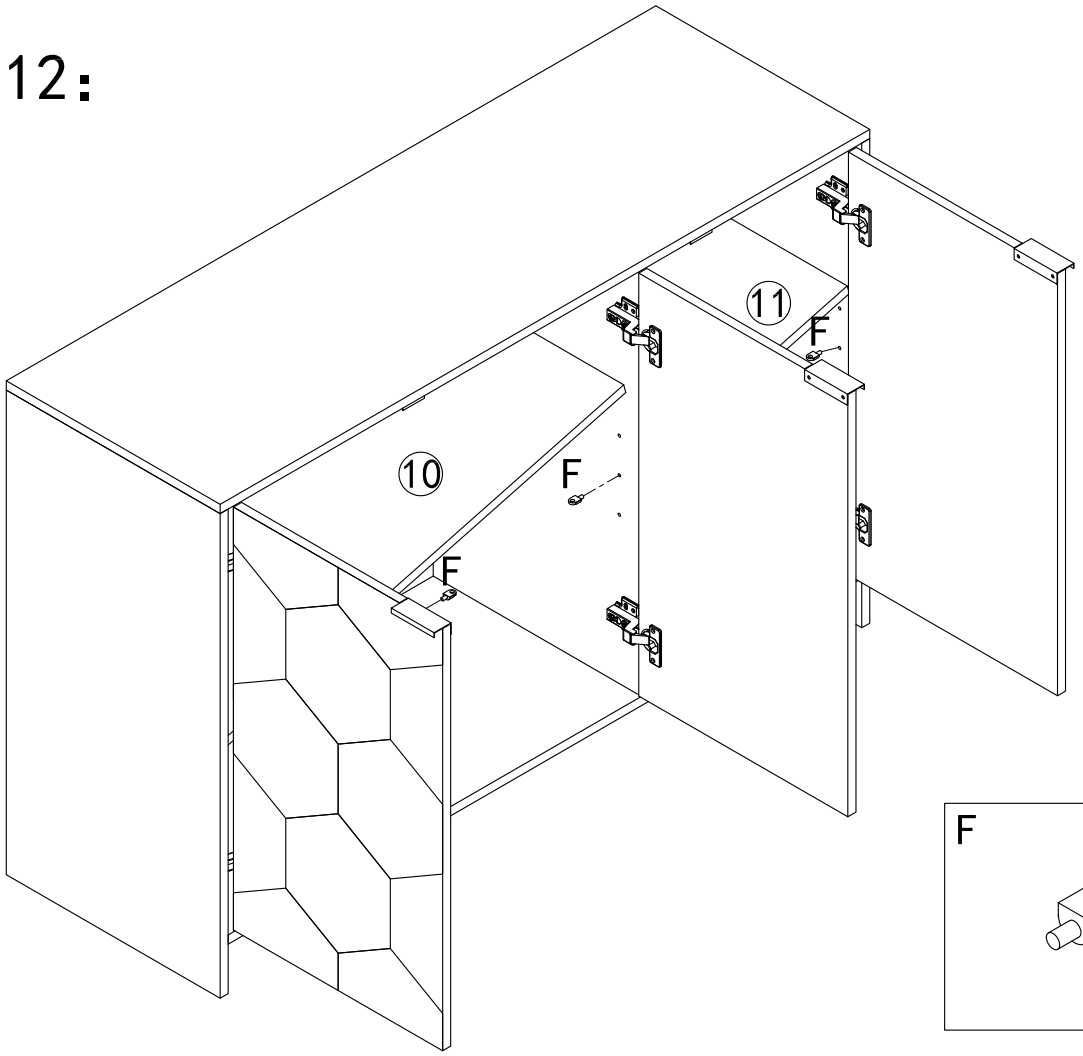

F

8pcs

Step 13:

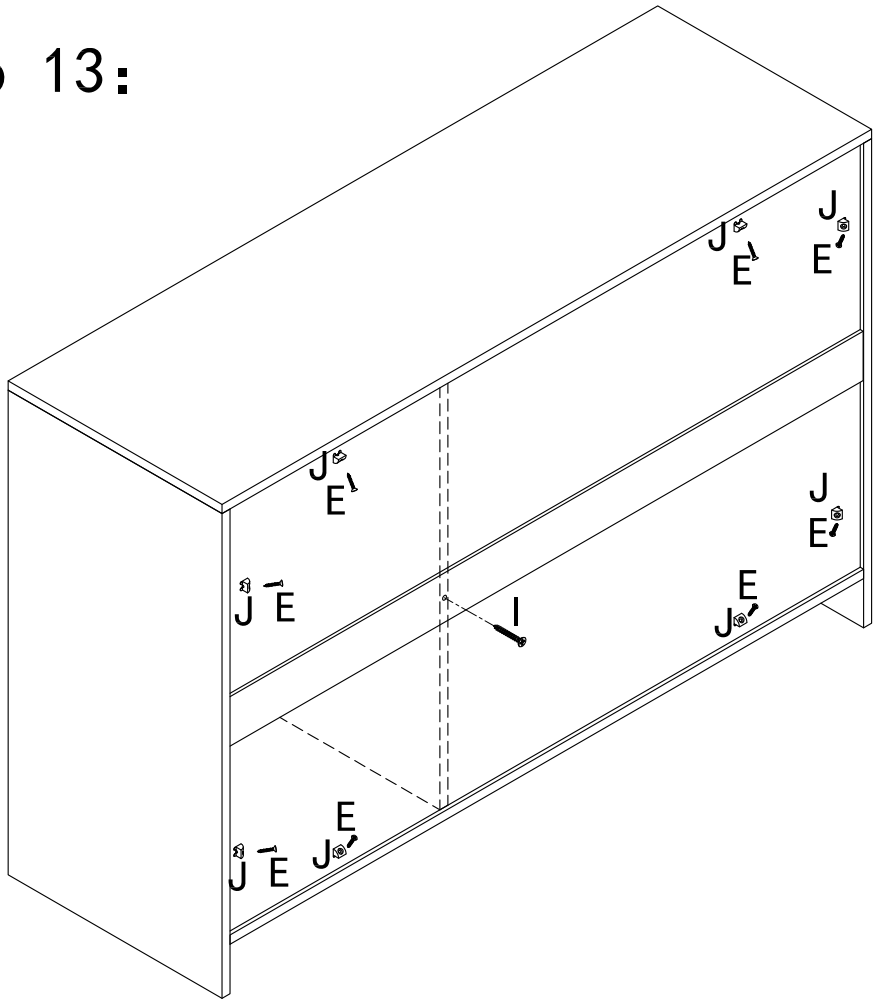

E

8pcs

I



1pc

J

8pcs

N



1pc

Step 14:

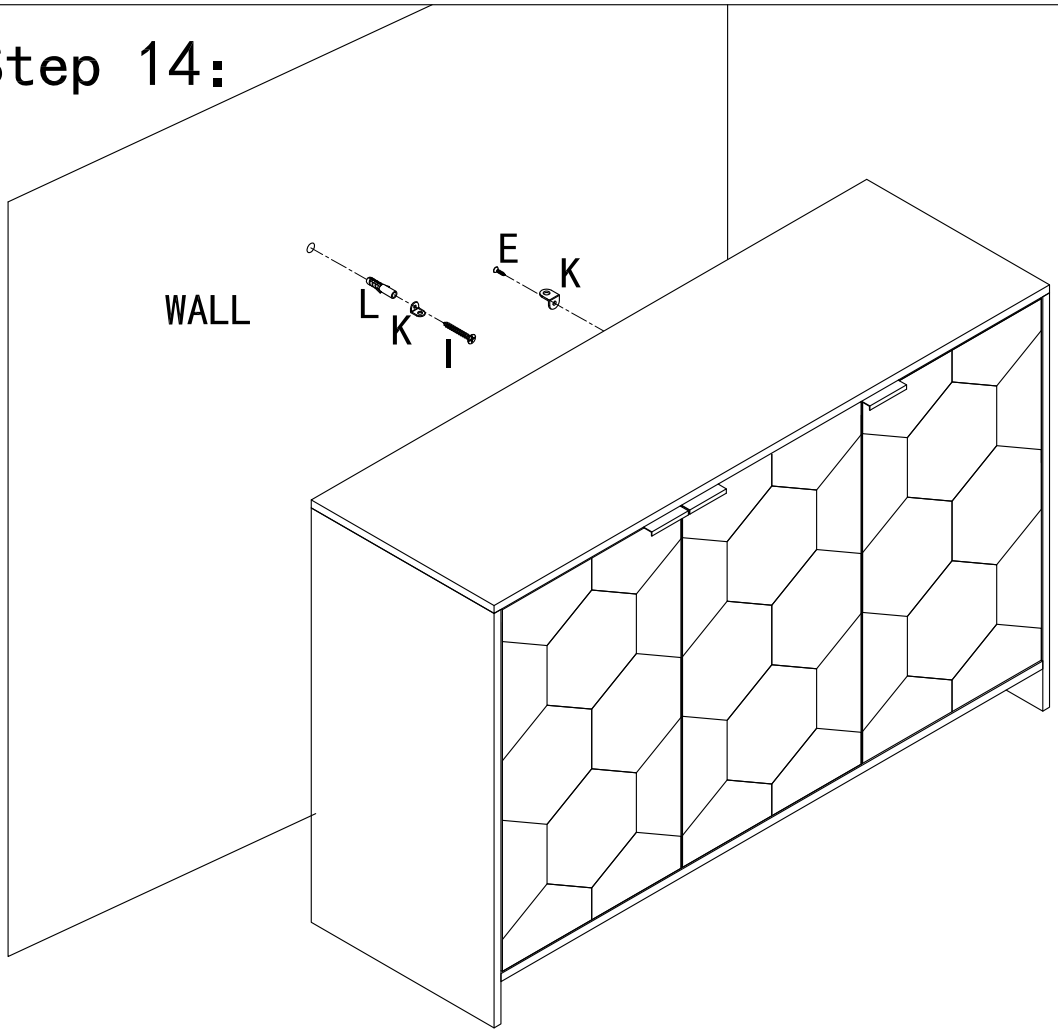

E

1pc

L

1pc

I



1pc

K

2pcs
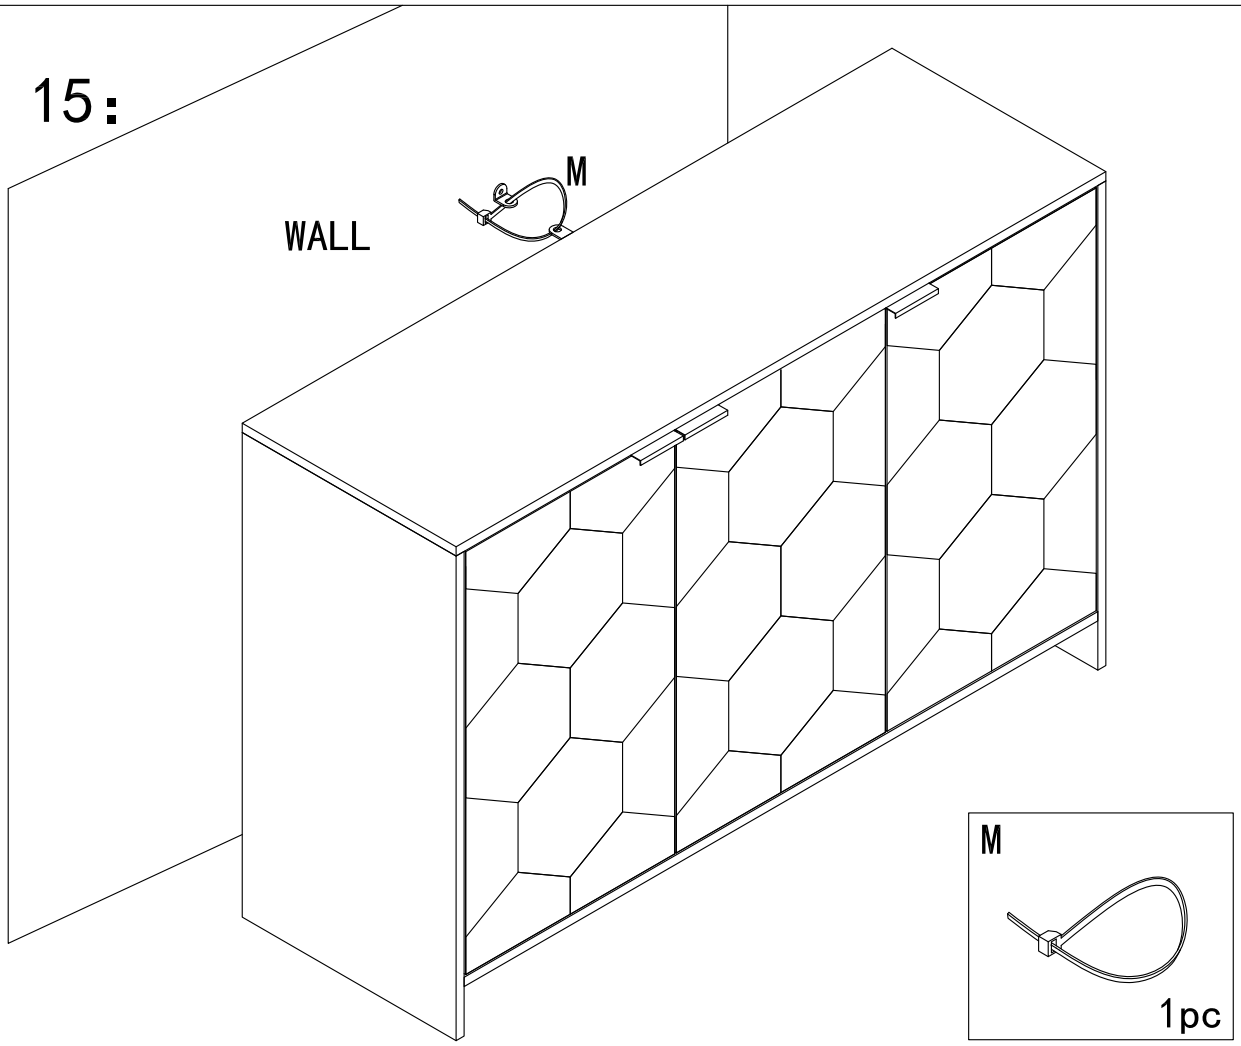
Step 15: