Portable sauna box

Instruction Manual

Part List

Number	Diogrom	Part Name	QTY
I		bath cabinet	1
2		steam pot	1
3		Remote Control	1
4		Herbal box	1
5		Soft Tube	1
6		Hose Connector	1
7		Moisture-proof pad	1
8		Stool	1

Fig 8

1：Lay down the sauna tent cover with the inlet hole facing you . Press down the frame on the opposite side .

2：Fold the sauna tent cover into half.

3：Hold the top left corner and fold it toward the right side of the inlet hole.

4：Hold the top left corner and fold it toward the right side of the inlet hole.

5：Fold the bottom left corner over the top right corner.

6：Press down the folded sauna tent cover.

7：Press down the folded sauna tent cover.

Fig 1

Fig 2

Fig 3

1. Take out the sauna tent cover from the carrying bag and unfold it from the center as shown in Fig 1.
2. Hold the inner frame and pull it out diagonally as shown in Fig 2.
3. The sauna tent cover will look like Fig 3 after it is fully unfolded.

Fig 7

Steam pot and remote control panel

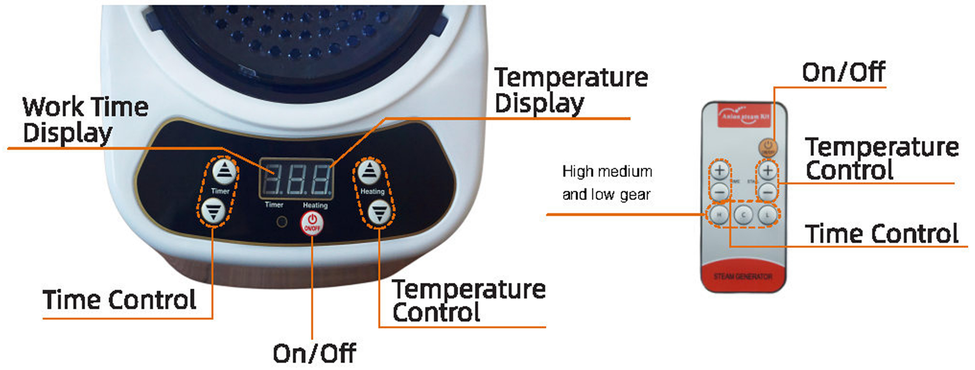

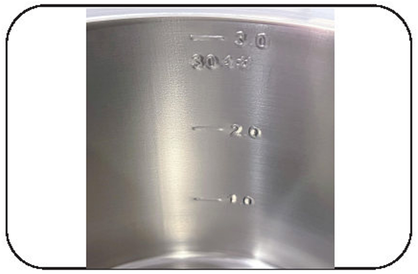

STEP1: Open the lid and add water below the maximum water level line.

STEP2: Tighten the lid clockwise to make sure it doesn't leak.

STEP3: Turn on the power. Place the end of the hose into the tent.

STEP4: Press the On/Off button to set the time and setting level. The machine starts to work when the Heating light blinks.

Fig 4

Note : If the frame of the sauna tent cover is out of shape , please twist it forward and backward repeatedly to readjust it as shown in Fig 4.

Fig 5

Use one of the steam tubes to connect the steam box and the outlet hole on the inner side of the sauna tent cover as shown in Fig 5 . Ensure that the steam tube is well connected with the two parts.

Note : Make sure that the steam box is placed fat with its cover on the top and that there is no objects within its periphery of 10 cm

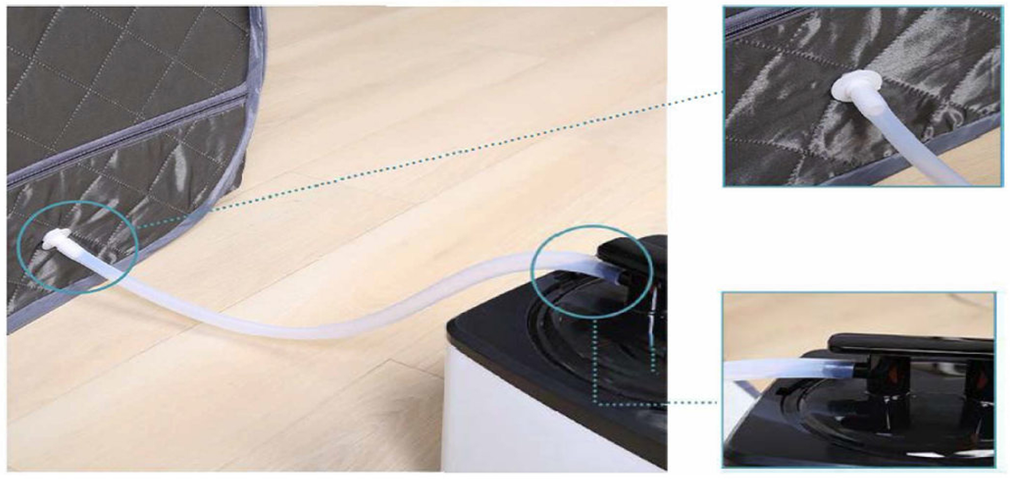

Fig 6

Use one of the steam tubes to connect the steamer and the inlet hole on the outer side of the sauna tent cover as shown in Fig 6.Ensure that the steam tube is well connected with the two parts.If the tubes fall off or loosen during usage , please turn off the power and let them thoroughly cool down first before reconnection.