ASSEMBLY INSTRUCTION

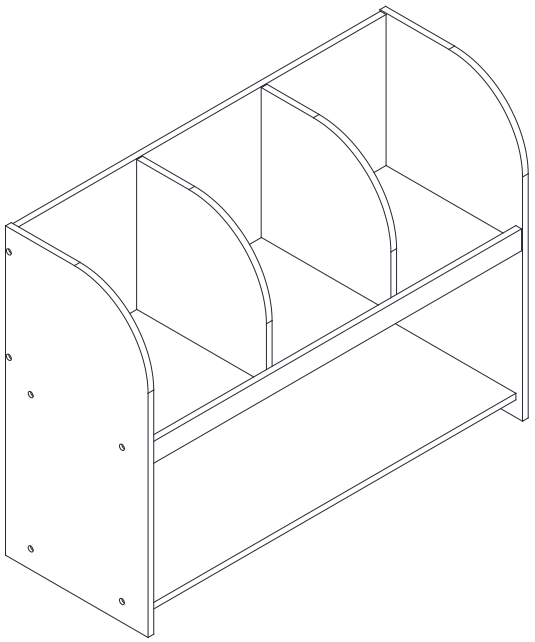

AX1PC	BX1PC
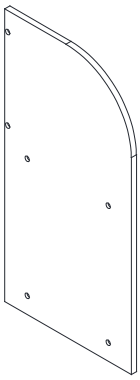	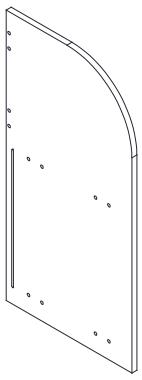

CX2PCS	DX1PC
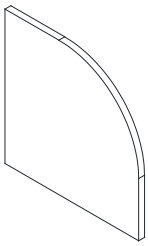	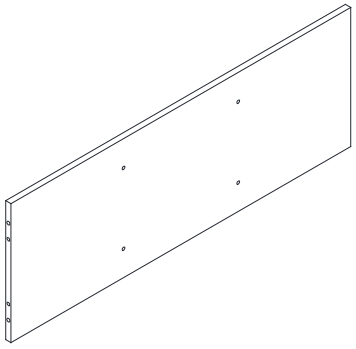

EX1PC	FX1PC
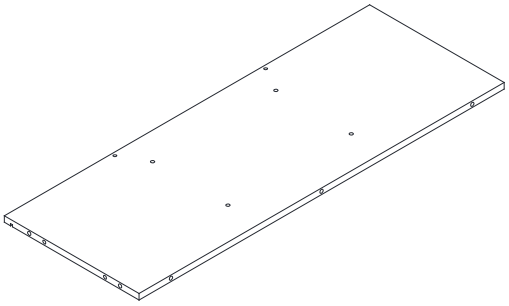	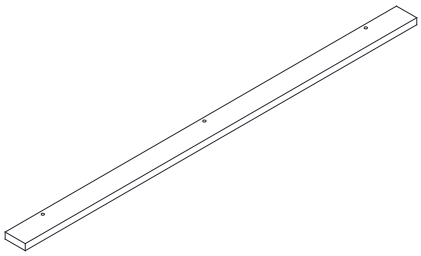

GX1PC	HX1PC	IX1PC
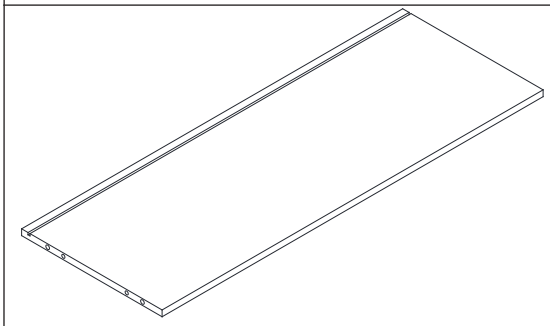	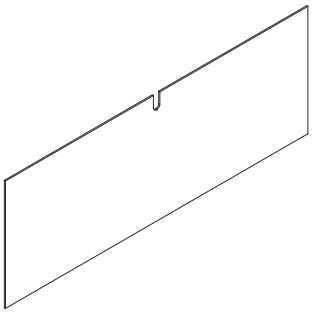	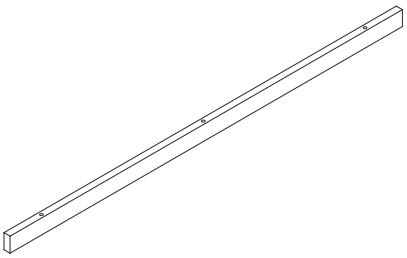

JX16PCS	KX16PCS	LX16PCS	MX3PC	NX3PC	OX4PCS
6x25mm	 6x40mm	Ø10x10mm	 6x38mm	Ø12x10mm	3x14mm
PX1PC	**QX1PC**	**RX6PCS**	**SX1PC**	**TX4PCS**	
4x10mm	 66x32x15mm	4x30mm		15x14x10mm	

1

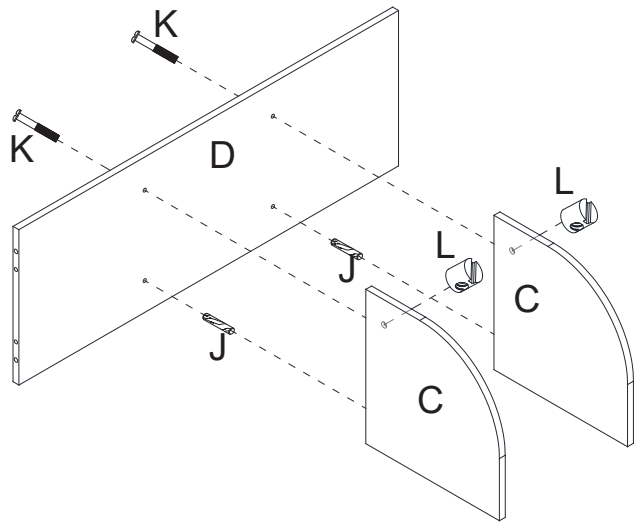

2

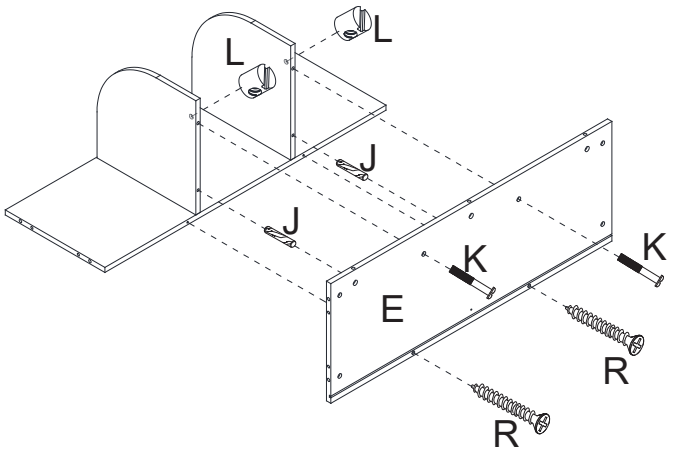

3

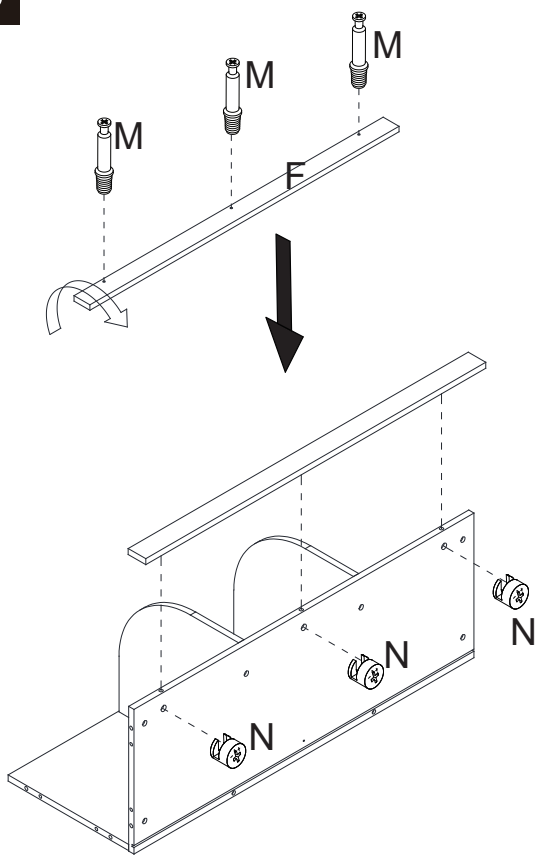

4

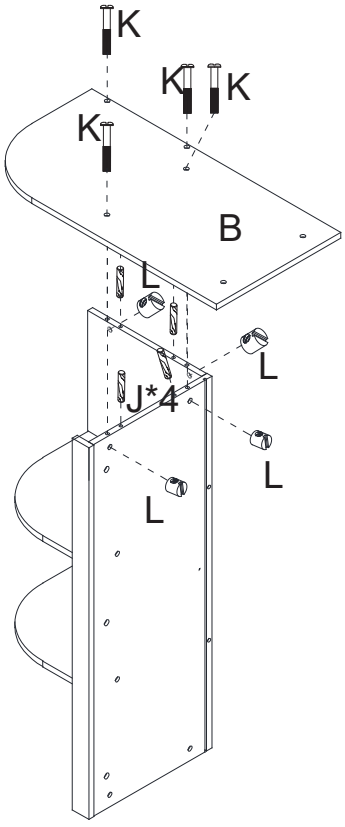

5

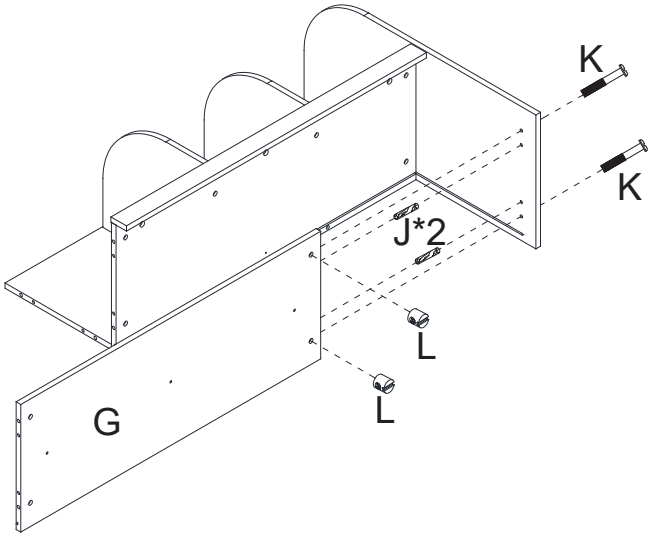

6

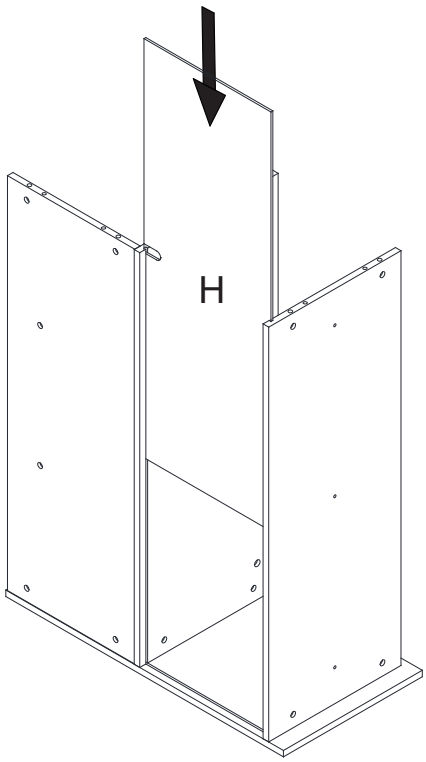

7

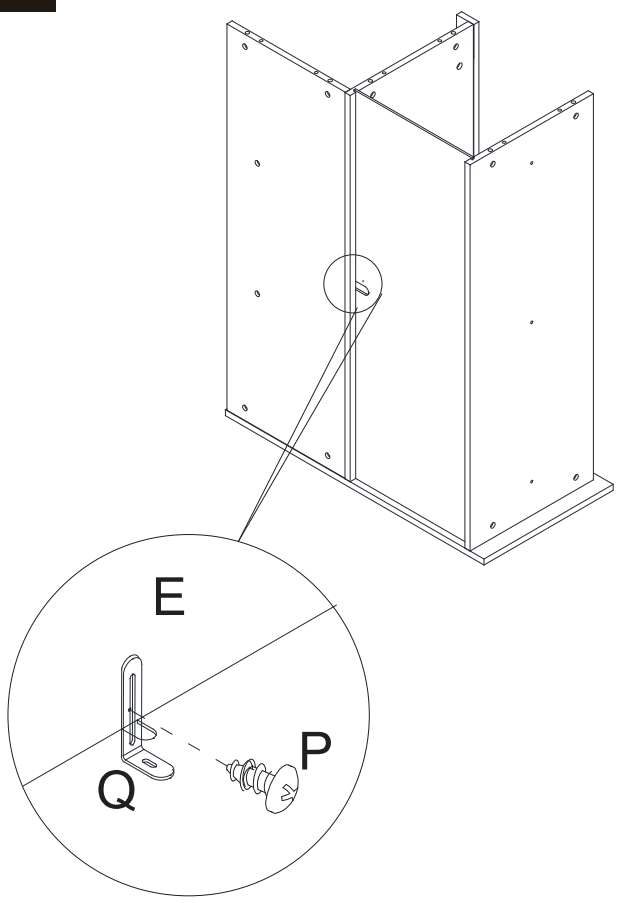

8

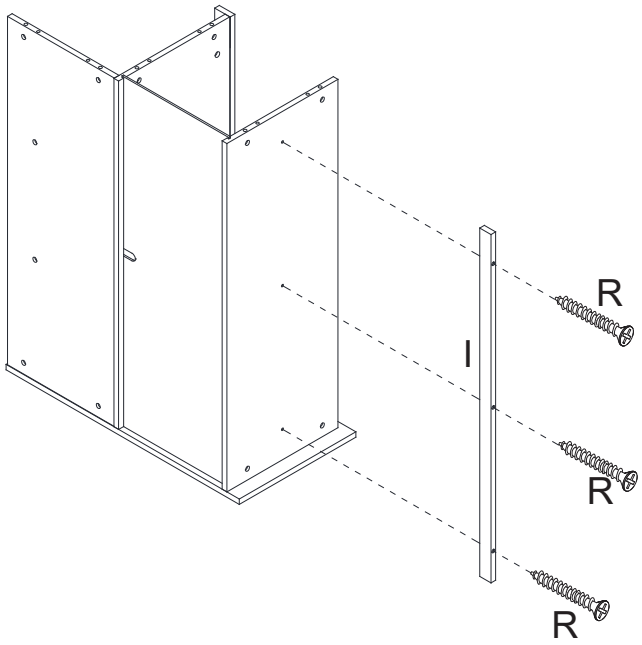

9

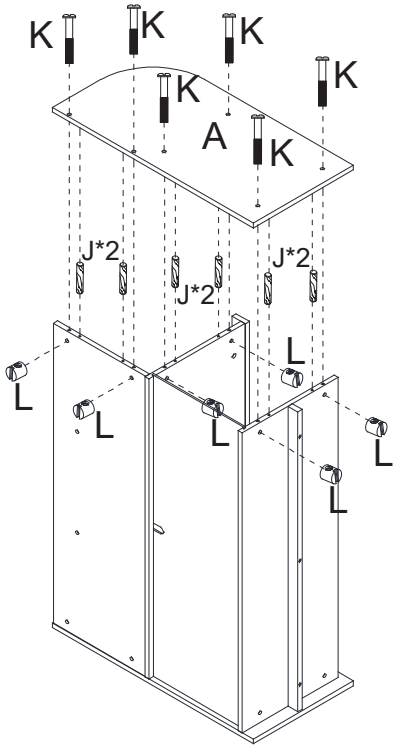

10

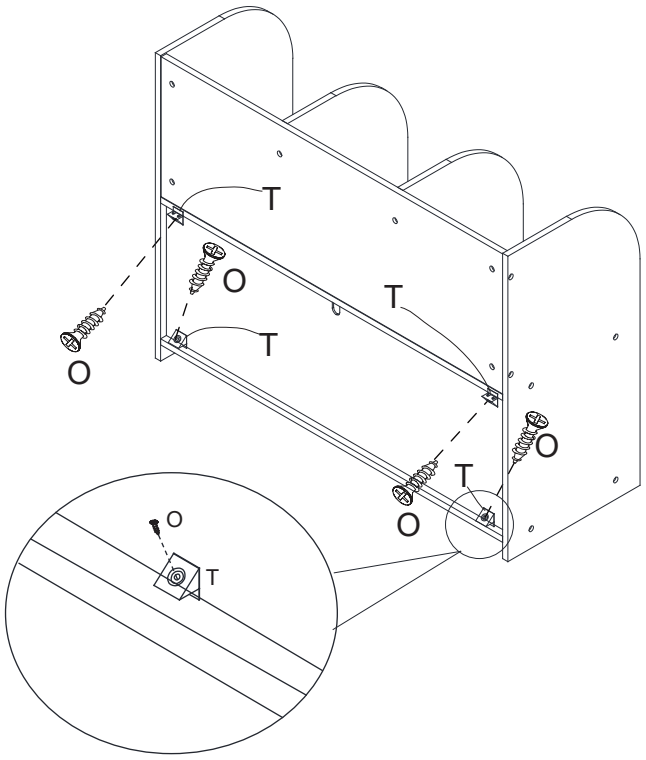

11

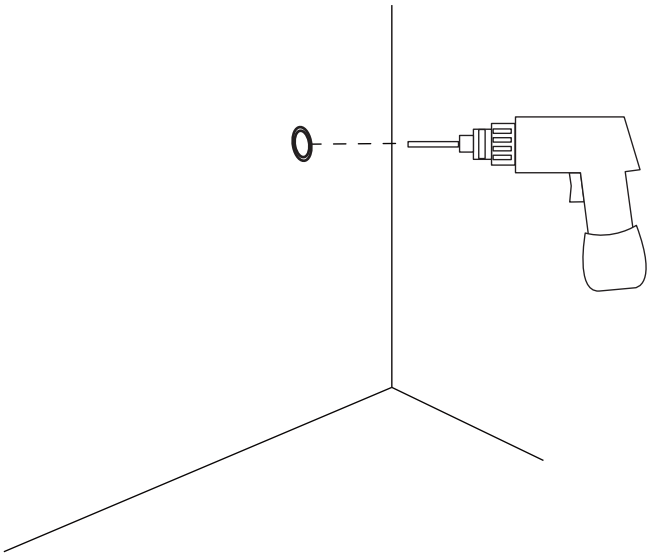
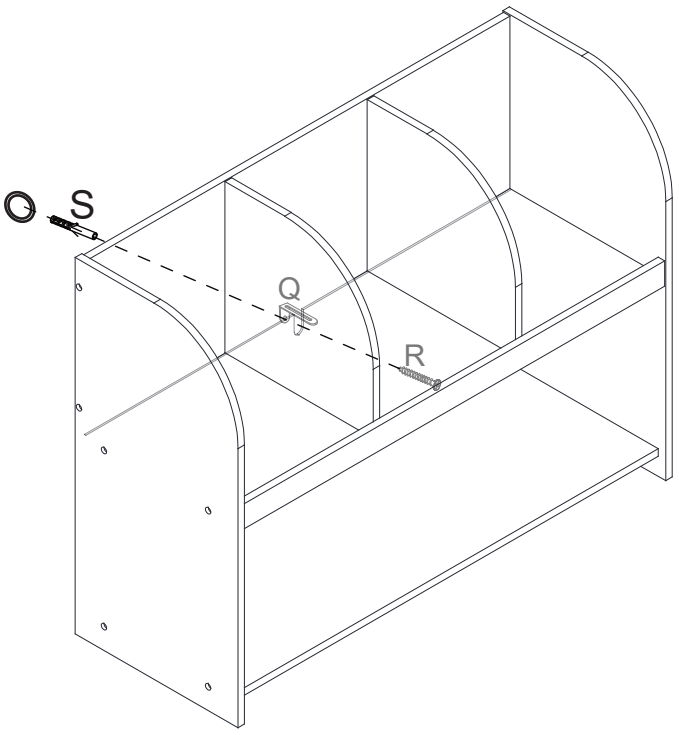
12