




WF289423

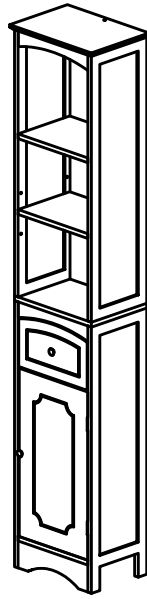


TOOLS:

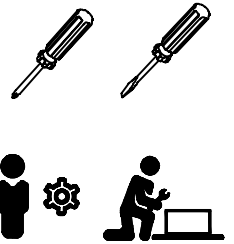








UNIT:MM
PACKAGE - A

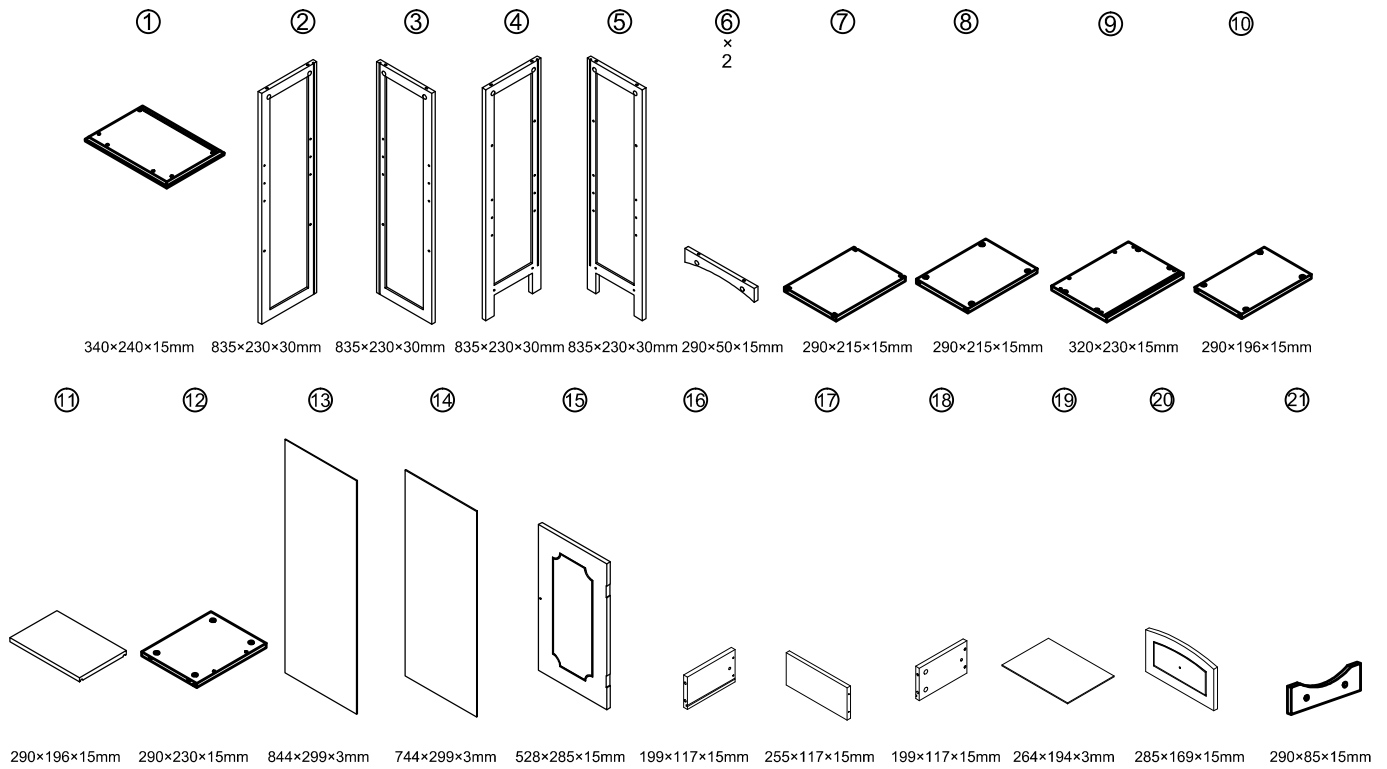




PACKAGE - B

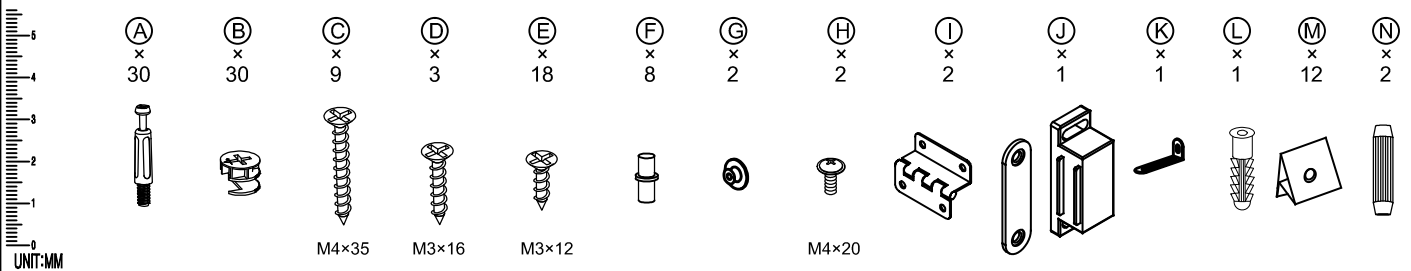




1.

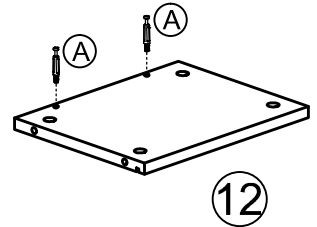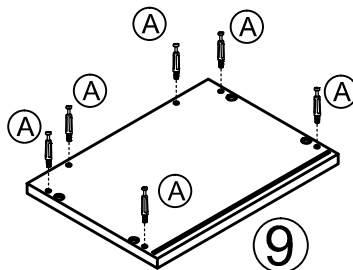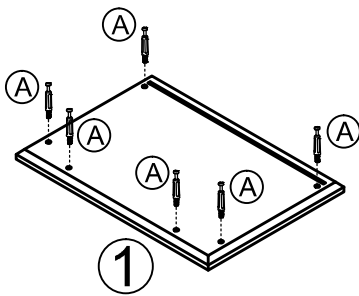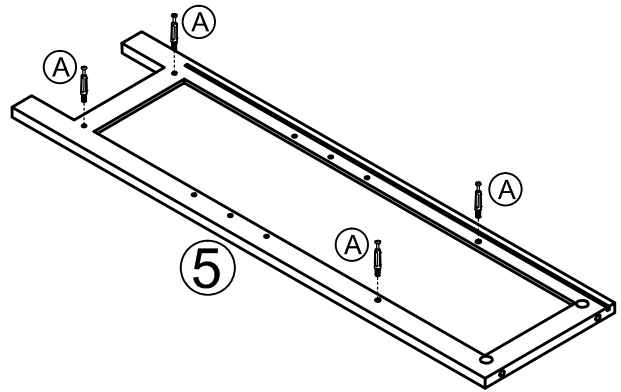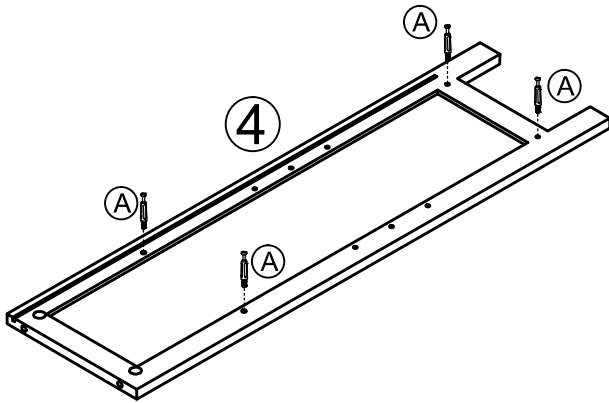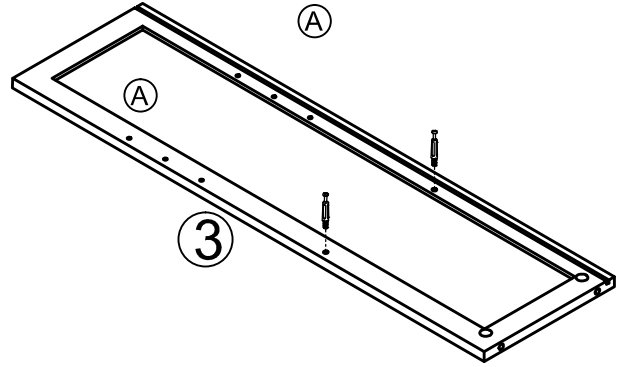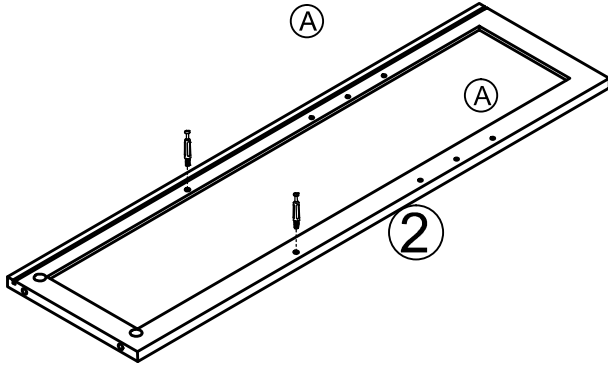


BOLT INSTALLATION AS BELOW:

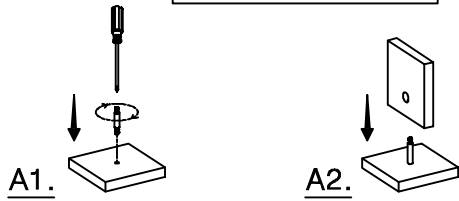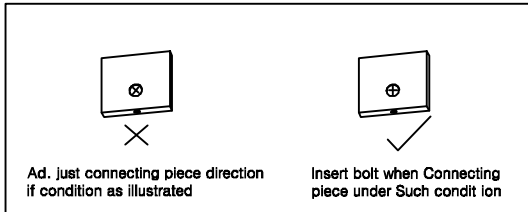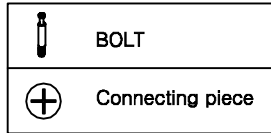


2.

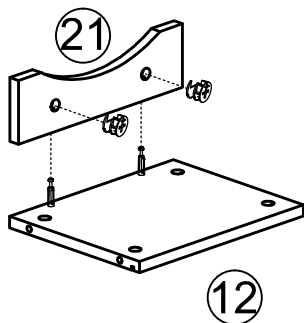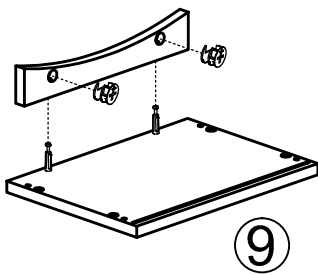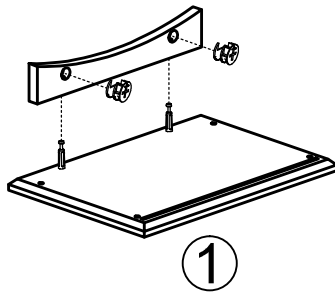


3.

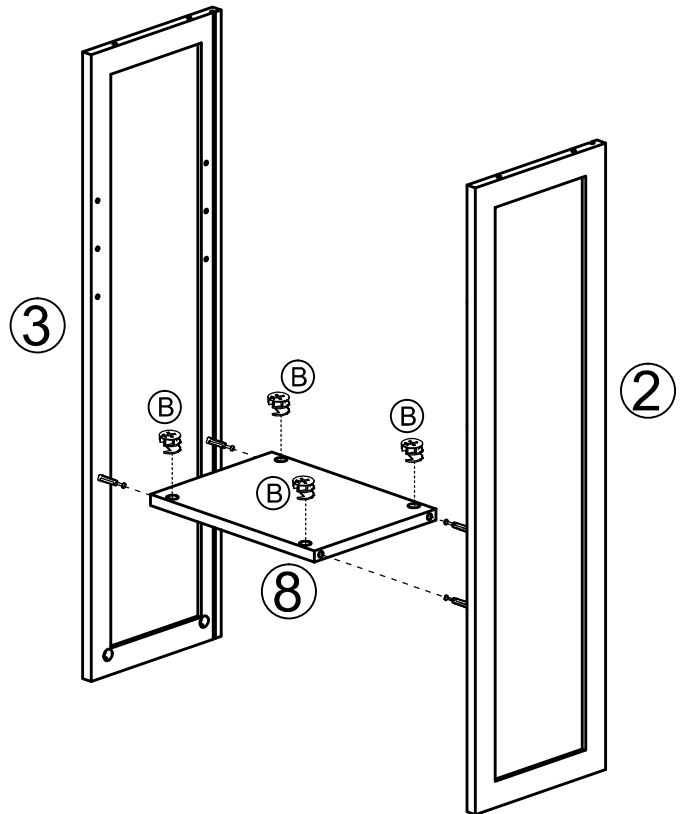


4.

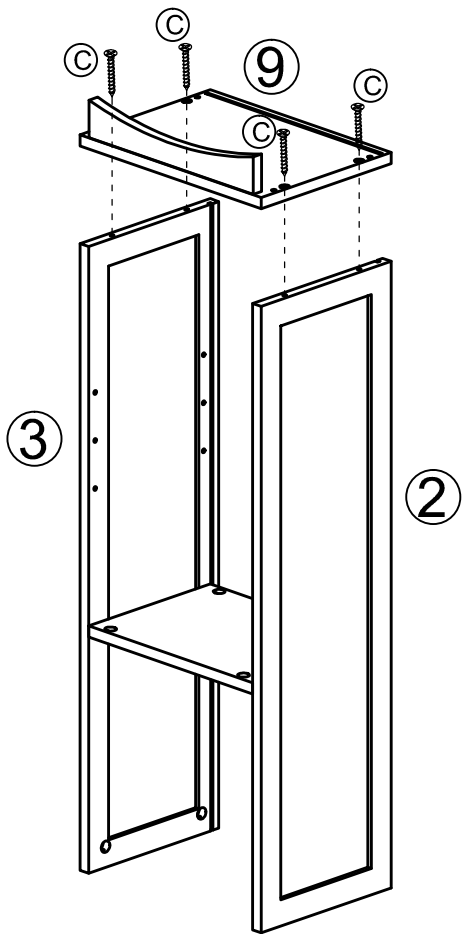


5.

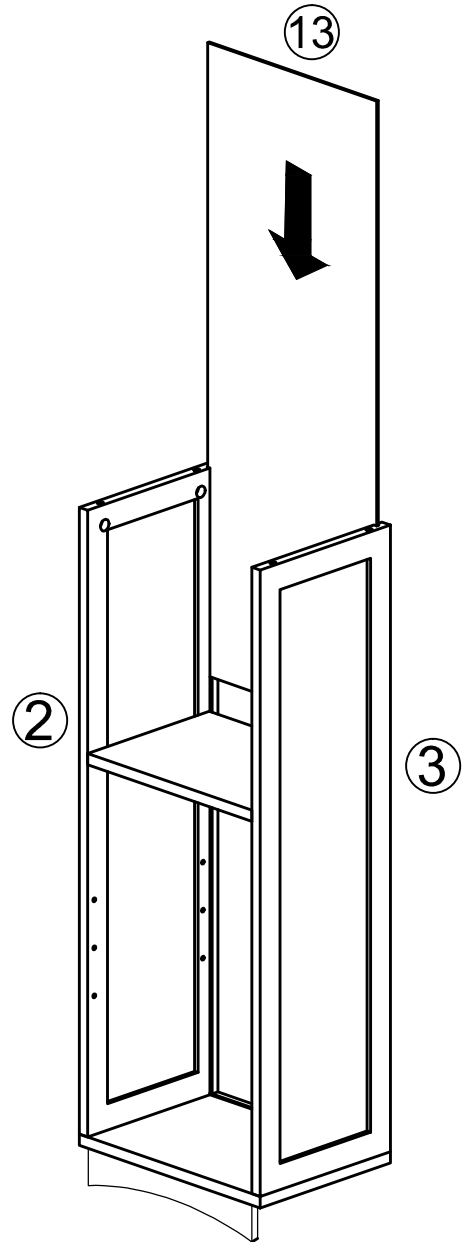


6.

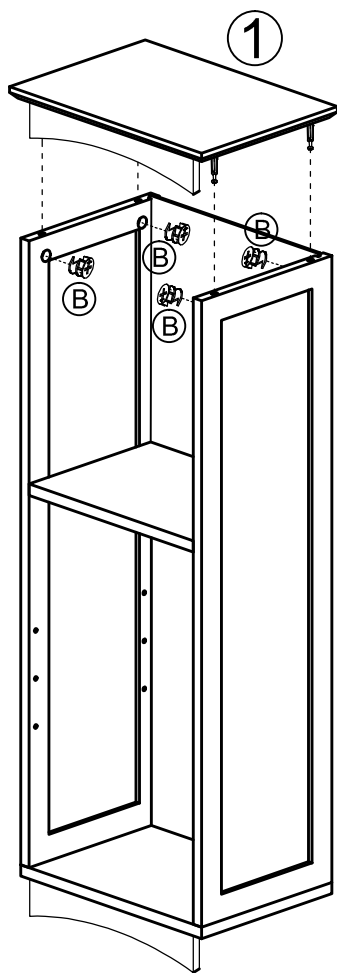


7.

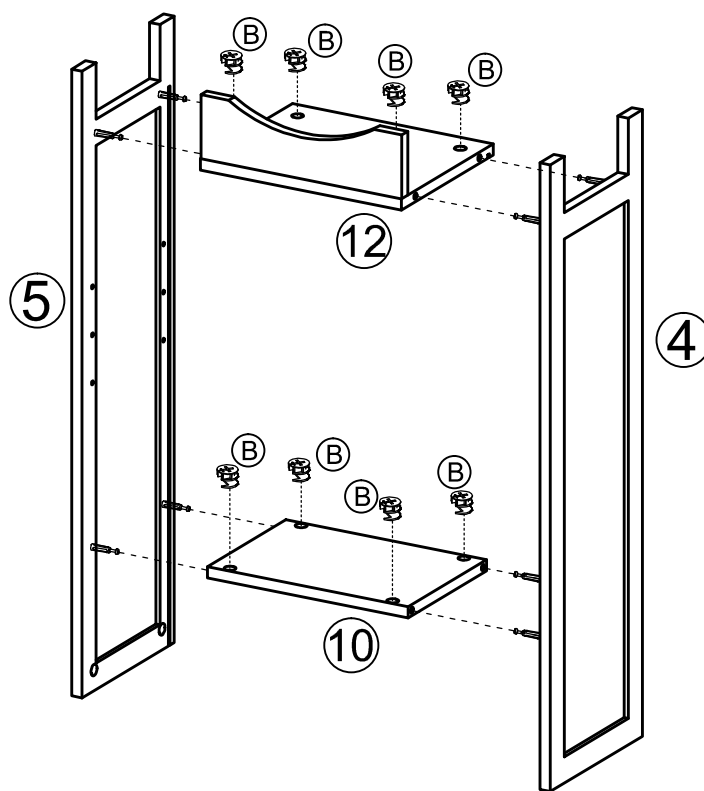


8.

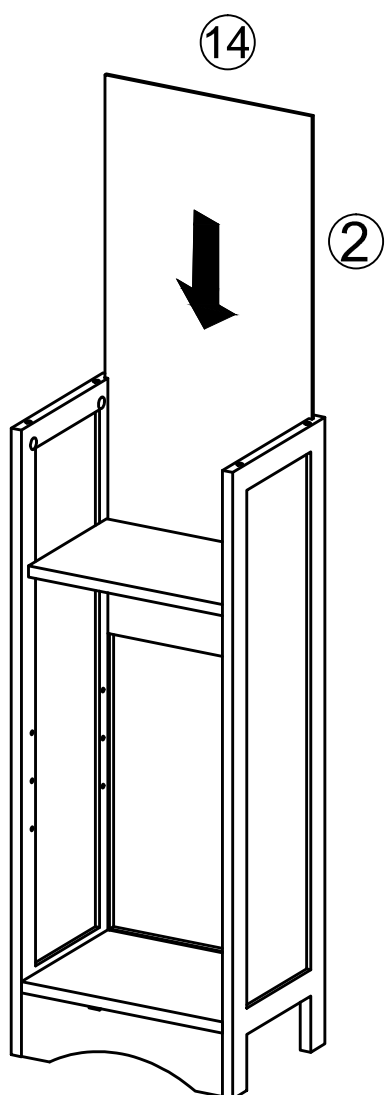


9.

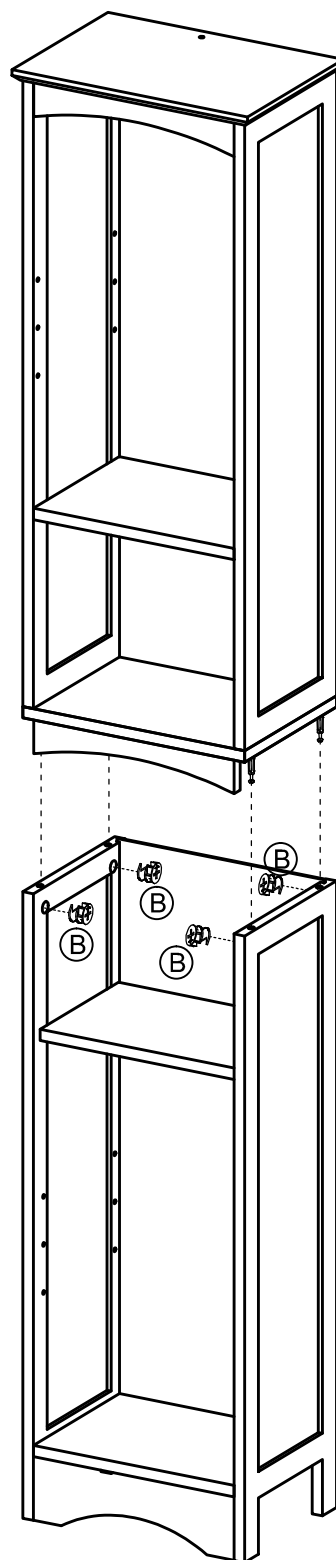


10.

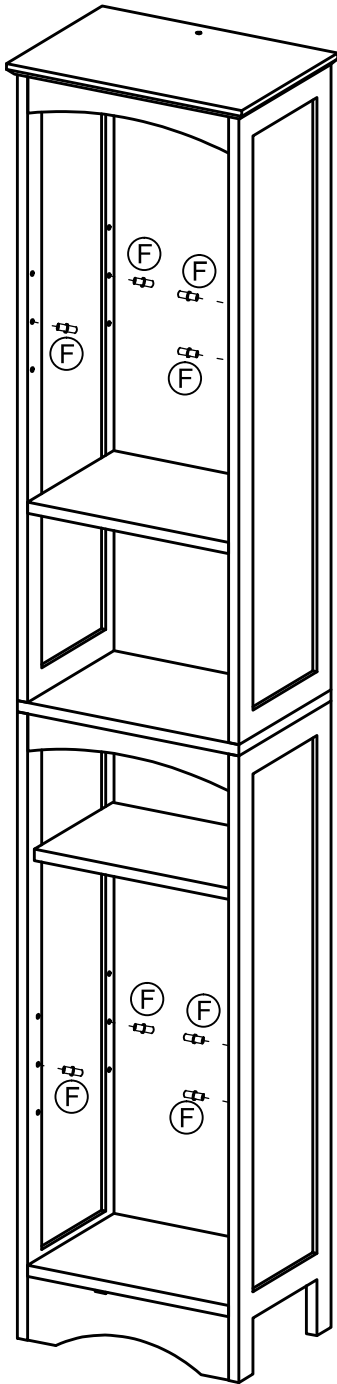


11.

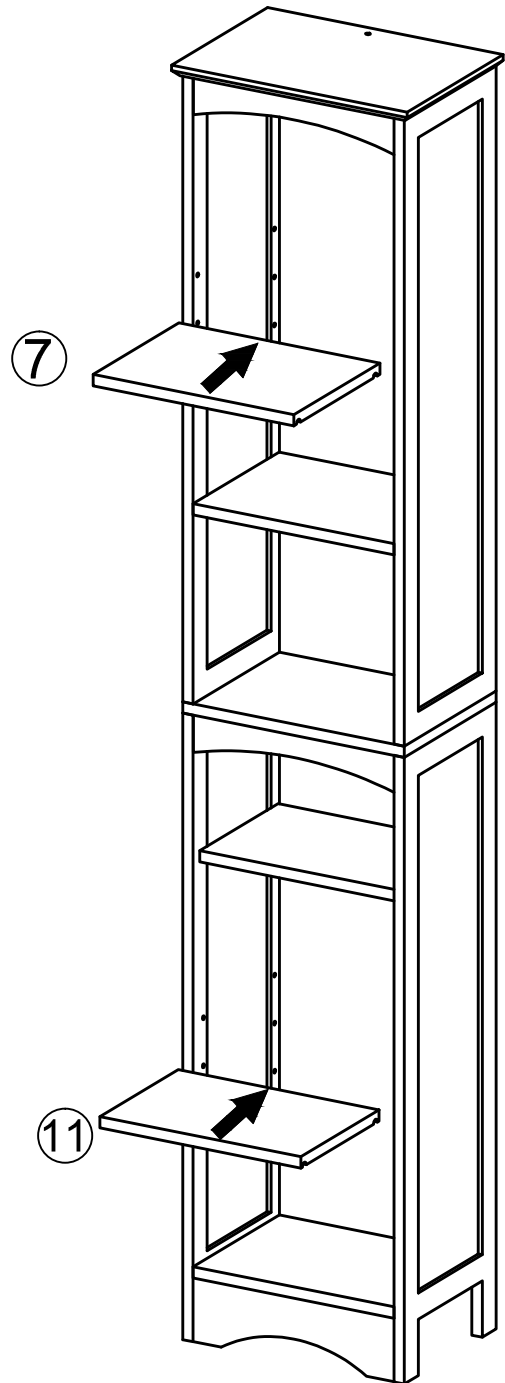







12.

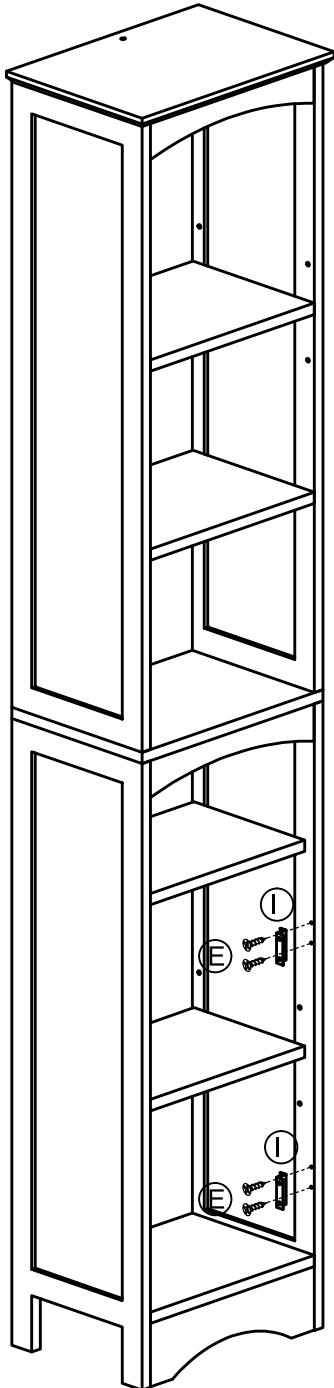


13.

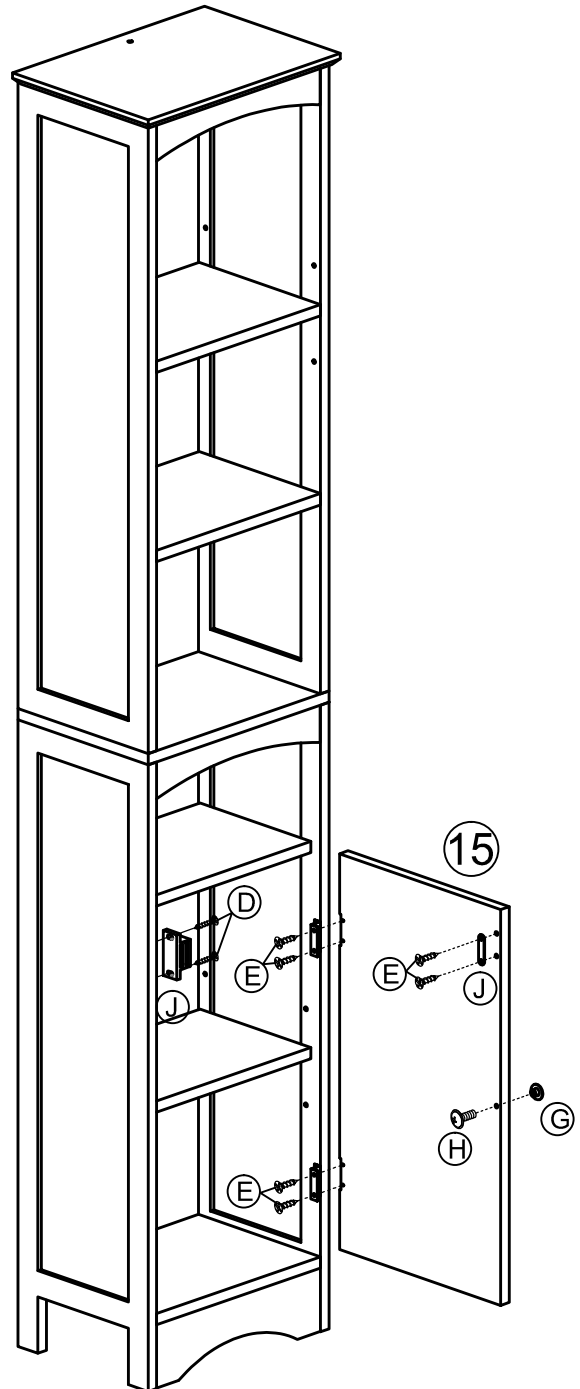


14.

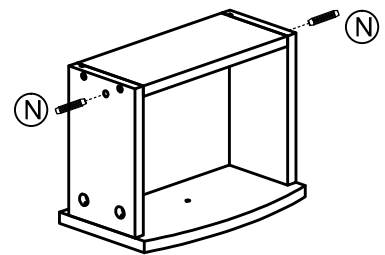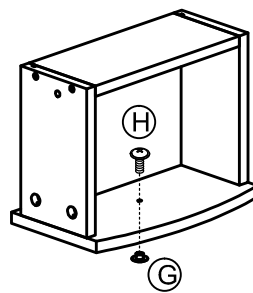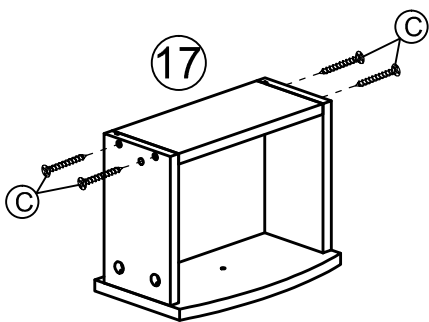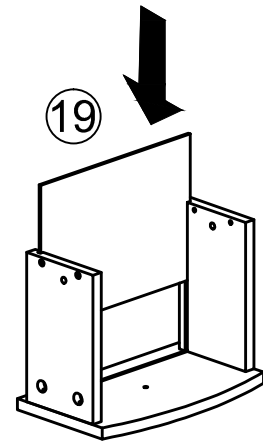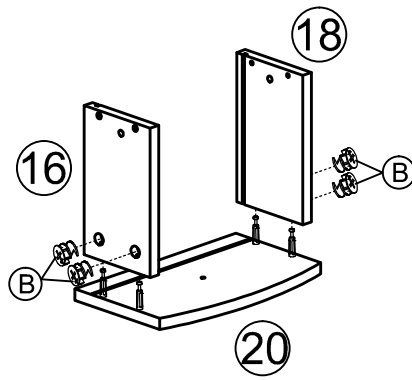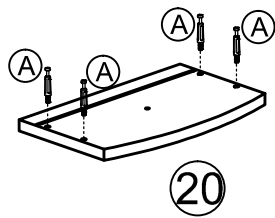

15.

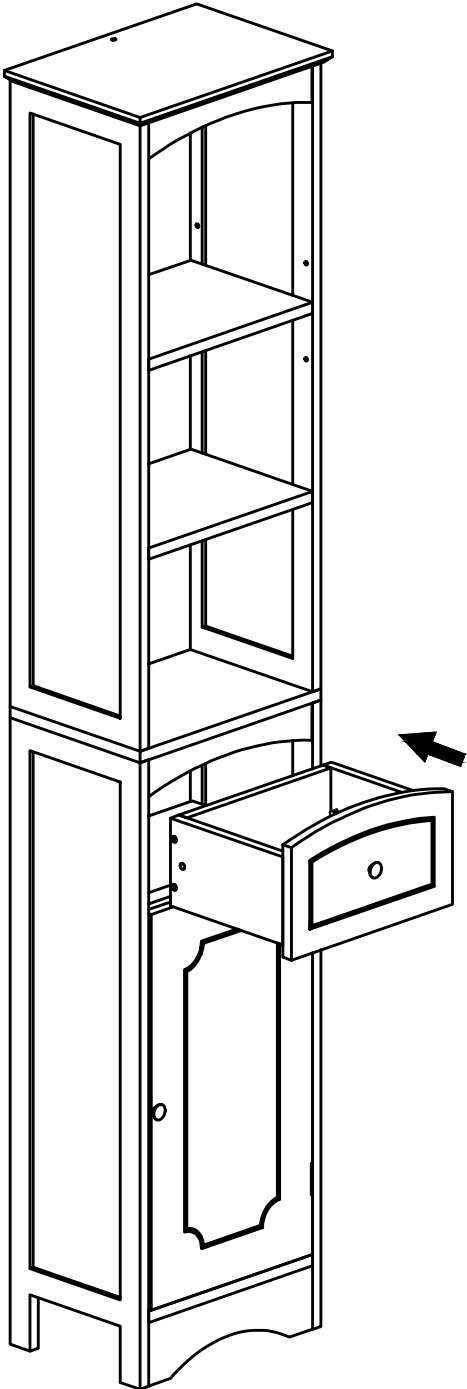

16.

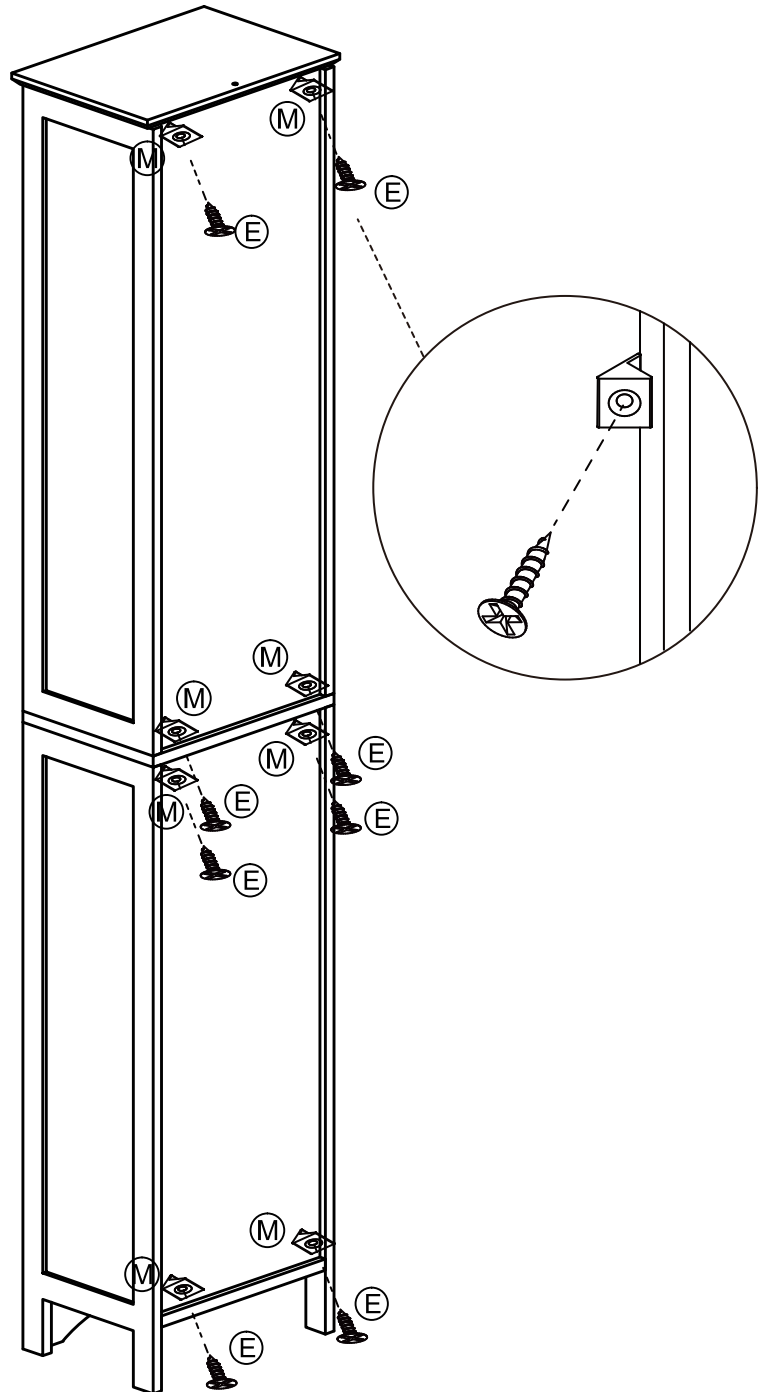

17.

