












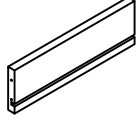


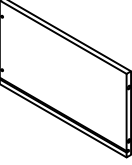

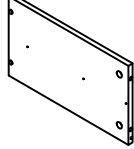

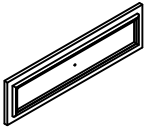

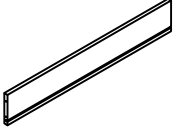
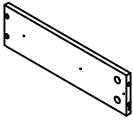





N725P185816









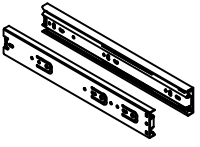



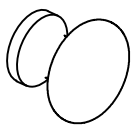



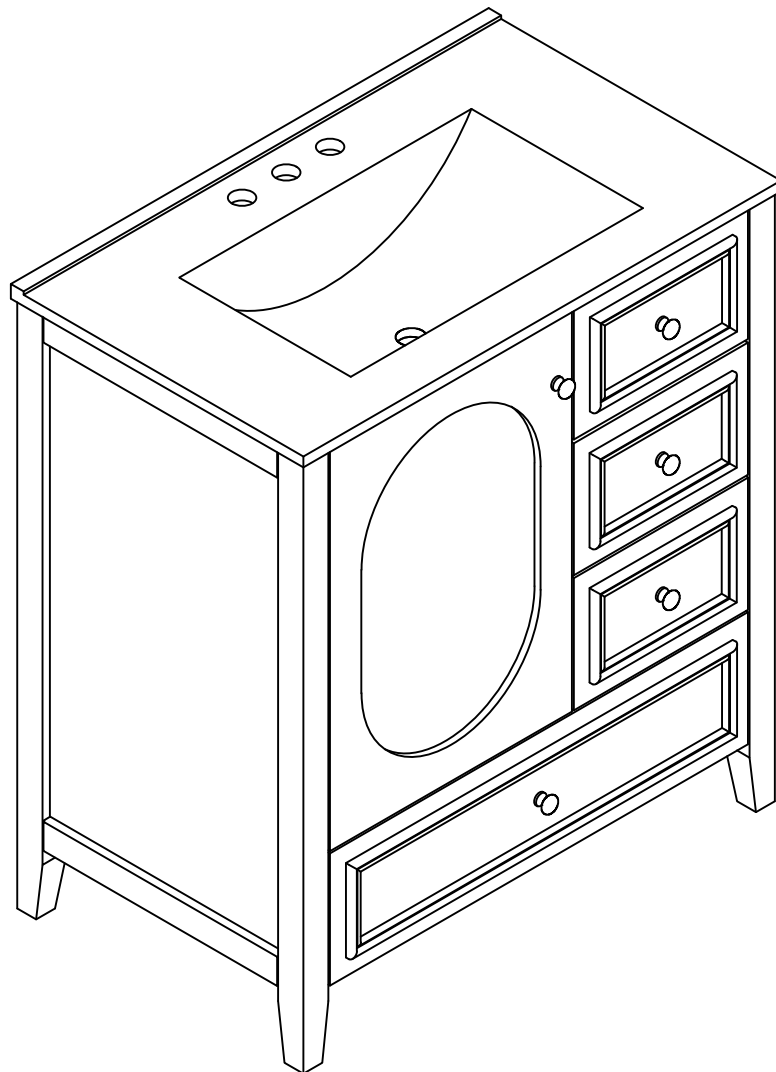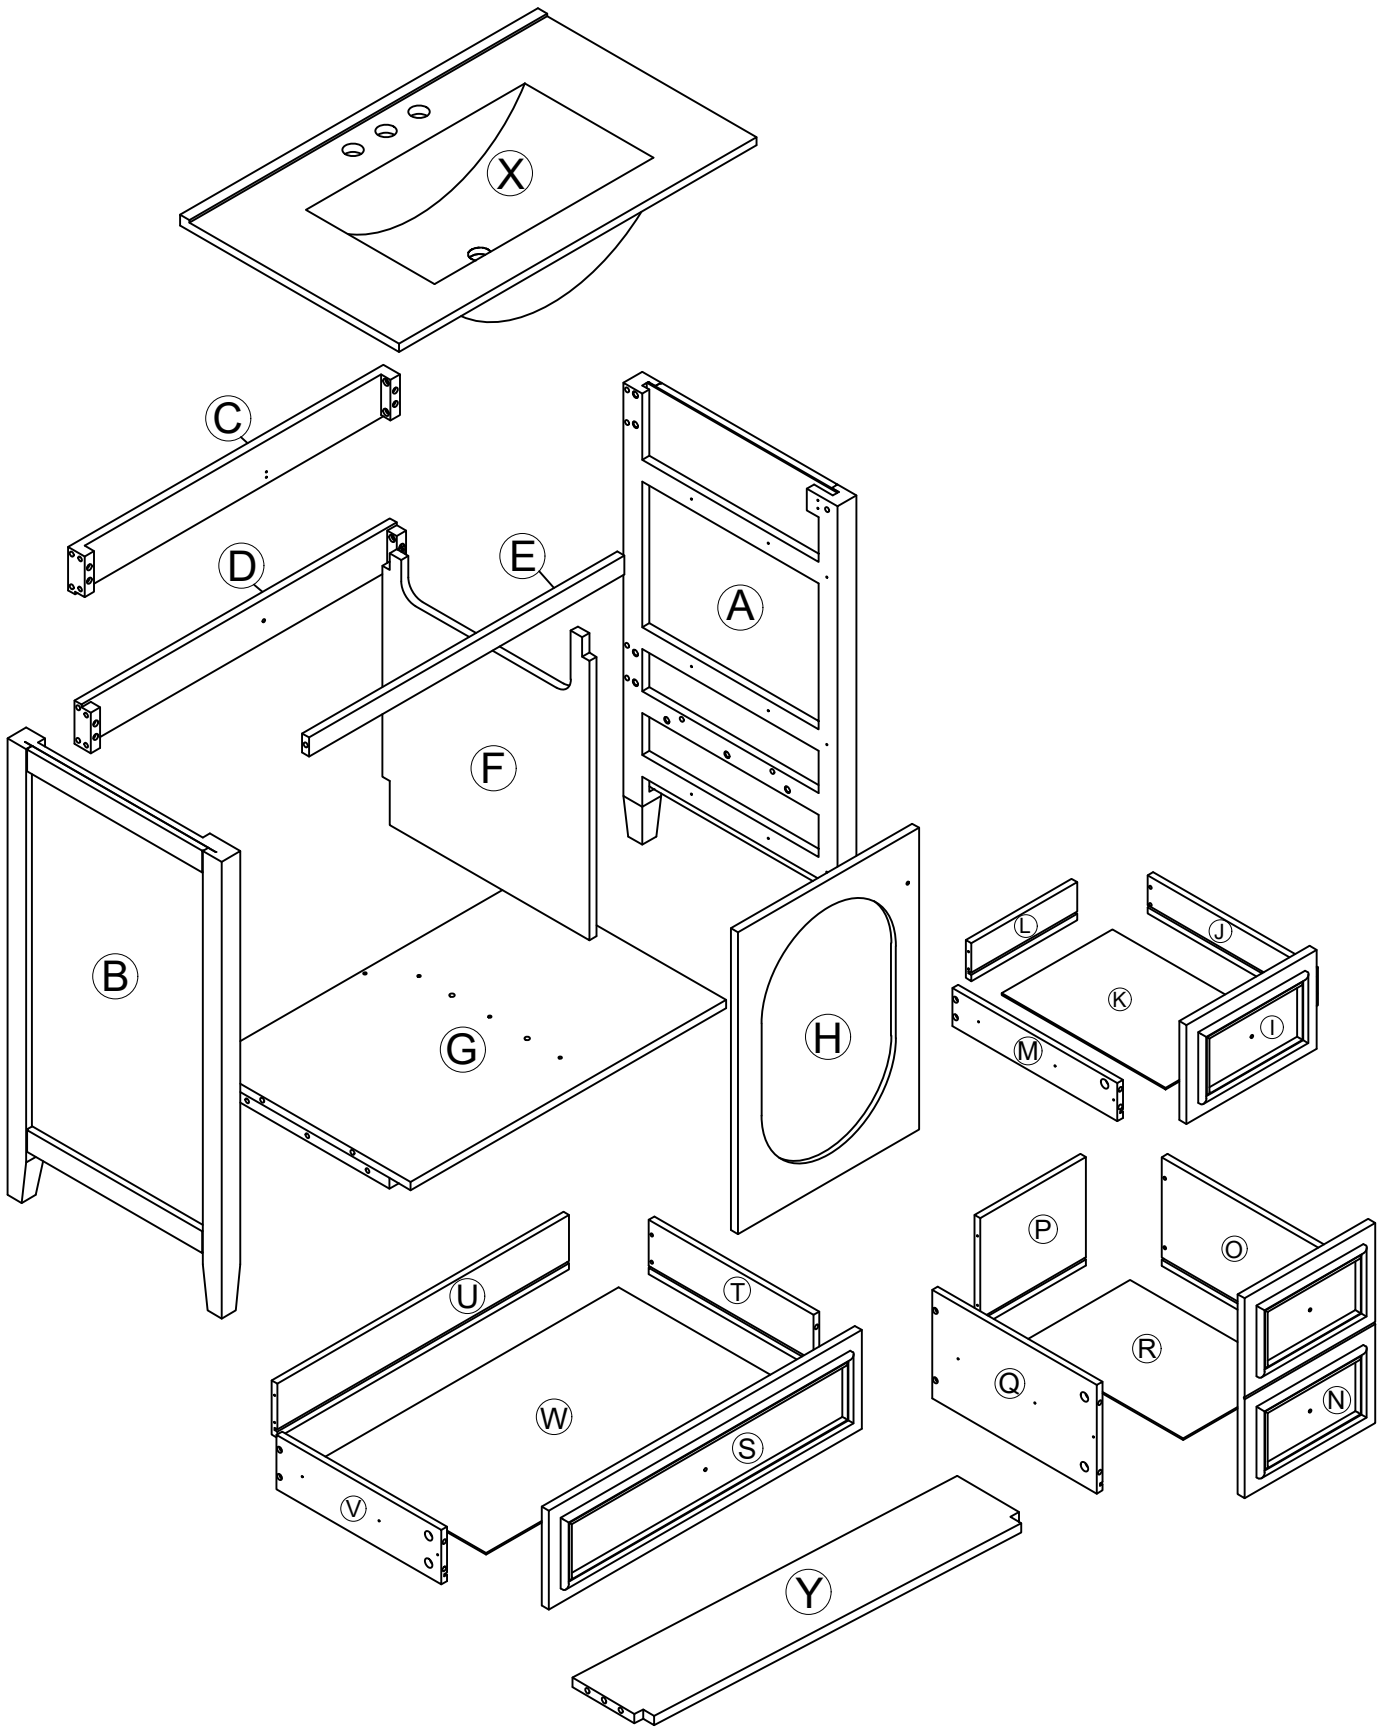



PRODUCT PARTS:


A	B	C	D	E	F
					
1PC	1PC	1PC	1PC	1PC	1PC
G	H	I	J	K	L
					
1PC	1PC	1PC	1PC	1PC	1PC
M	N	O	P	Q	R
					
1PC	1PC	1PC	1PC	1PC	1PC
S	T	U	V	W	X
					
1PC	1PC	1PC	1PC	1PC	1PC
Y					
					
1PC					

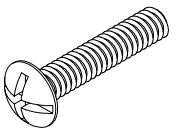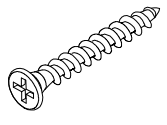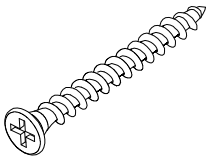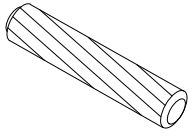
# HARDWARE:


①	②	③	④	⑤	⑥
					
1/4"x25mm	Ø4x25mm	Ø4x35mm	Ø8x30mm	17x17x21mm	
<b>14+1 PCS</b>	<b>12+1 PCS</b>	<b>5 PCS</b>	<b>18+1 PCS</b>	<b>1 PC</b>	<b>2 PCS</b>
⑦	⑧	⑨	⑩	⑪	⑫
					
20x20x30mm	Ø4x12mm	12"x45mm	Ø3x10 mm	Ø6x33mm	Ø15x9mm
<b>3 PCS</b>	<b>12+1 PCS</b>	<b>3 SET</b>	<b>36+2 PCS</b>	<b>16+1 PCS</b>	<b>16+1 PCS</b>
⑬	⑭	⑮			
					
5 PCS	5/32"x18mm	Ø3x12 mm			
<b>5 PCS</b>	<b>5 PCS</b>	<b>16+1 PCS</b>			

STEP 1


④  10pcs  
Ø8x30mm


⑮  6pcs  
Ø3x12mm

⑦  3pcs

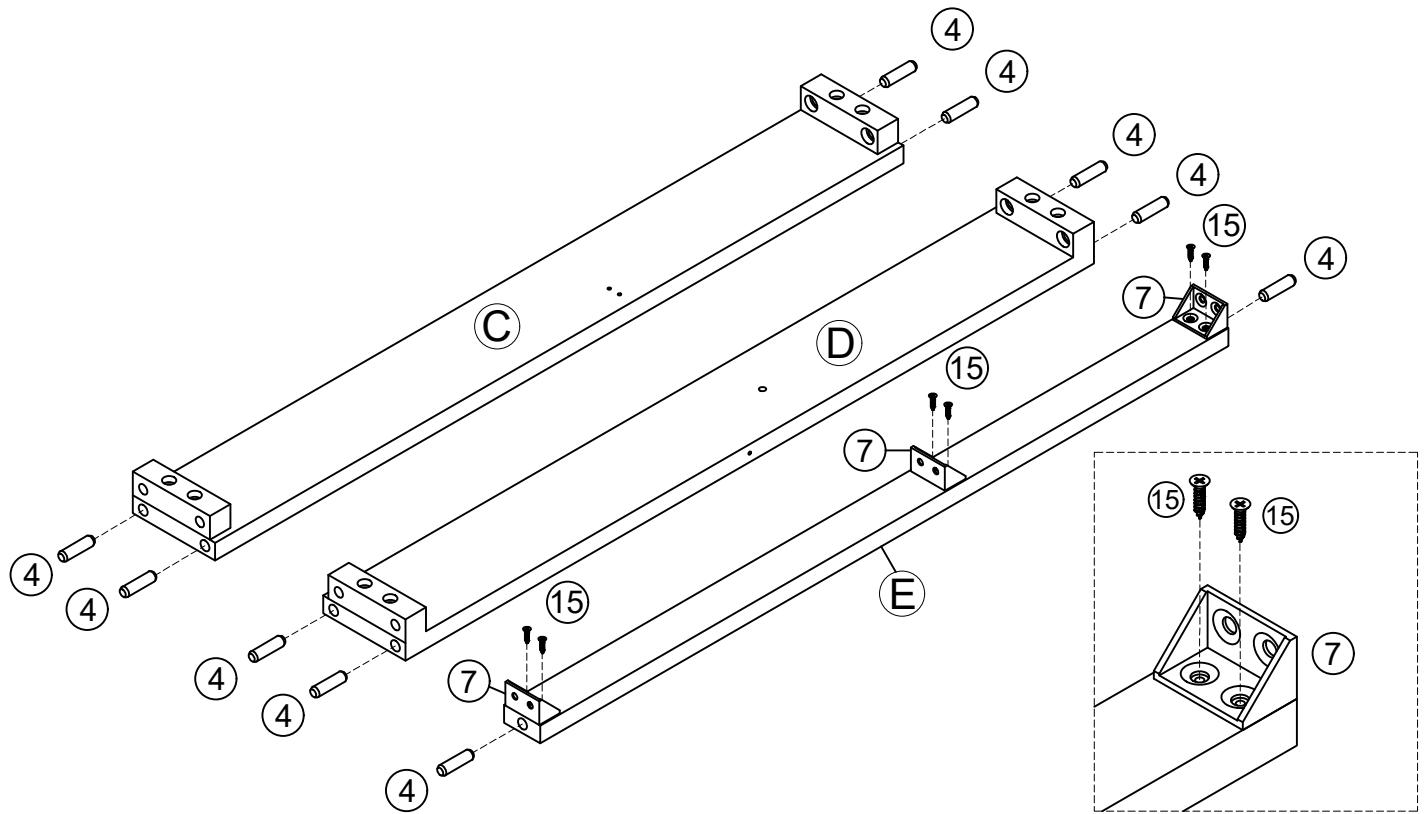


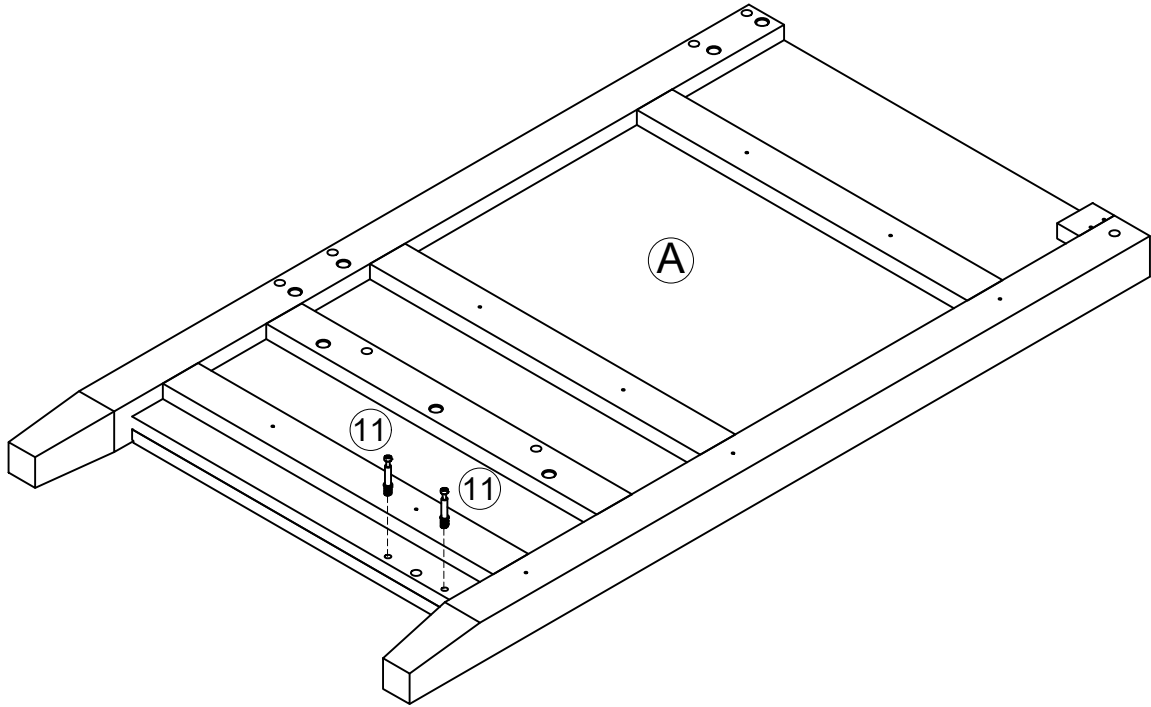
STEP 2

④  6pcs  
Ø8x30mm

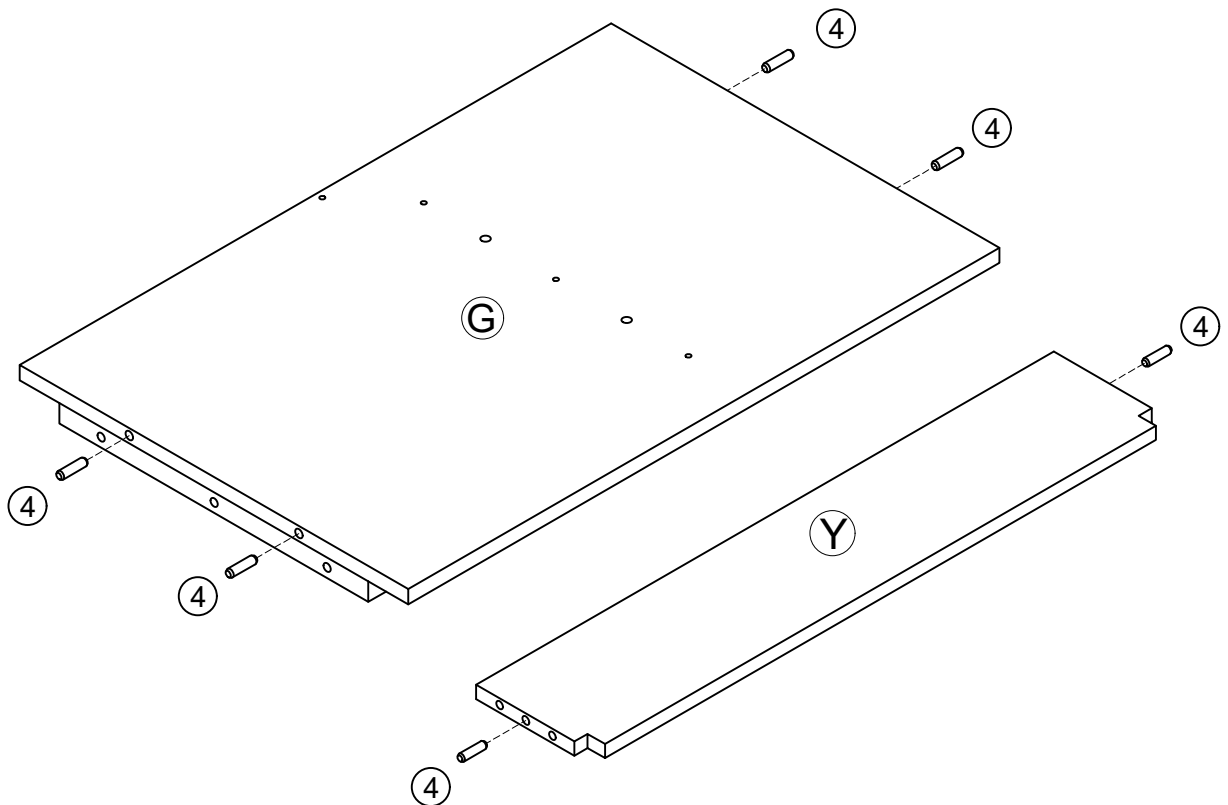



STEP 3

11  2pcs  
Ø6x33mm




STEP 4

11  2pcs  
Ø6x33mm

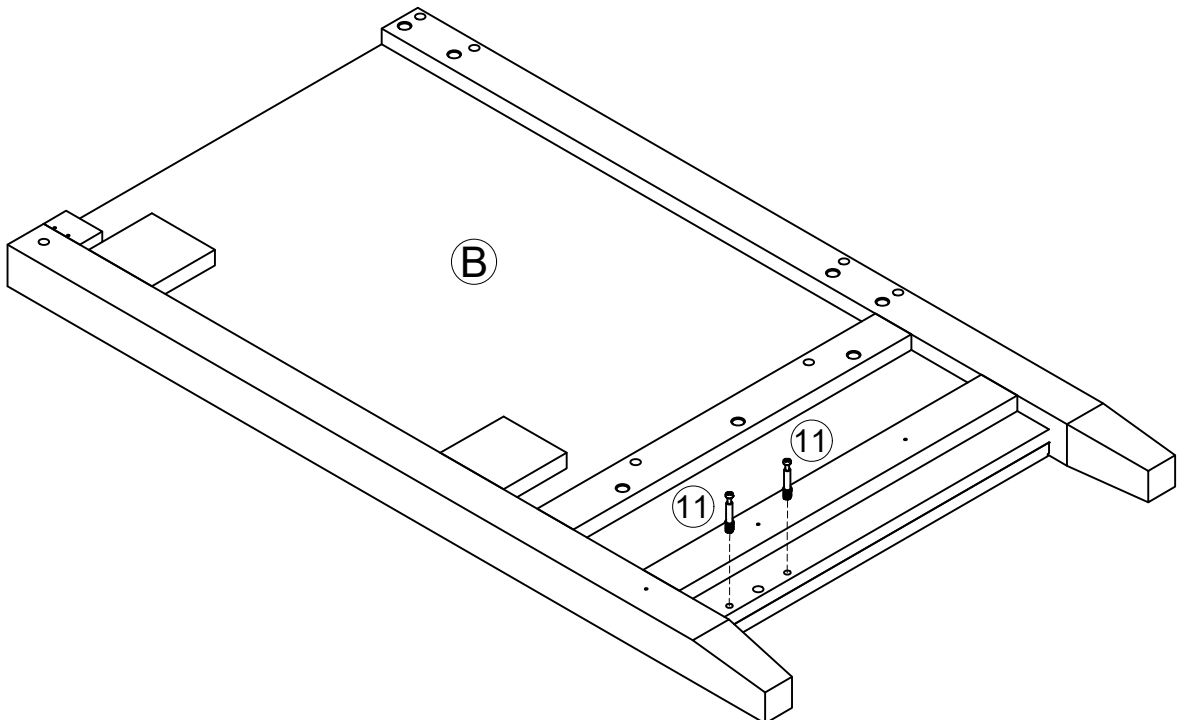






STEP 5

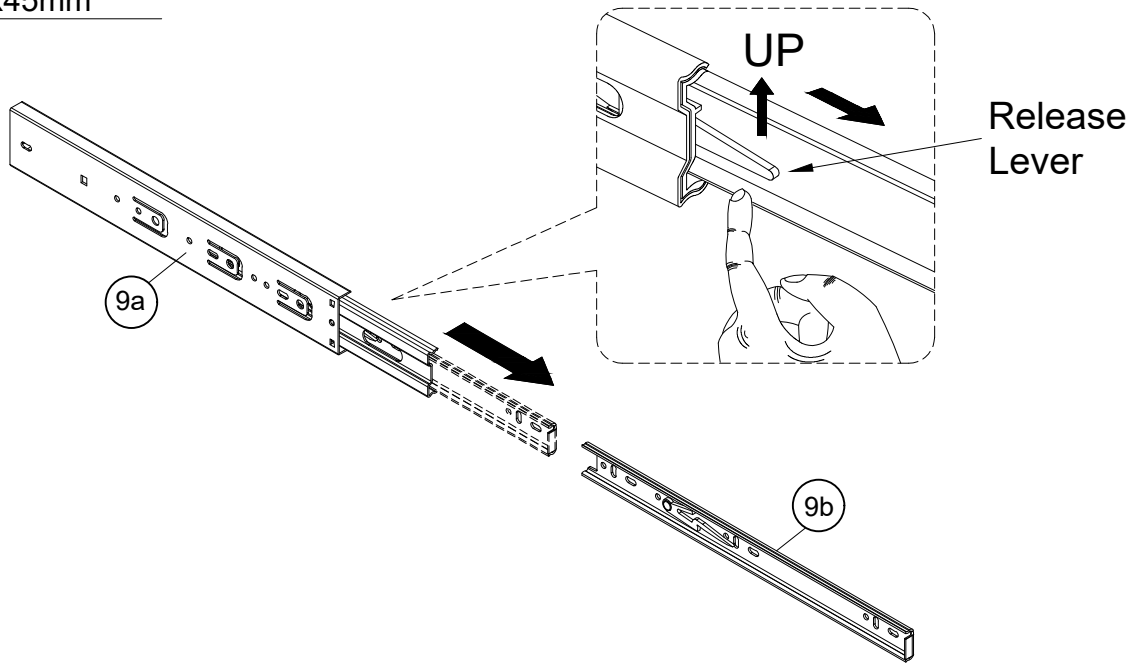- 9  3SET  
12"x45mm




STEP 6



- 4  2pcs  
Ø8x30mm
- 9a  2pcs
- 10  6pcs  
Ø3x10mm

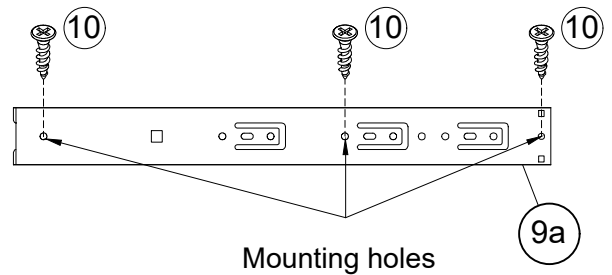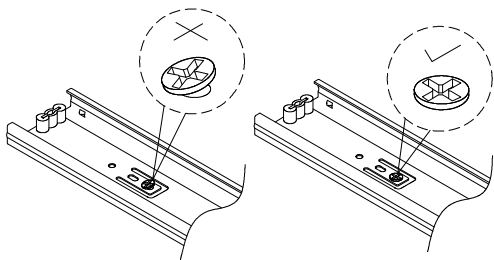



Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

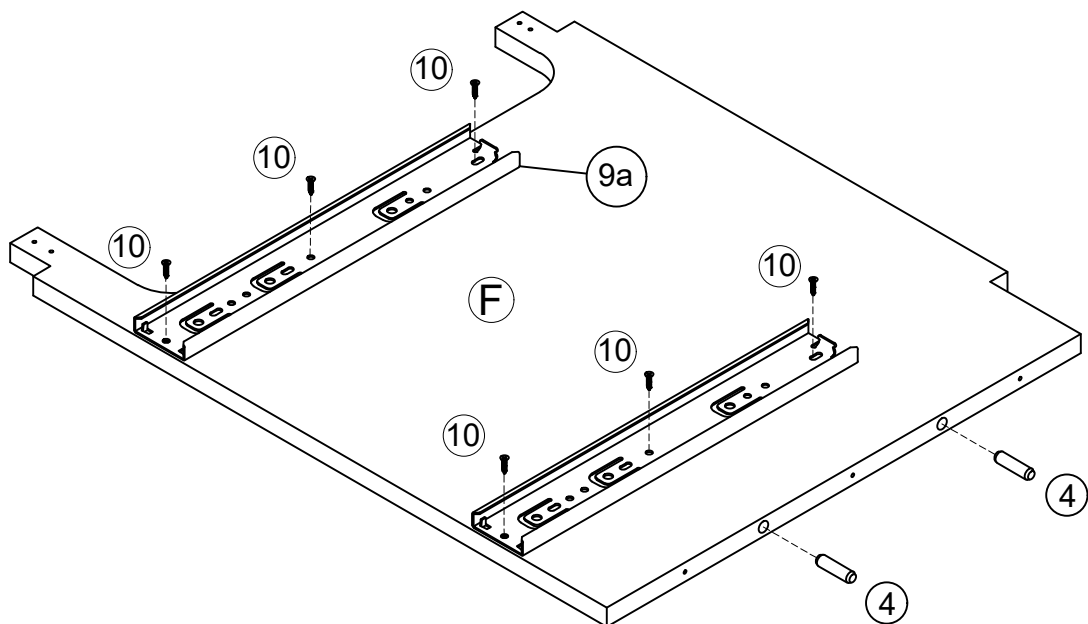

### STEP 7

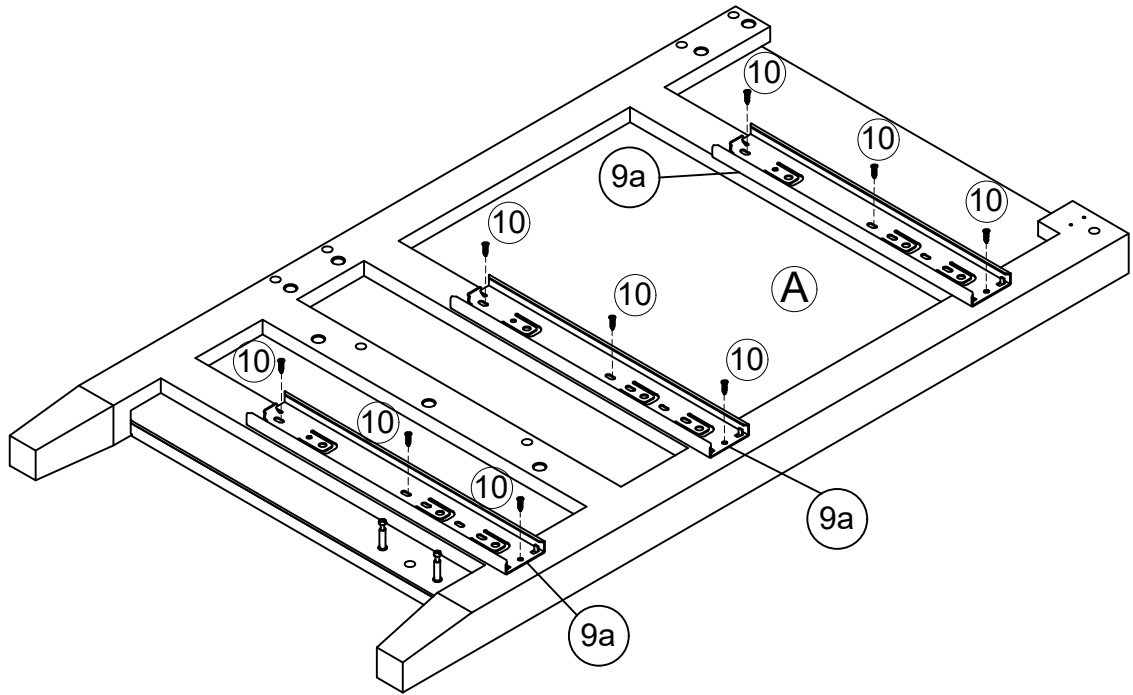






### STEP 8

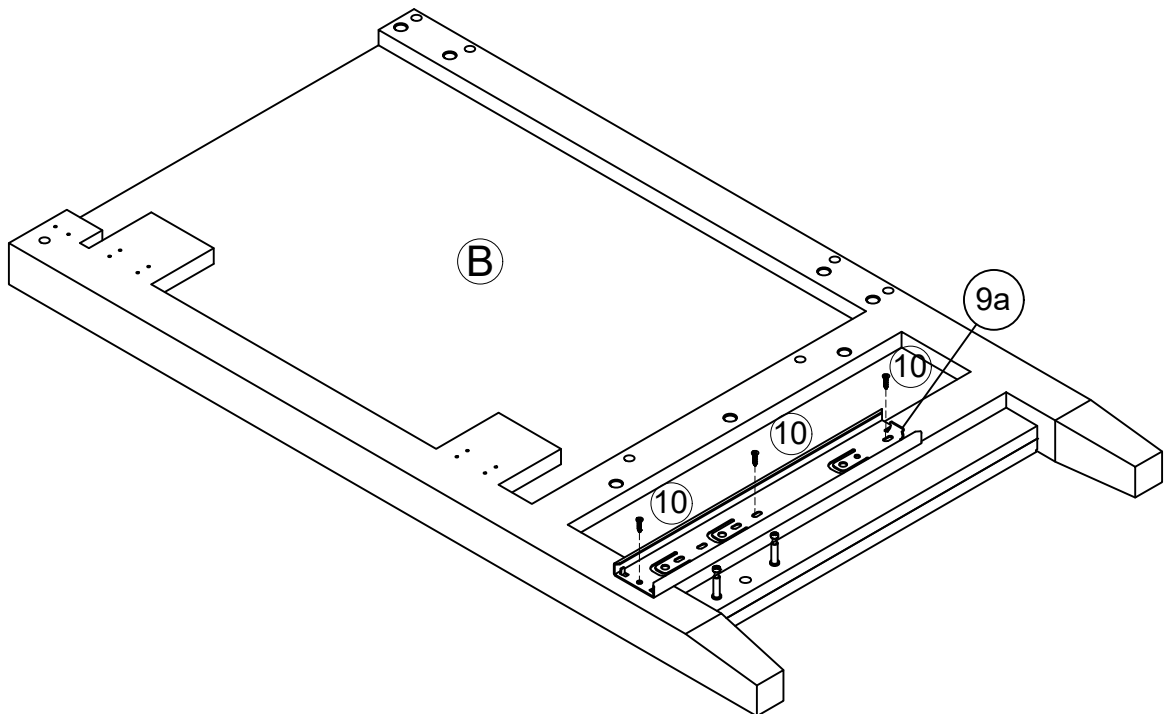




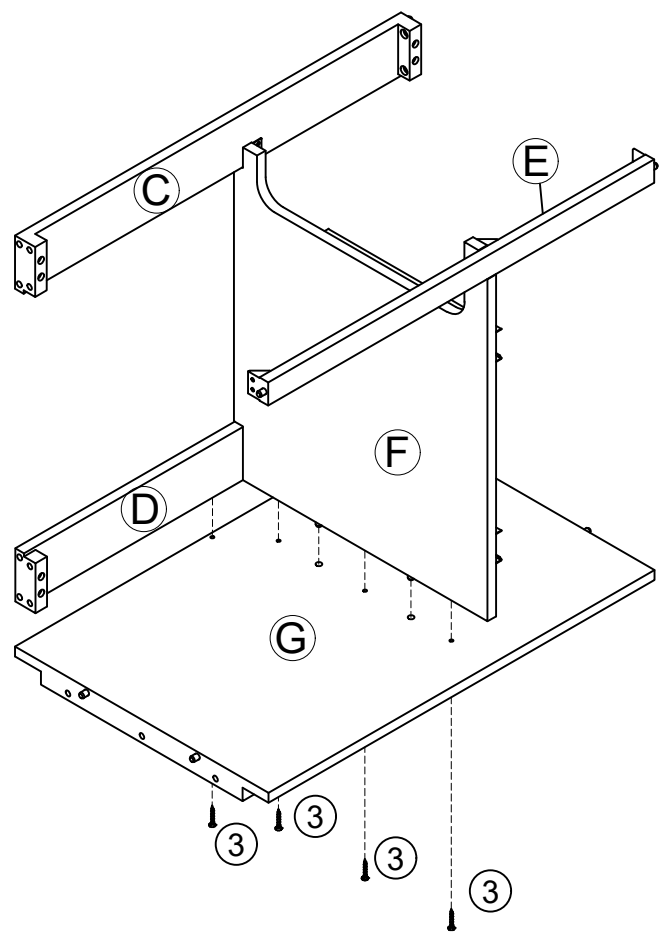
STEP 9

- ③  1pc  
Ø4x35mm
- ⑤  1pc
- ⑮  6pcs  
Ø3x12mm

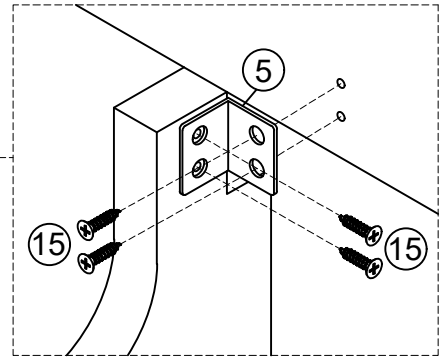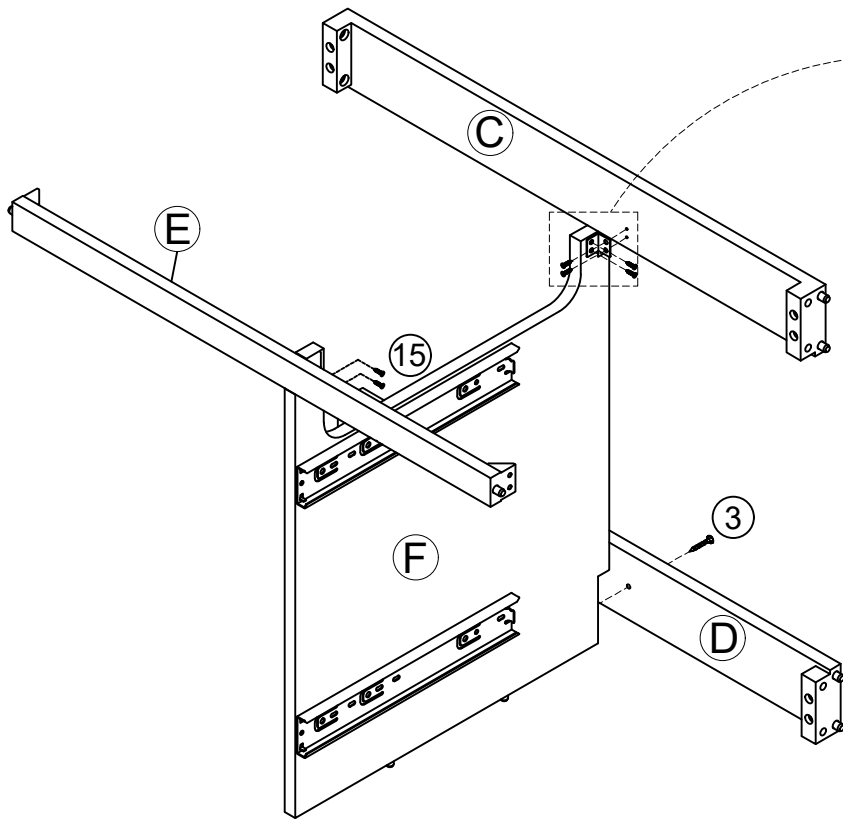


STEP 10

- ③  4pcs  
Ø4x35mm




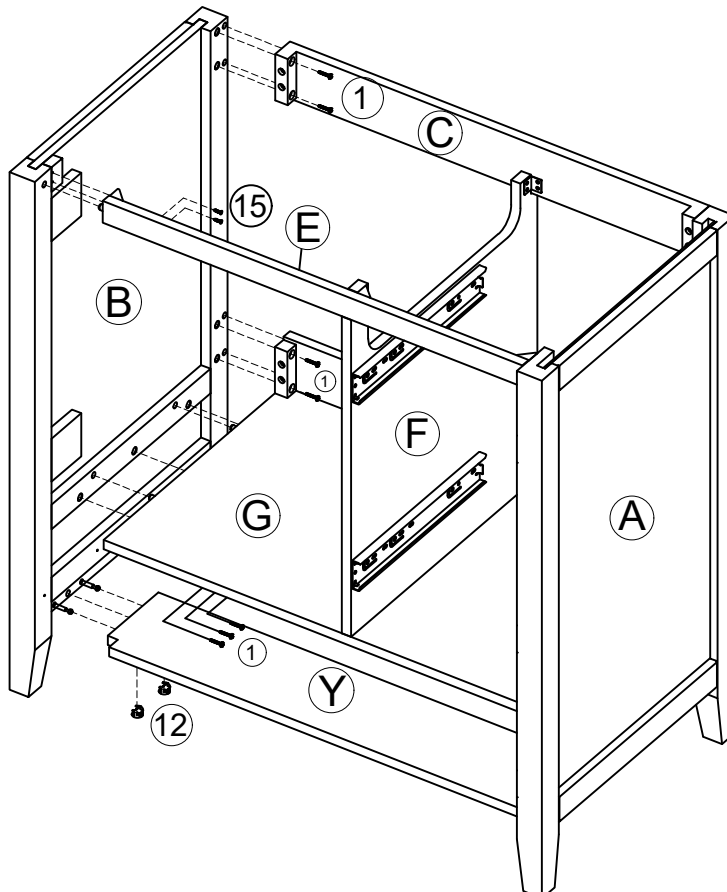
# STEP 11

- |  |  |  |
|--|--|--|
|  7pcs |  2pcs |  2pcs |
| 1 1/4"x25mm  | Ø15x9mm  | Ø3x12mm  |

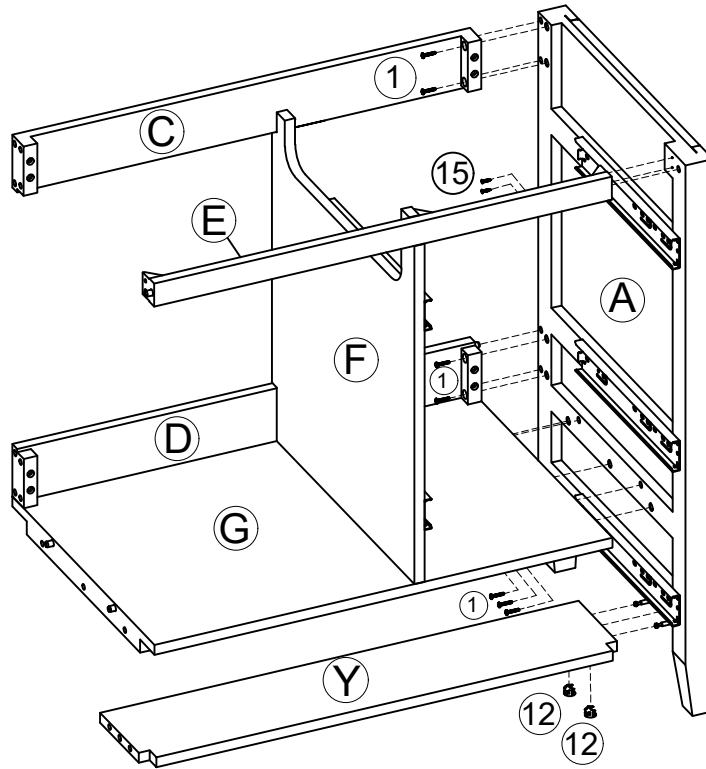



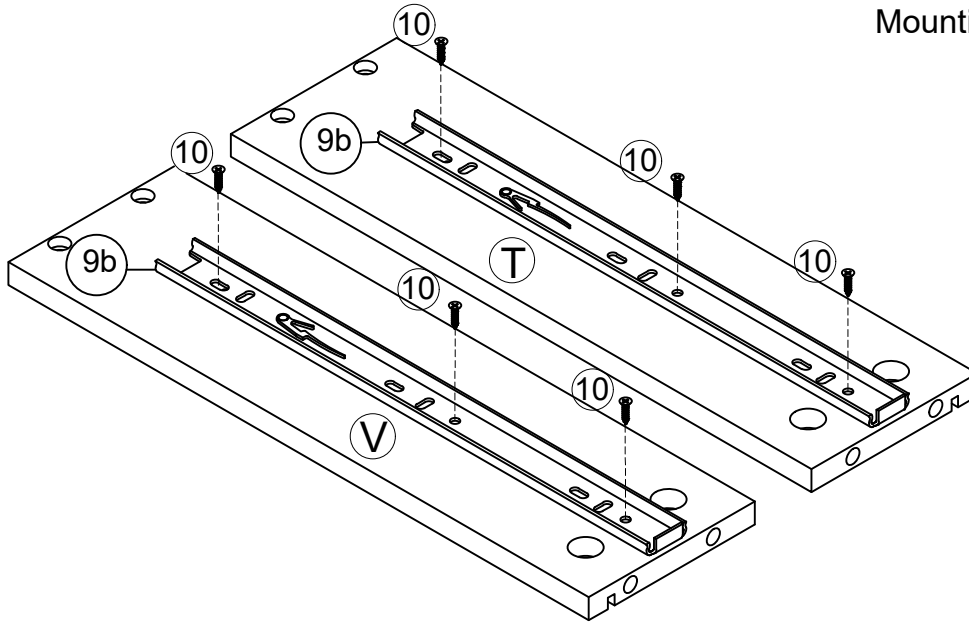
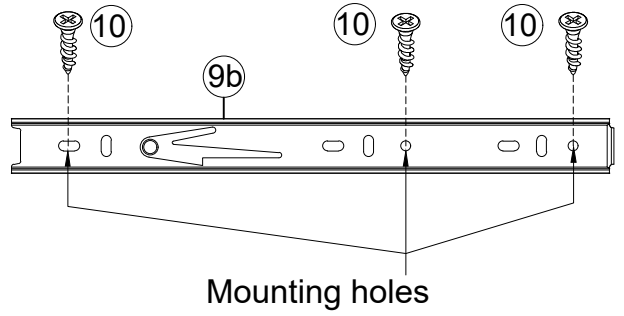
# STEP 12

- |  |  |  |
|--|--|--|
|  7pcs |  2pcs |  2pcs |
| 1 1/4"x25mm  | Ø15x9mm  | Ø3x12mm  |





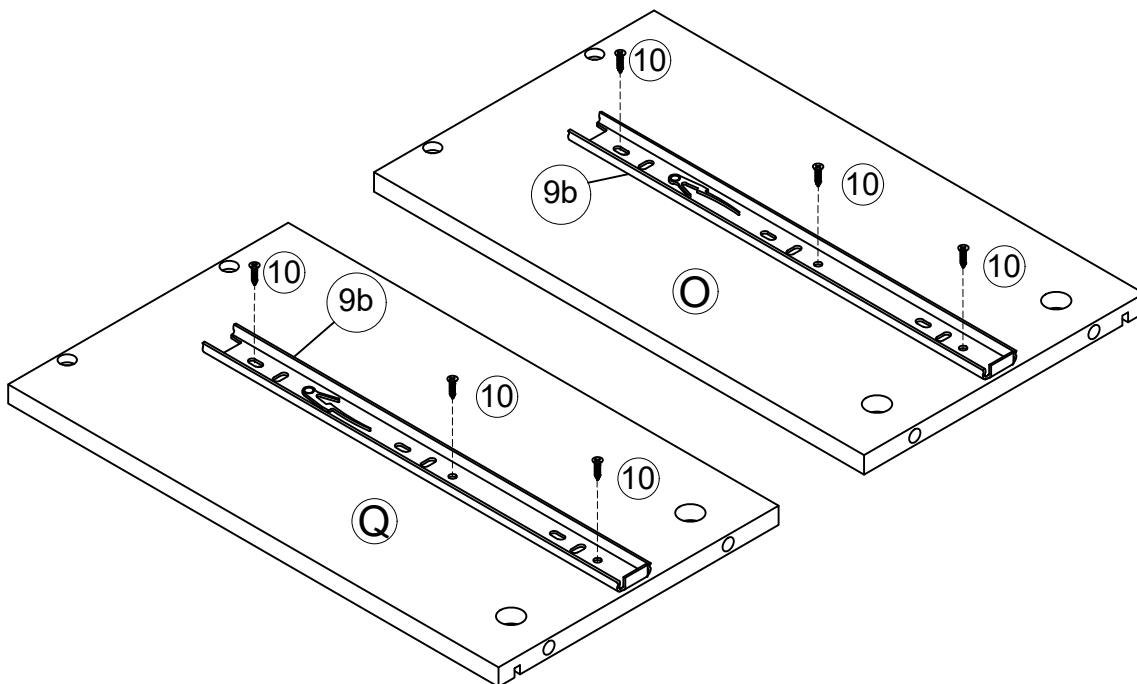
STEP 13

- 9b  2pcs 12"x45mm
- 10  6pcs Ø3x10mm




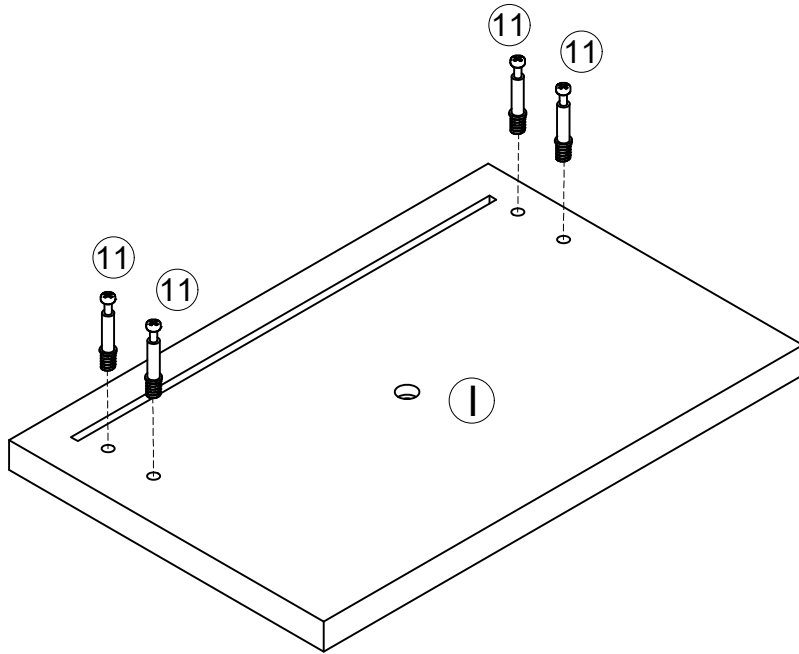
STEP 14

- 9b  2pcs 12"x45mm
- 10  6pcs Ø3x10mm




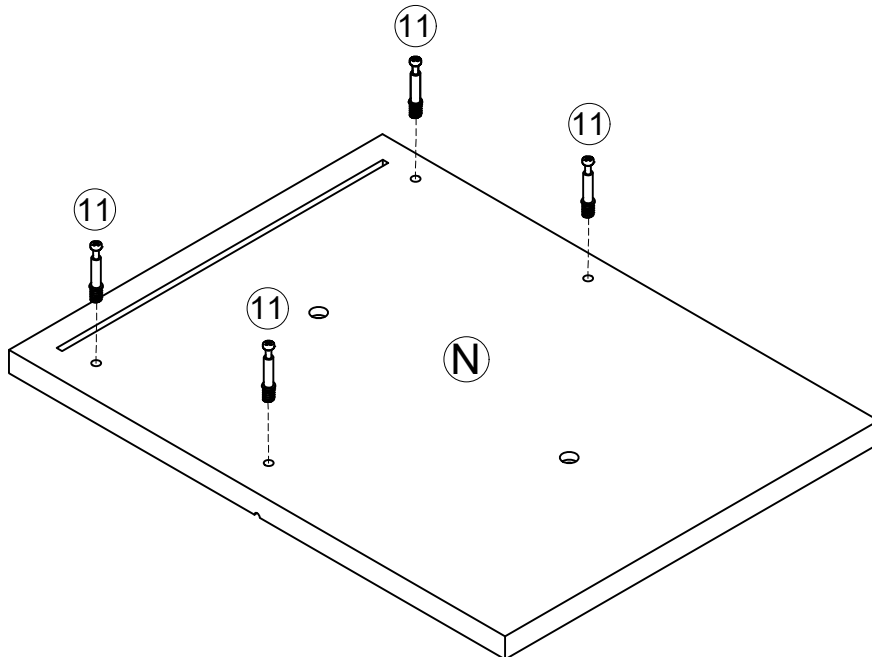
STEP 15

11  4pcs  
Ø6x33mm




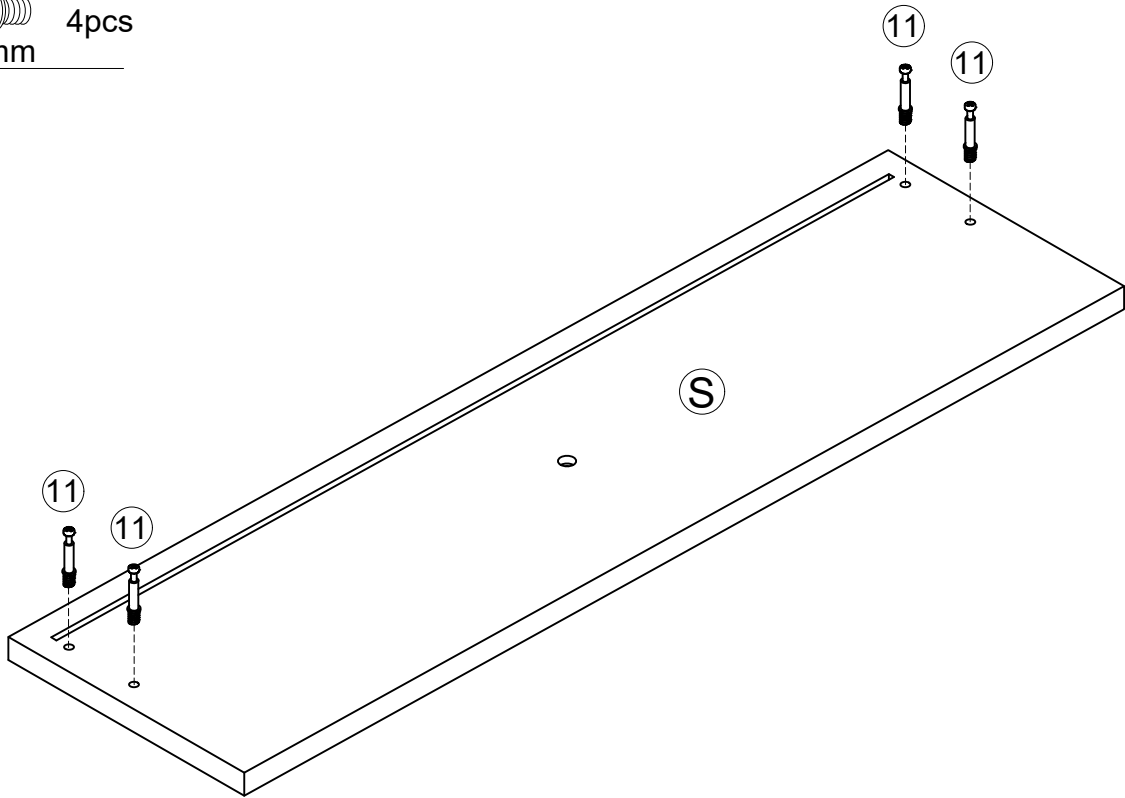
STEP 16

11  4pcs  
Ø6x33mm





STEP 17

⑪  4pcs  
Ø6x33mm




STEP 18



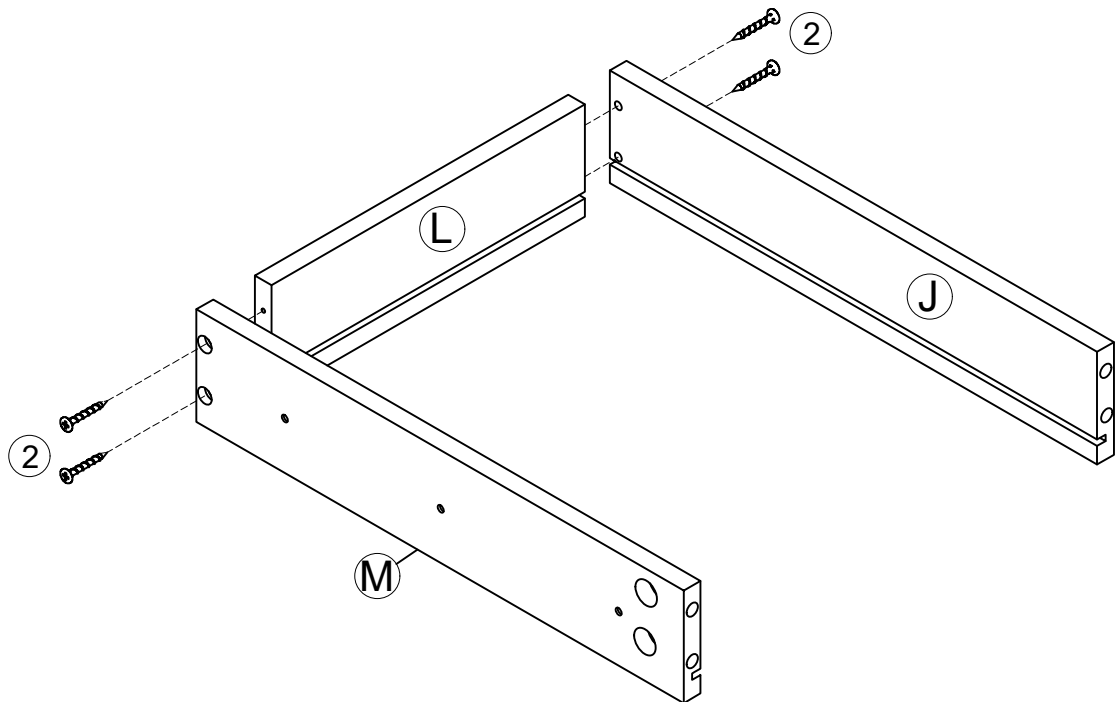②  4pcs  
Ø4x25mm

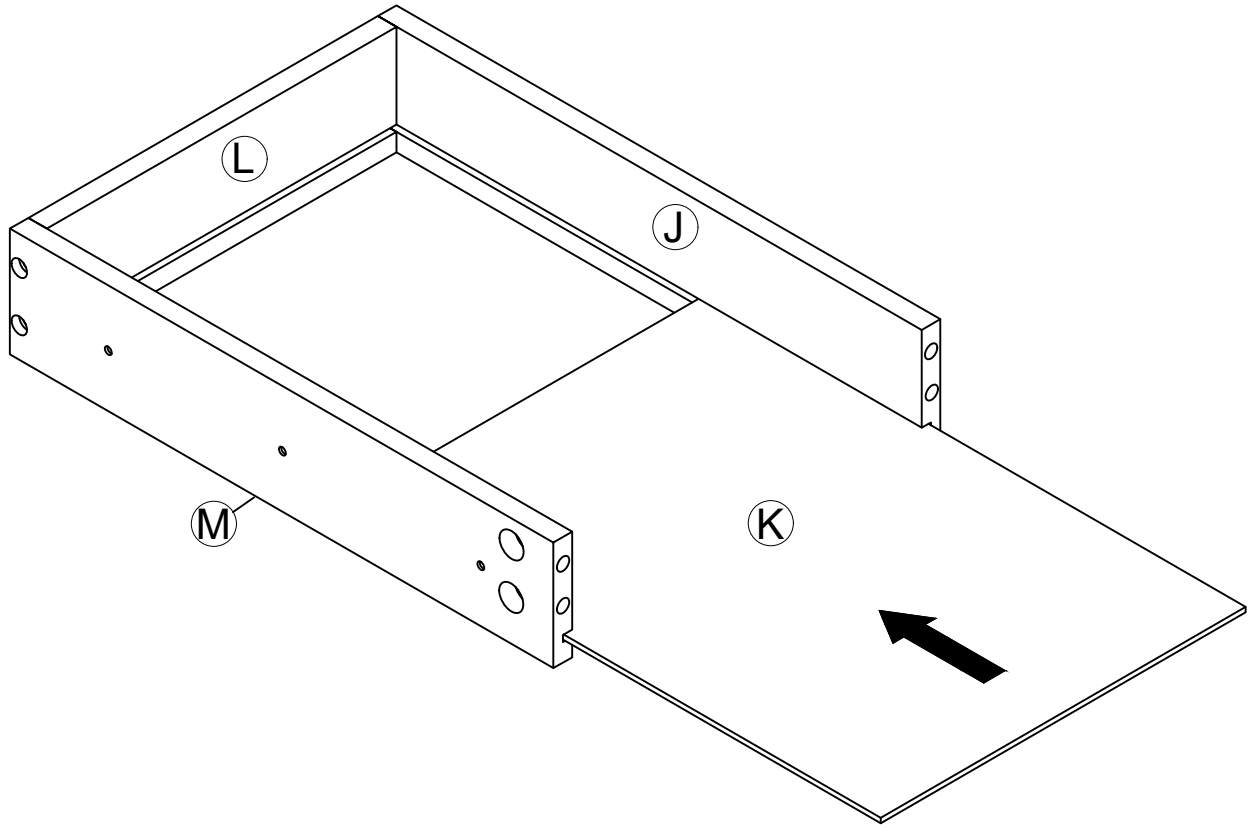


STEP 19





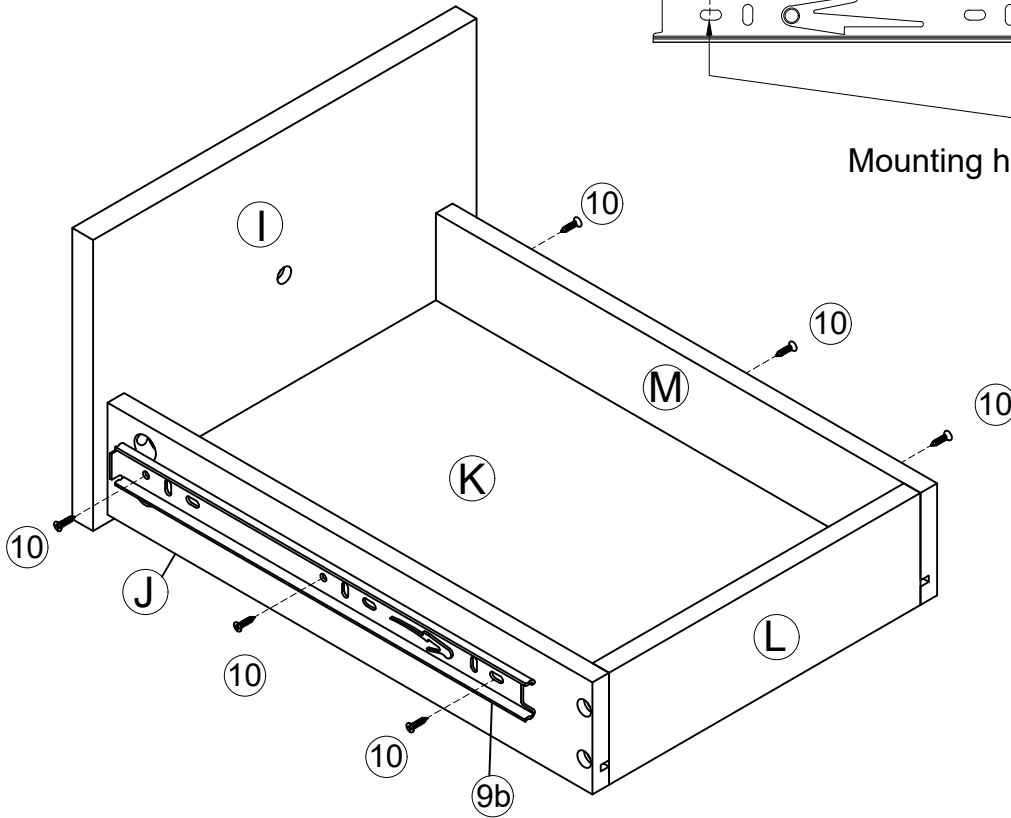
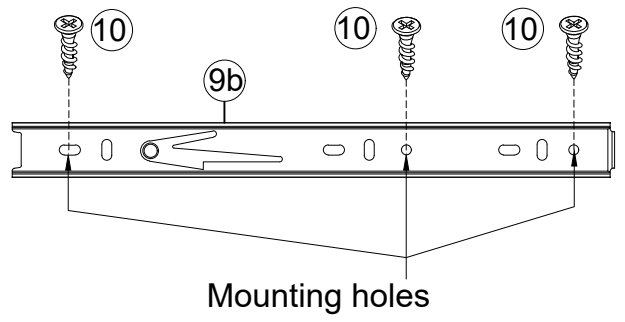
STEP 20

- |   |   |      |   |   |     |   |   |     |
|---|---|------|---|---|-----|---|---|-----|
| ⑫ |  | 4pcs | ⑬ |  | 1pc | ⑭ |  | 1pc |
|   | Ø15x9mm   |      |   |   |     |   | 5/32"x18mm  |     |

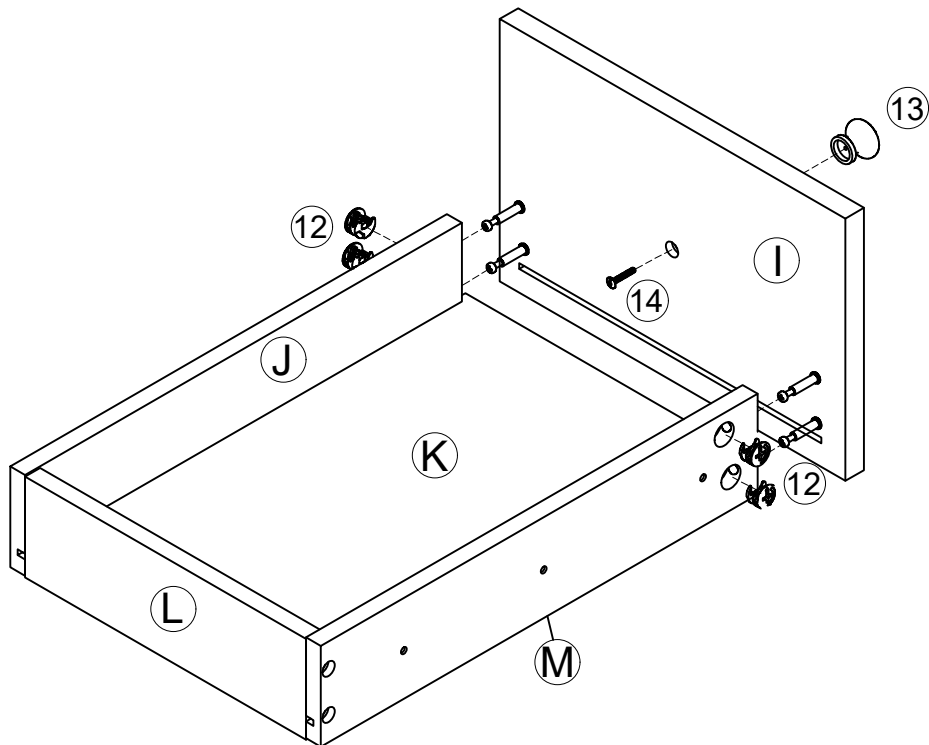


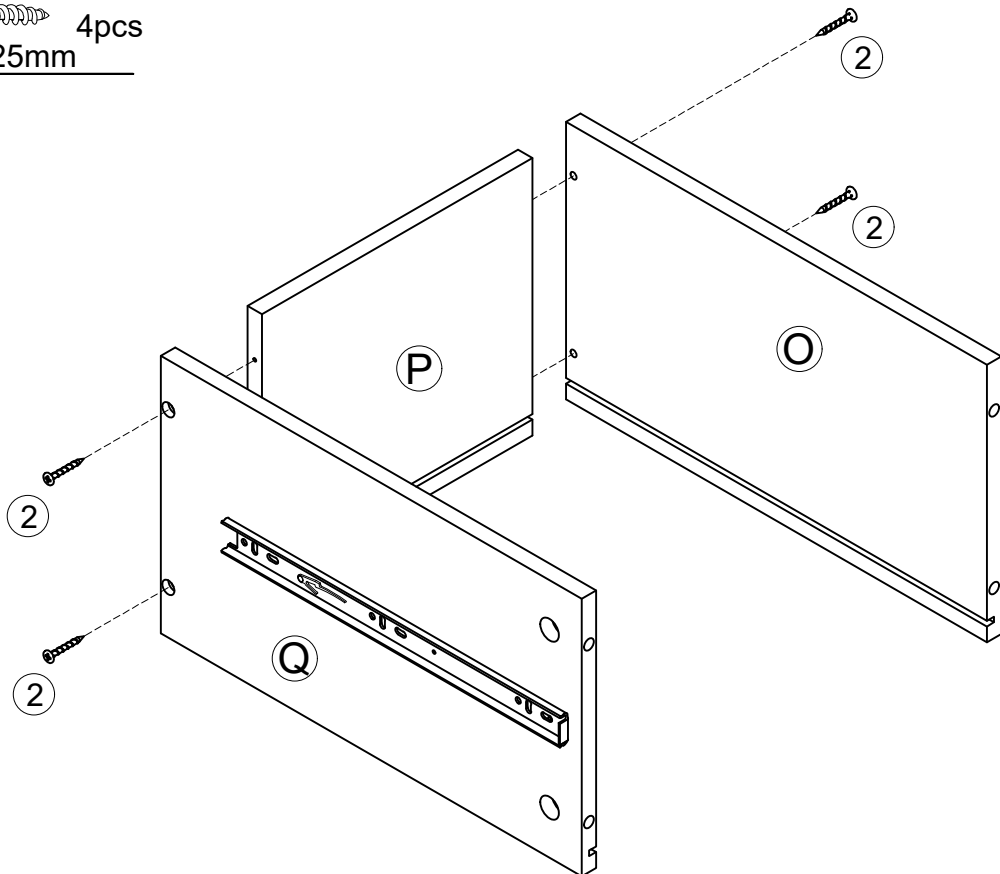
### STEP 21

- 9b  2pcs  
12"x45mm
- 10  6pcs  
Ø3x10mm




### STEP 22

- 2  4pcs  
Ø4x25mm




STEP 23

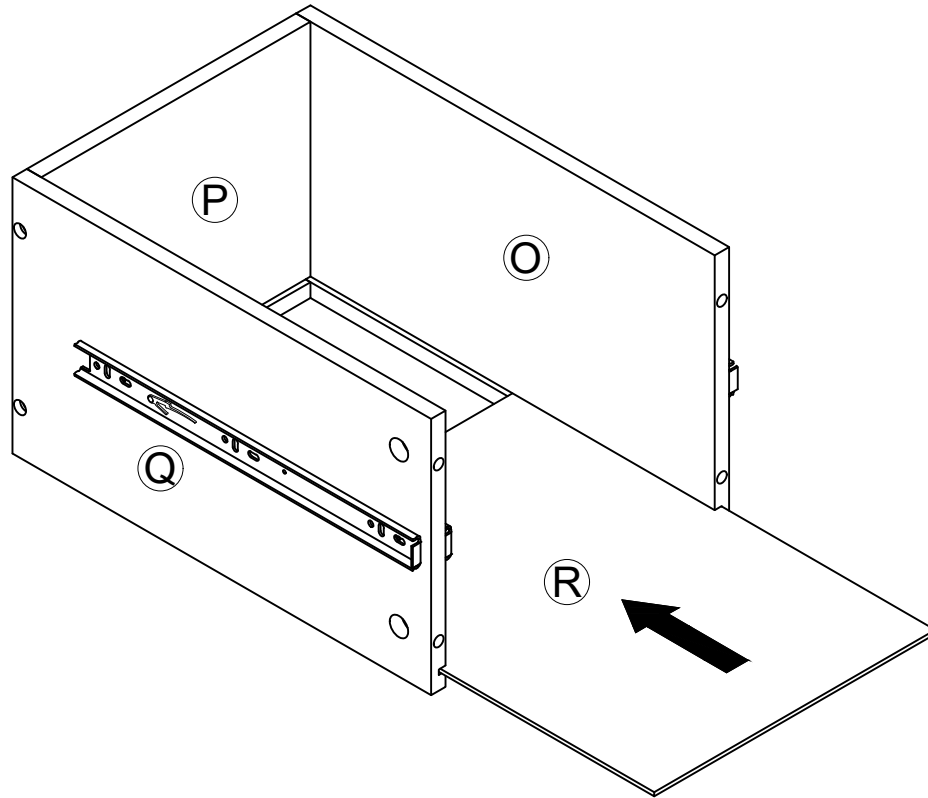


STEP 24


- |   |   |      |   |   |      |   |   |      |
|---|---|------|---|---|------|---|---|------|
| ⑫ |  | 4pcs | ⑬ |  | 2pcs | ⑭ |  | 2pcs |
|   | Ø15x9mm   |      |   |   |      |   | 5/32"x18mm  |      |

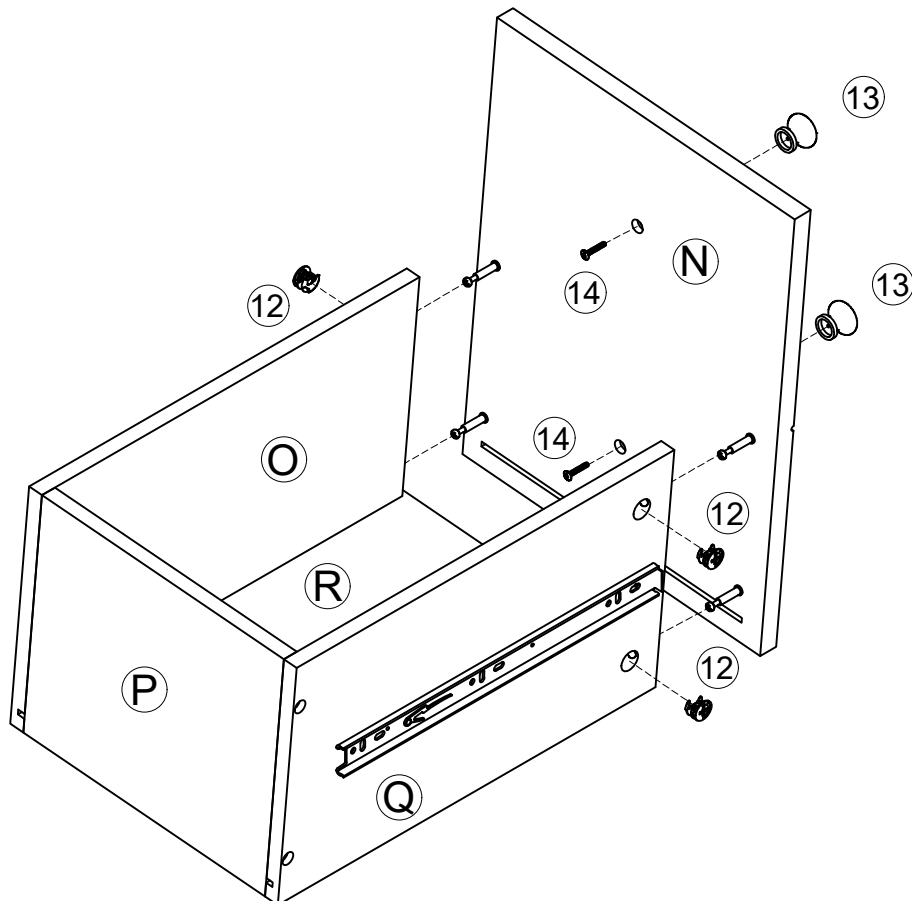




STEP 25

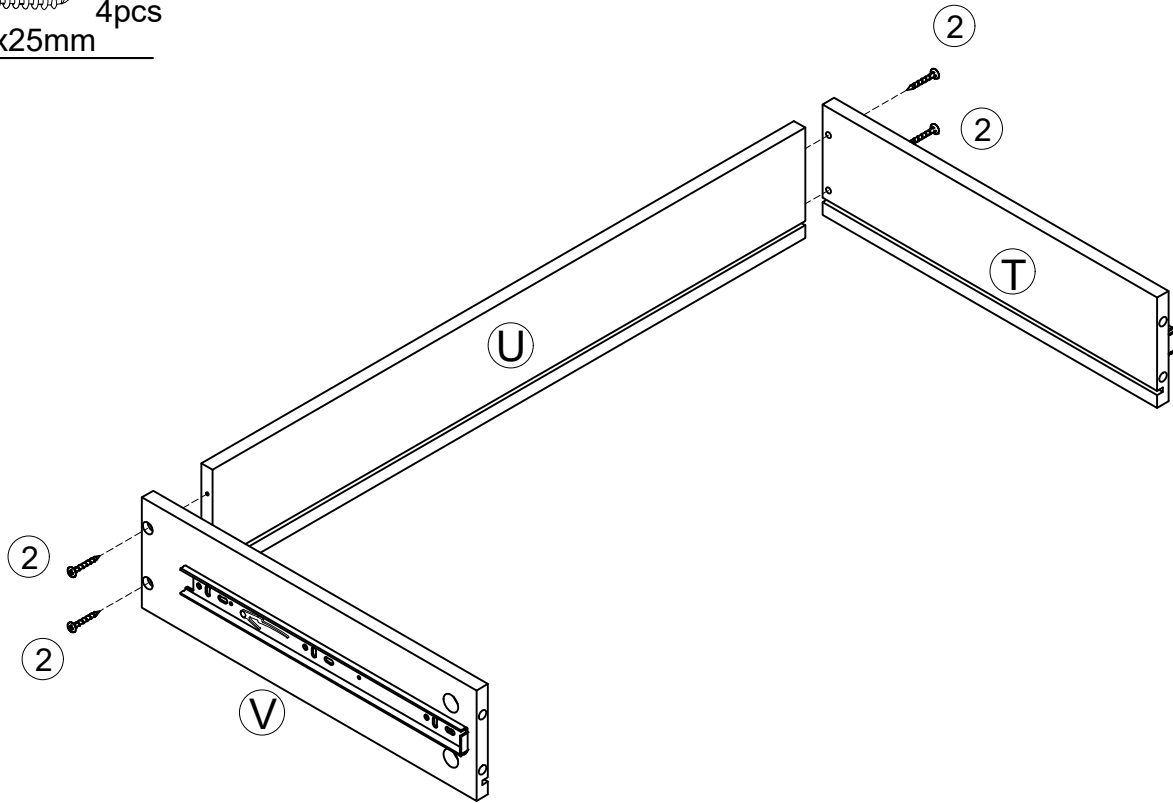


②  4pcs  
Ø4x25mm

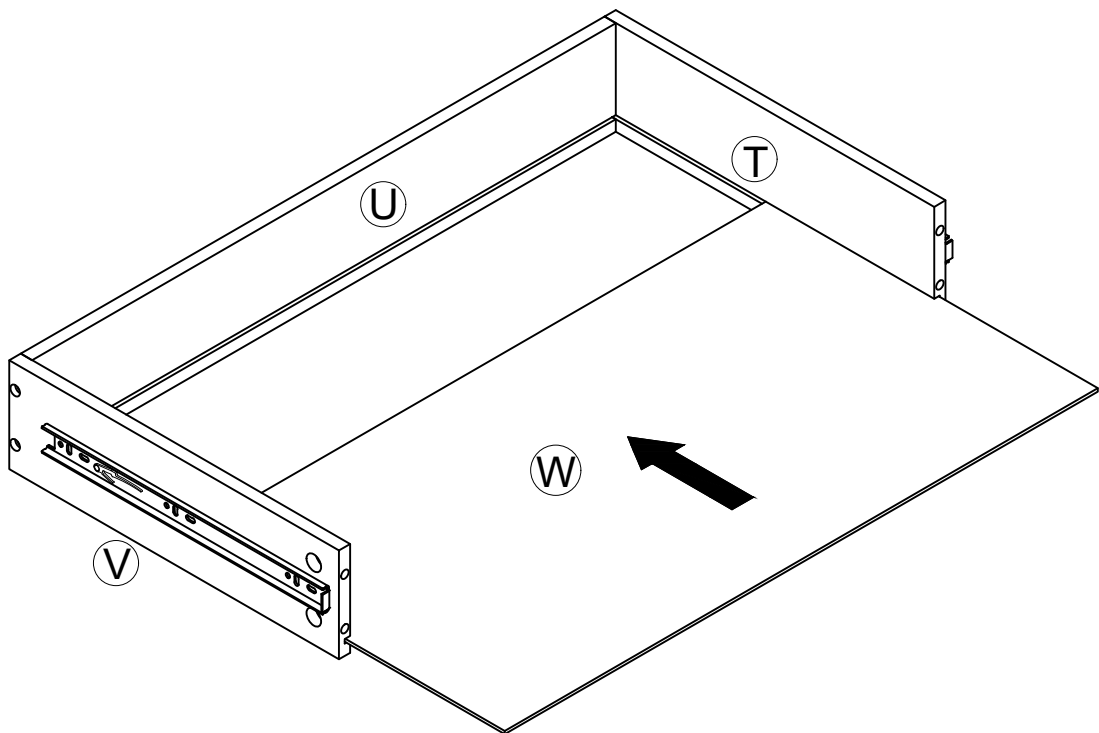


STEP 26




STEP 27



- ⑫  4pcs Ø15x9mm
- ⑬  1pc
- ⑭  1pc 5/32"x18mm

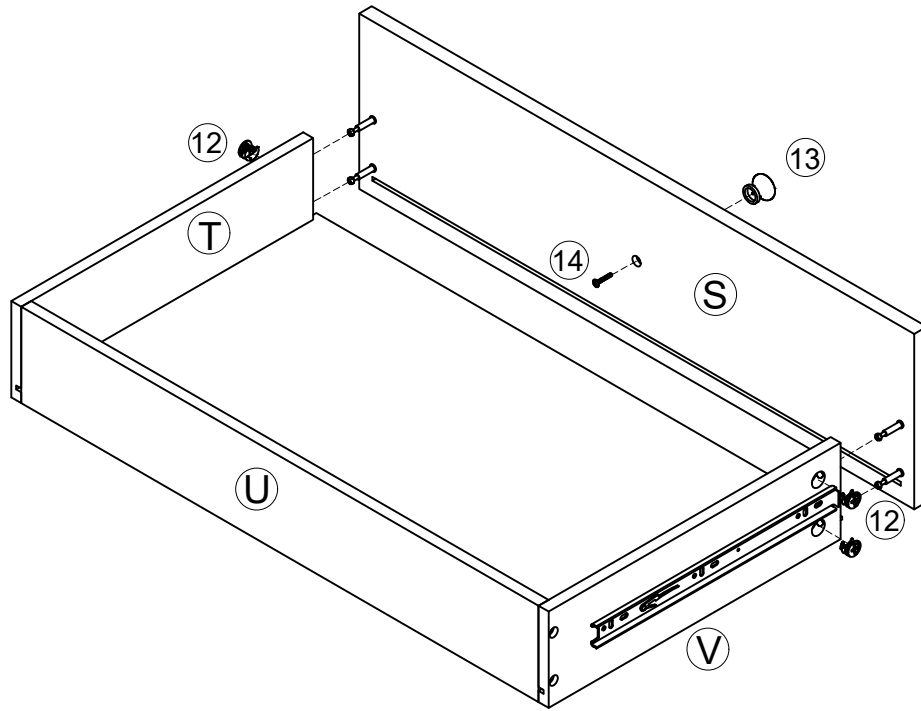


STEP 28

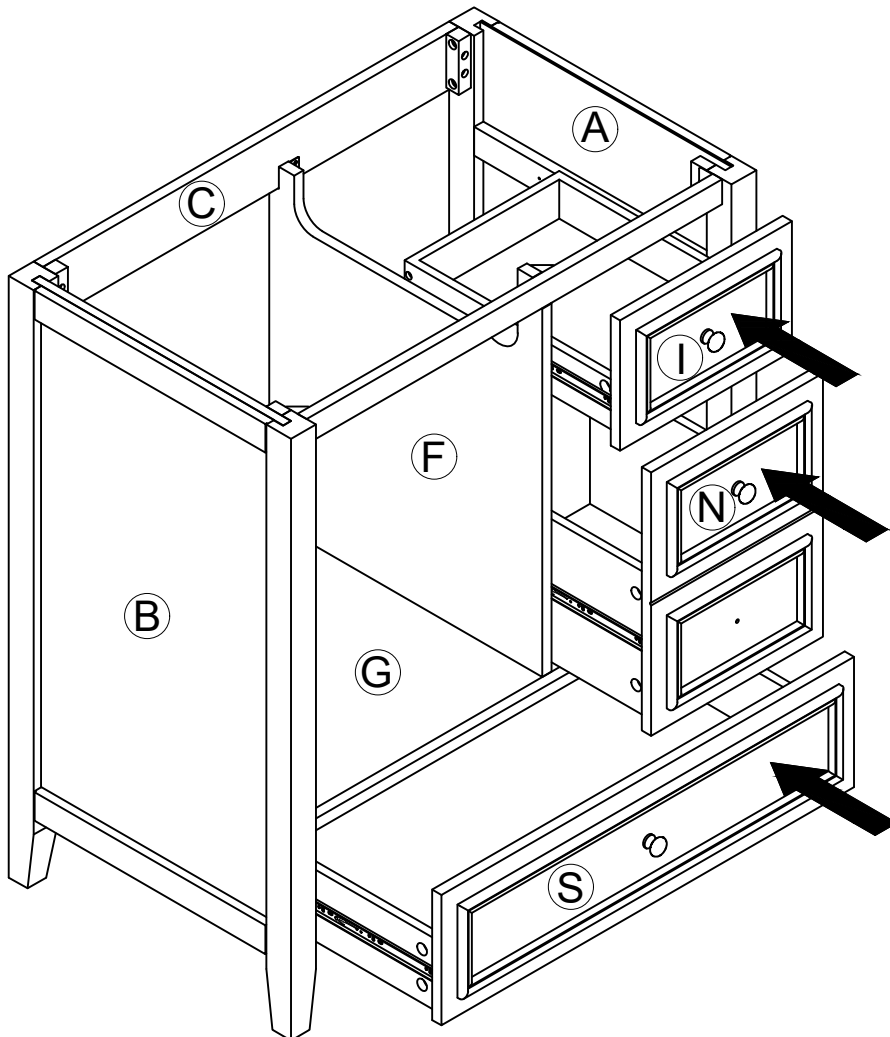

STEP 29

- ⑥  2pcs   
 ⑧  4pcs  
 Ø4x12mm



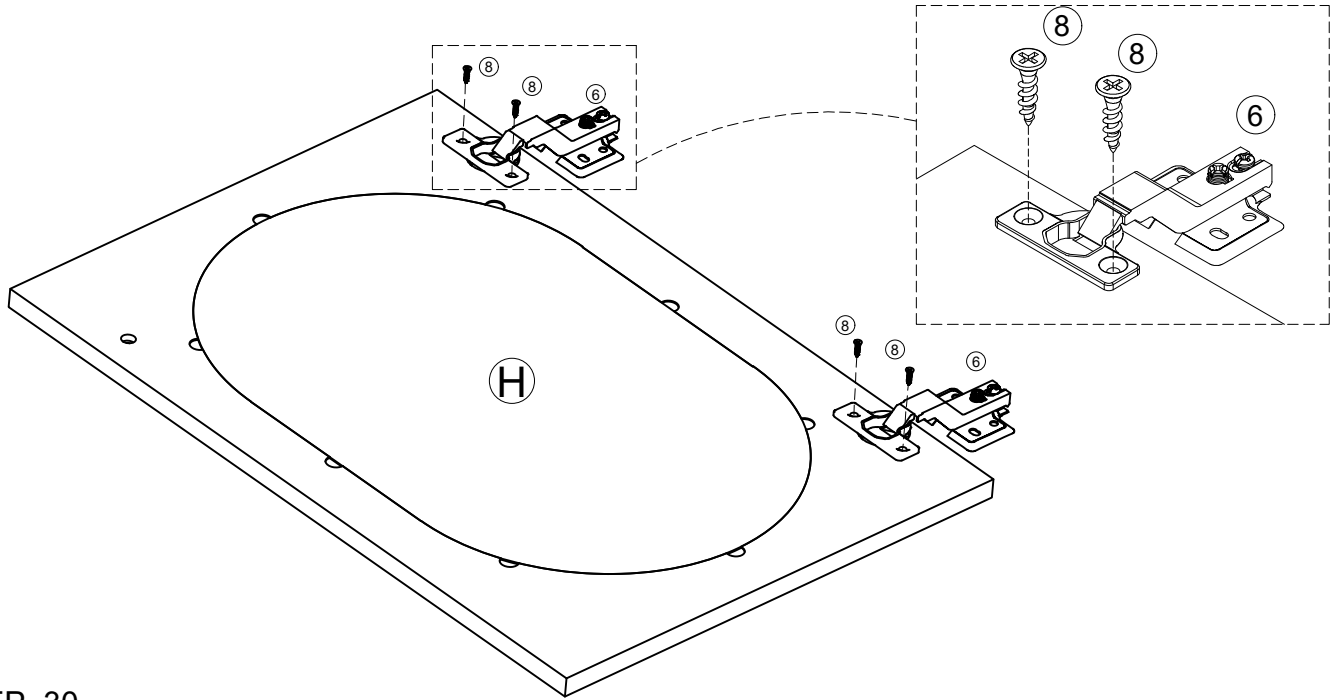


STEP 30

- ⑧  8pcs  
 Ø4x12mm


Three-way adjustable hinge for perfectly aligned doors

1. TO ADJUST DOOR FORWARD OR BACKWARD.
2. TO ADJUST DOOR TO RIGHT OR TO LEFT.
3. TO ADJUST DOOR UP OR DOWN.

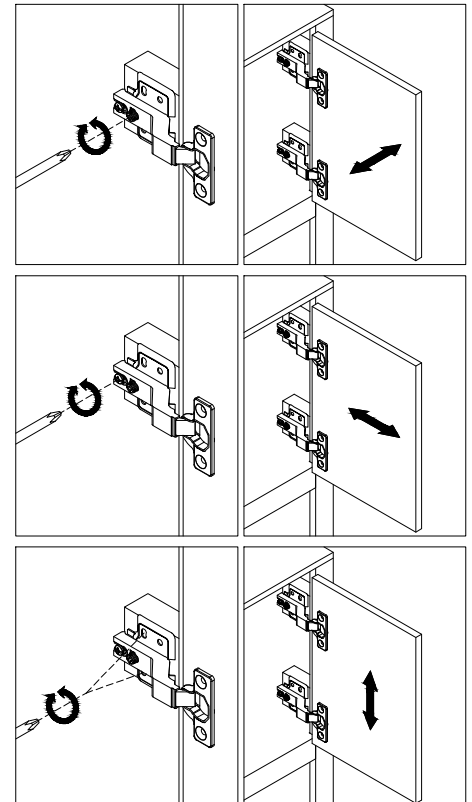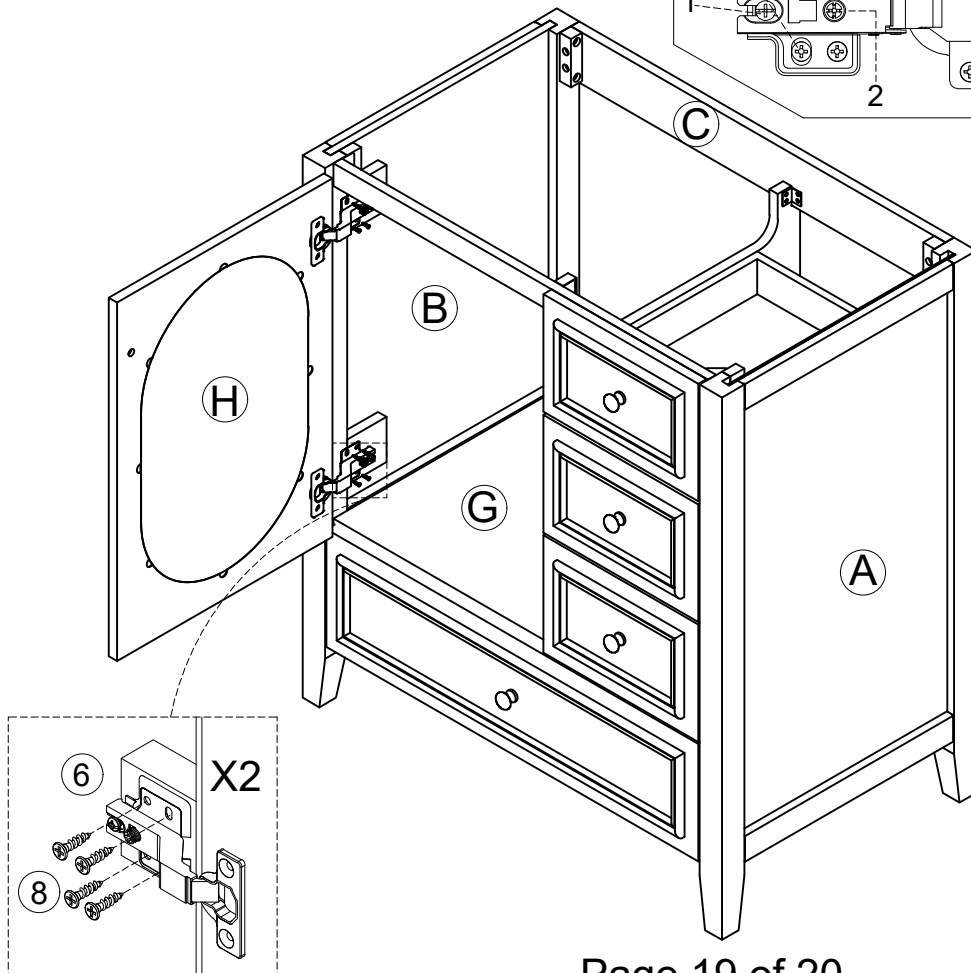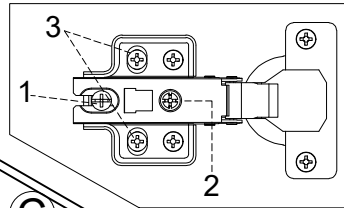


### STEP 31

- ⑬ 1pc  
⑭ 5/32"x18mm 1pc

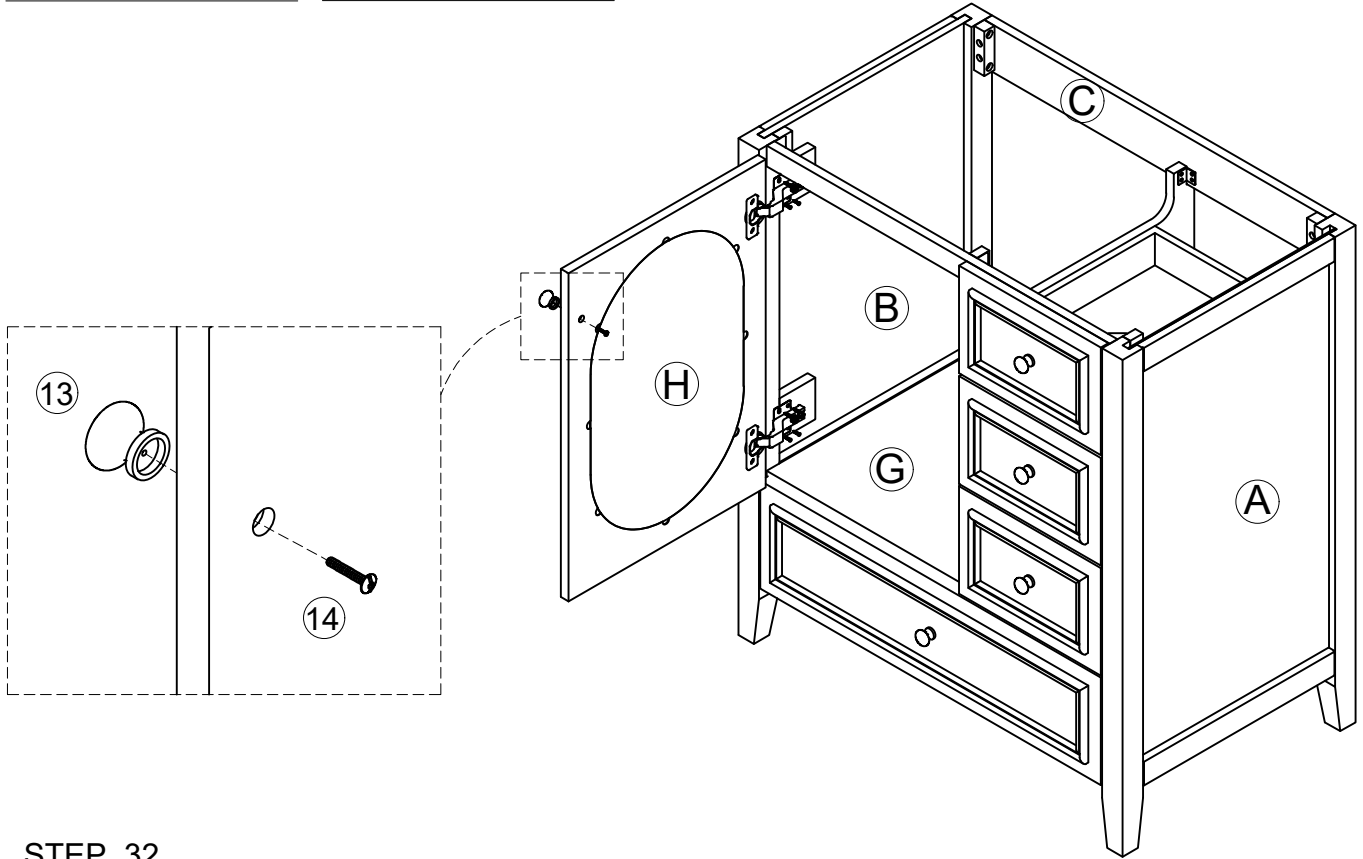

### STEP 32

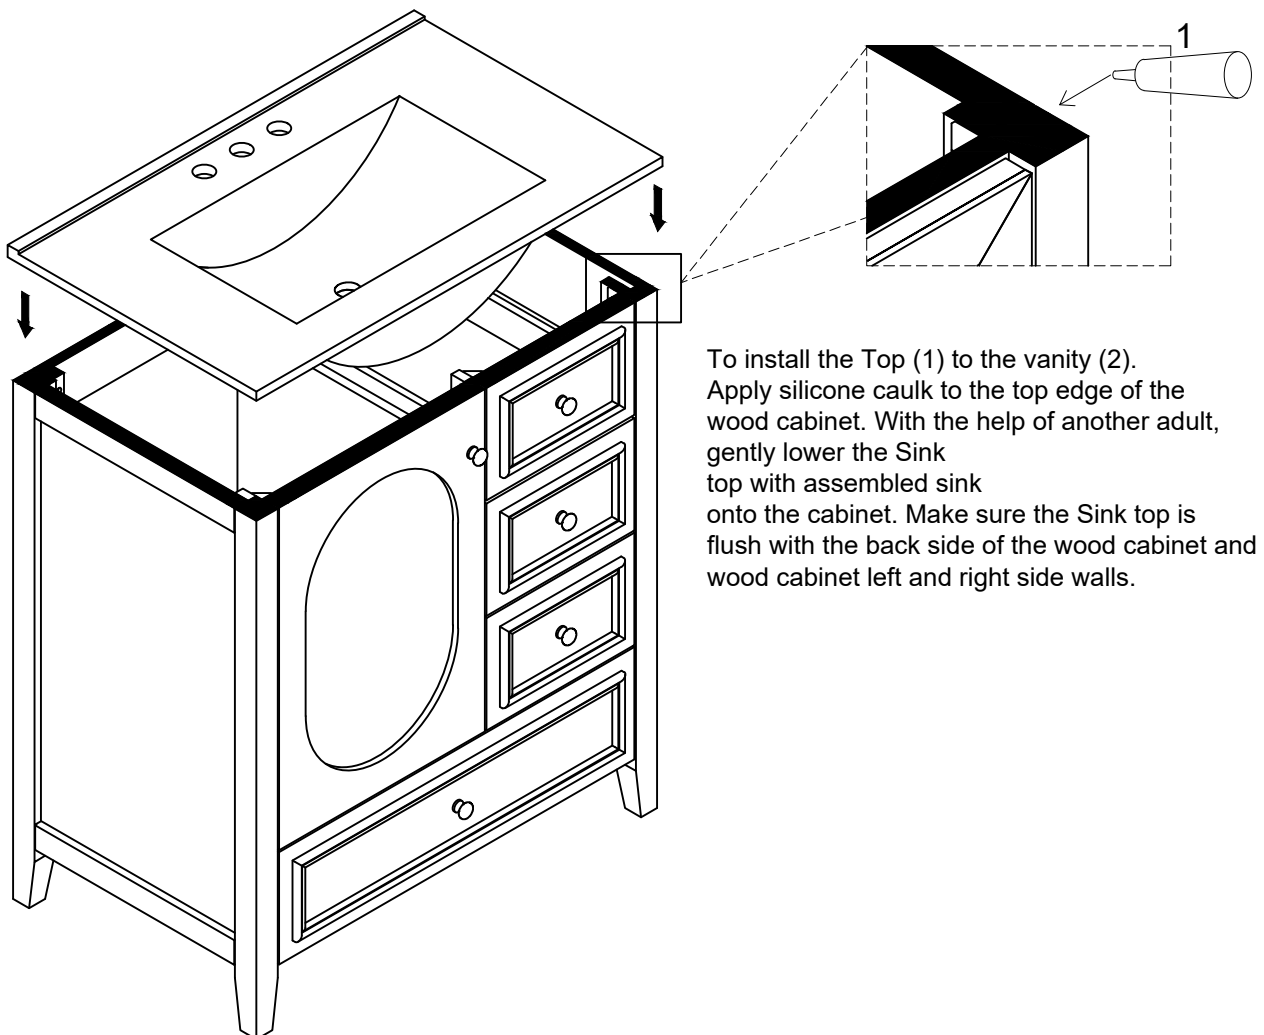

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.