



PRODUCT DRAWING






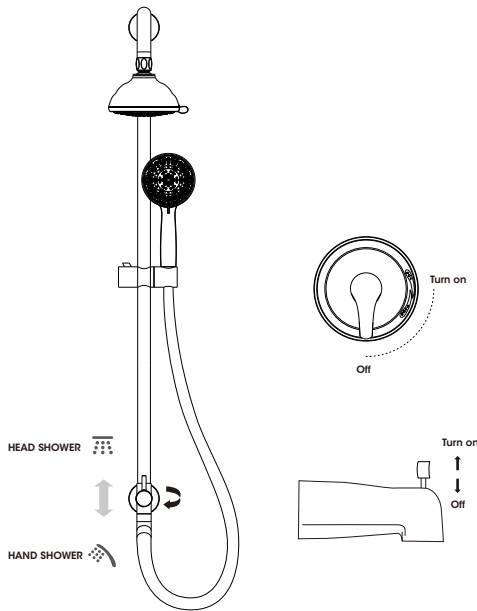


RECOMMENDED TOOLS

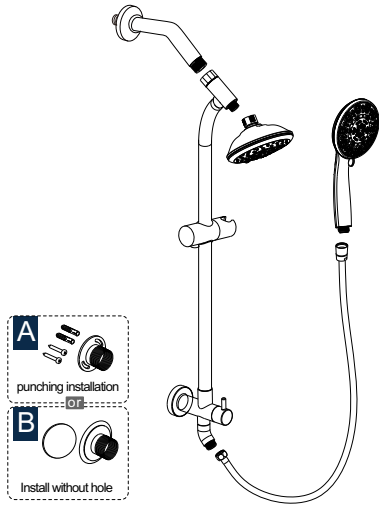

INSTALLATION STEPS

BEFORE YOU BEGIN

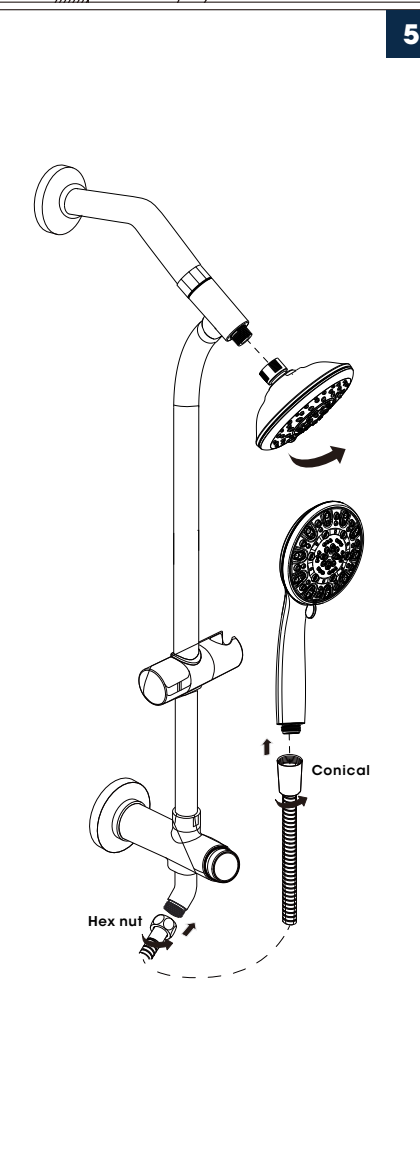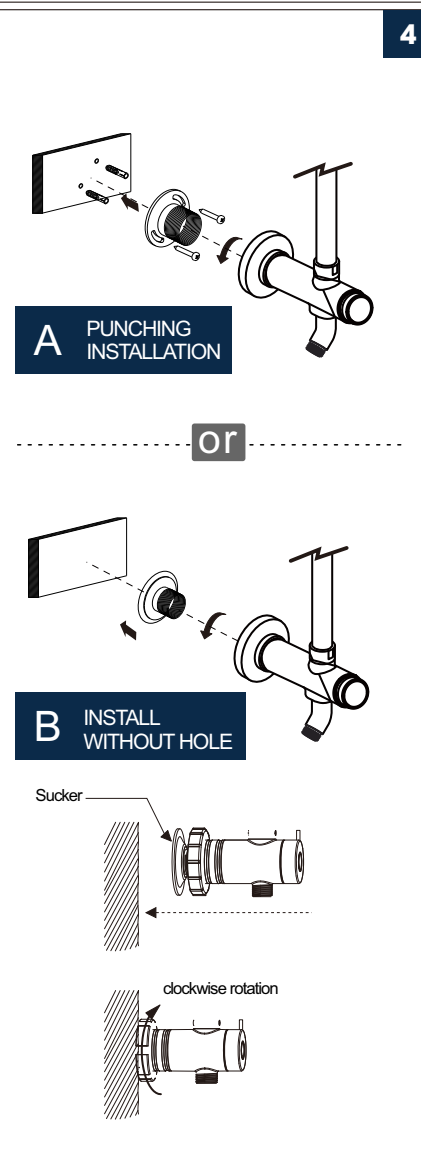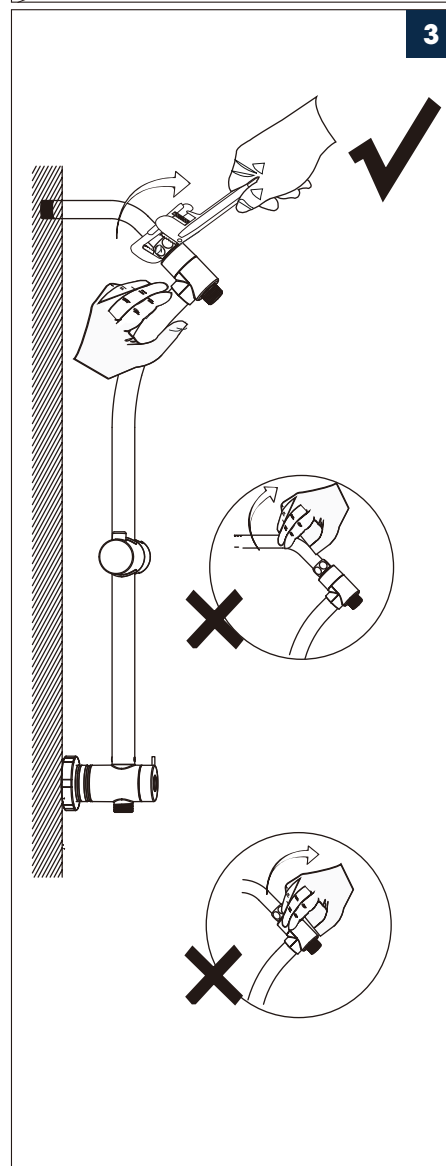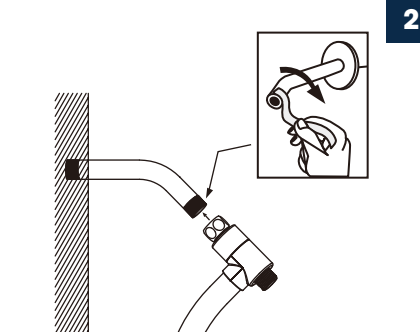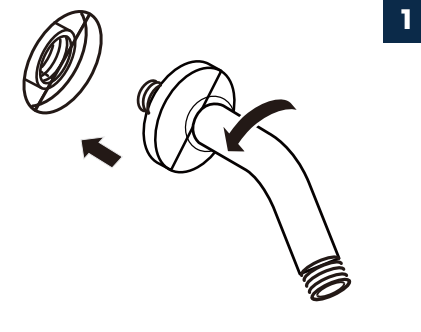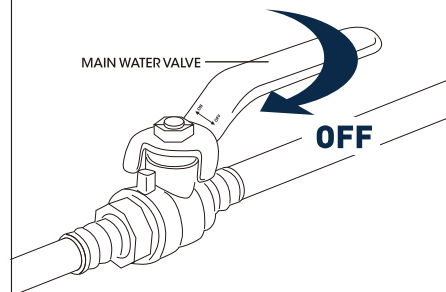

HANDHELD SHOWERHEAD & RAIN SHOWER COMBO

Installation instruction



MB / BN / BG / CH / ORB

CARE INSTRUCTIONS

Rinse the product with clear water. Dry the product with a soft cloth.




DO NOT:

Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acid, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.

PRODUCT DRAWING


UNIVERSAL BATHTUB SPOUT

Installation instruction

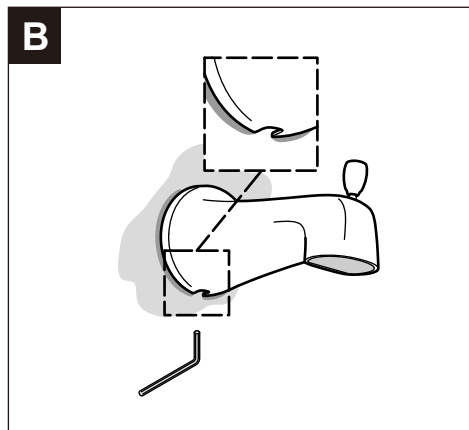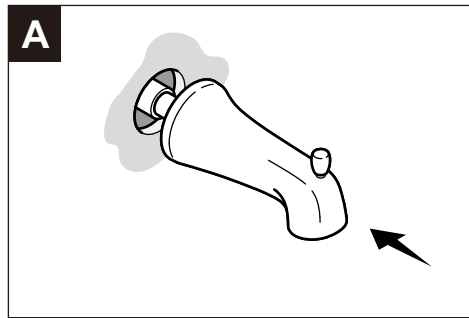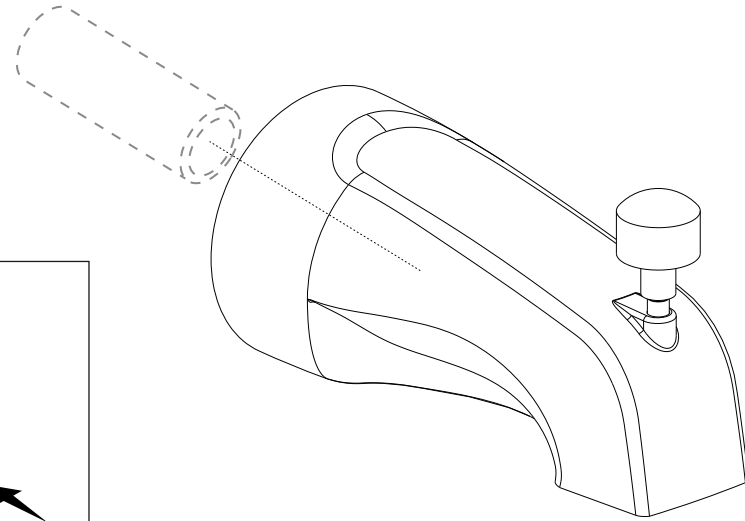



INSTALLATION STEPS

BEFORE YOU BEGIN

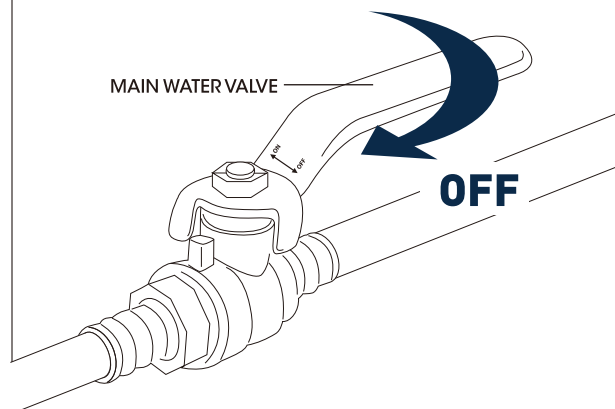


Rough-in-Installation primaire


ATTENTION
WHEN USING A HANDSHOWER, IT NEEDS TO BE CONNECTED TO THE TOP OUTLET

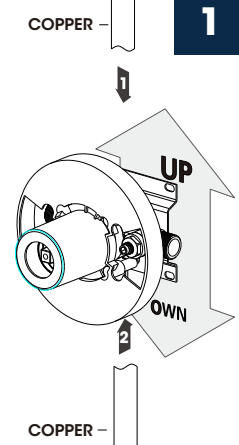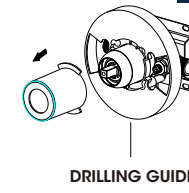


2

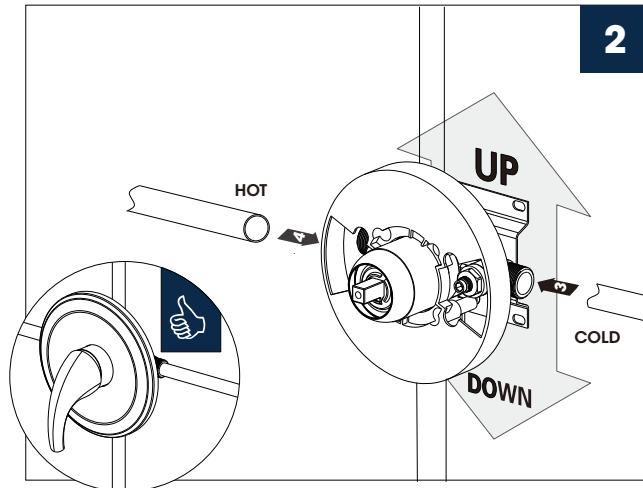

3

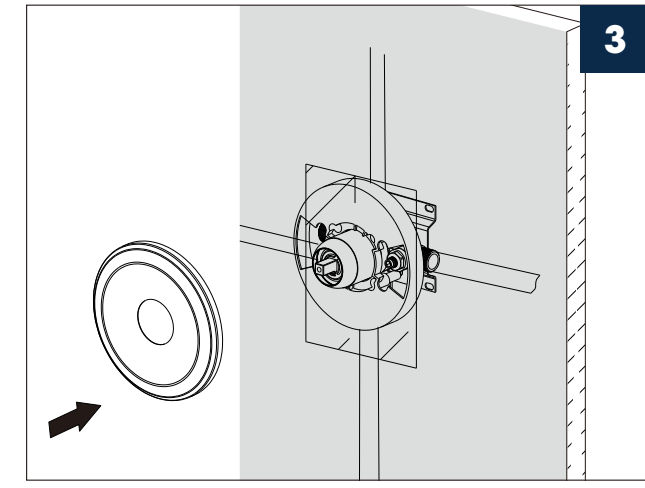

4

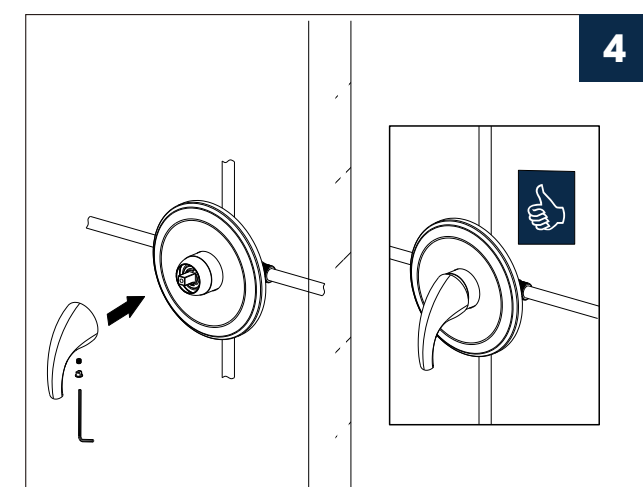

5

