

BIDET HOLDER INSTALLATION INSTRUCTION



Back flow prevention valve Sprayer




Stainless Steel coated flexible hose




Suction cup fixed base

1 TURN OFF WATER SUPPLY

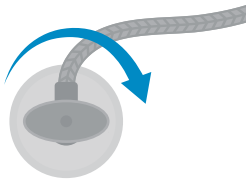

2 CONNECT-VALVE, HOSE, & BIDET SPRAYER

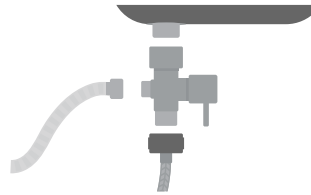

3 INSTALLATION METHODS ARE OPTIONAL

Make sure wall is flat, smooth, clean and dry

1. Hold the round flange with one hand.

2. Pinch suction cup with the other hand and turn it clockwise 2 to 3 circles, don't separate it completely from round flange.

3. Make sure the Suction cup fixed base is vertical, firmly press the against wall surface.

4. Tighten the round flange clockwise by hand.

5. Mount sprayer

