

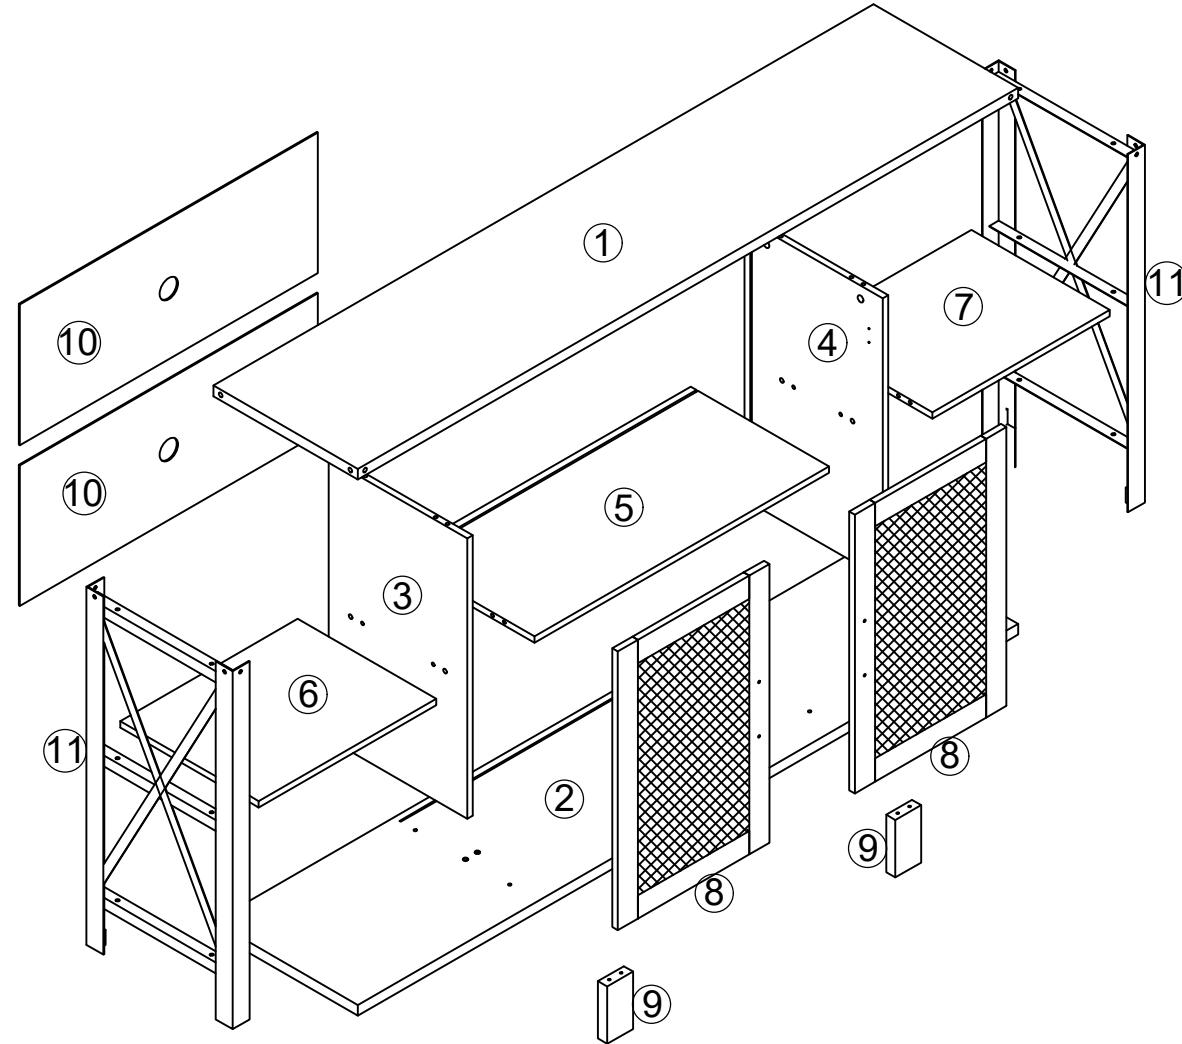
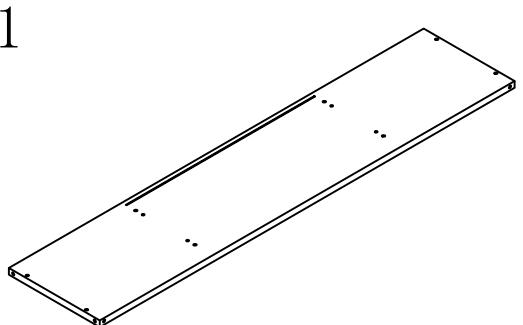
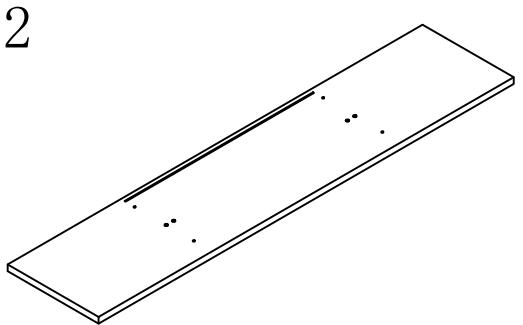
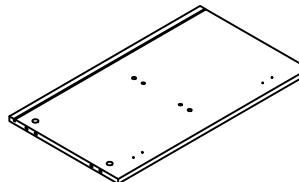
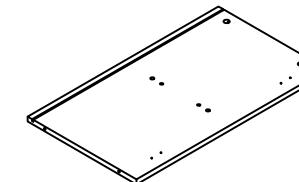
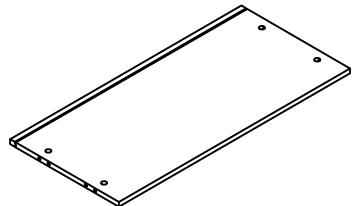
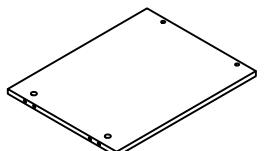
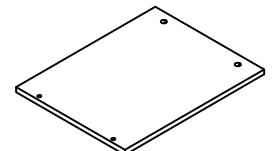


FL2208094

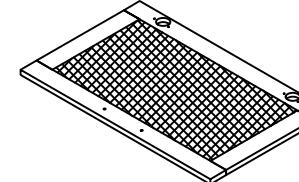

K	L	4*18	M	20*20							
2PCS	4PCS		4PCS								
A	B	C	D	E	F	G	H	I	J		
12PCS	12PCS	12PCS	24PCS	8PCS	4PCS	20PCS	12PCS	12PCS	4PCS		


1		2		3		4	
	1794*393 1PS		1794*393 1PS		660*376 1PS		660*376 1PS
5		6		7		8	
	800*376 1PS		482*376 1PS		482*376 1PS		656*412 2PS
9		10					
	135*70 2PS		810*331 2PS				

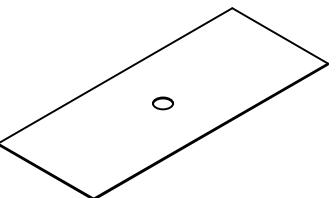


Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!


I

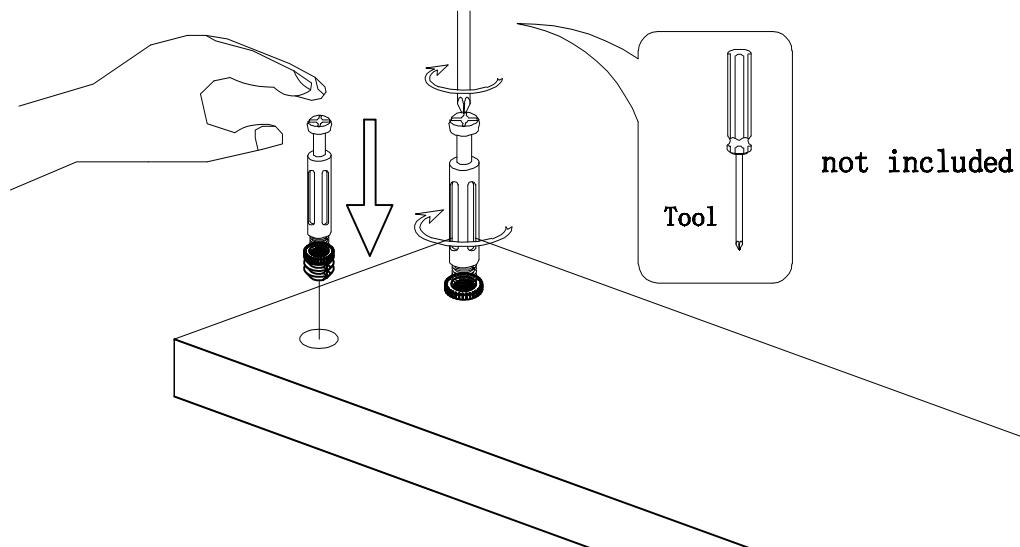

II

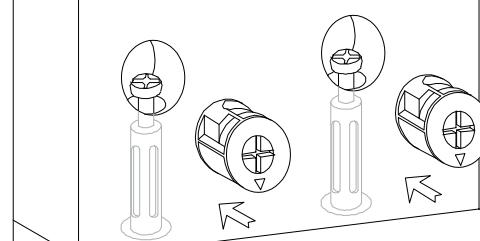

III







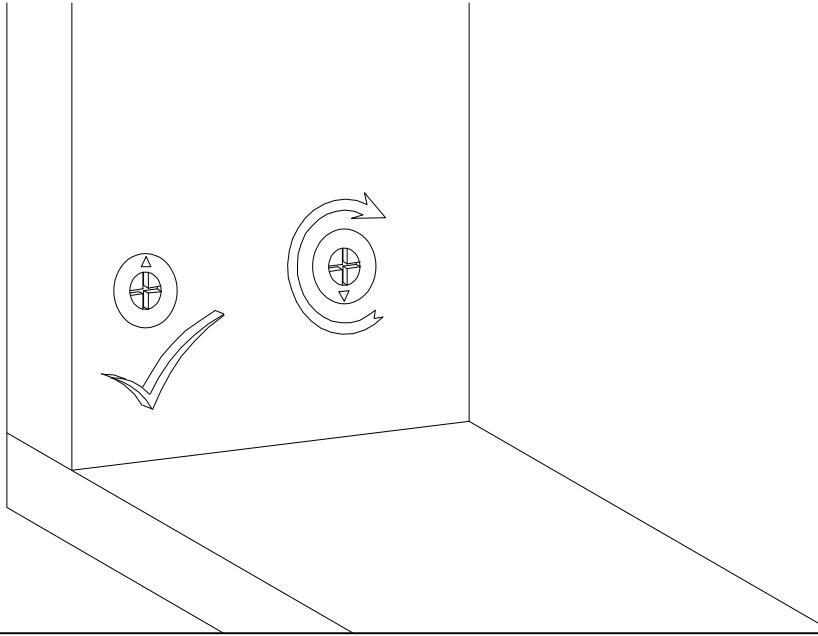


IV



Scan QR code for assembly video


1

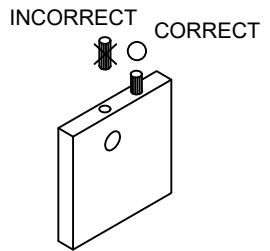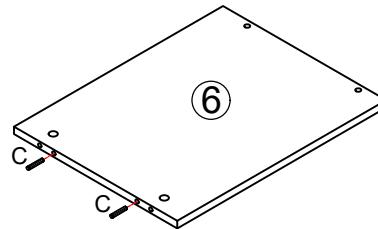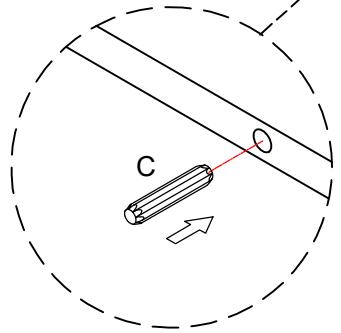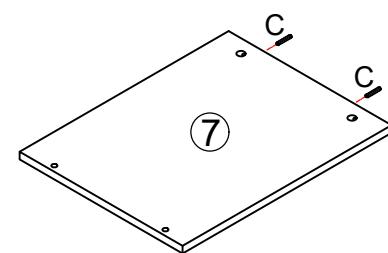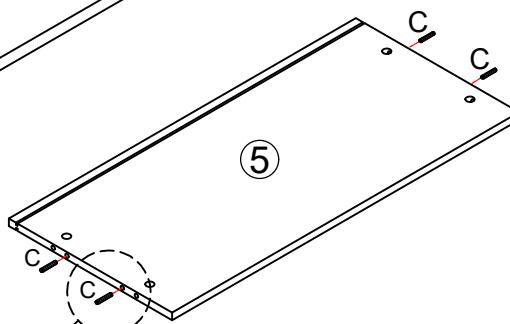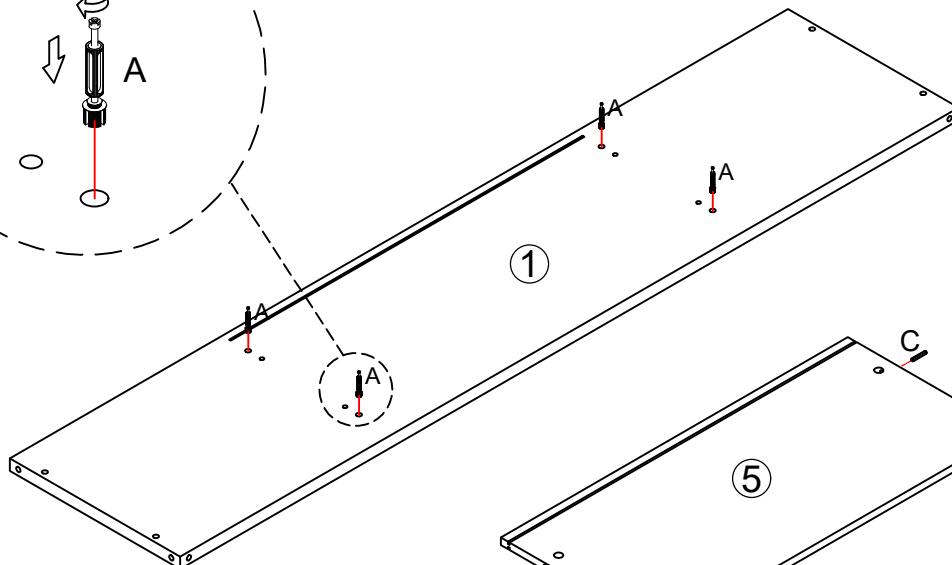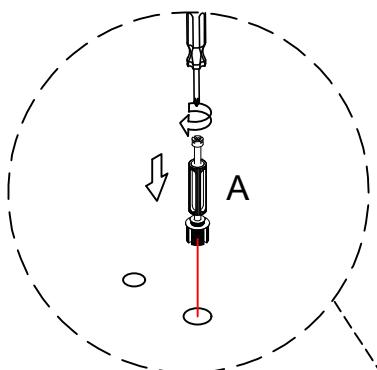

A*4




C*8




put A on board ①
put C on board ⑤⑥⑦

2

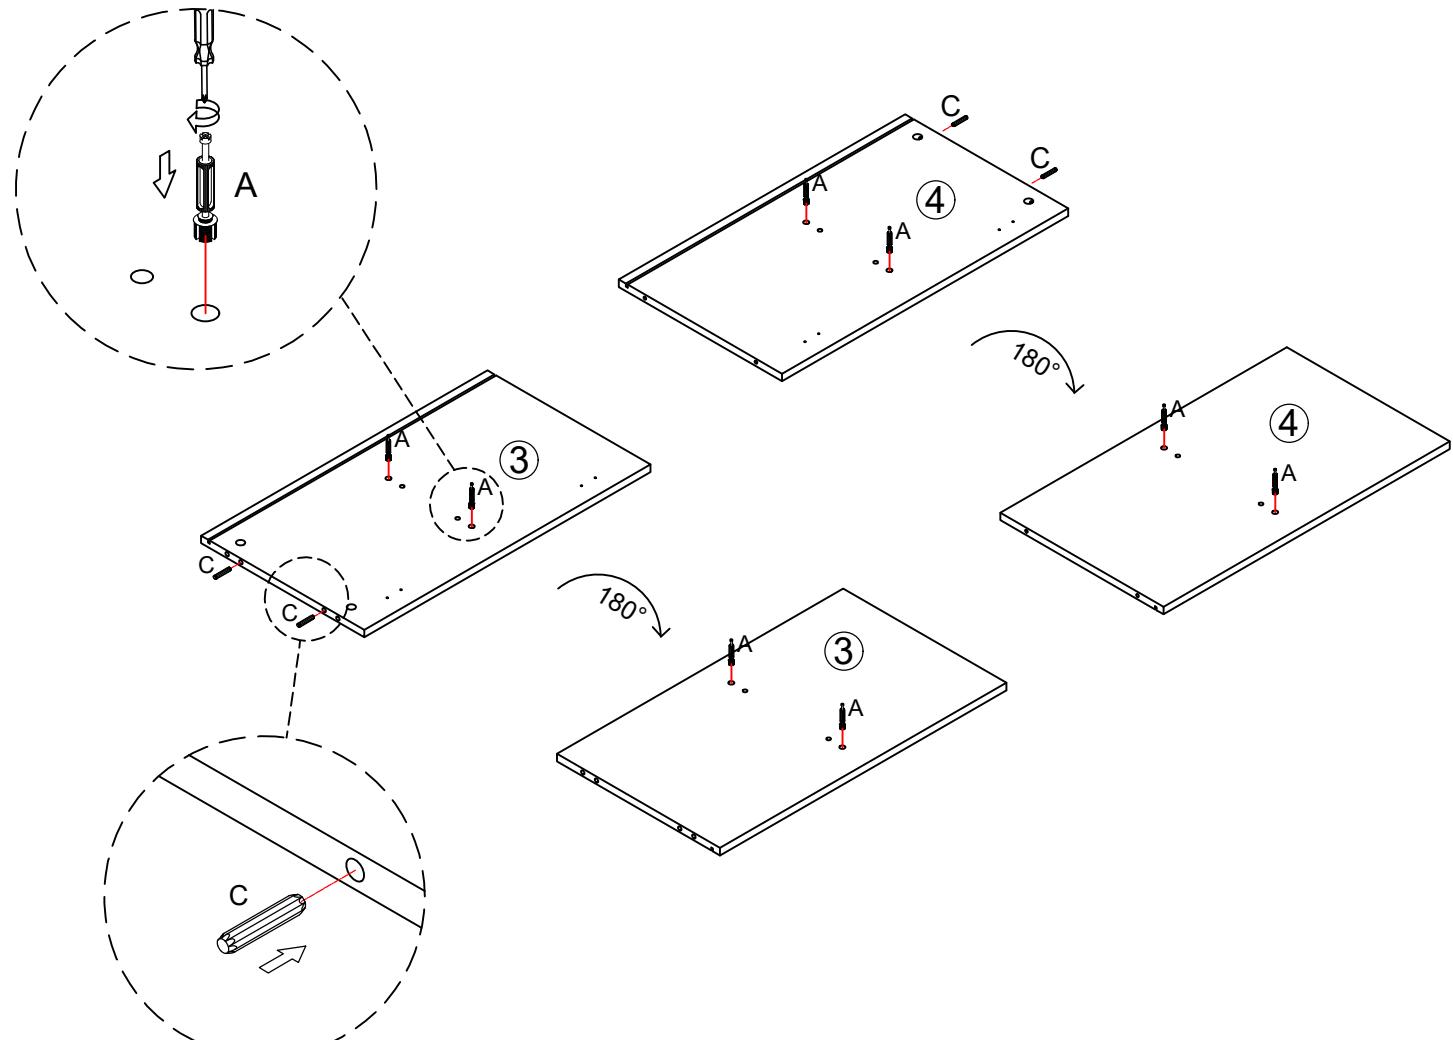


A*8




C*4

put A on board ③④
put C on board ③④

3

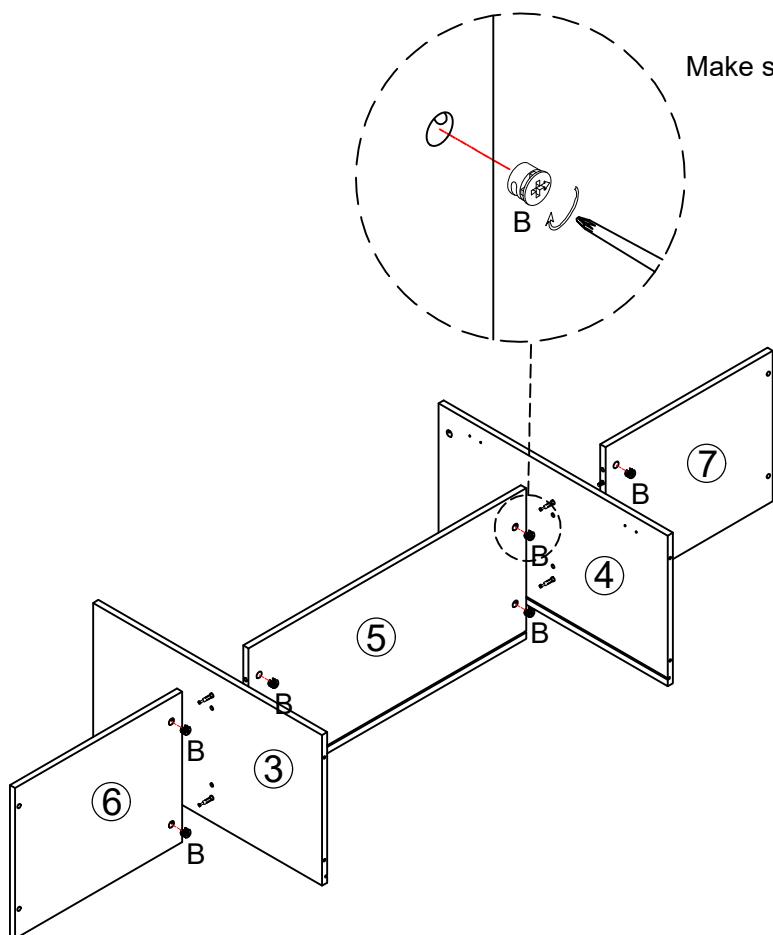

Make sure the arrow on the screw align to the hole on the side.

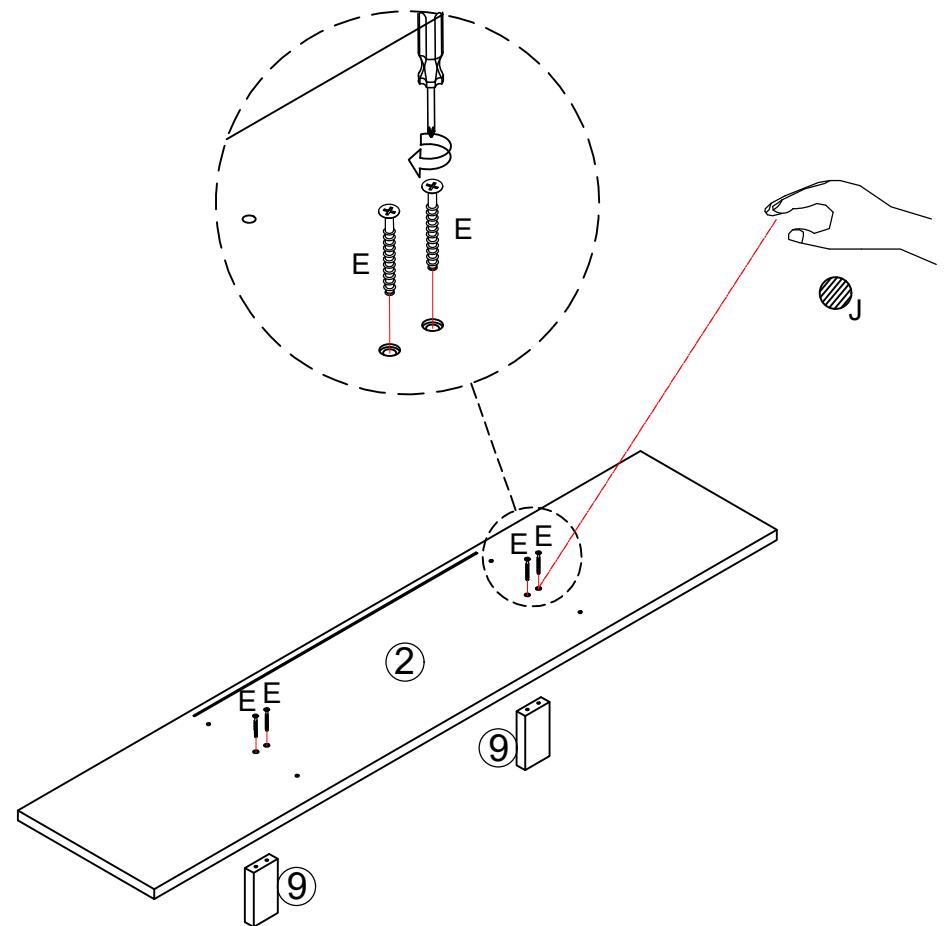

B*8


E*4



J*4

put B on board ⑤⑥⑦


4

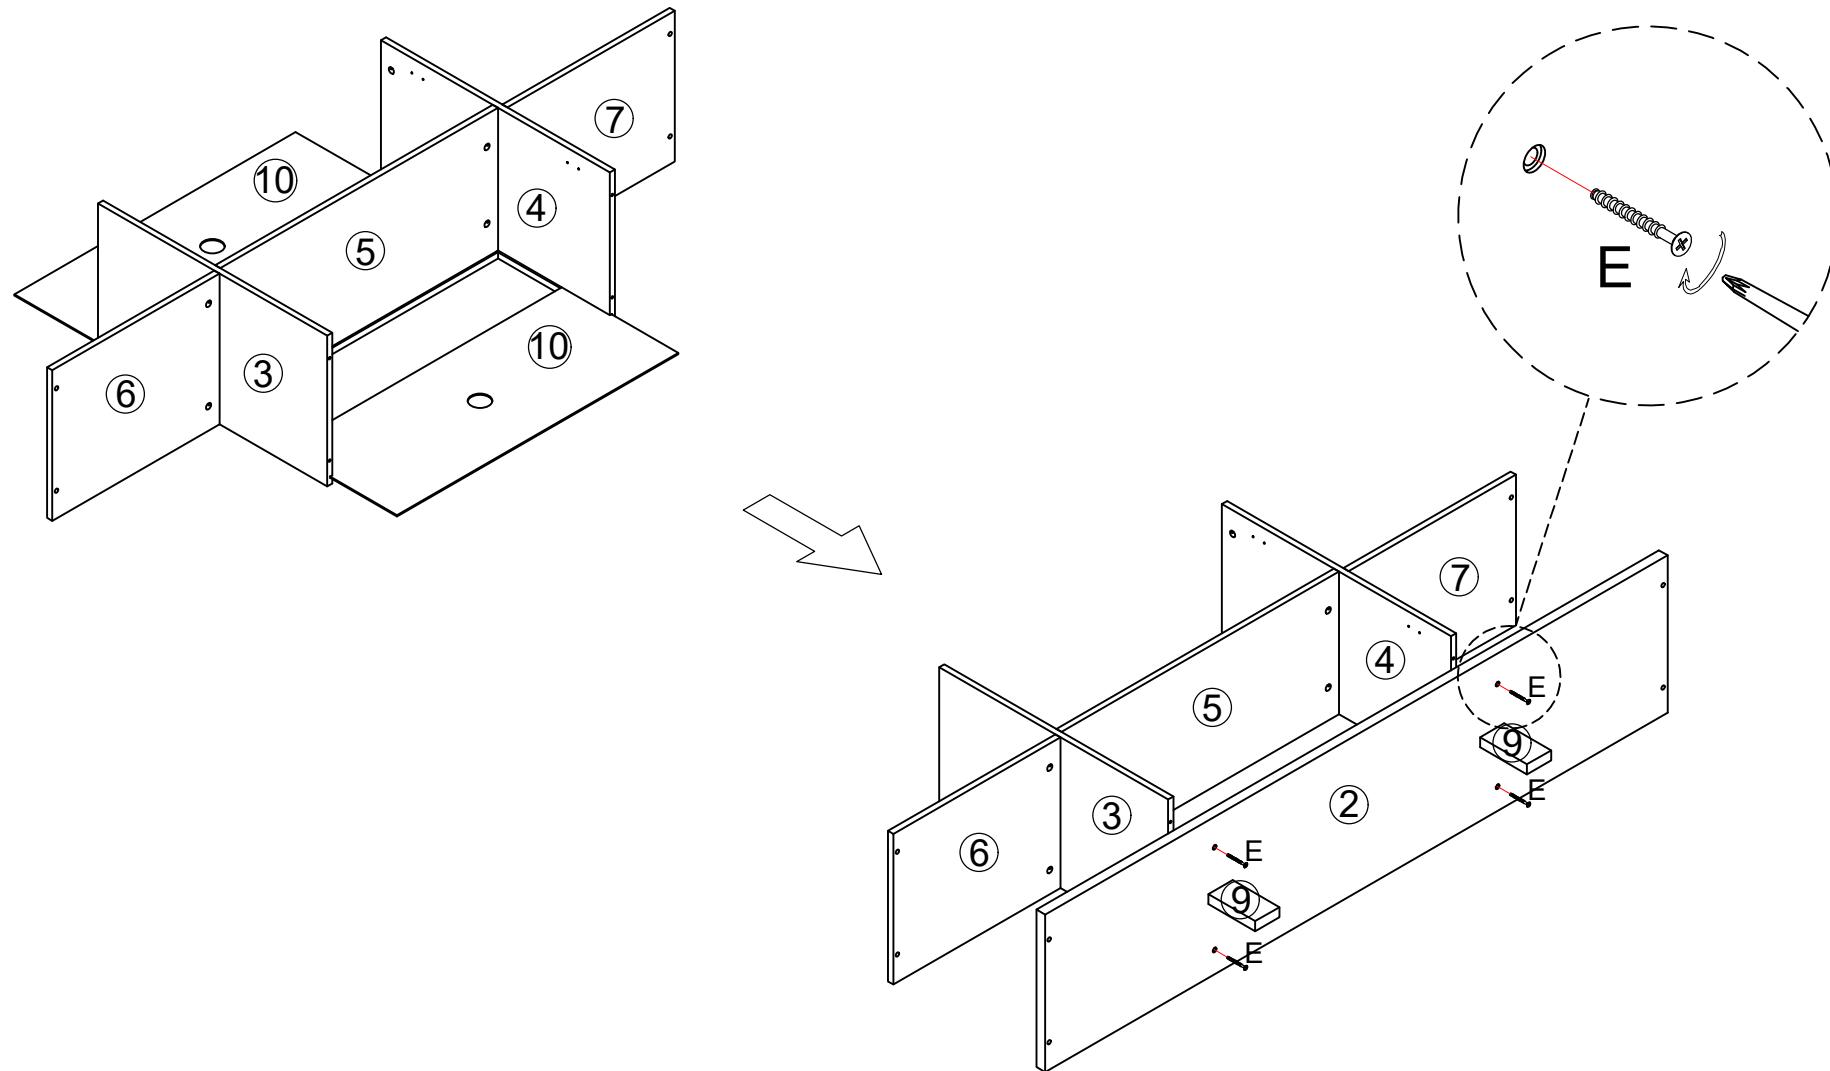

E*4

5


Make sure the arrow on the screw align to the hole on the side.

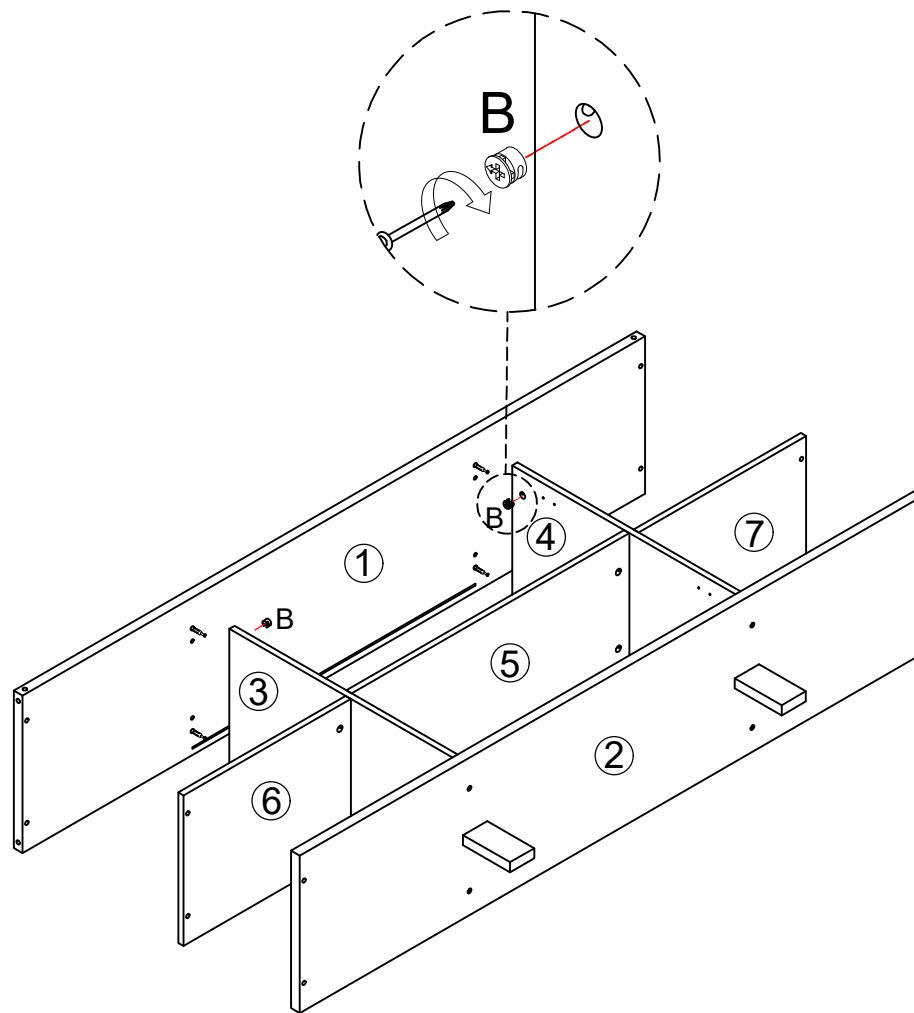

B*4

put B on board ③④

6

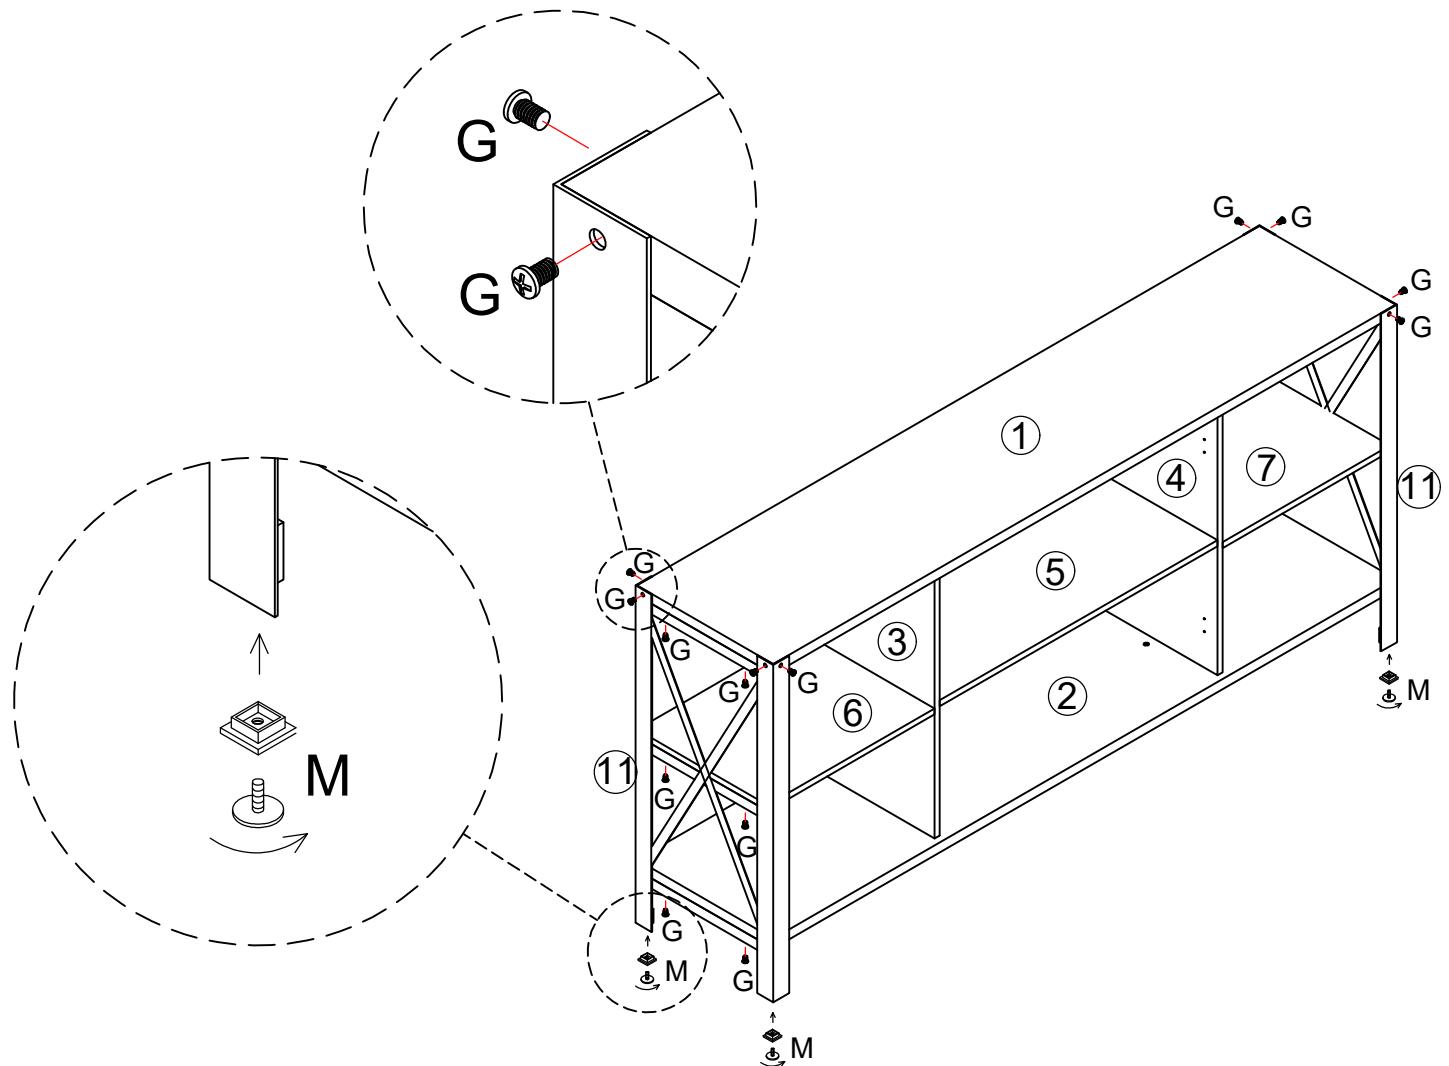


G*20





M*4

7

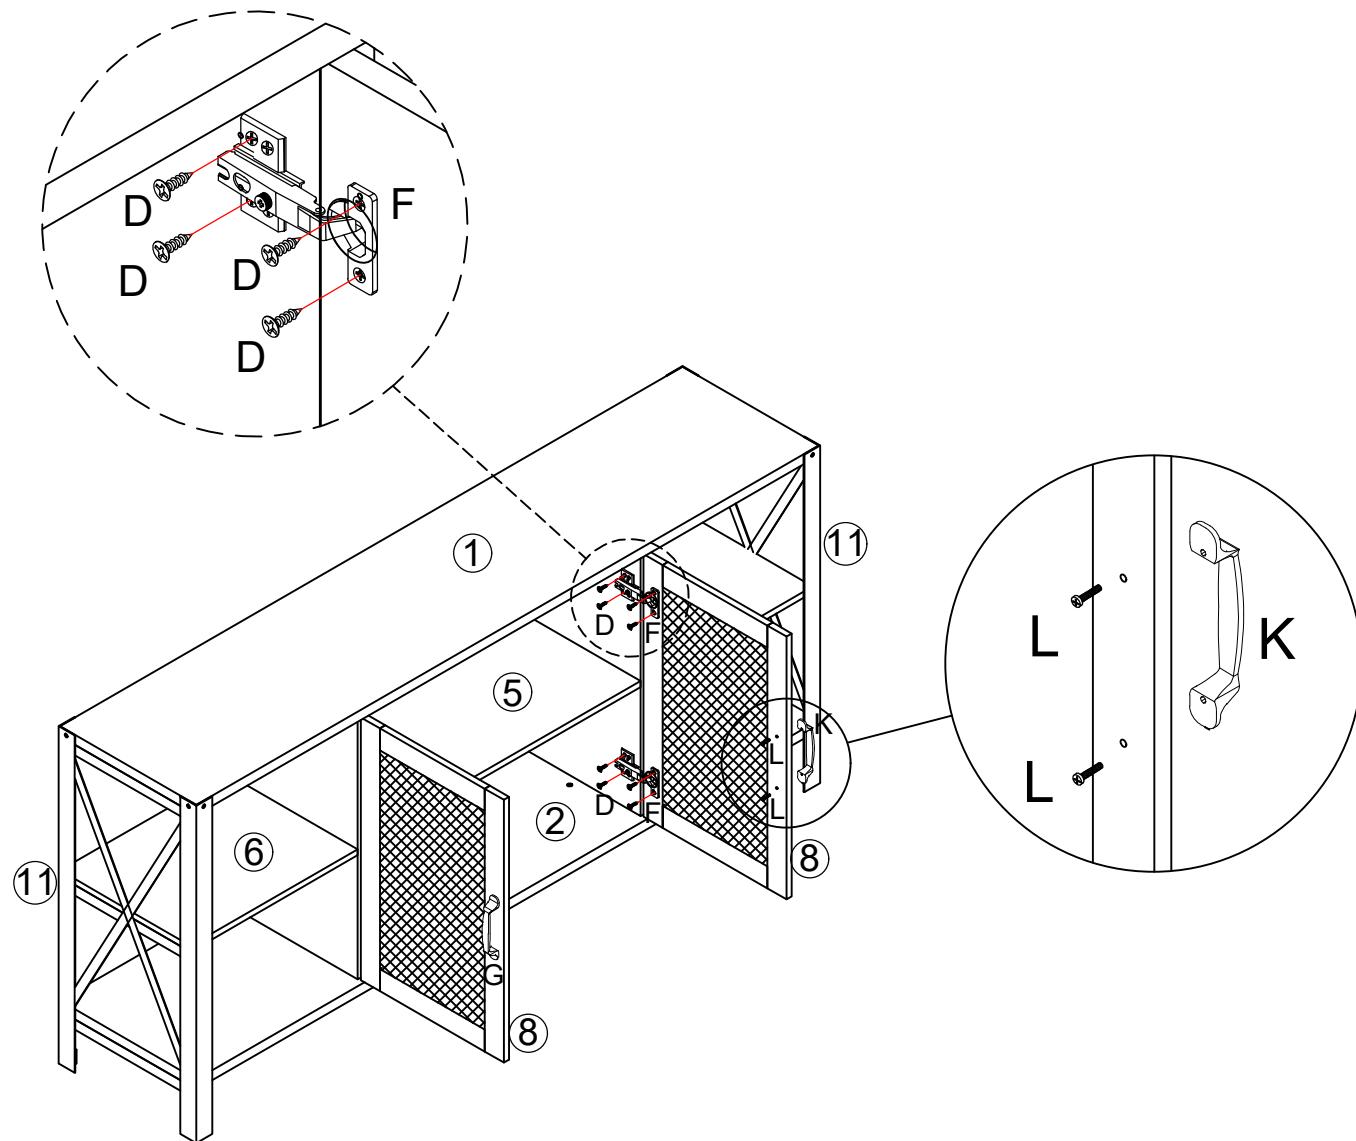

	D*24
	F*4
	K*2
	L*4

8

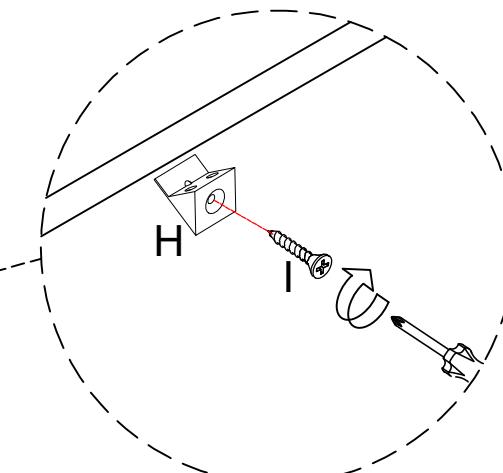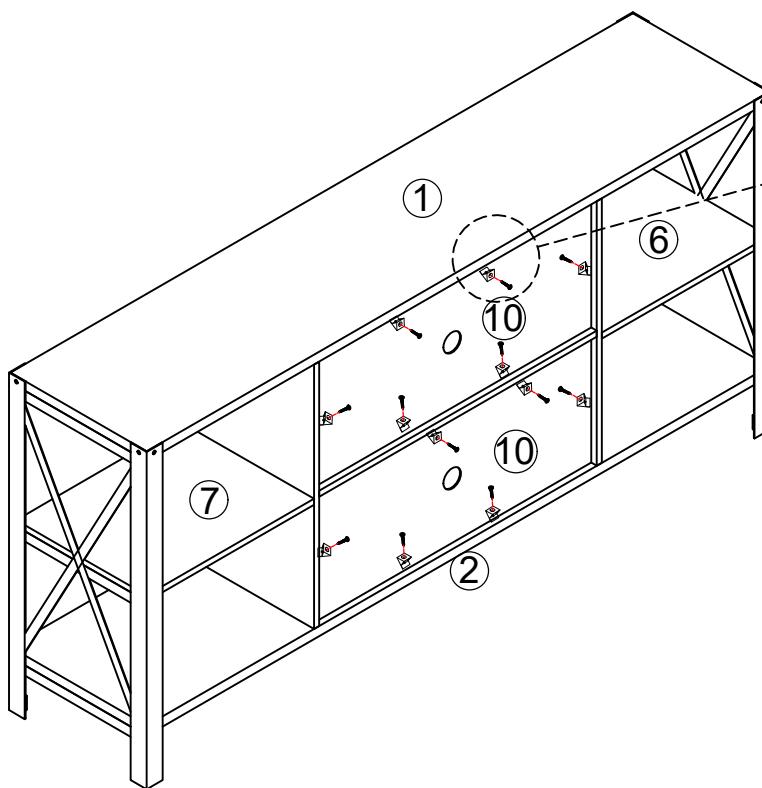

H*12



I*12

	H*12
	I*12

⑨

