
BUNK-BED ASSEMBLYINSTRUCTIONS

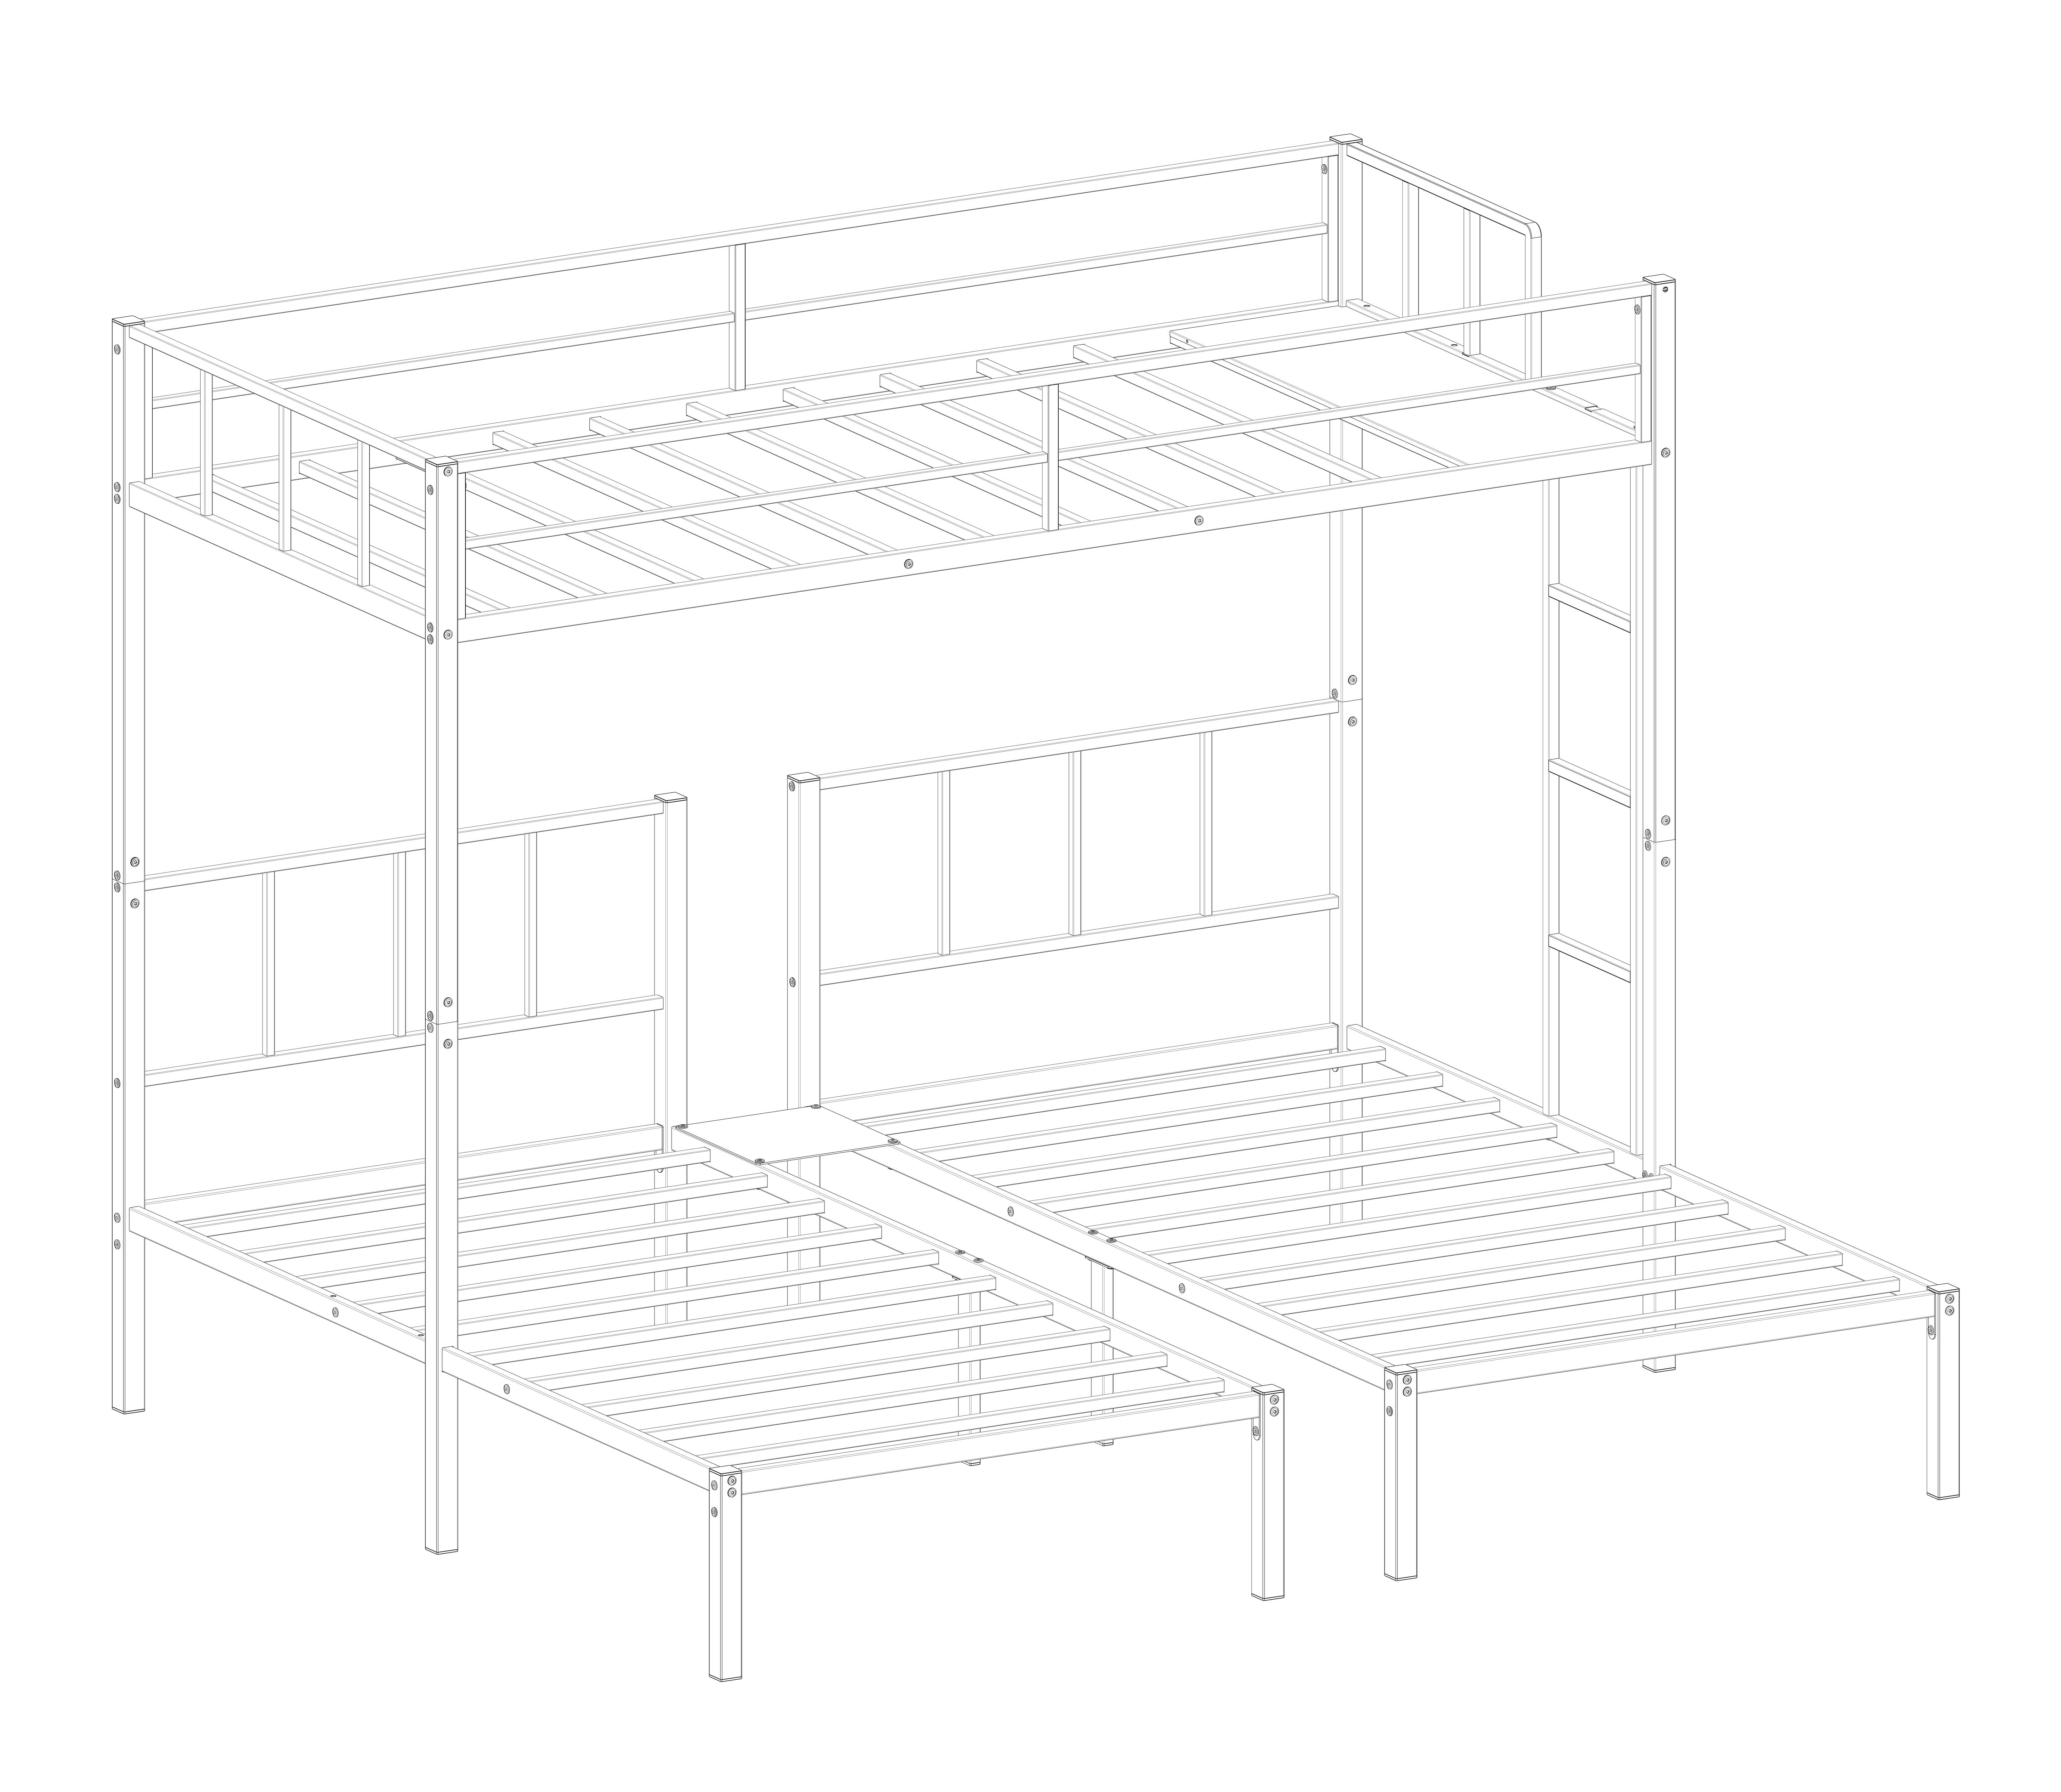

BUNK-BED ASSEMBLYINSTRUCTIONS

SAFETY WARNINGS AND GENERAL NOTES:

- 1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
- 2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
- 3. Do not allow children under 6 years of age to use the upper bunk.
- 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
- 5. Do not allow horseplay on or under beds.
- 6. Always prohibit jumping on the bed.
- 7. Prohibit more than one person on upper bunk.
- 8. Always use the ladder for entering and leaving the upper bunk.
- 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- 10. Use of a night-tight may provide added safely precaution for a child using the upper bunk.
- 11. Always use guardrails on both long sides of the upper bunk.
- 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- 13. The use of water or sleep flotation mattresses is prohibited.
- STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.
- 14. Keep these instructions for future reference.
- 15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
- 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
- 17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Down bed


Bed type Length Width Thickness Twin Standard 74" - 75" 38Vz 8" max


Up bed (bunk bed and tribed included)


Bed type Length Width Thickness Twin Standard 74" -75" 38 Vi 6" max


- 18. SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.
- 19. Replacement Parts:


Replacement Parts, including additional guardrails, may be obtained from any of our dealers

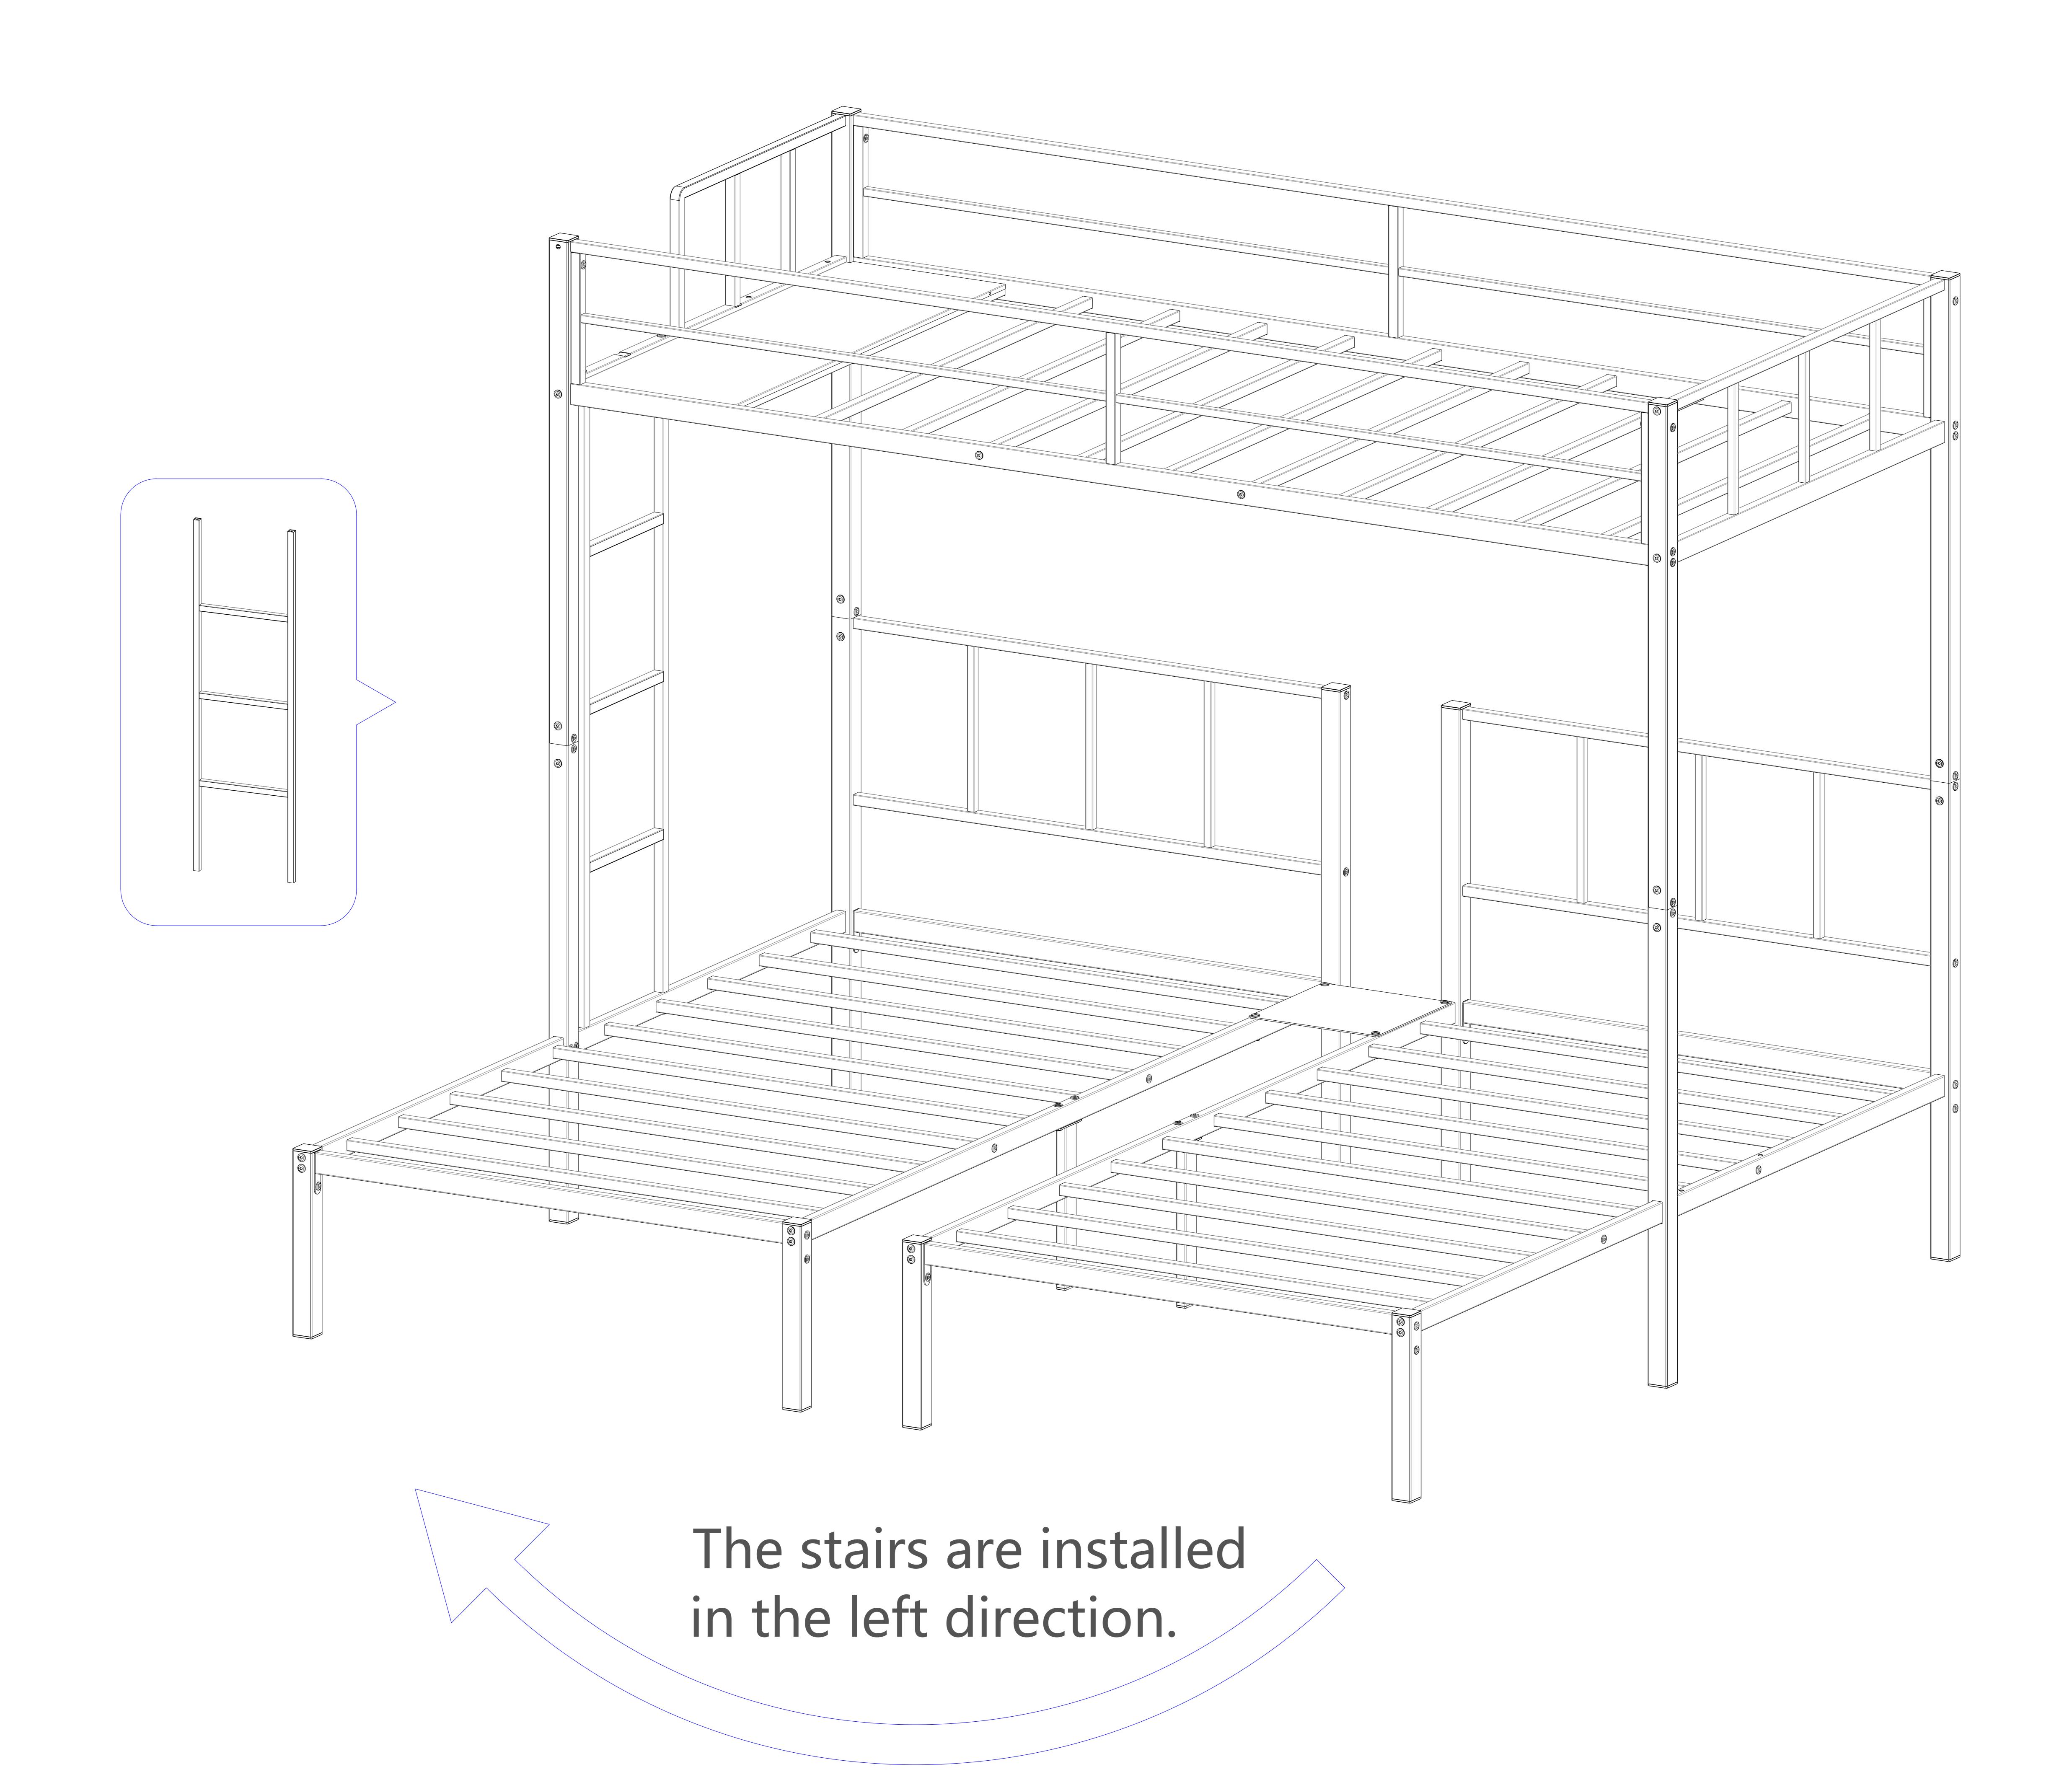

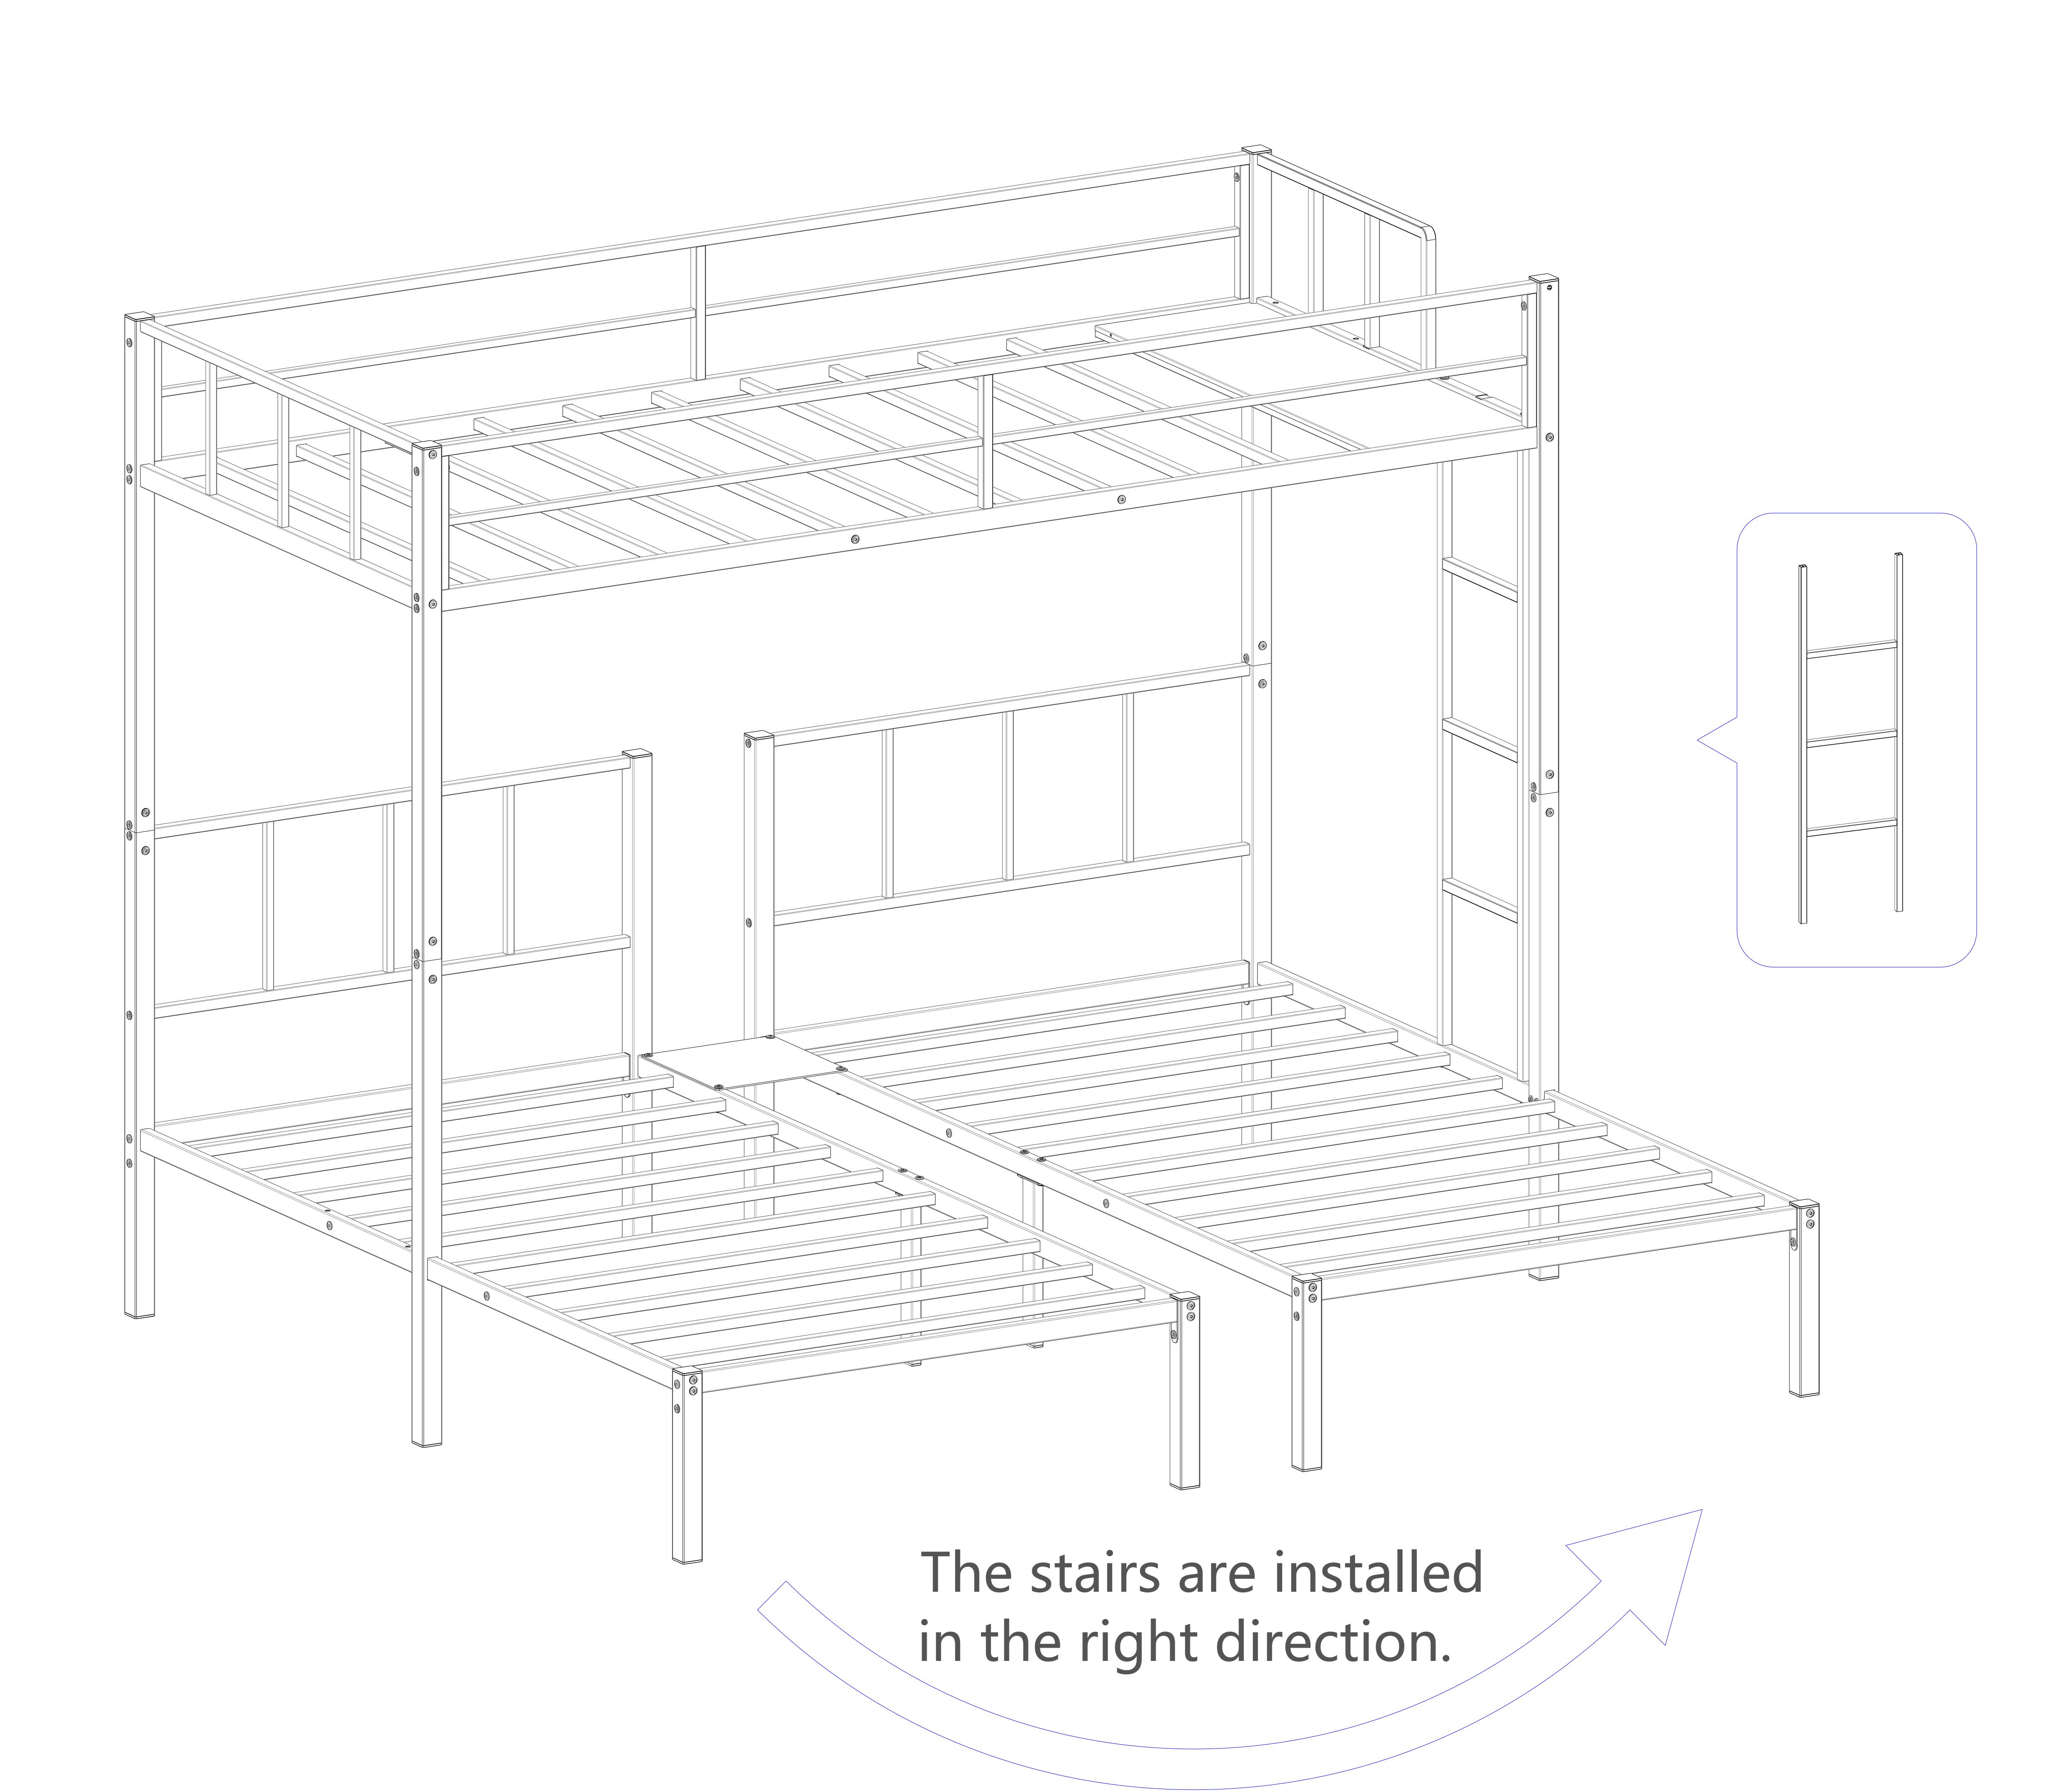

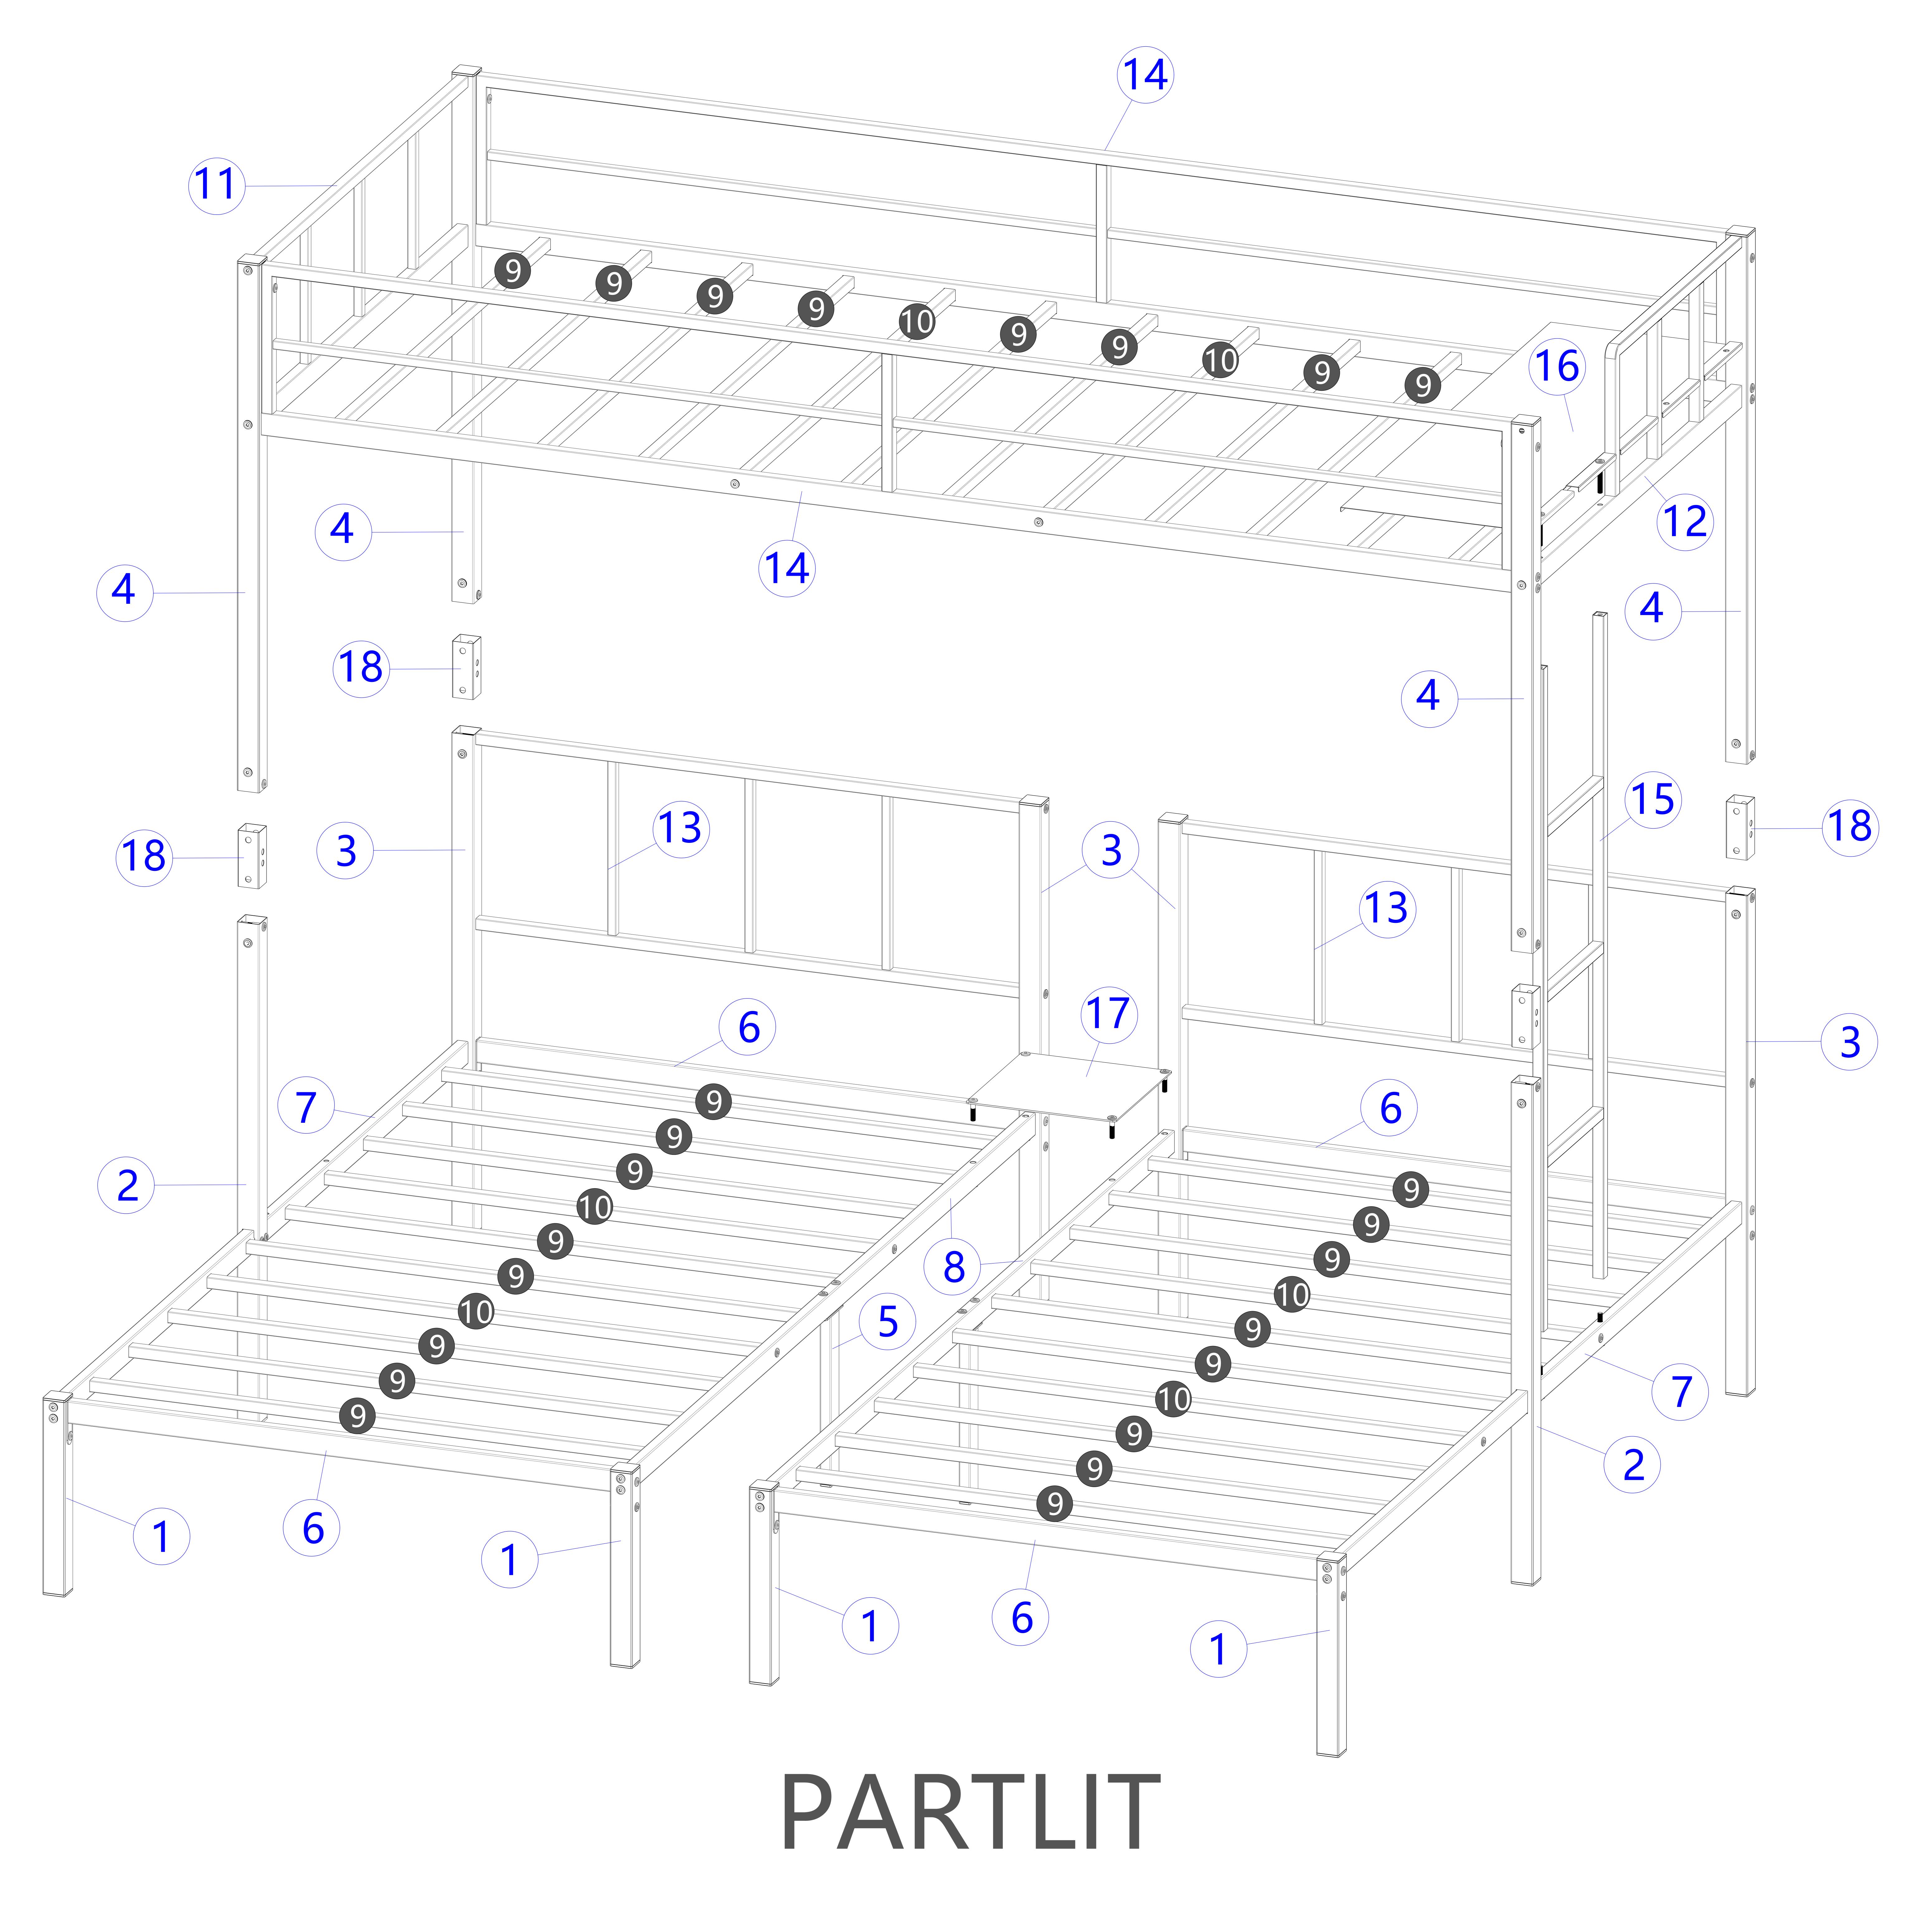

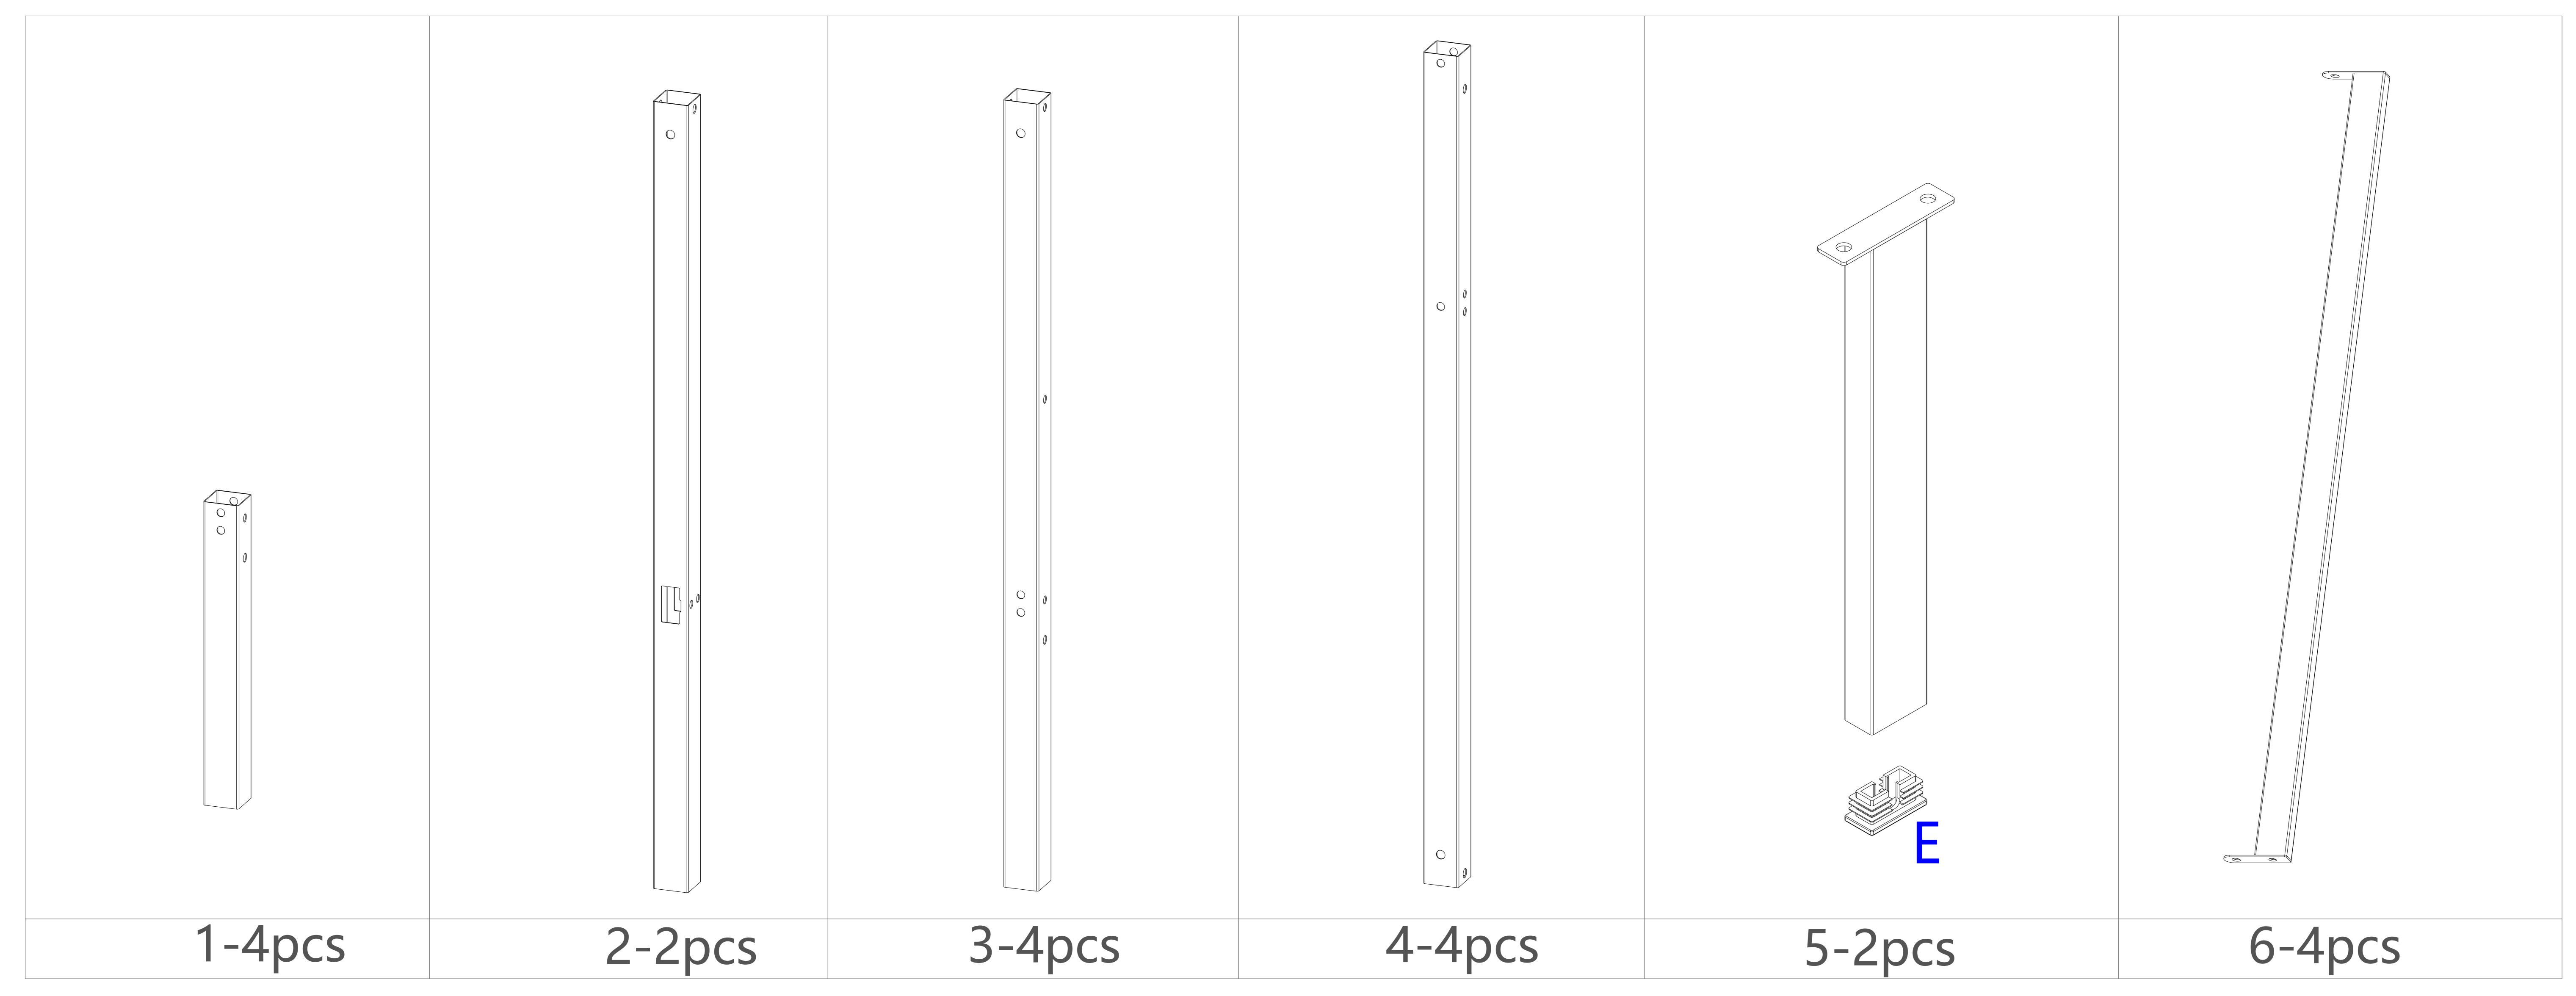





HARDWARE LIST

	B			E Installed		G
M8*55-55pcs	M8*35-42pcs	M8*15-4pcs	M8*15-34pcs	20X40-2pcs	40X40-24pcs	M5X60-2pcs


Step 1: Use hardware A, B, D, F, G to connect #3, #6, #13, #18 together. 13-1pcs F 3pcs 3-2pcs 6-1pcs B 3pcs D 3pcs 18-1pcs A 6pcs Step 2: Use hardware A, B, F, G to connect #1 and #6 together.

1-2pcs 6-1pcs F 4pcs A 2pcs B 2pcs D 2pcs G




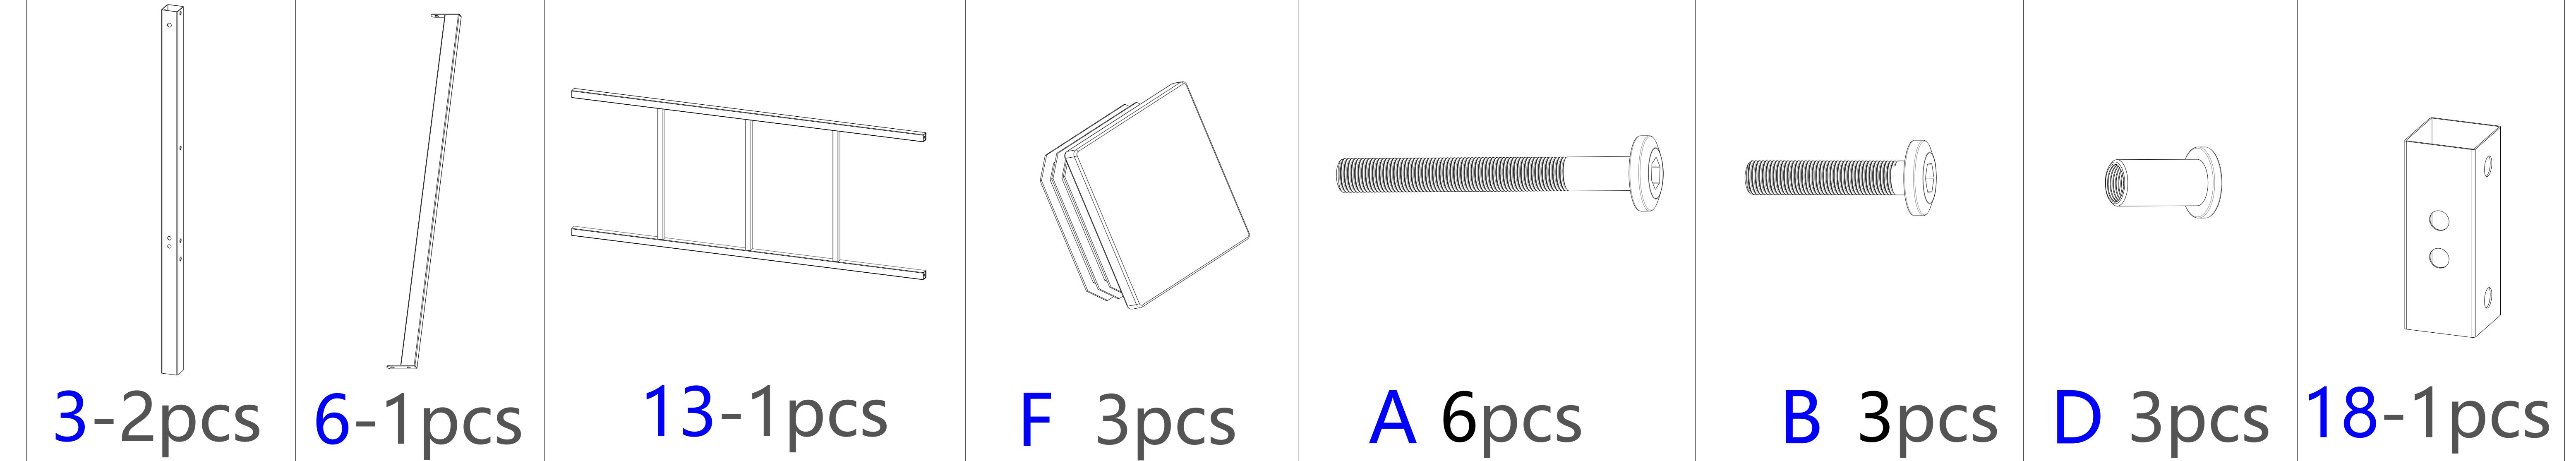

Step 6: Use hardware A, B, D, F, G to connect #1 and #6 together.

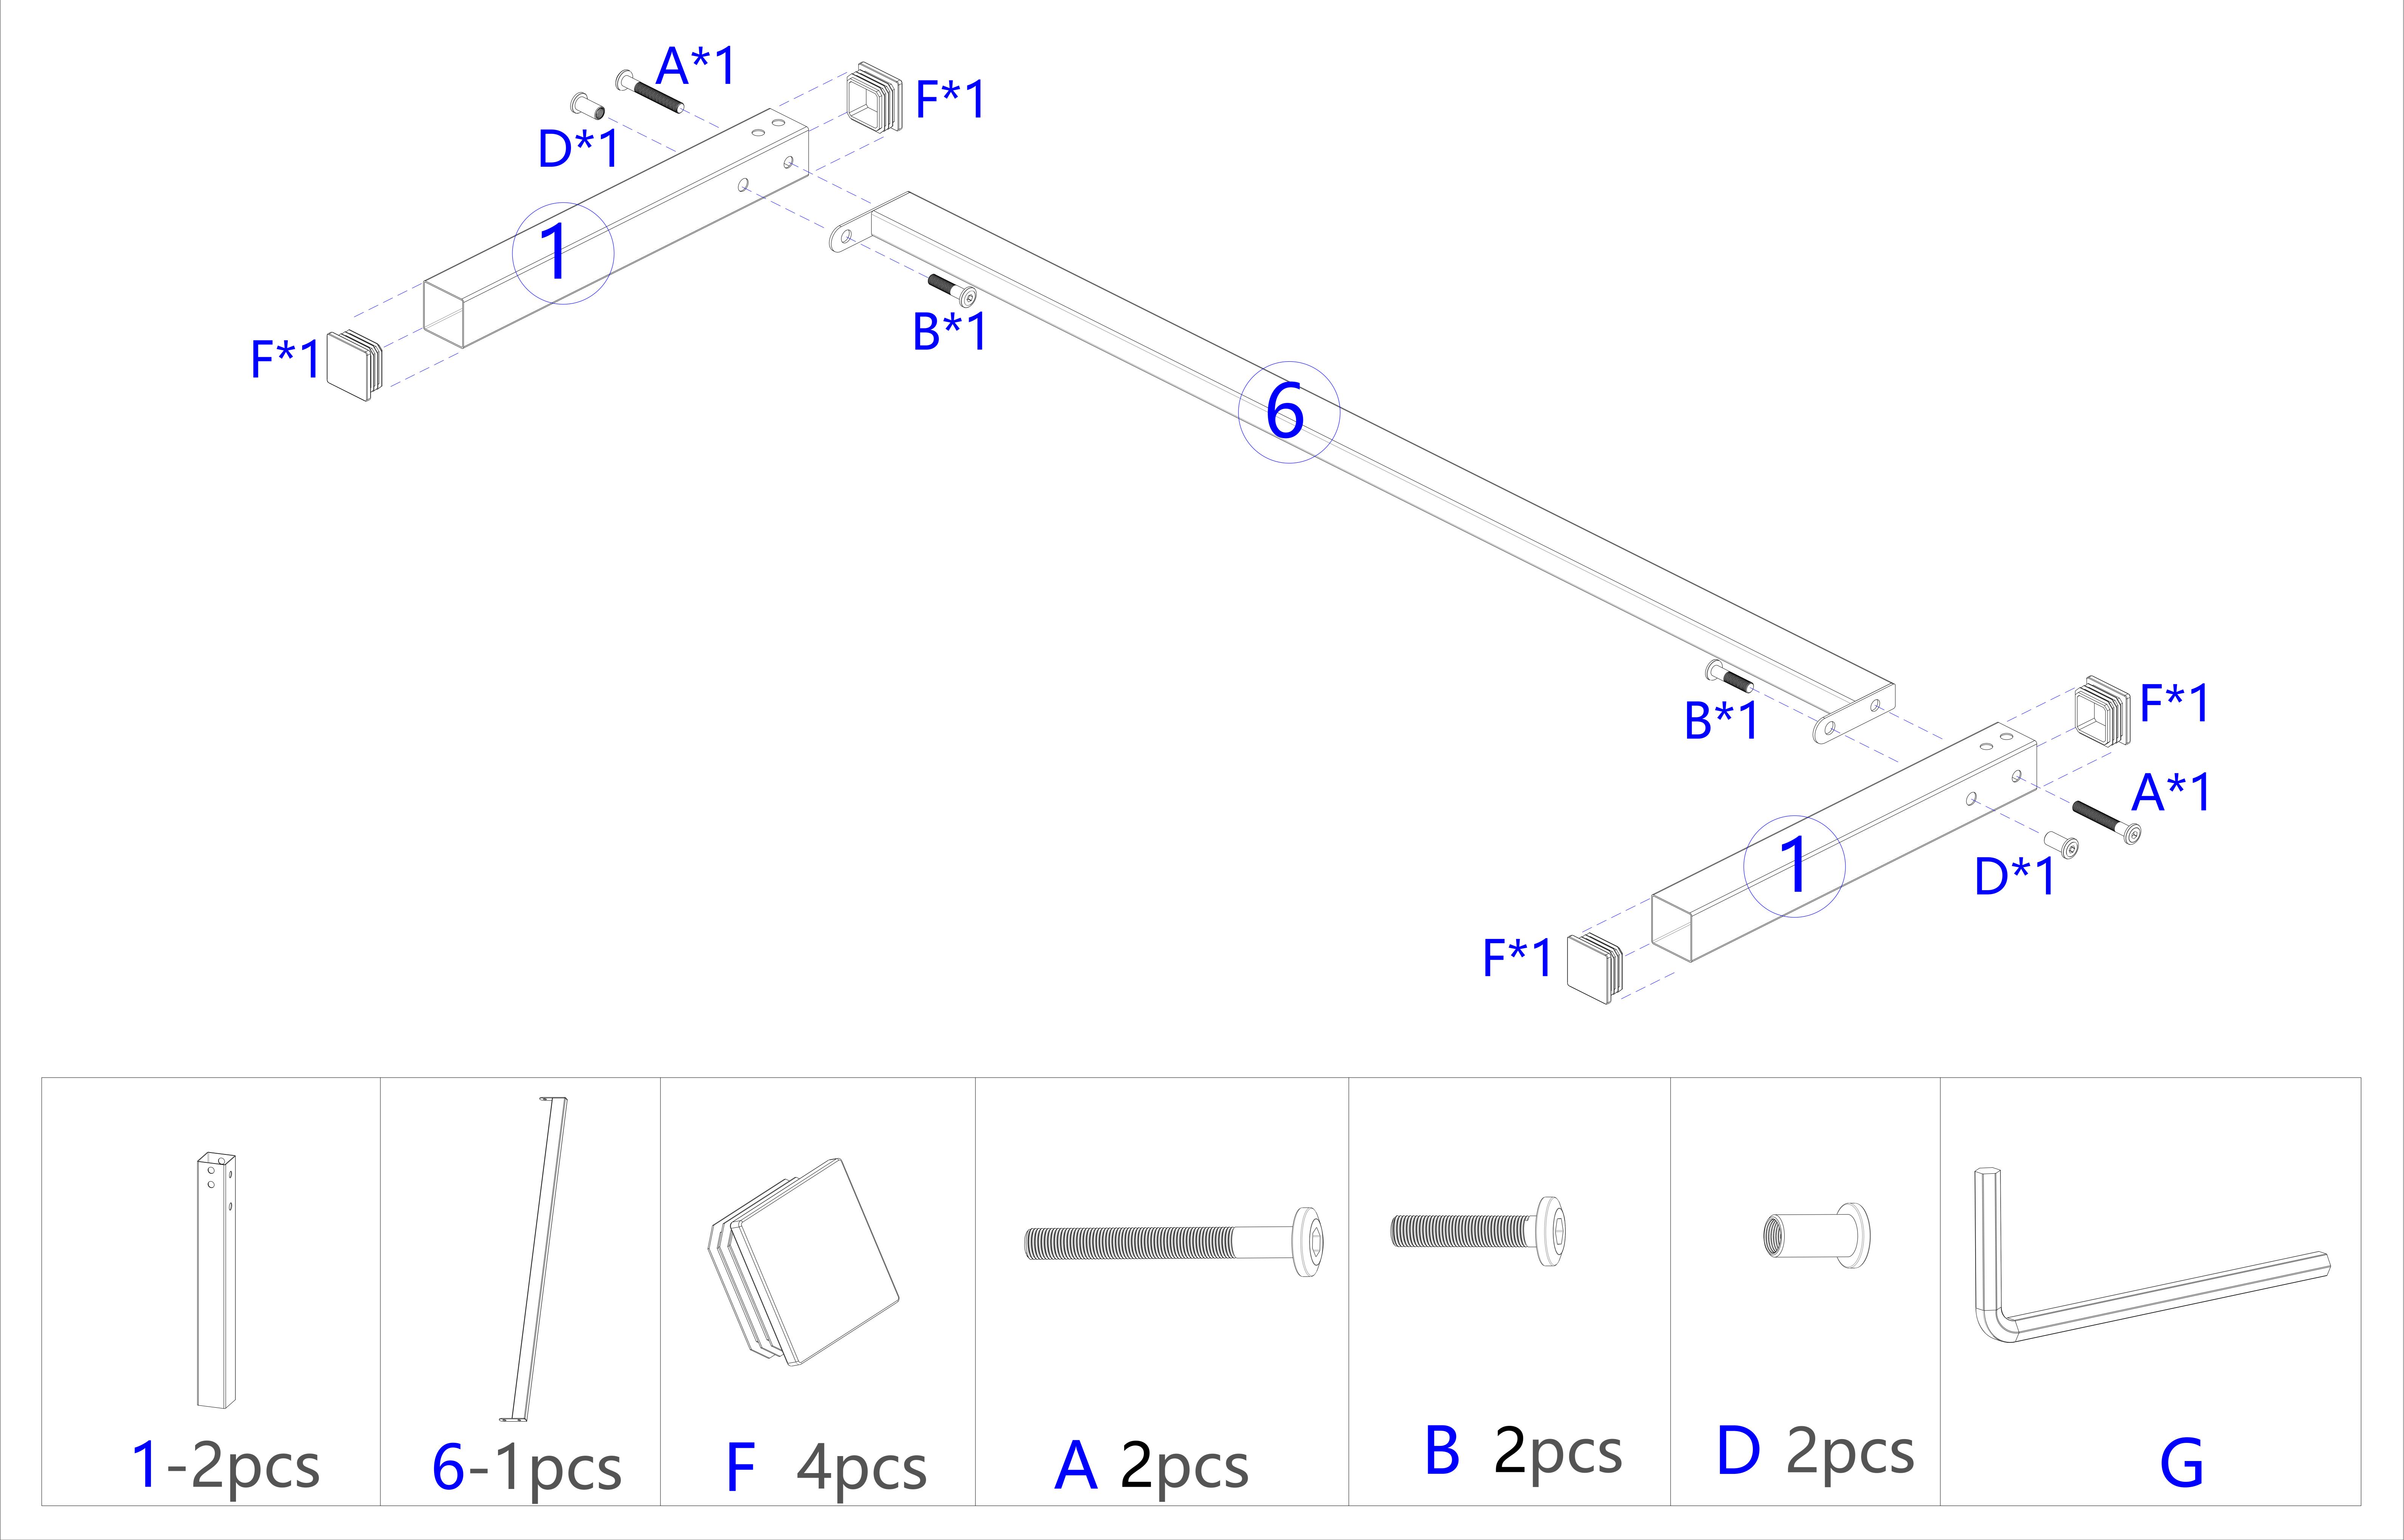

Step 7: Use hardware F, C, B, D, G to connect #2, #7, #8, #9, #10, #18 together.

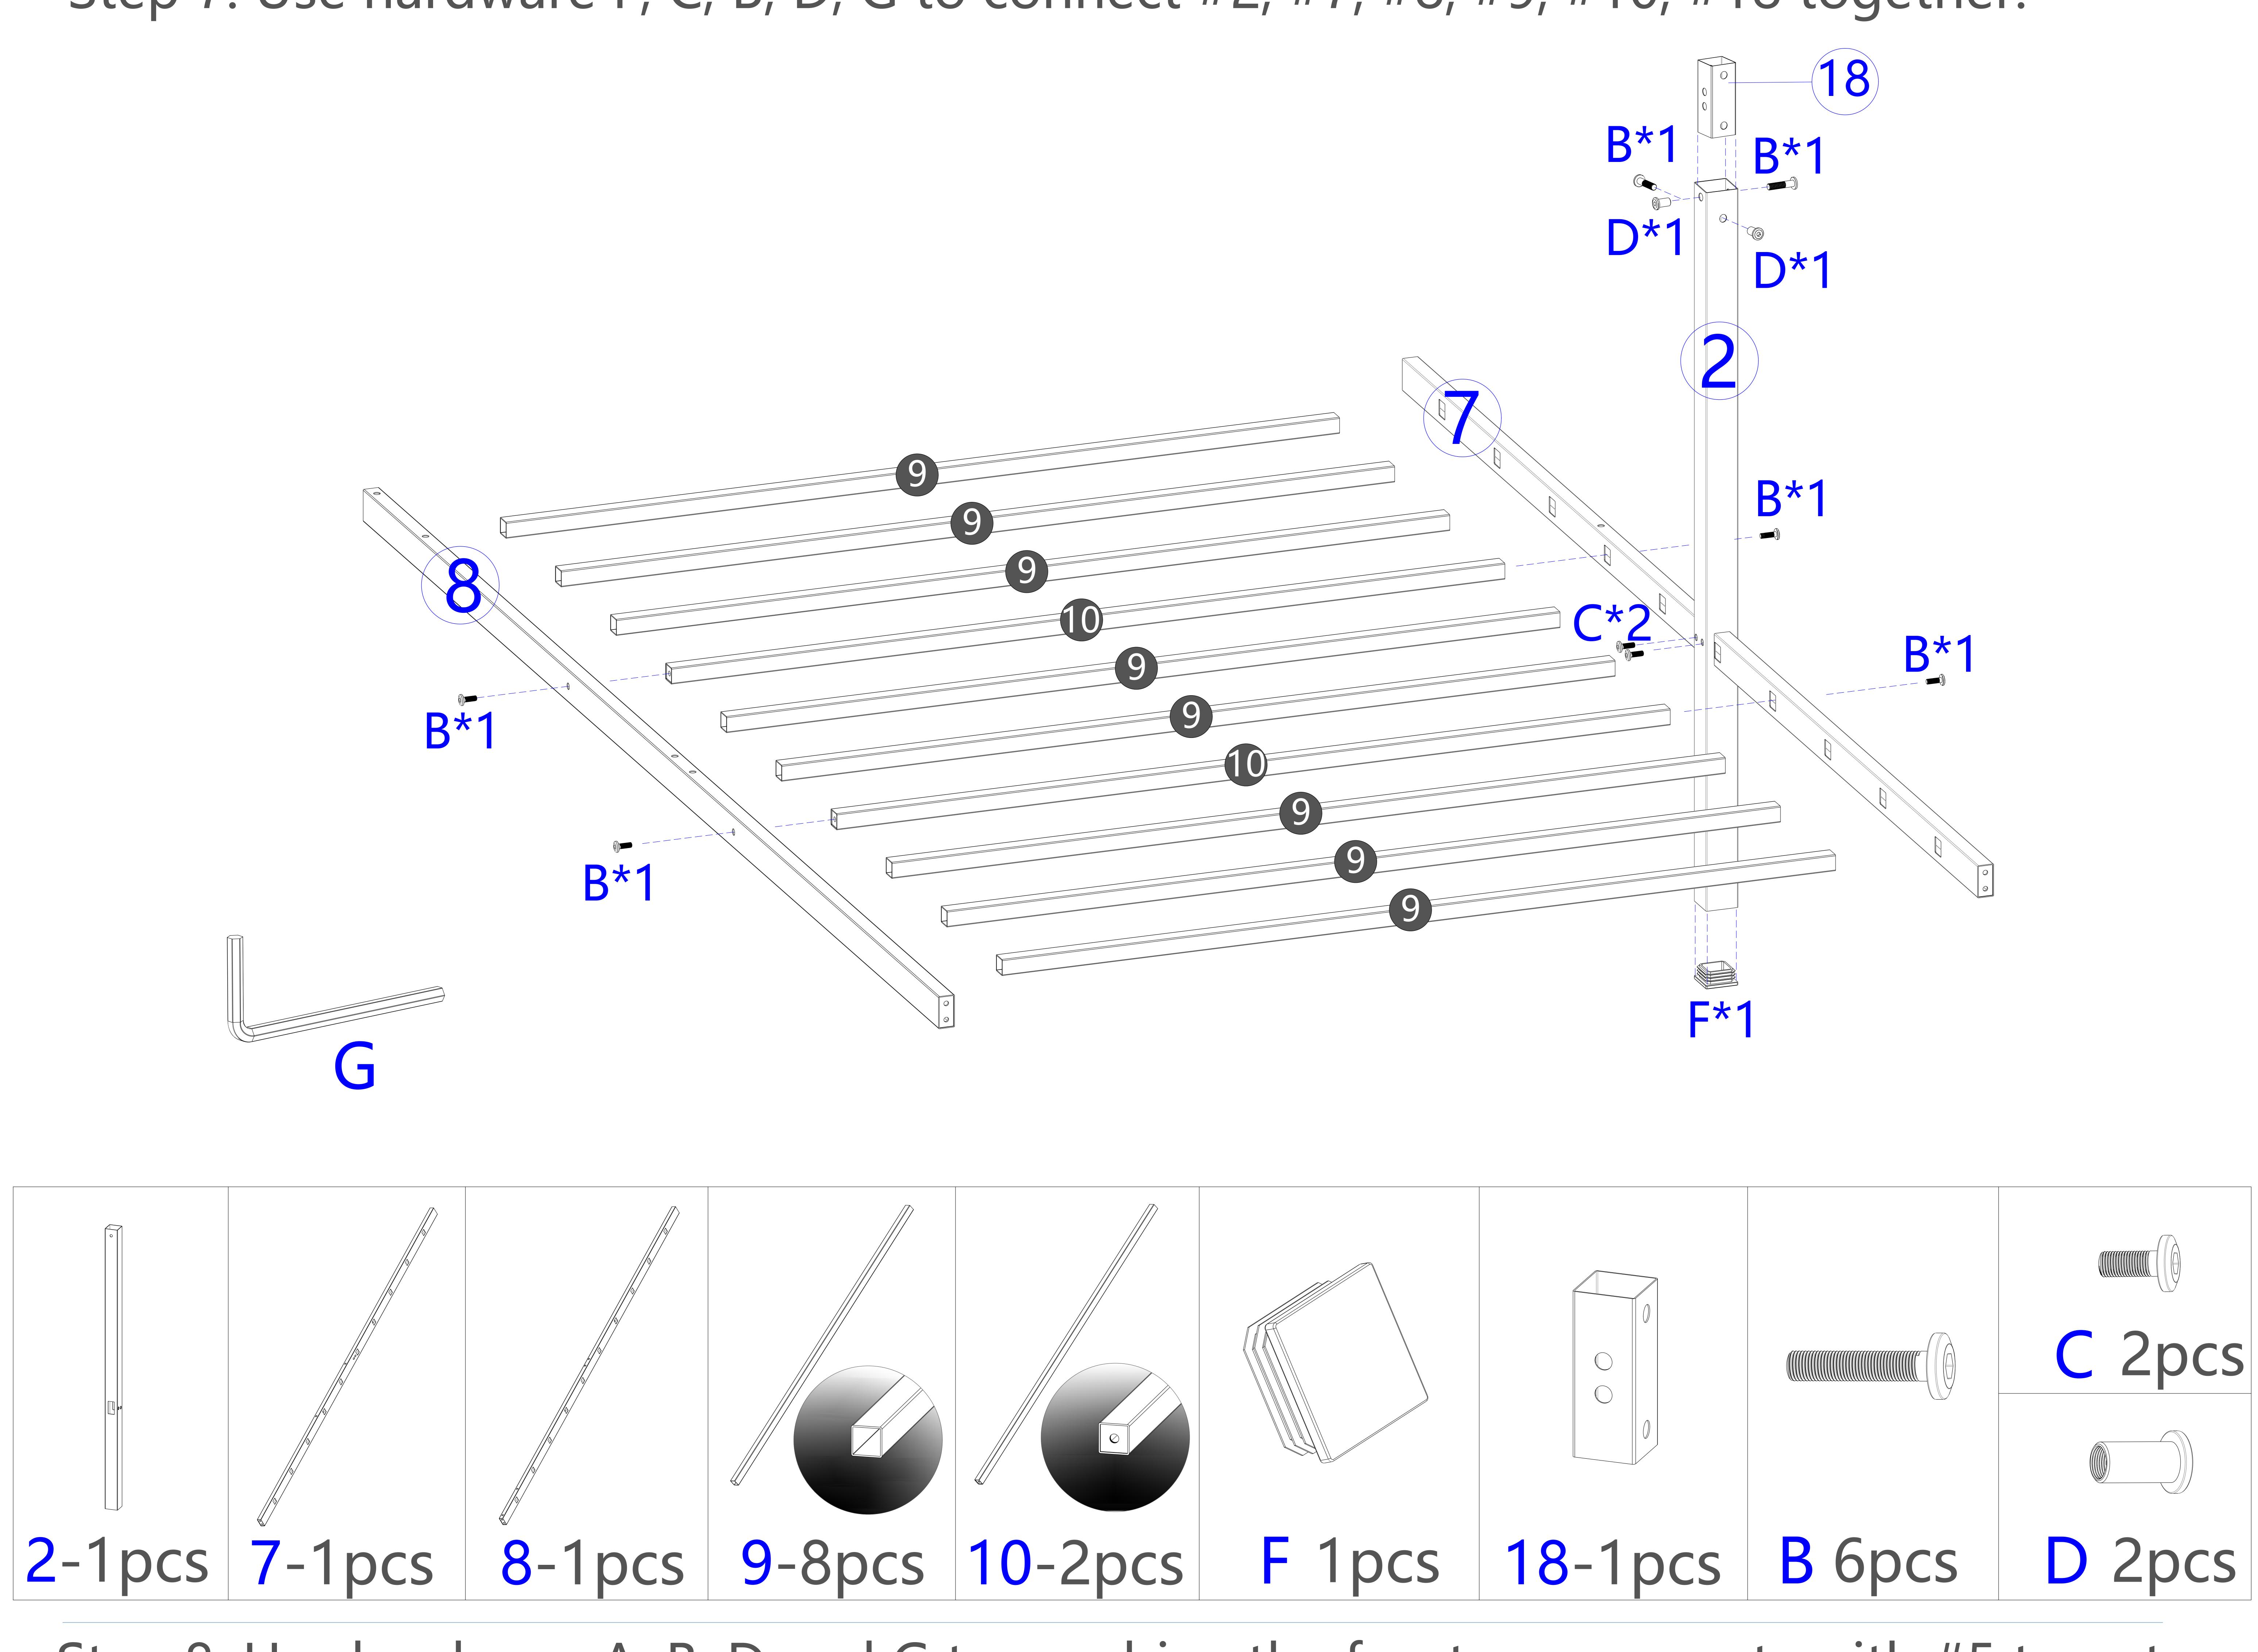

2-1pcs 7-1pcs 8-1pcs 9-8pcs 10-2pcs F 1pcs 18-1pcs B 6pcs D 2pcs Step 8: Use hardware A, B, D and G to combine the front components with #5 to get a right bed.

A*2

B*2

B*2

A*2


B 2pcs

2pcs


5-2pcs

A 8pcs


Step 9: Use hardware A, B, D, F, G to connect #5 and #14 together and install two identical components repeatedly.

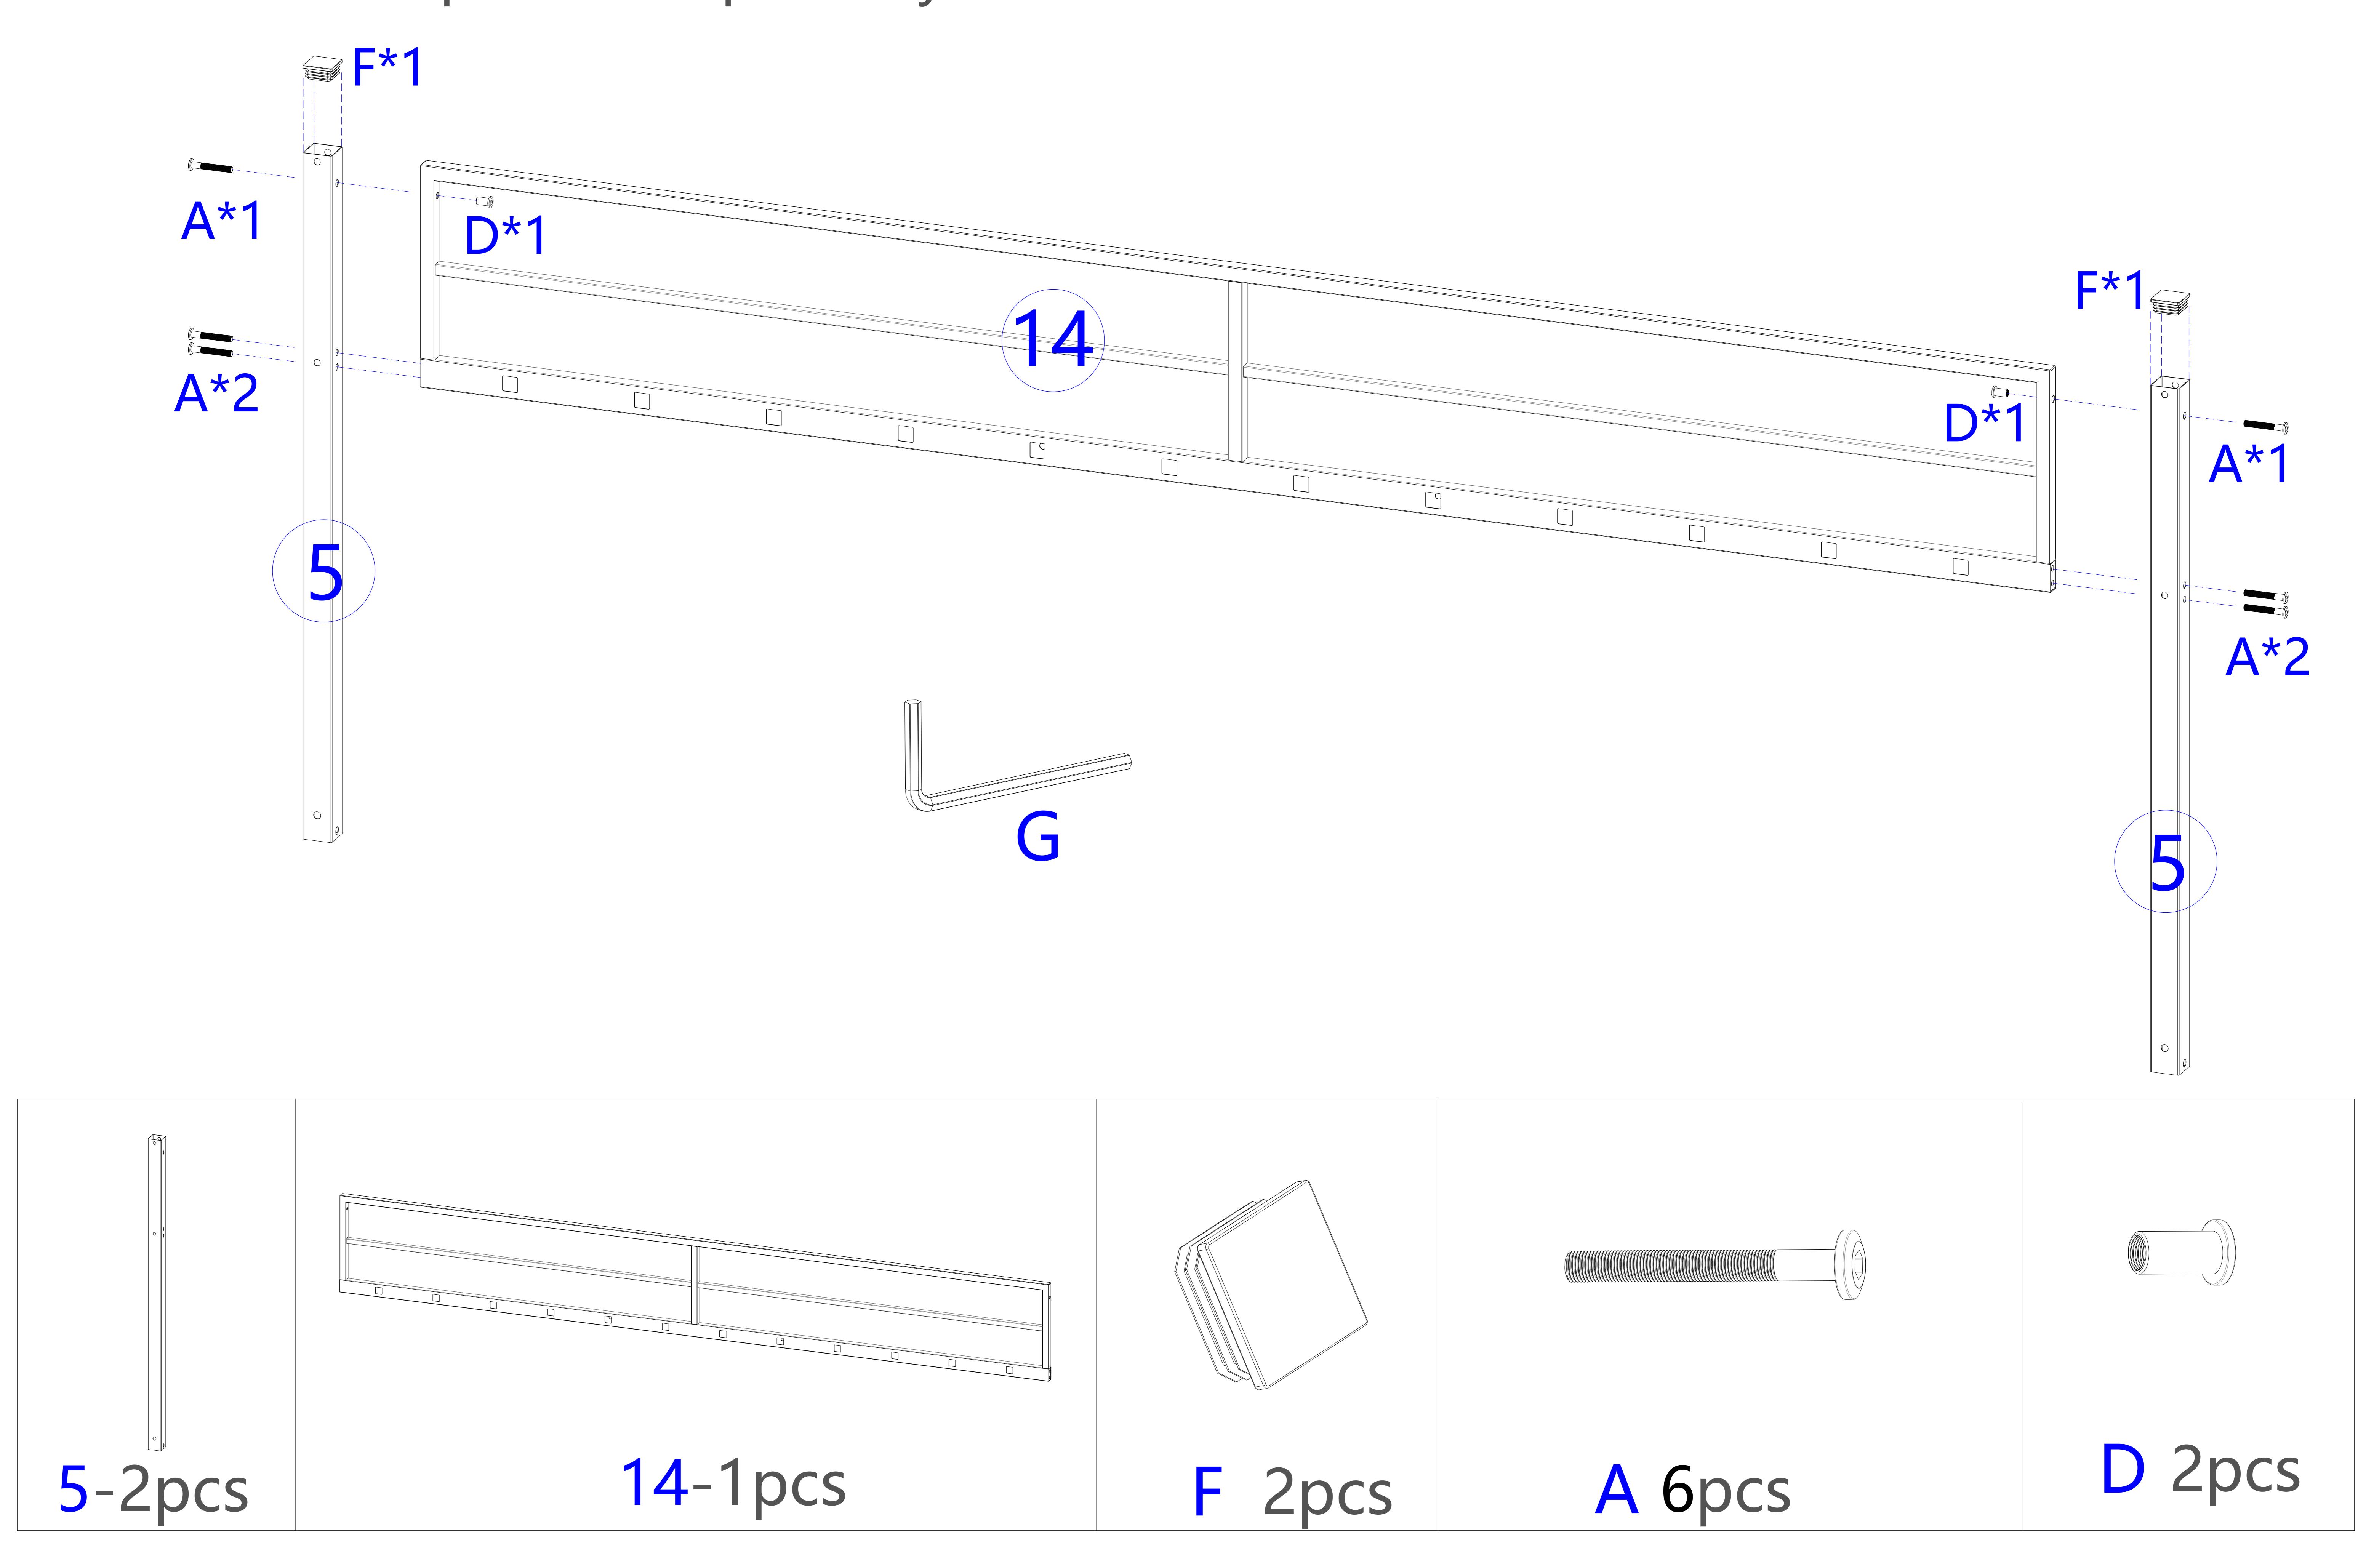


Step 10: Use B, D and G to connect the components of step 9 to the left and right

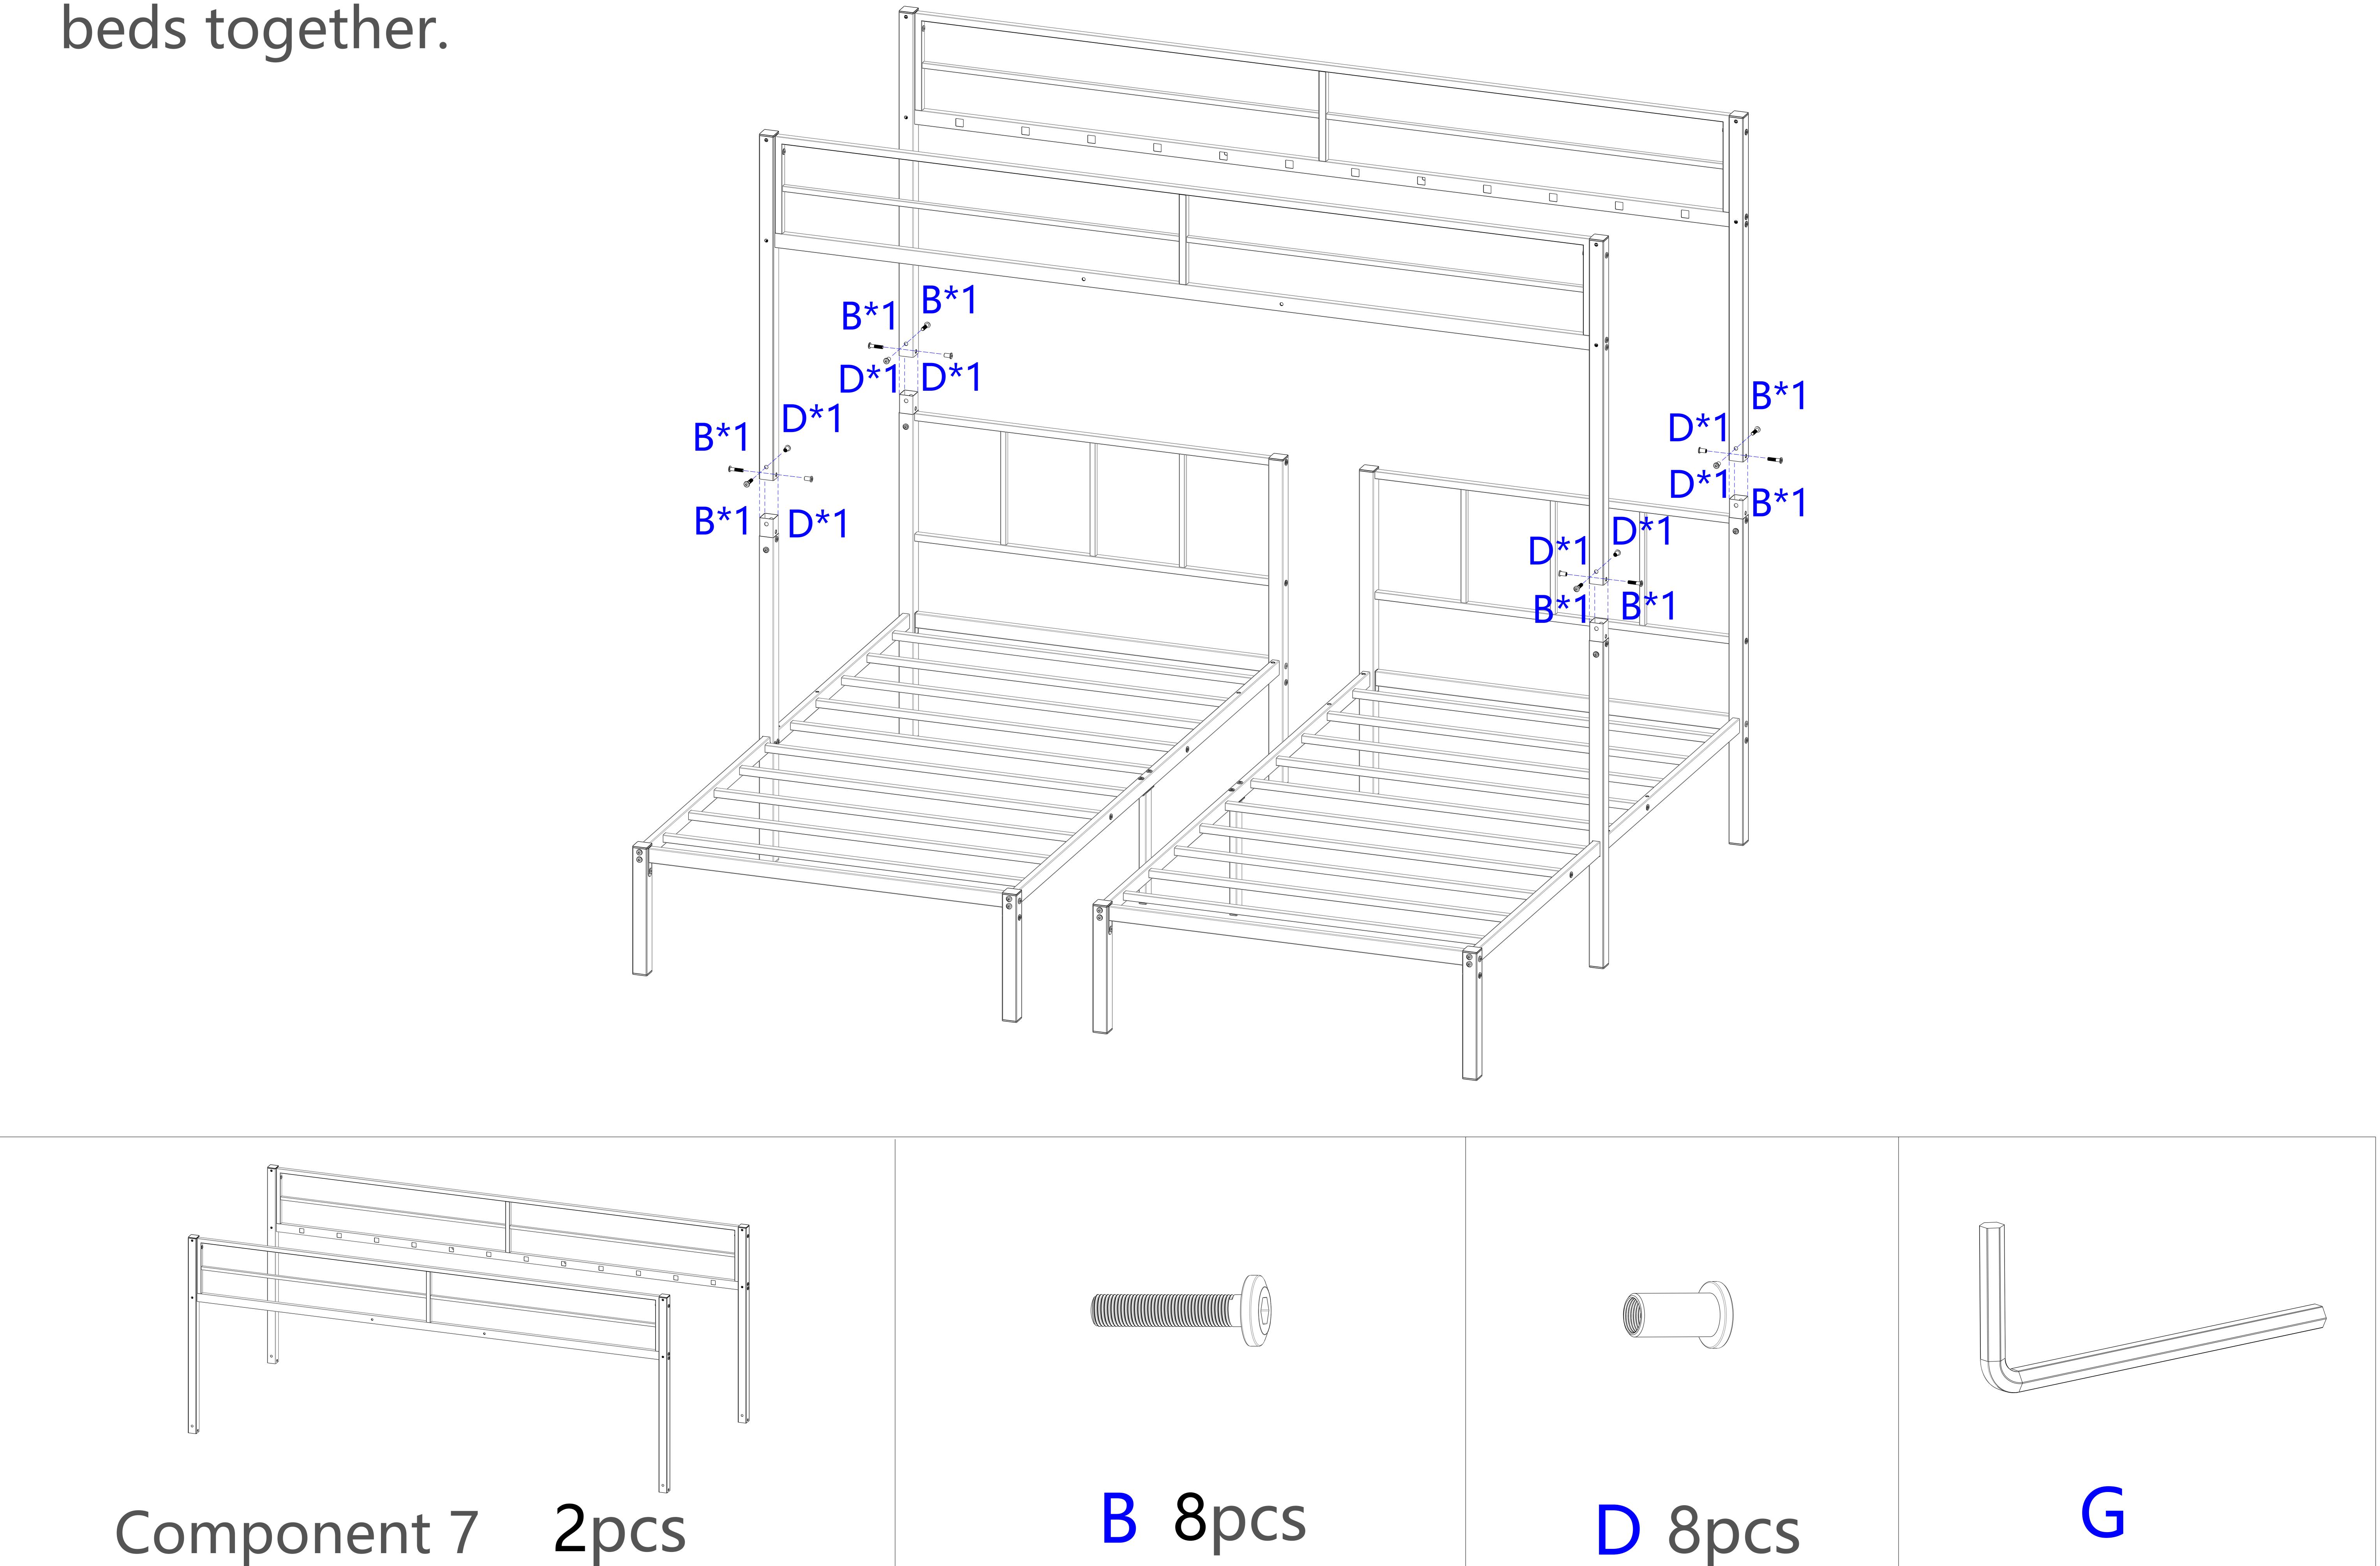



Step 11: Use #9 and #10 to insert the #14 holes in order, and #10 needs to correspond to the #14 side screw holes.

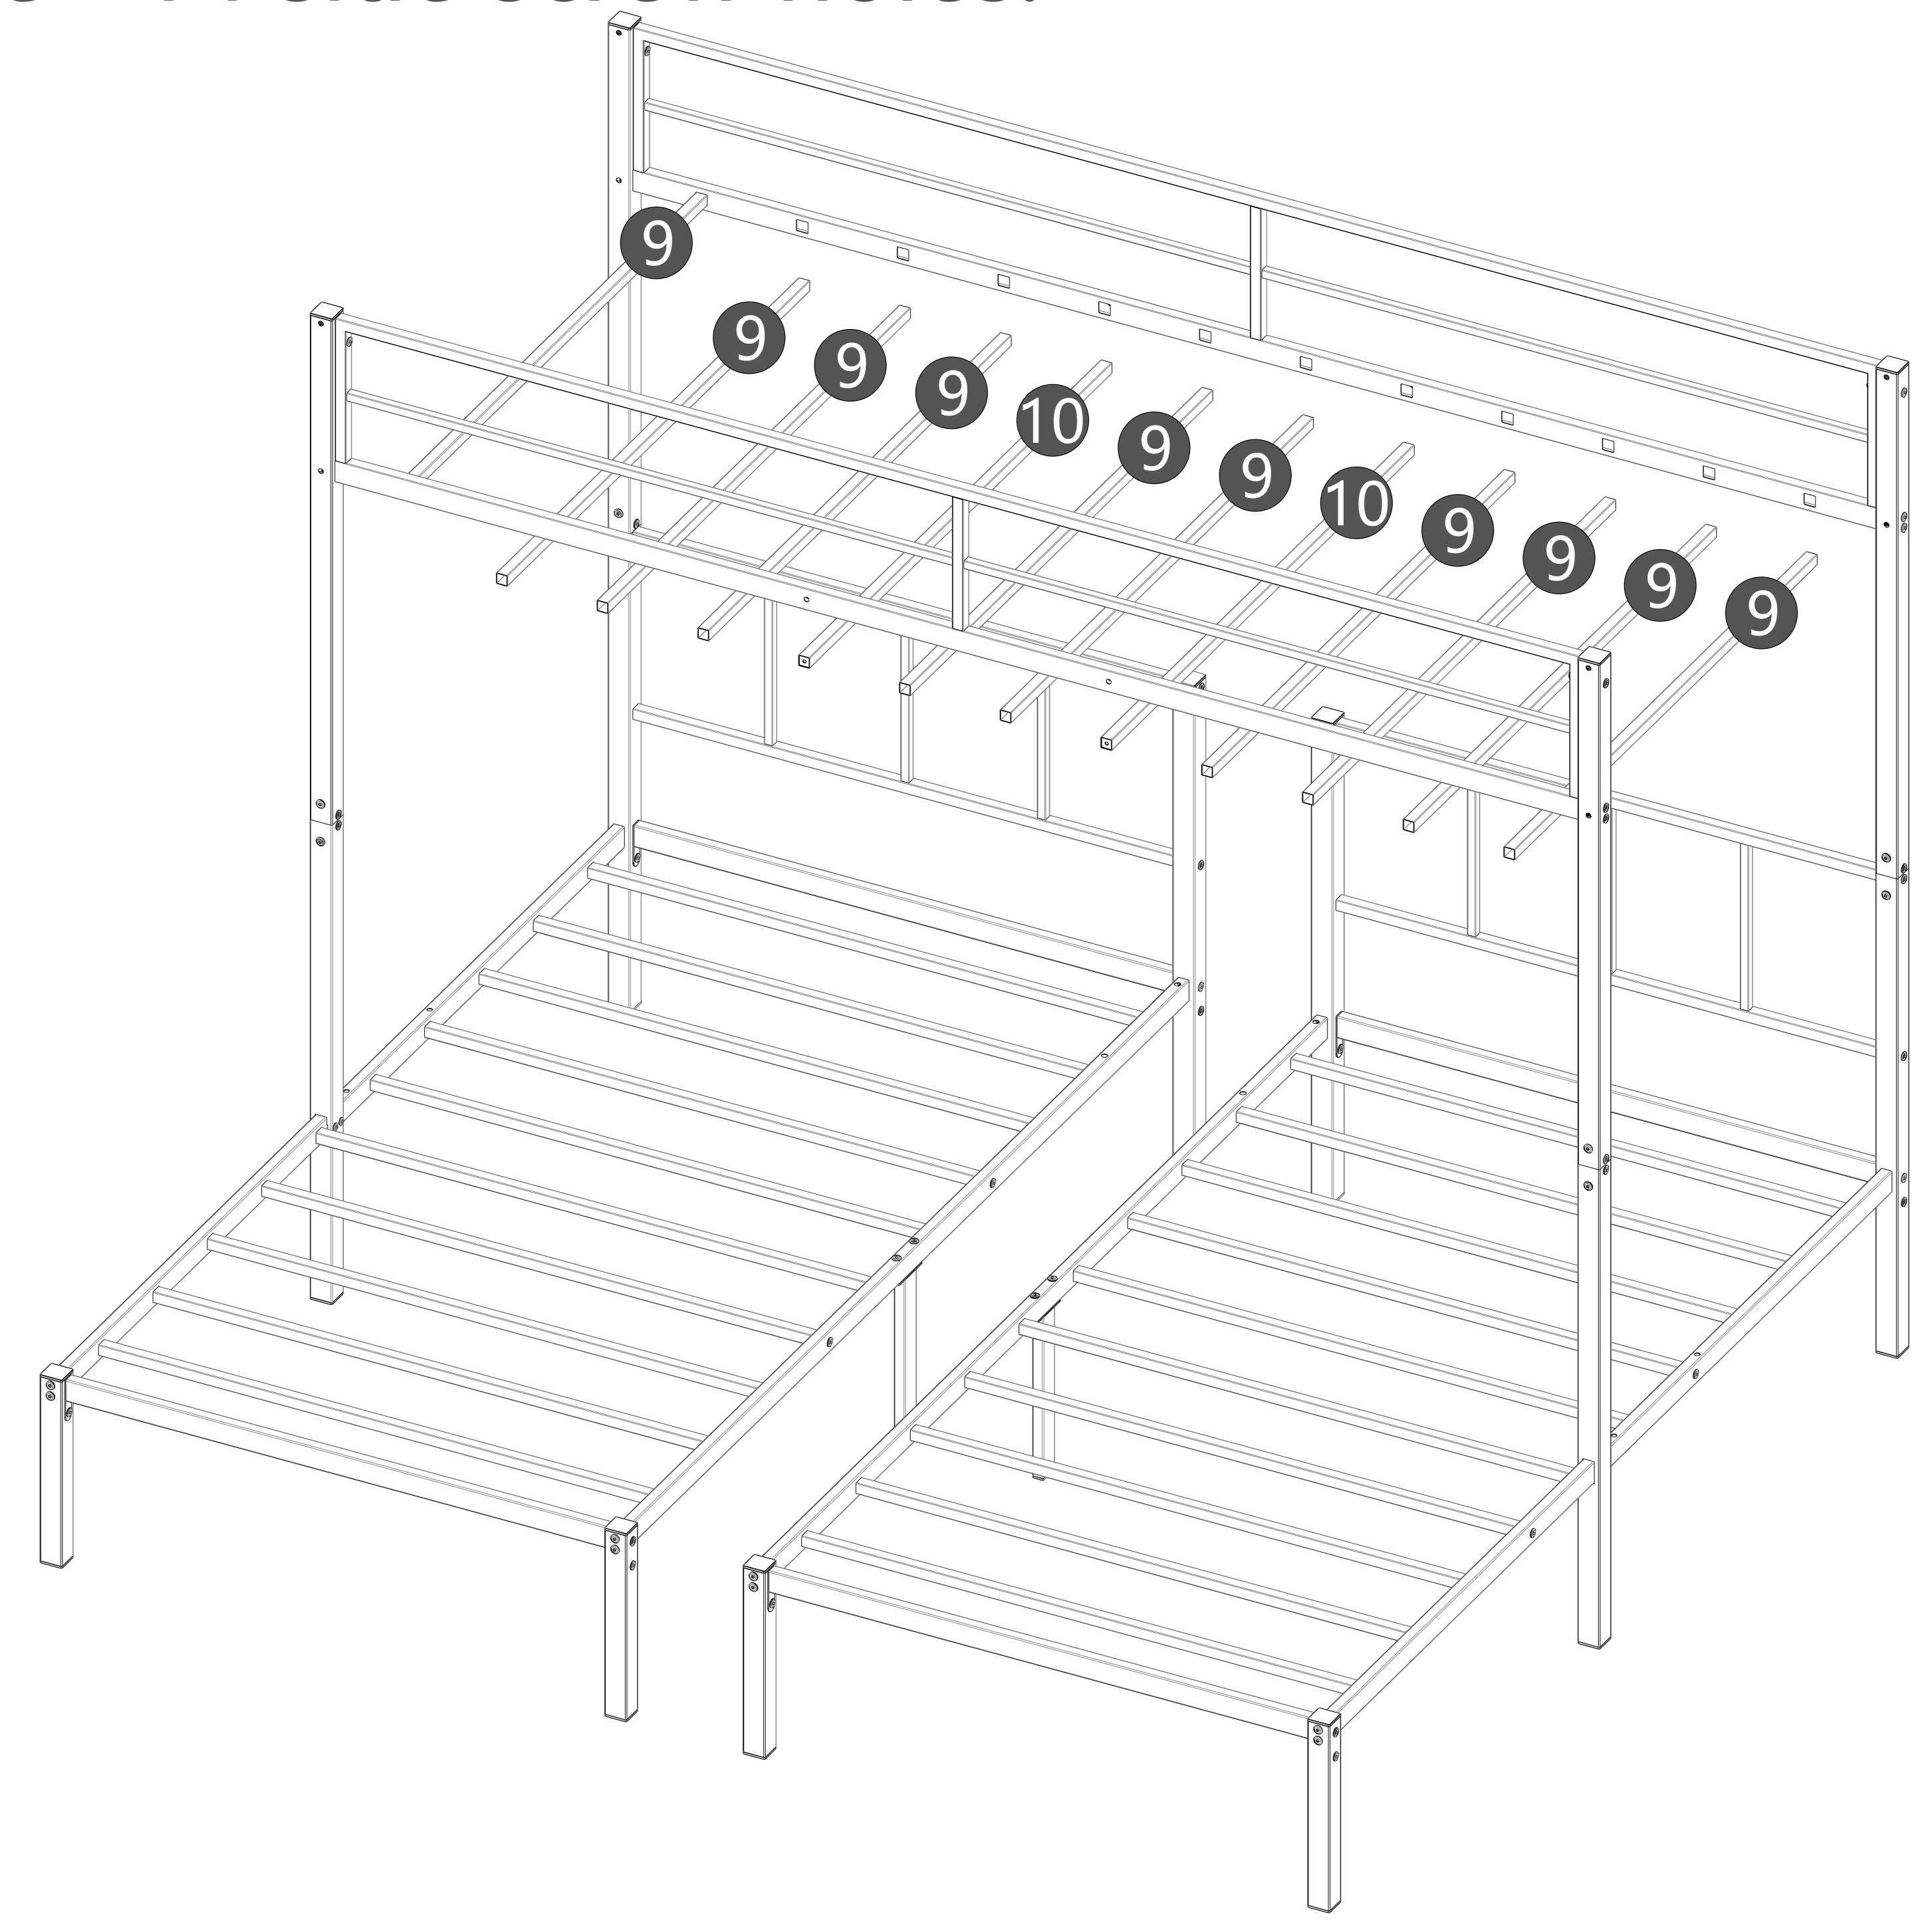

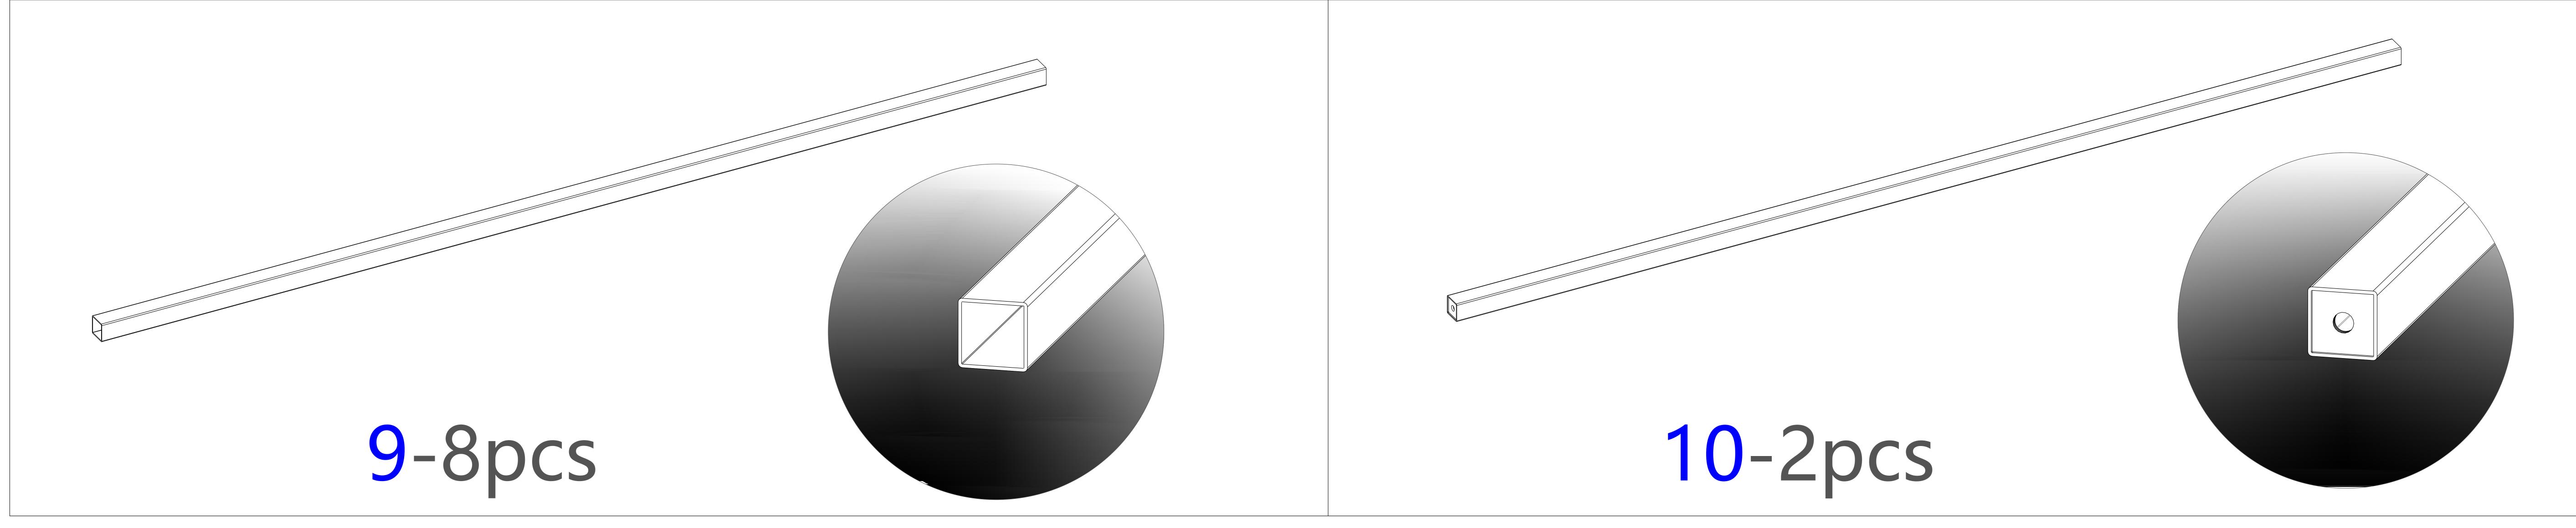

Step 12: Use hardware B and G to tighten the matching hole position of #10 and #14.

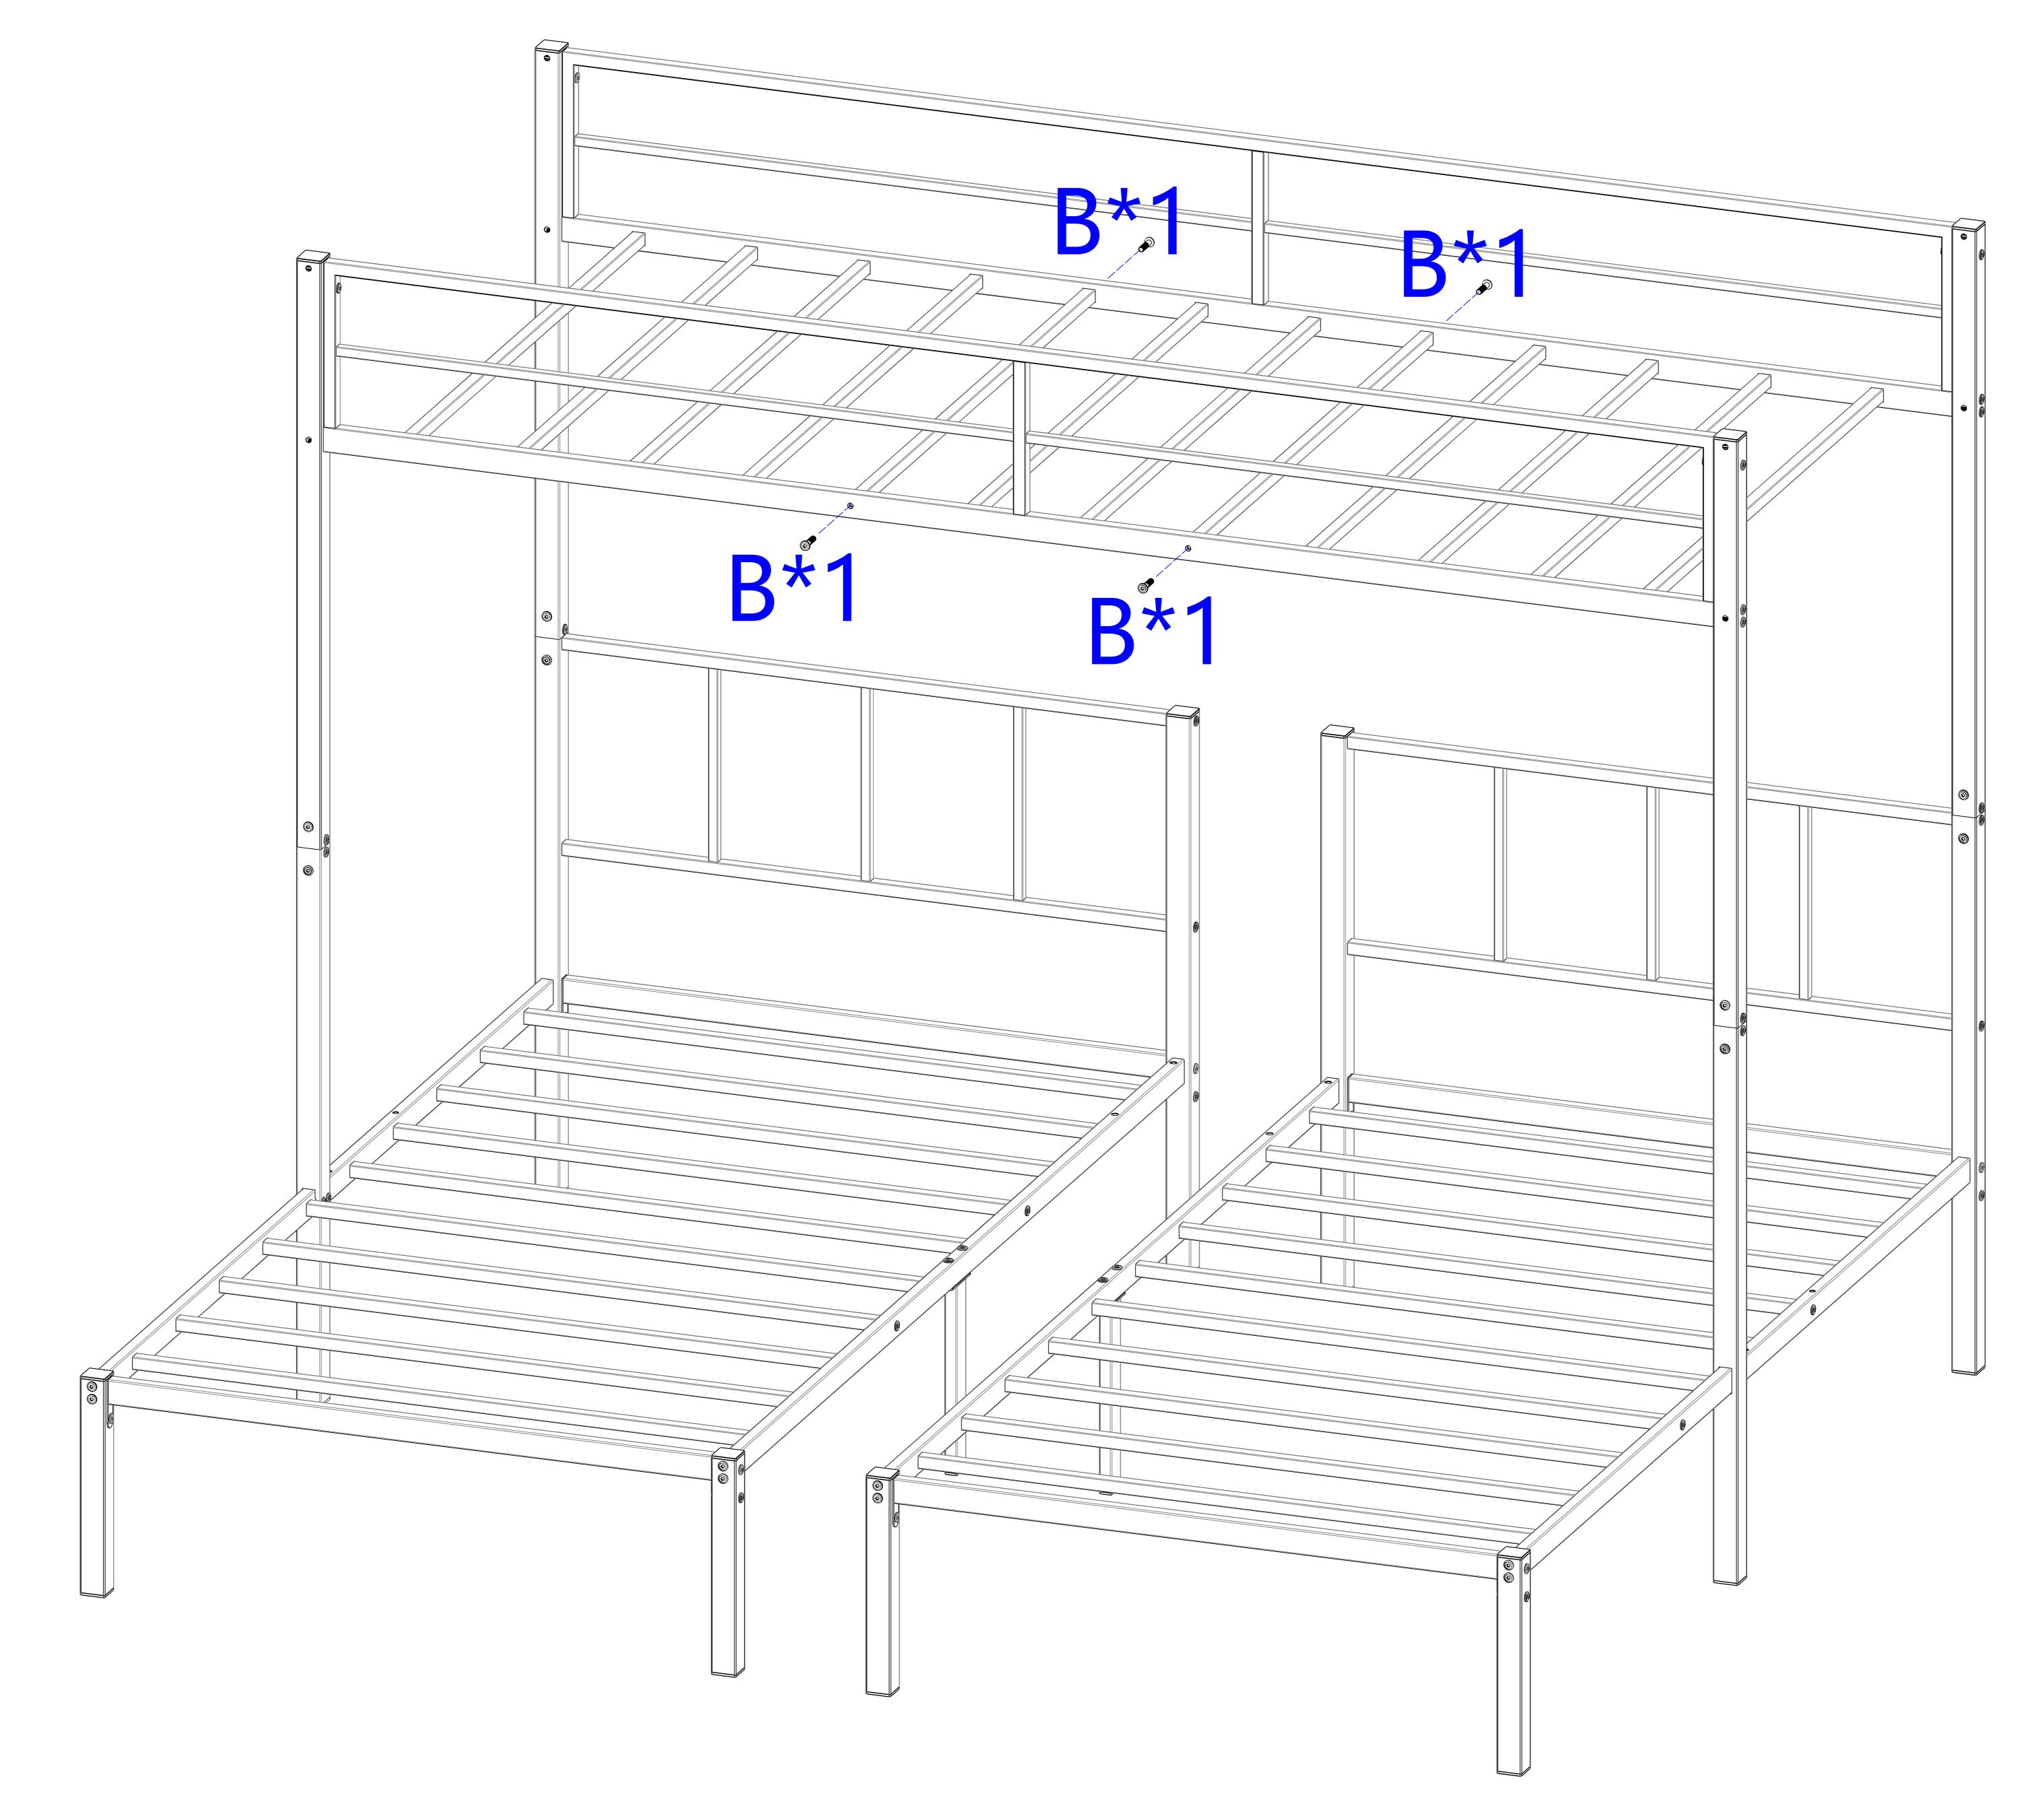


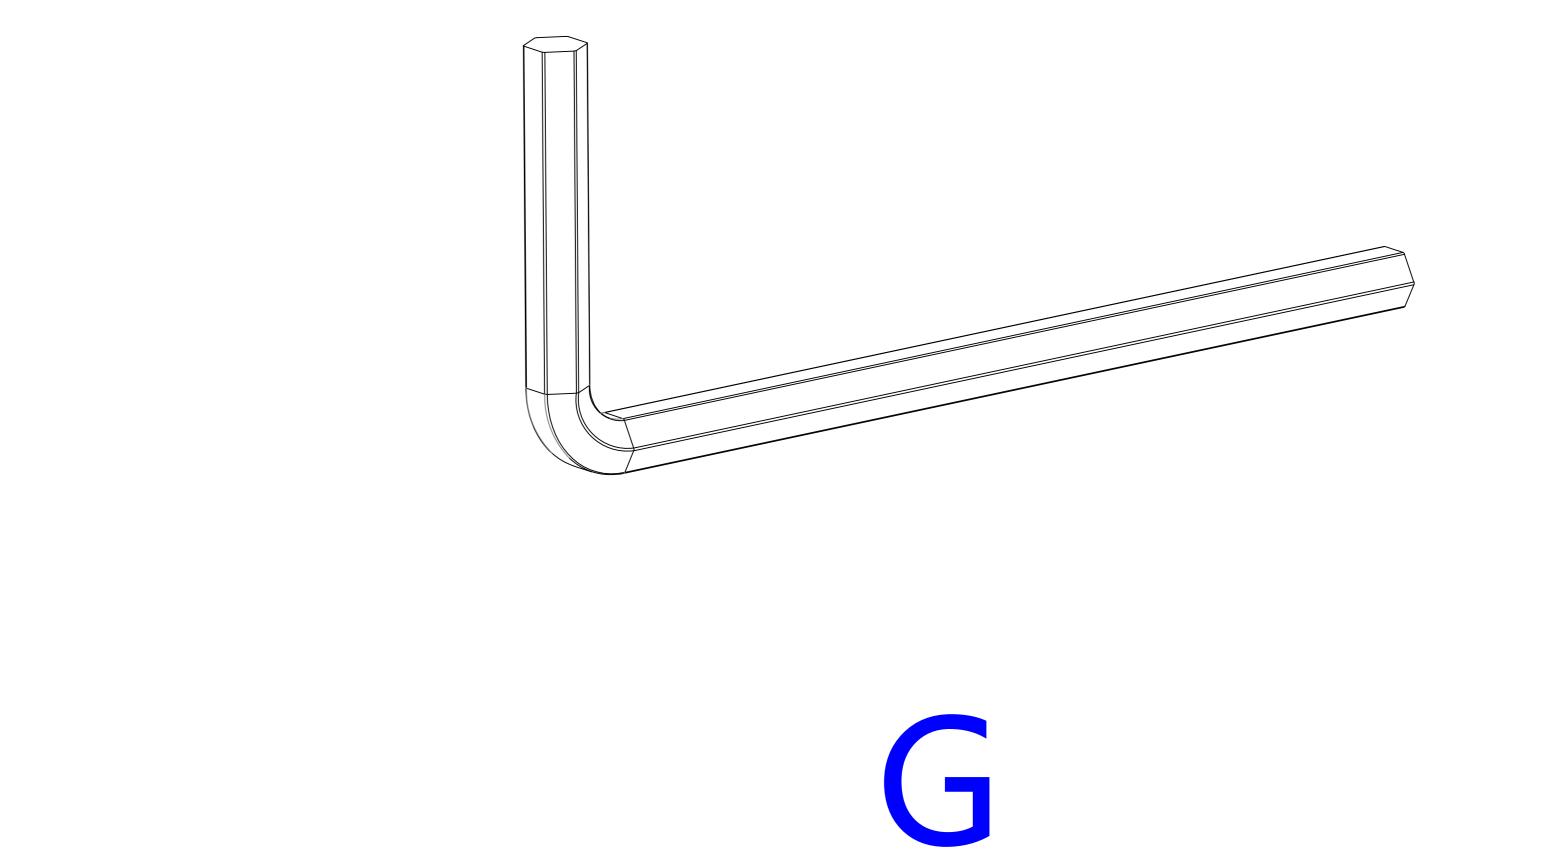


B 4pcs


Step 13: Use hardware A and G to continue to install the drawings to specify the location.


A*1

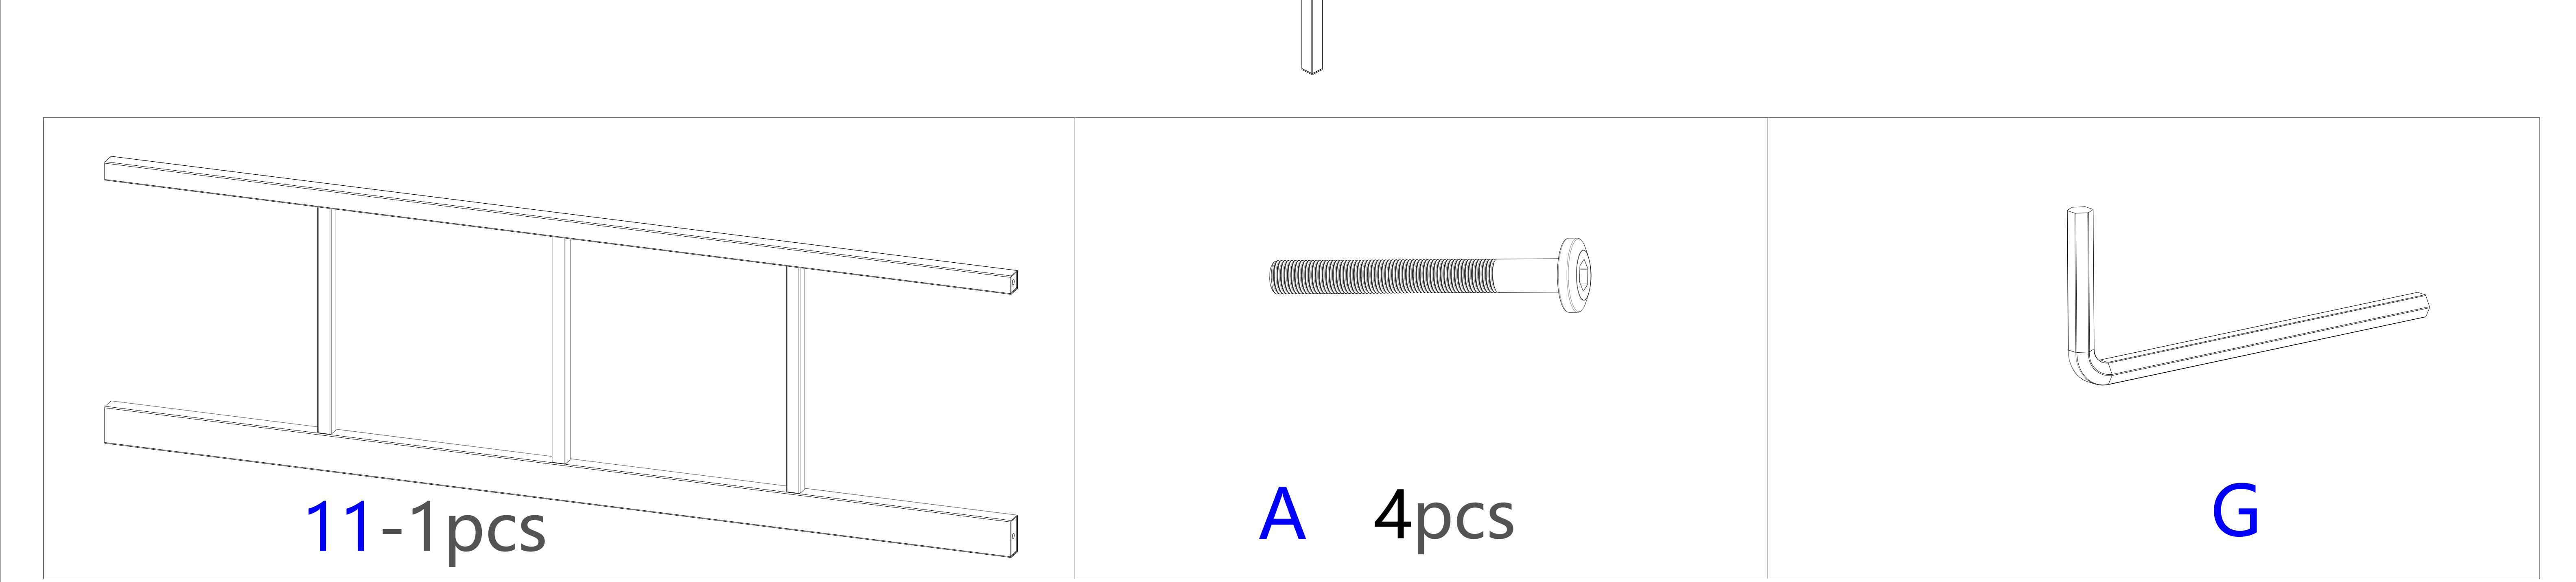


Step 14: Use hardware A and G to continue to install the drawings at the specified location.

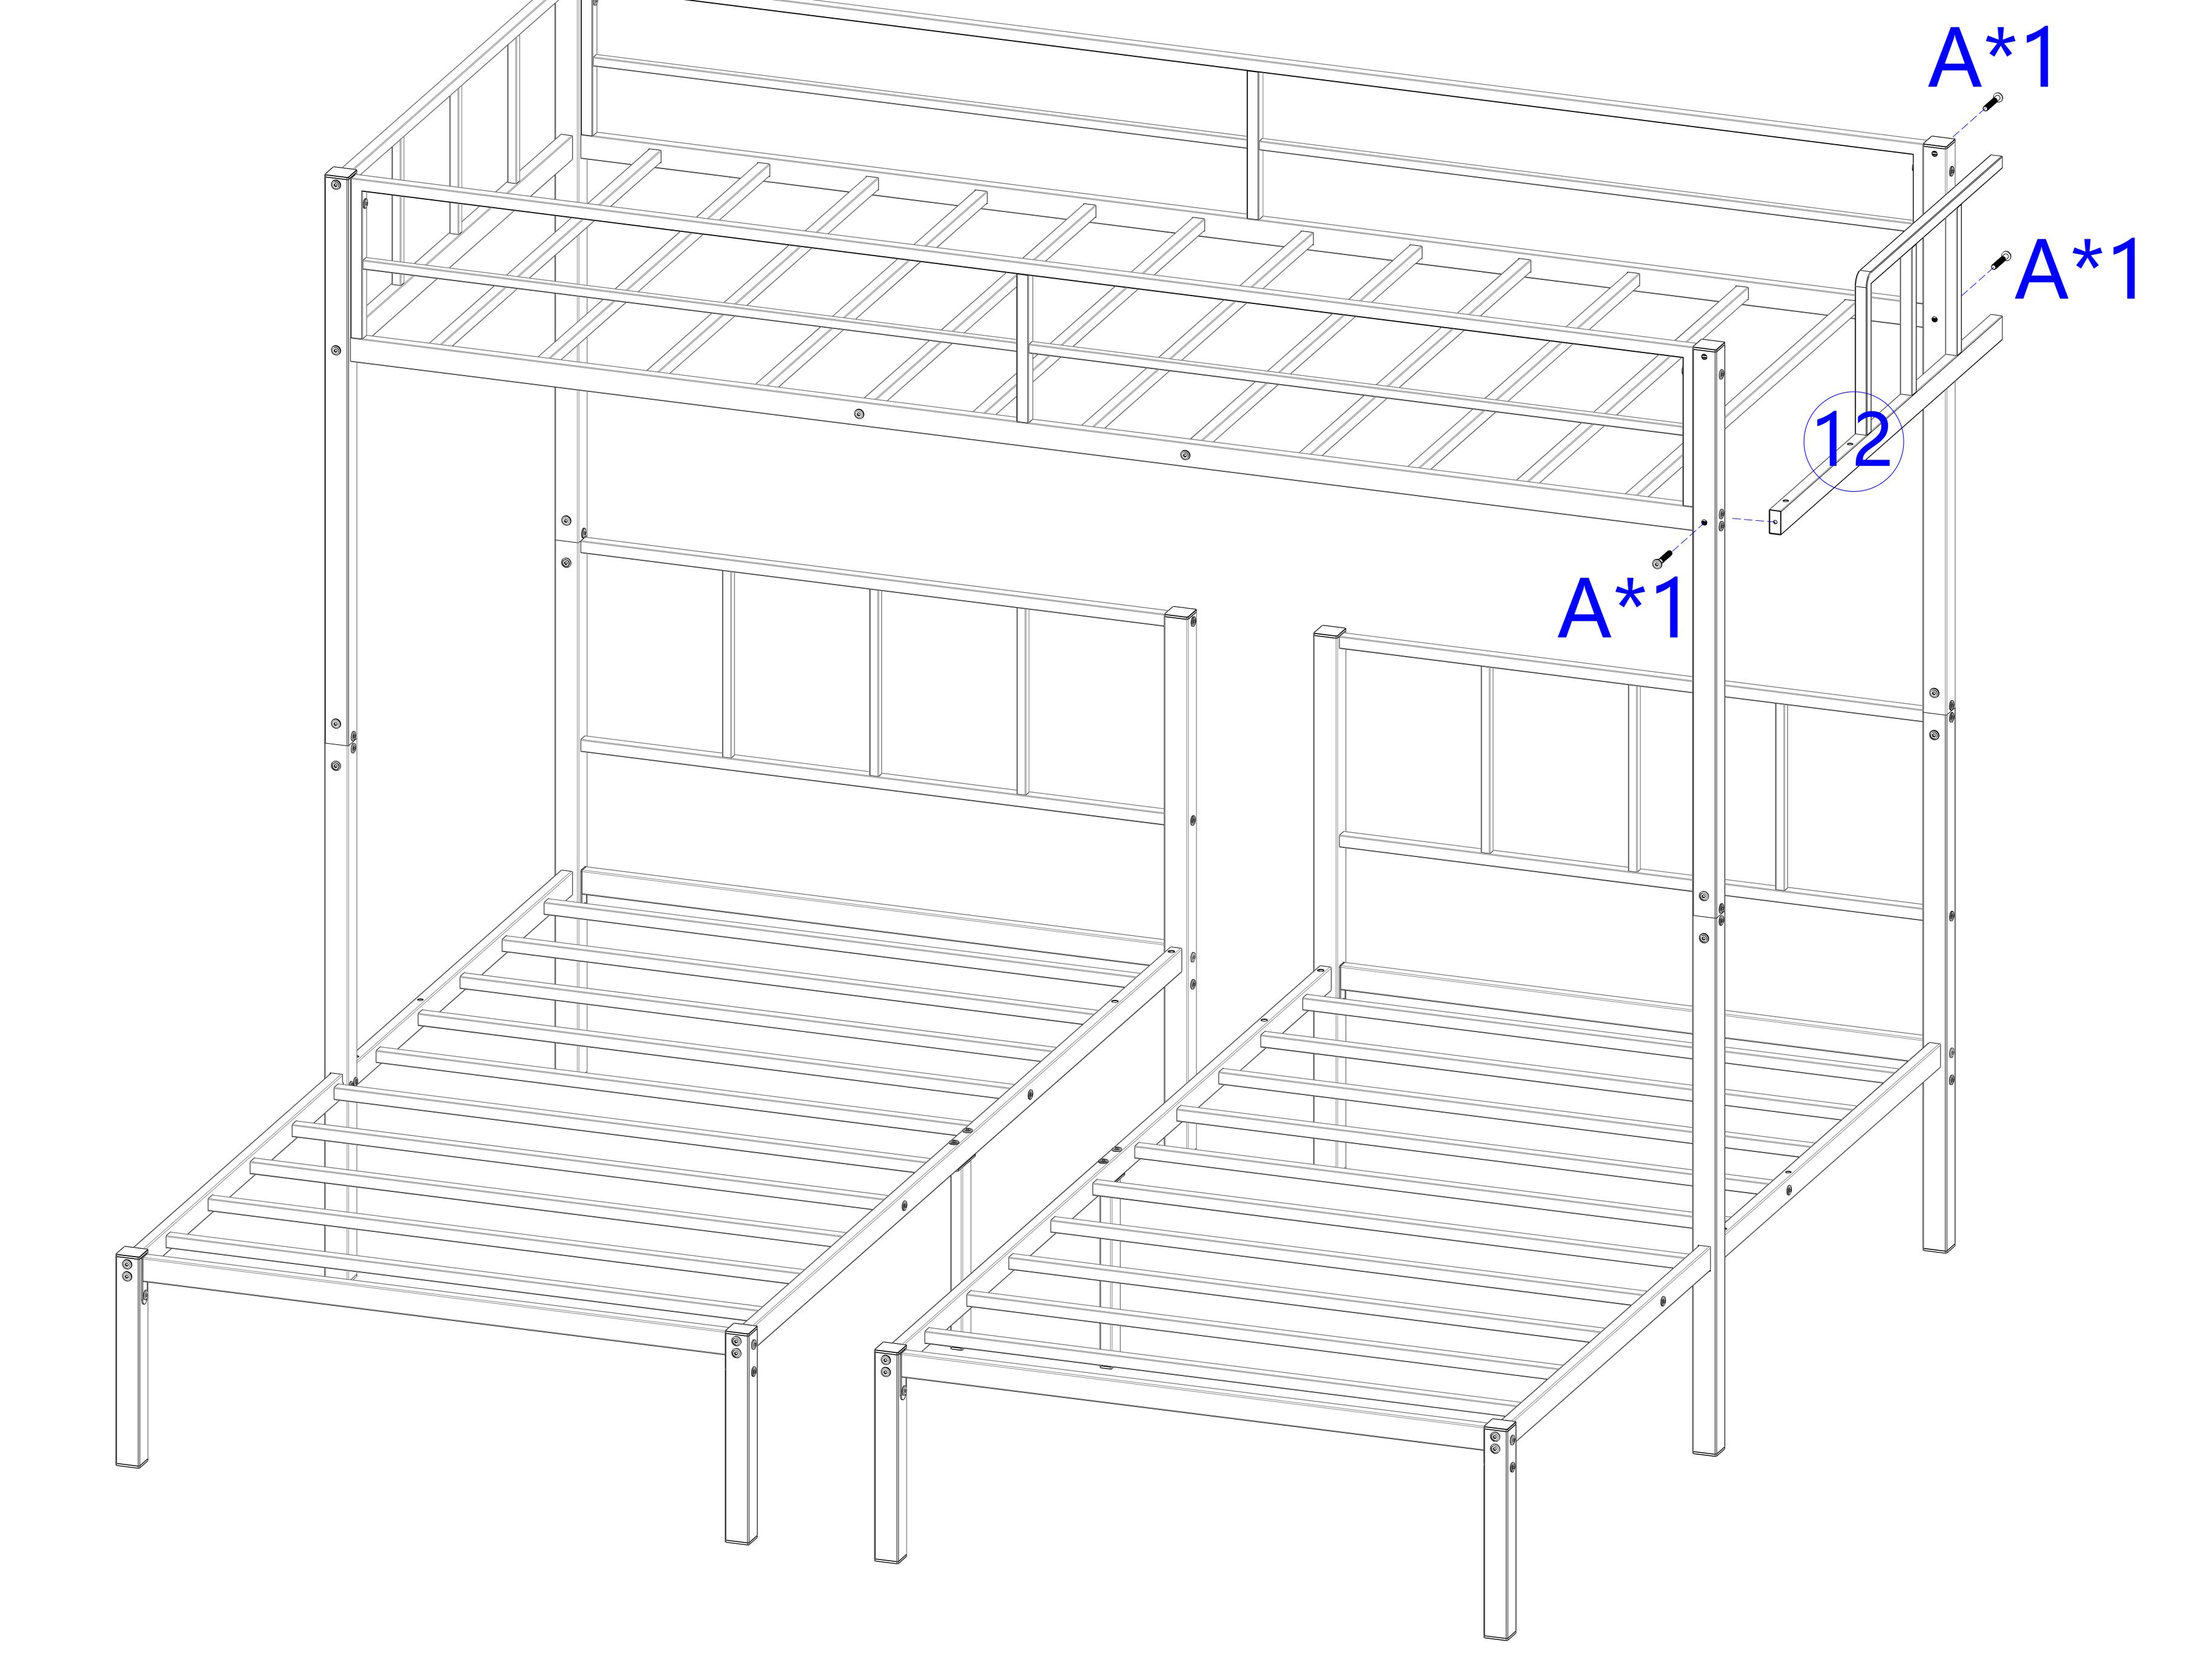

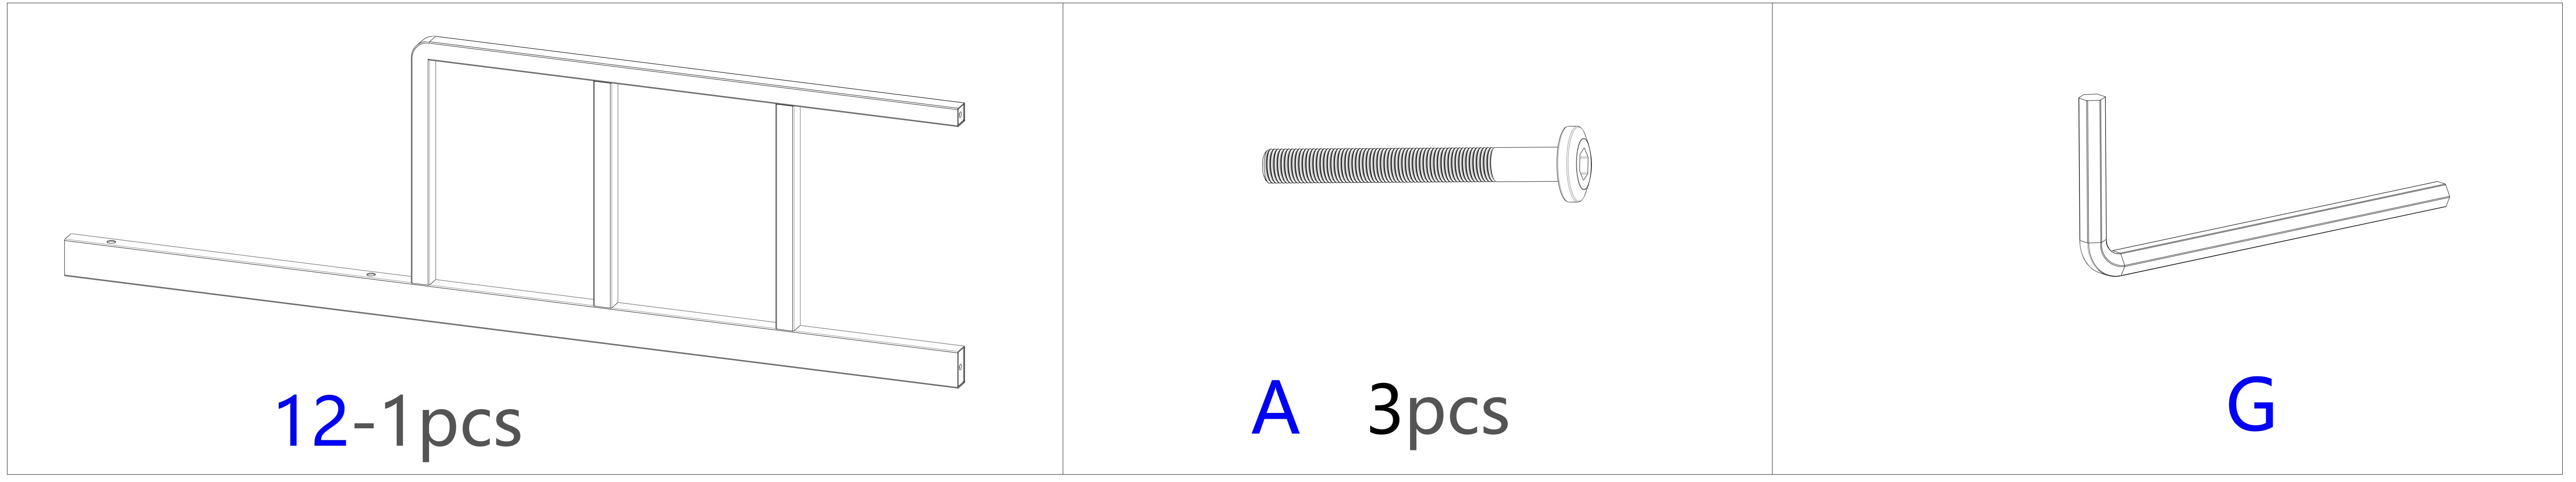





Completed attic bed



Note: Tighten all the steps before use, thank you.

