




Assembly Instructions

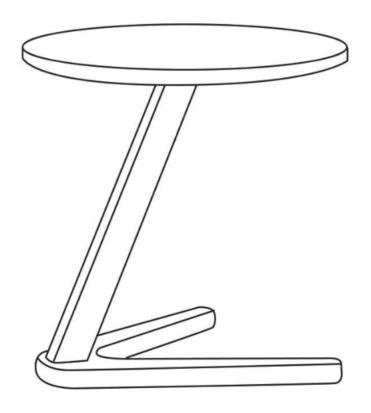

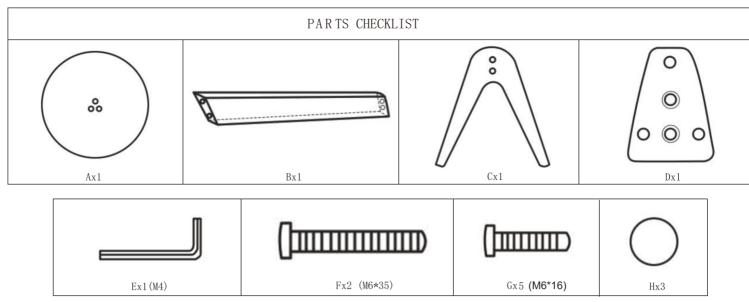


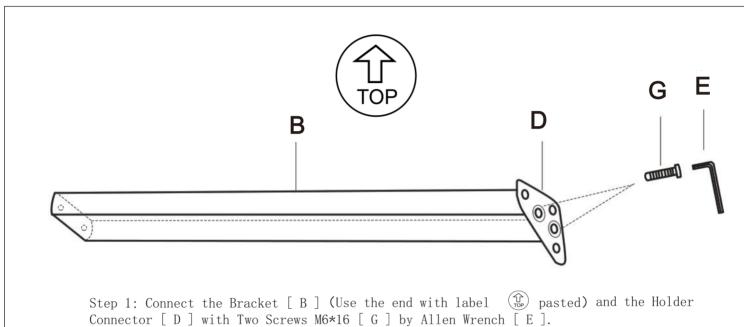

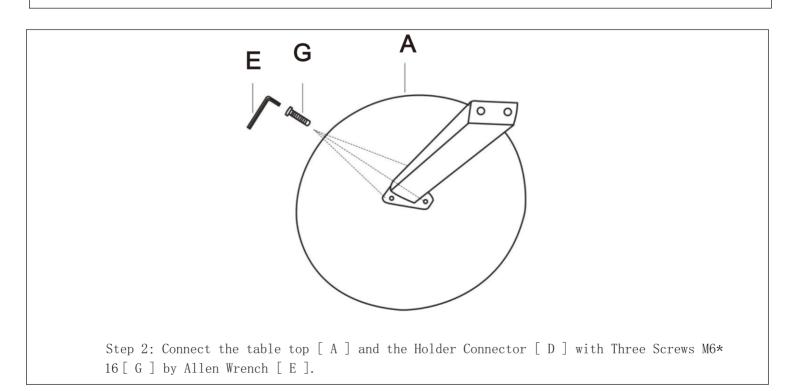

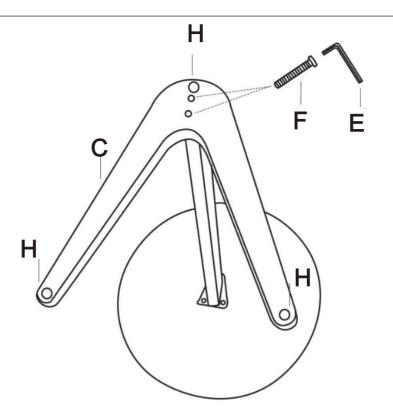

Step 3: Connect the Base [C] and the Bracket [B] with Two Screws M6*35 [F] by Allen Wrench [E]. And paste the foot pad [H] to the bottom of base.

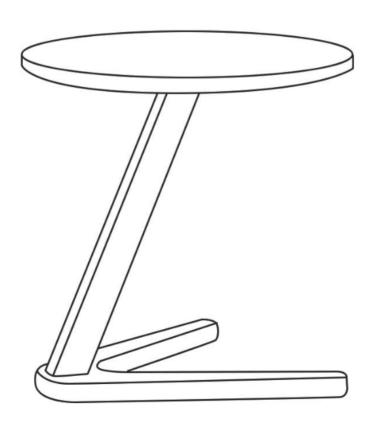

Step 4: Enjoy your new Table!