





# ASSEMBLY INSTRUCTION FOR ACME FURNITURE

## MODEL# LV01213





Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*\*\* Do not fully tighten screws until fully assembled \*\*\***


### PARTS LIST

NO	DESCRIPTION	SKETCH	QTY
A	TOP		1PCS
B	SHELF		1PCS
C	LEG(LONG)		4PCS
D	LEG(SHORT)		4PCS

### HARDWARE LIST


NO	DESCRIPTION	SKETCH	QTY
1	ALLEN BOLT (Ø5/16*70MM)		20PCS
2	ALLEN BOLT (Ø5/16*60MM)		8 PCS
3	FLAT WASHER (Ø5/16*2MM)		9 PCS
4	ALLEN KEY (M4)		1 PCS

#### STEP 1

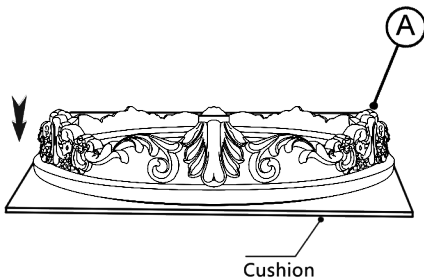


Please assemble the product by matching components in the same number.  
The Numbers are written on each component.


#### STEP 2 (1)~(2)

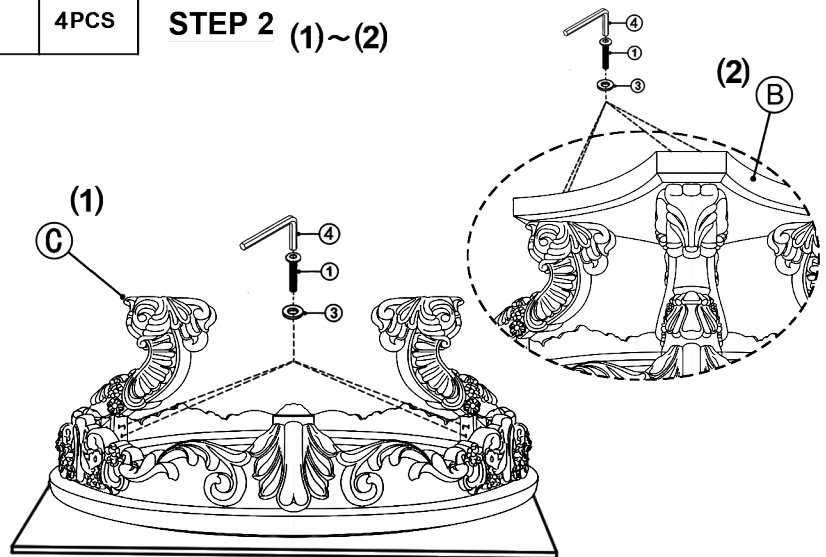

#### STEP 3

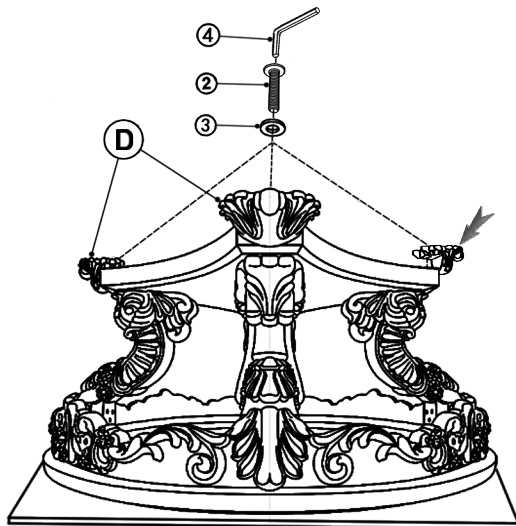

#### STEP 4

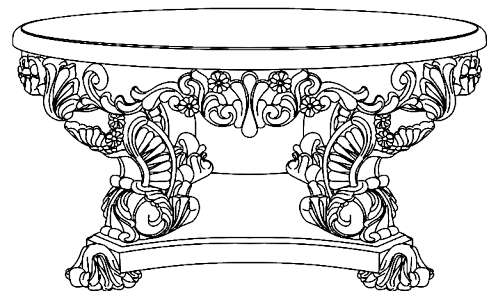

MADE IN CHINA

COMPLETED