


## UPT-37910/37900 ASSEMBLY INSTRUCTIONS

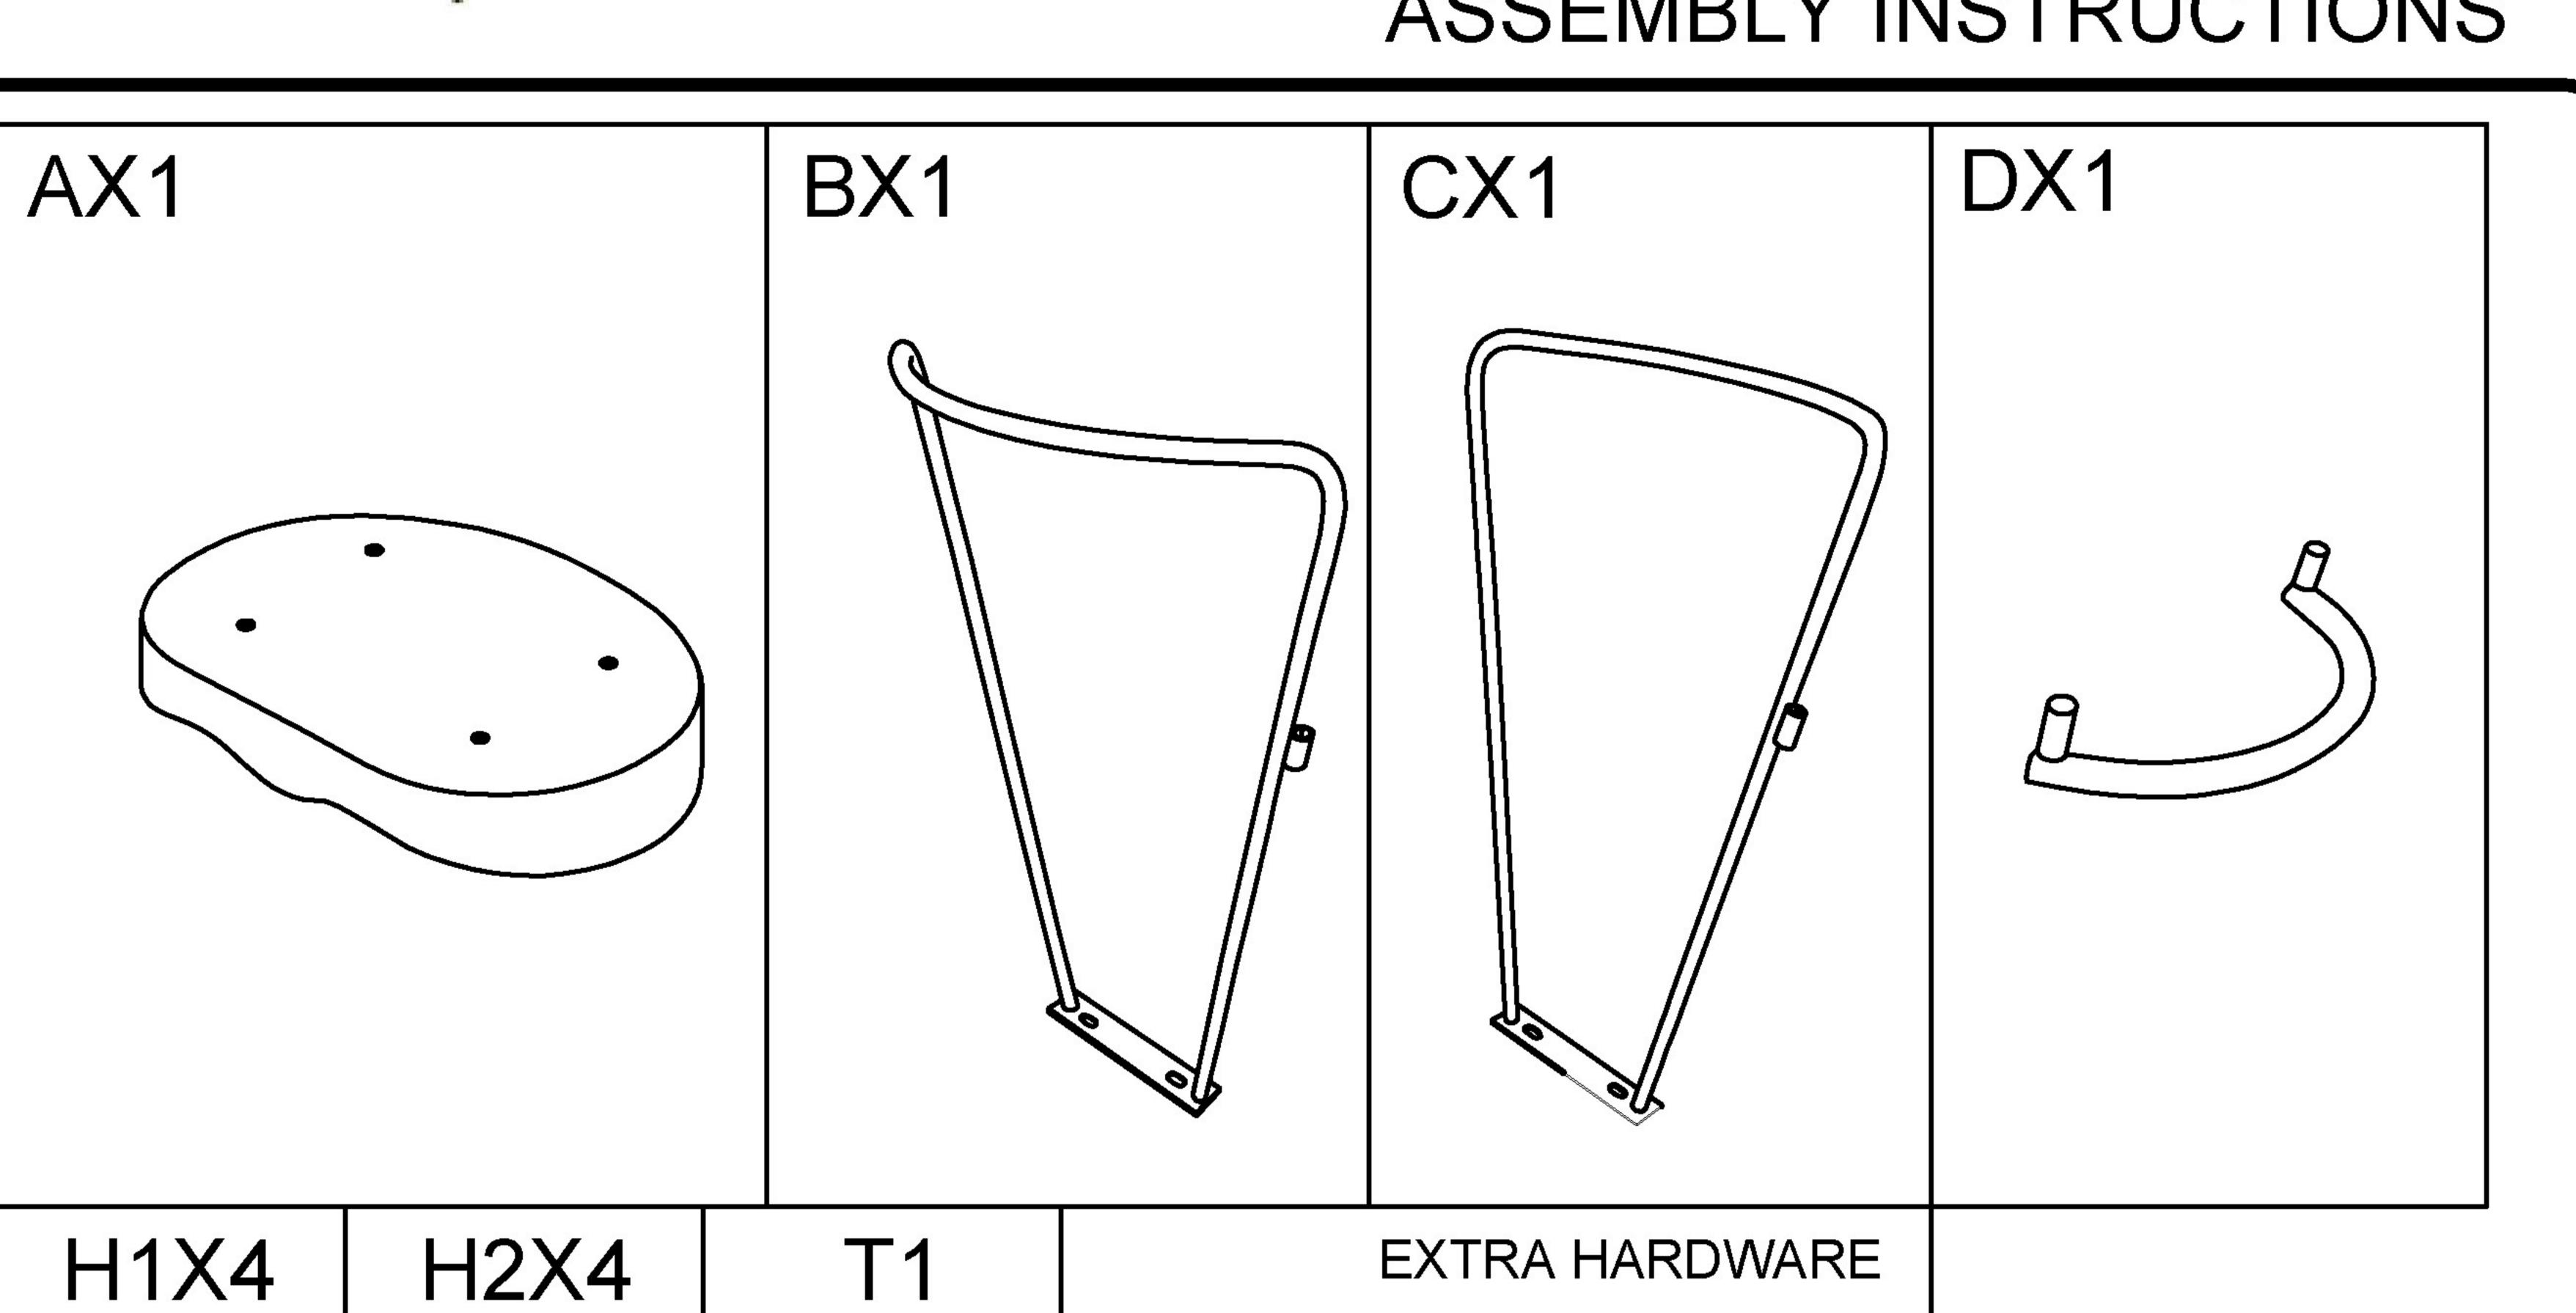



Note: 1. Please do not tight any bolt unless all bolts are fixed at their respective places.

H2 - 2pc

- 2. After fixing the bolts tighten them simultaneously.
- 3. Matching Parts Bolt (example AtoA)
- 4. Two person assembly required.

Olamo

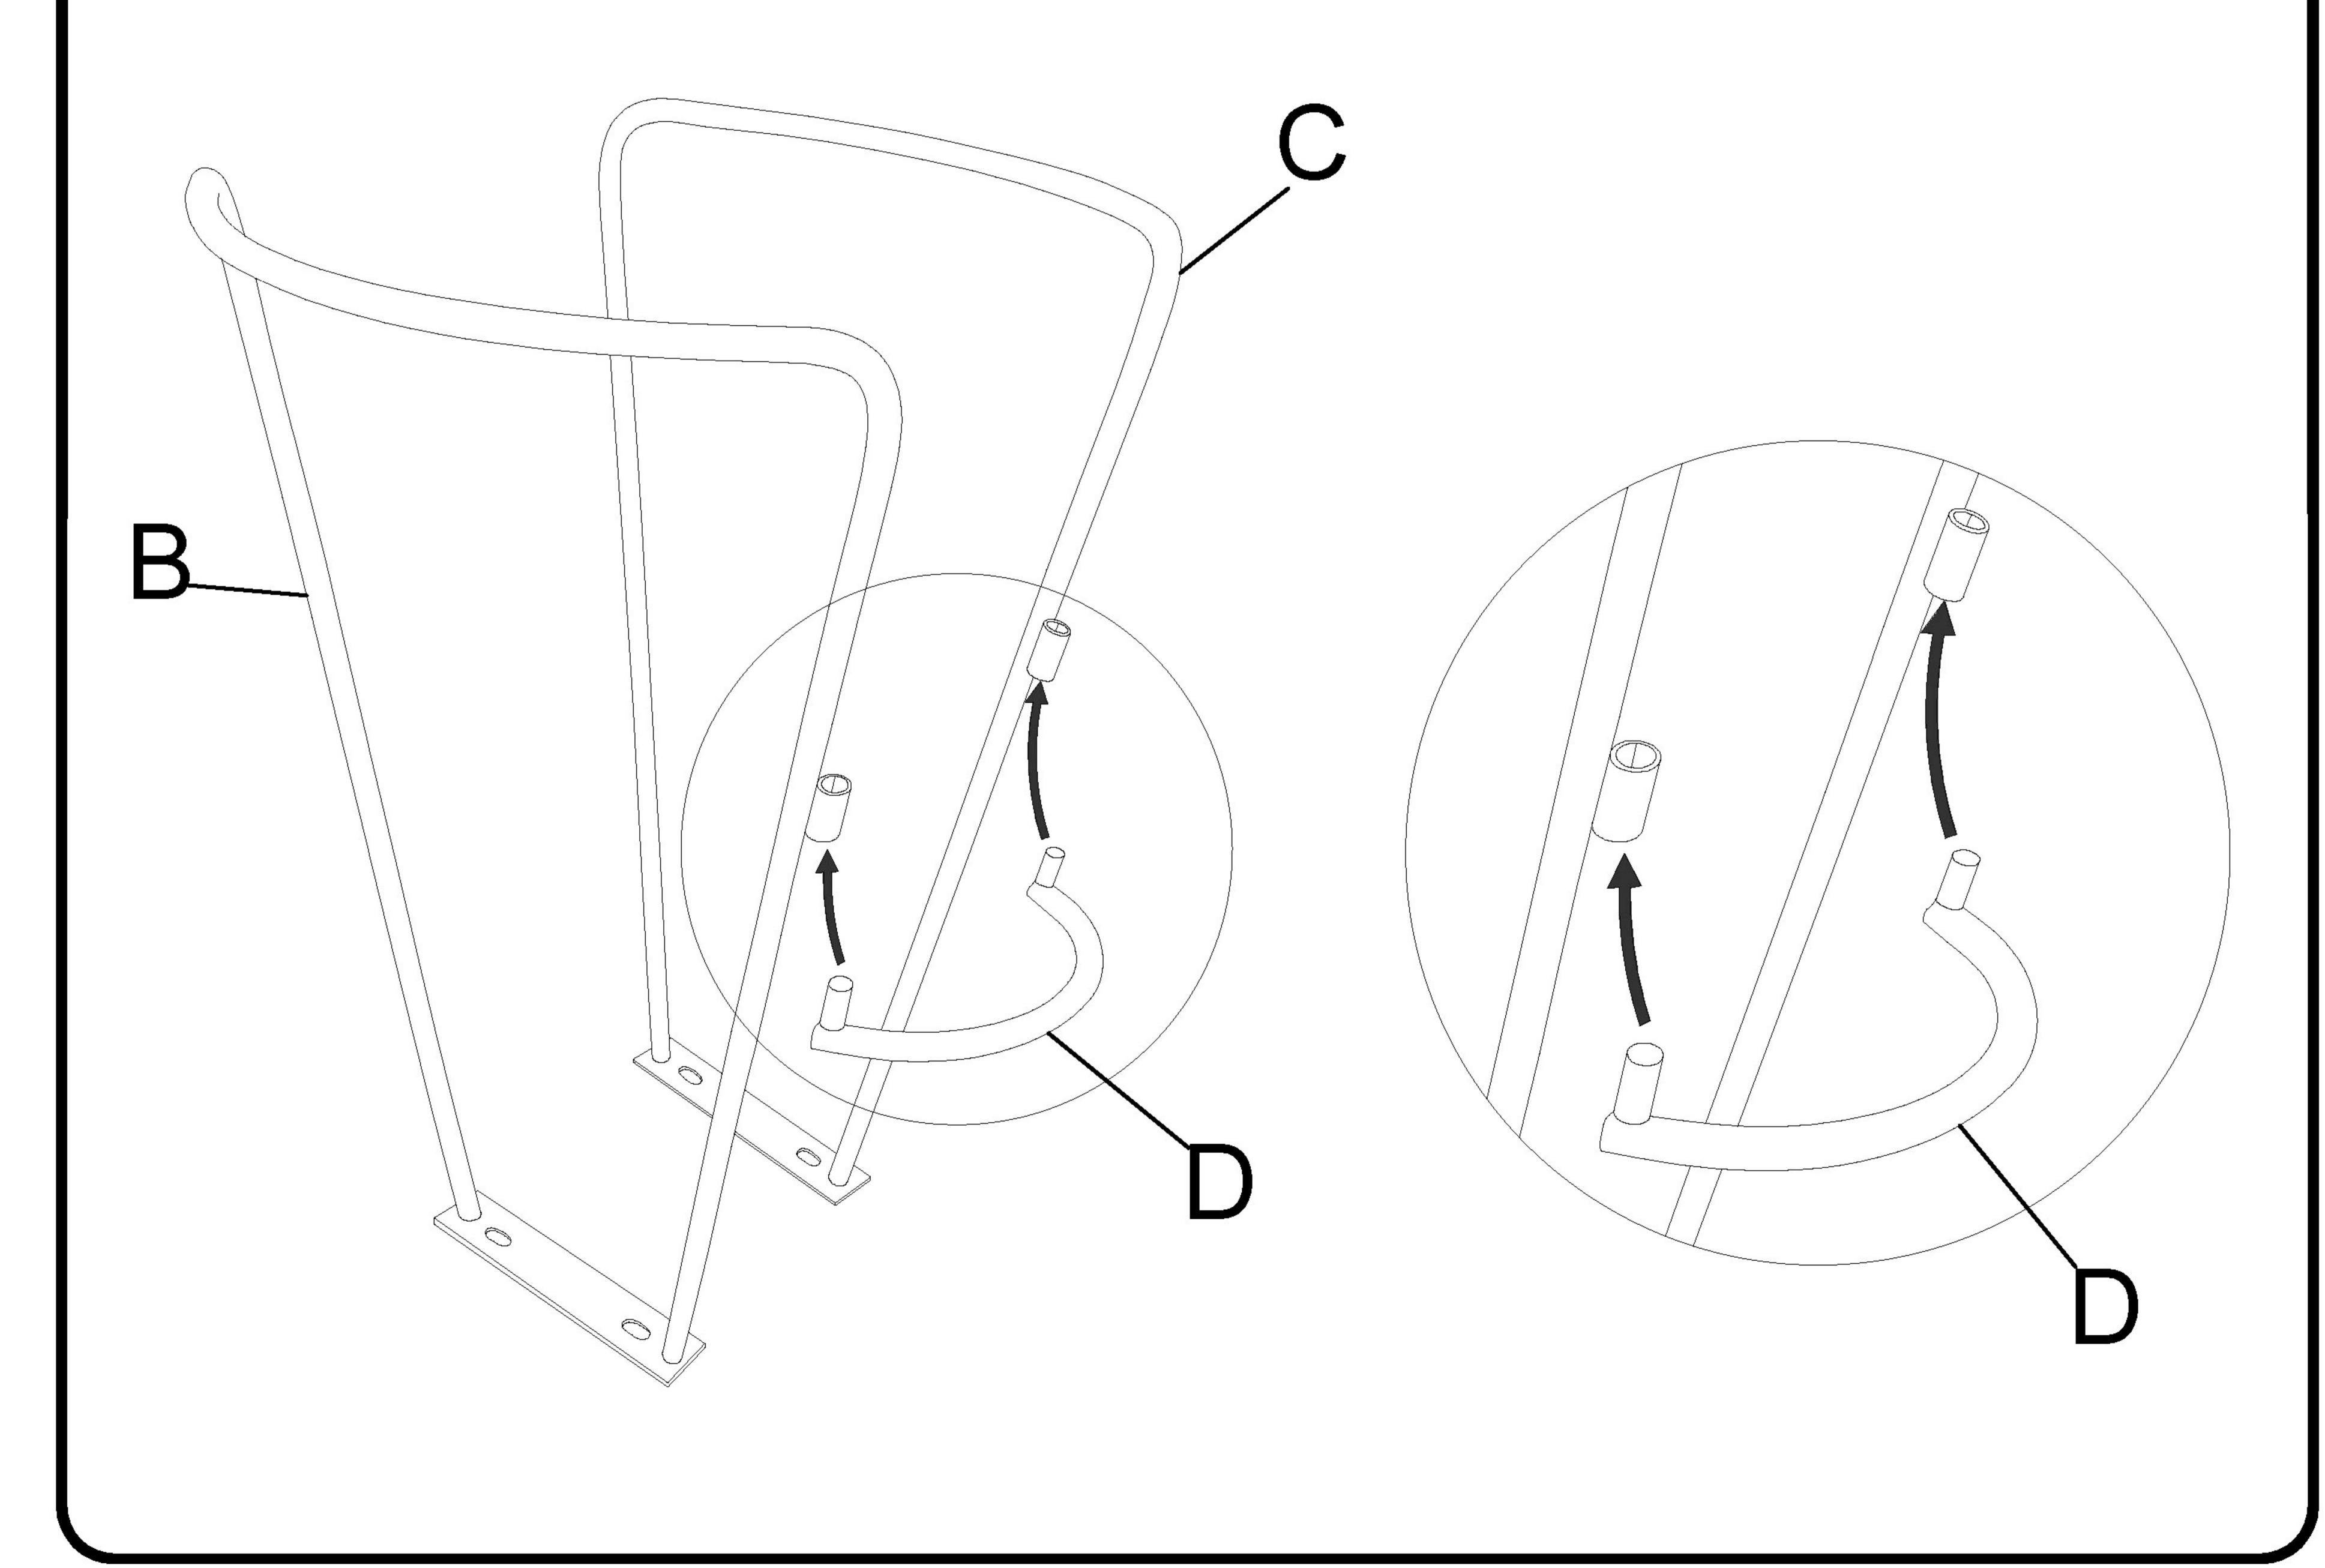

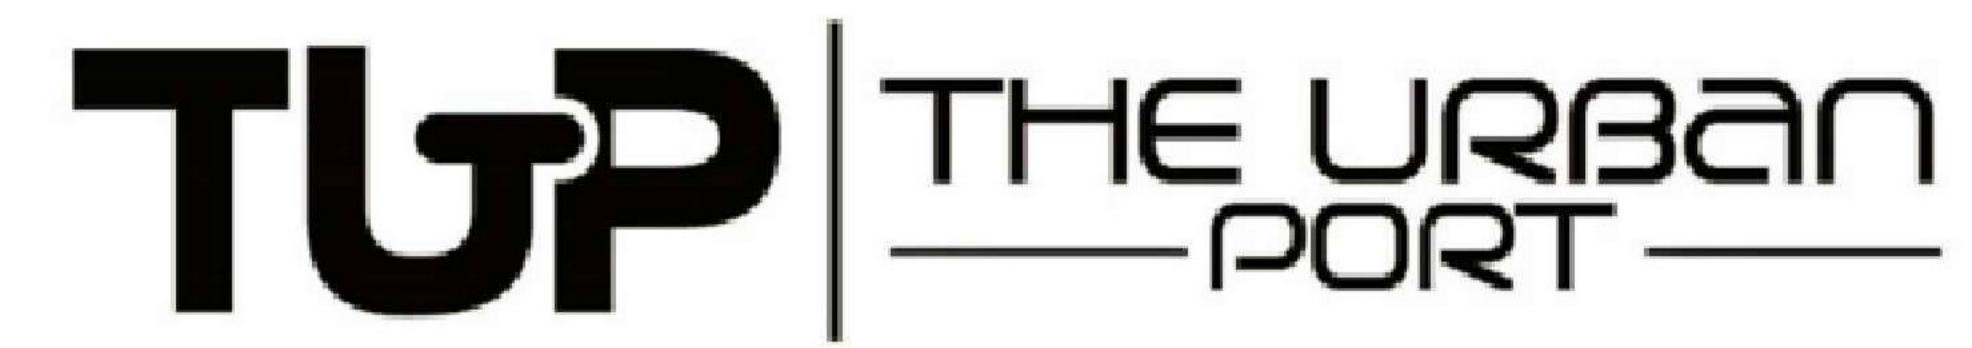

UPT-37910/37900 ASSEMBLY INSTRUCTIONS

