


# Cat treadmill 4.0 M installation

## Instructions Hint:


Do not tighten the mounting screws to the end at one time, and tighten them again after a single component is installed and formed !

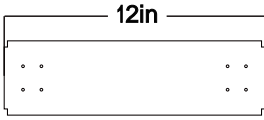

**A** × 2




**P** × 2

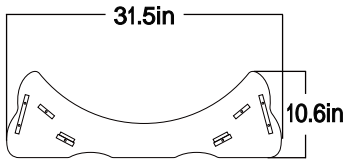


**B** × 2

\* **B** Base for cat treadmill

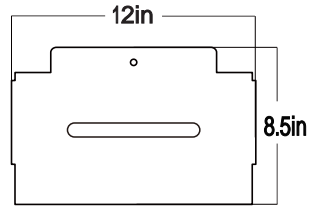


**C** × 2

\* **C** A plank with only one screw hole

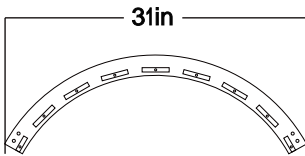


**D** × 6

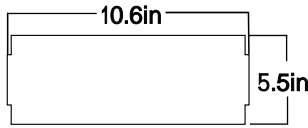


**E** × 17

\* Three pieces of E have double holes in the side! Connecting D and D !

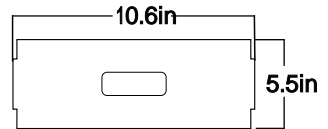

**F** × 1


\* **F** Empty space in the center.

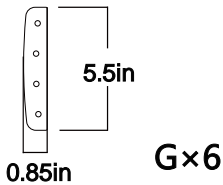

0.85in

**G** × 6


\* **G** Connecting D and D !

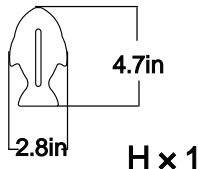


2.8in

**H** × 1

\* **H** Insert F to prevent rotation.

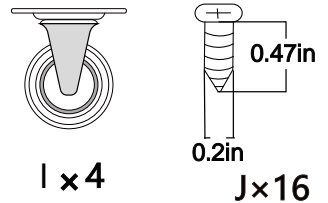


**I** × 4

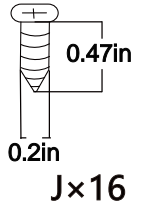

0.2in


**J** × 16

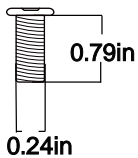

0.79in

0.24in

**K** × 24

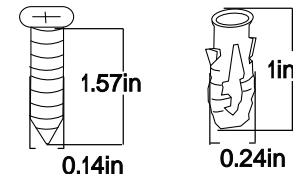

1.57in

0.14in


**L** × 58



1in

0.24in


**M** × 58

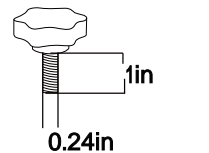

1in

0.24in

**N** × 1

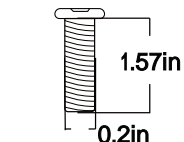

1.57in

0.2in

**Q** × 4

\* **Q** Long screw



**R** × 4

\* **R** Install on P-plate with Q-screws and torque with S-nuts.




**S** × 4


\* **S** Locking Q-screw and R-wheel.

# Detailed installation steps :



## STEP 1

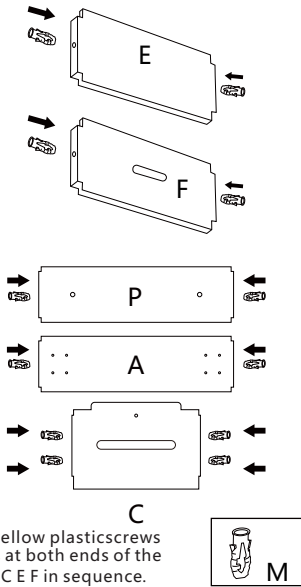

## STEP 2

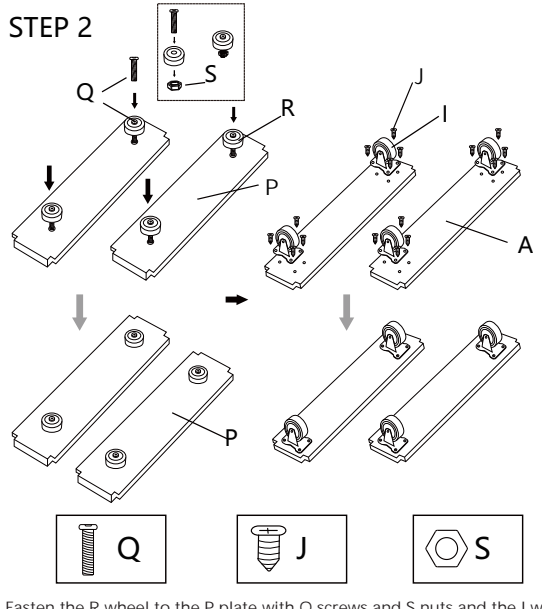

## STEP 3

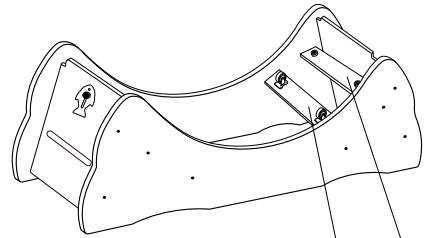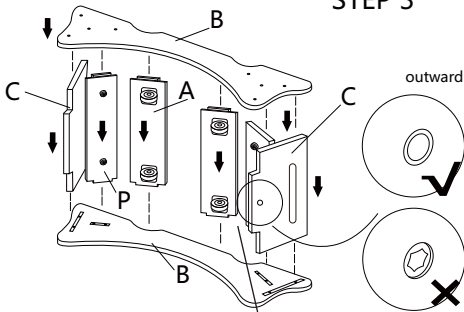


Base installation complete


The two A plates with I wheels are at the bottom, and close to the A plates are the two P plates with R wheels.

\* Note that the F plate should be placed in the middle of the horizontal plate arrangement in the arc plate (such as the third of the 5 horizontal plates, the fourth of the 7 horizontal plates, the actual object shall prevail)  
F plates cannot be placed at curved plate joints.


STEP 4

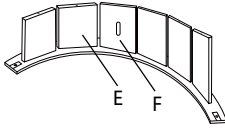


STEP 5

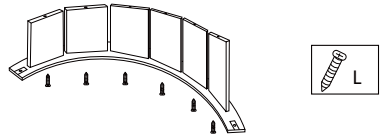

STEP 6

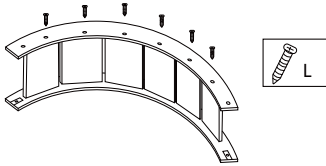

STEP 7

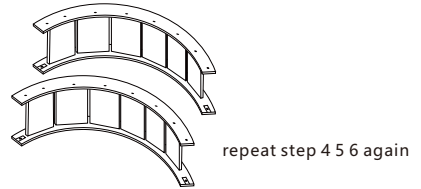




STEP 8

Here, use E with double holes for installation.

STEP 9

STEP 10




Mount the G here with the K screws, it will make the connection stronger.

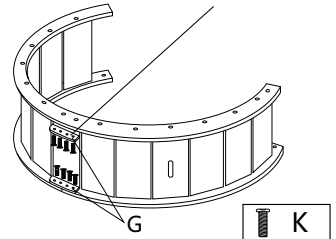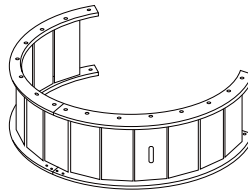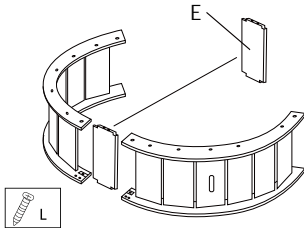

STEP 11

STEP 12

STEP 13

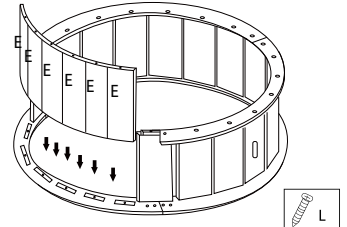
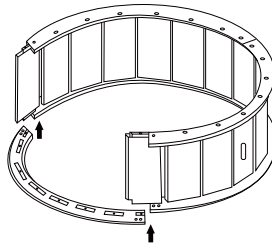
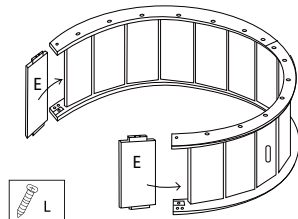


STEP 14


STEP 15

STEP 16

Place the rollers on the base.

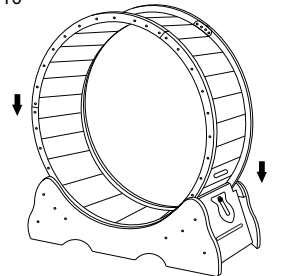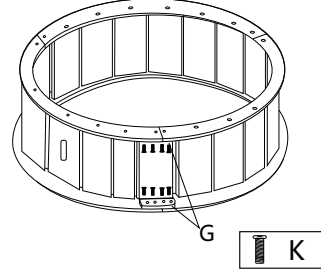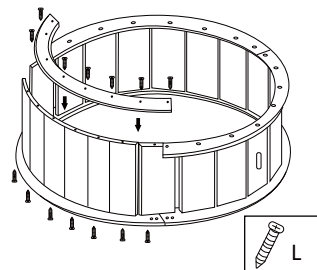


**STEP 17**

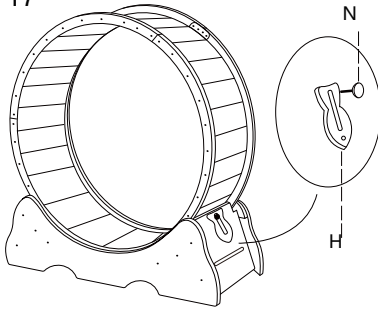


Secure H to the side panel with N.

**STEP 18**

Please paste the black buckle as shown in the figure below.

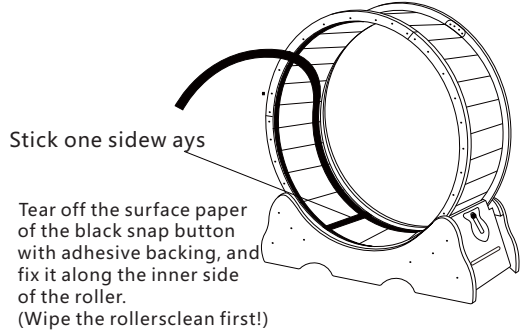


**STEP 19**

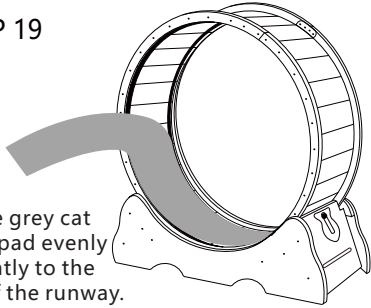


Glue the grey cat scratch pad evenly and tightly to the inside of the runway.

**STEP 20**

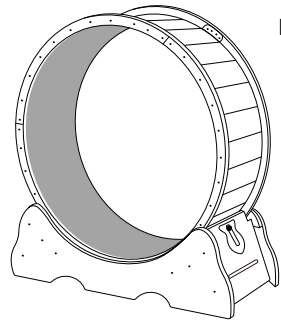

Finished

Lock it when not in use

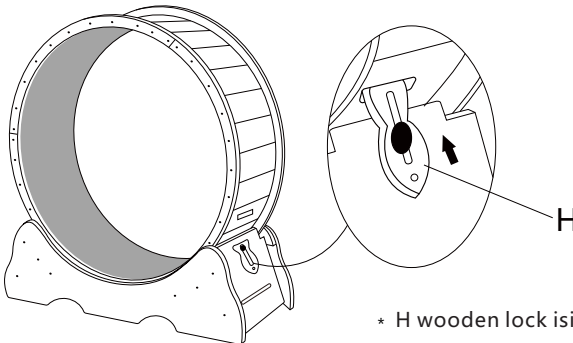

\* H wooden lock is inserted into the card slot and locked.