


# Cat treadmill 4.0 L installation

## Instructions Hint:


Do not tighten the mounting screws to the end at one time, and tighten them again after a single component is installed and formed!



**A**×2




**P**×2

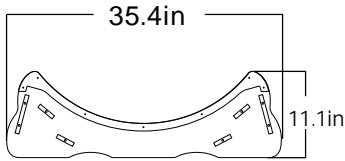


**B**×2

\* **B** Base for cat treadmill

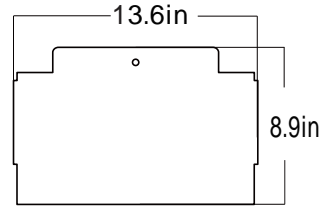


**C** ×2

\* **C** A plank with only one screw hole

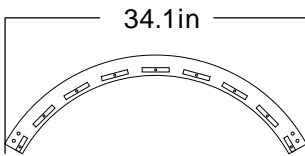


**D**×6

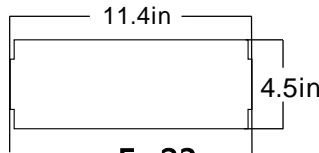


**E**×23

\* Three pieces of **E** have double holes in the side! Connecting **D** and **D**!

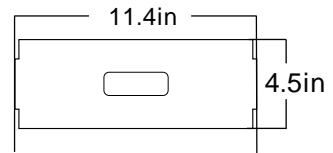


**F**×1

\* **F** Empty space in the center

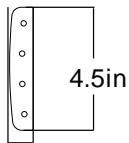


**G**×6

\* **G** Connecting **D** and **D**!

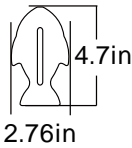


**H**×1


\* **H** Insert **F** to prevent rotation.

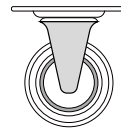


**I**×4

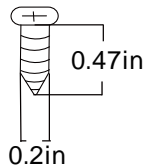

**J**×16

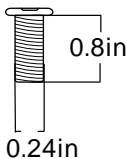


**K**×24

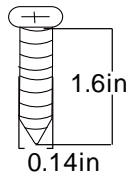


**L**×70



**M**×70

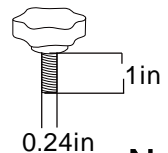

**N**×1

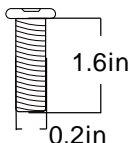

**Q**×4

\* **Q** Long screw



**R**×4

\* **R** Install on **P**-plate with **Q**-screws and torque with **S**-nuts.




**S**×4

\* **S** Locking **Q**-screw and **R**-wheel.



# Detailed installation steps :

## STEP 1

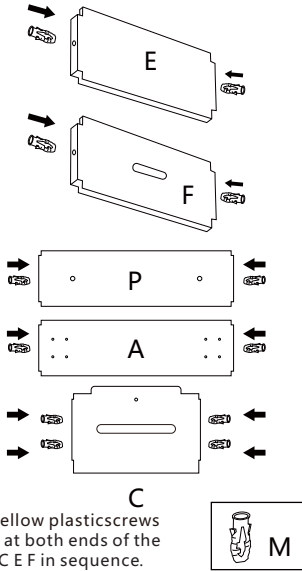


Insert the M yellow plasticscrews into the holes at both ends of the assembly A P C E F in sequence.

## STEP 2

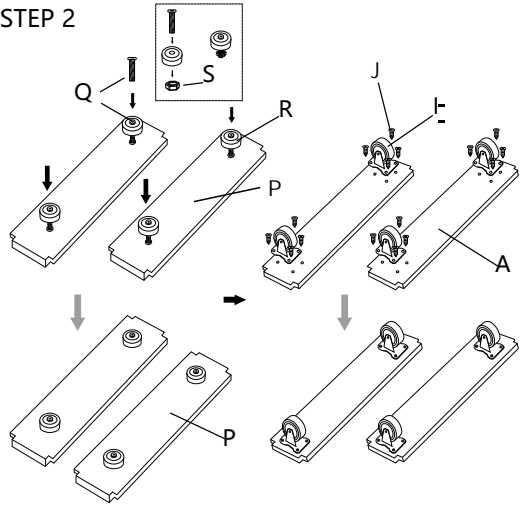


Fasten the R wheel to the P plate with Q screws and S nuts and the I wheel to the A plate with J screws.

## STEP 3

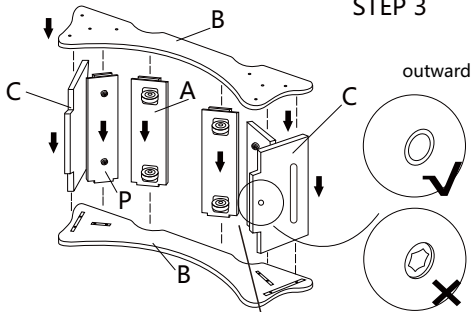


Insert the fixingscrews first, then install the other side to fixit, and then install the other side to fixit.

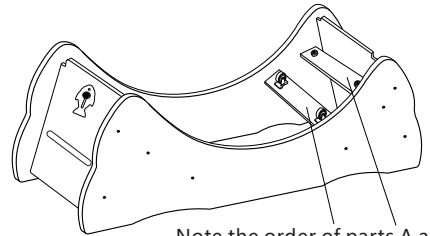

Note the order of parts A and P, A inside, P outside


Base installation complete

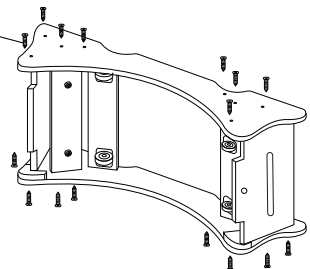


The two A plates with I wheels are at the bottom, and close to the A plates are the two P plates with R small wheels.

\* Note that the F plate should be placed in the middle of the horizontal plate arrangement in the arc plate (such as the third of the 5 horizontal plates, the fourth of the 7 horizontal plates, the actual object shall prevail)  
F plates cannot be placed at curved plate joints.


STEP 4

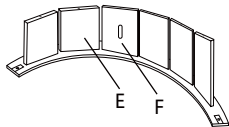


STEP 5

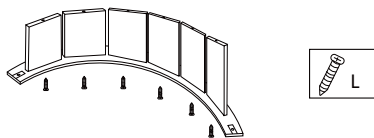


STEP 6

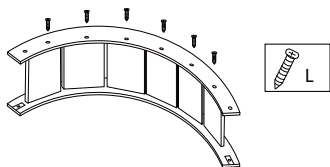


STEP 7

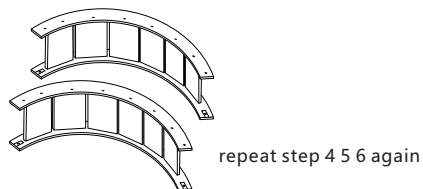


STEP 8 Here, use E with double holes for installation.

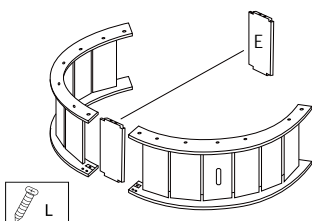


STEP 9

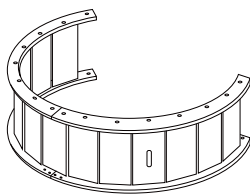


STEP 10 Mount the G here with the K screws, it will make the connection stronger.

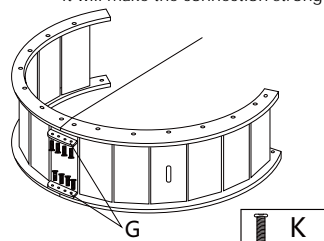


STEP 11

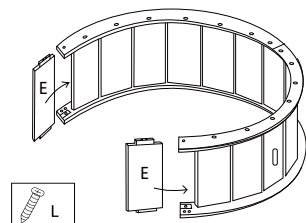


STEP 12

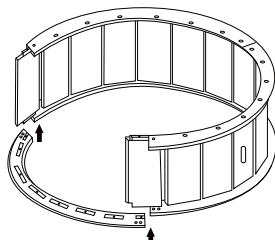


STEP 13

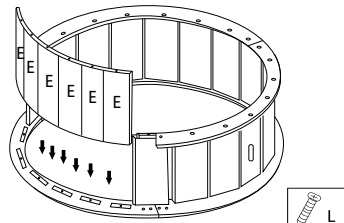

STEP 14

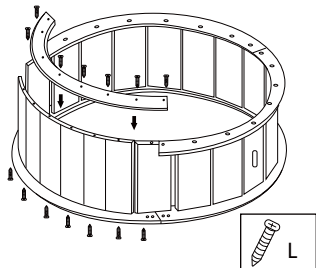


STEP 15

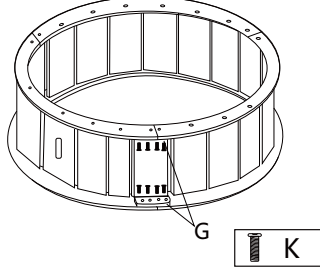


STEP 16

Place the rollers on the base.

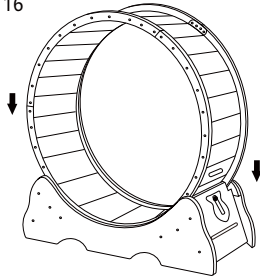


### STEP 17

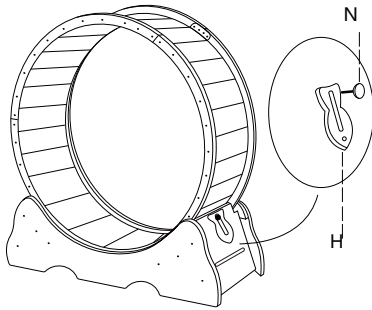


Secure H to the side panel with N.

Please paste the black buckle as shown in the figure below.


### STEP 18

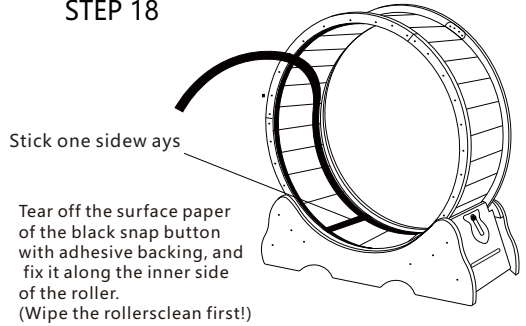


### STEP 19

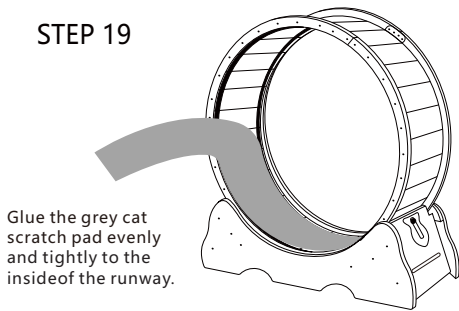

### STEP 20

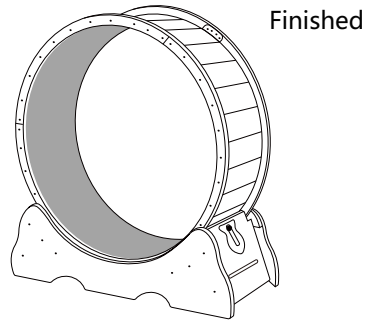

Lock it when not in use

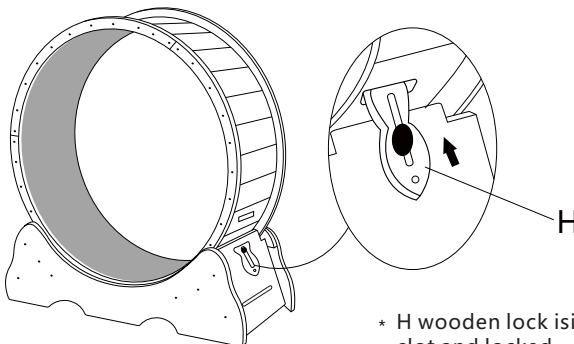

\* H wooden lock isinserted into the card slot and locked.