

ASSEMBLY INSTRUCTION


2 - DRAWER NIGHTSTAND WF305130AAK

- IMPORTANT NOTE * PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START
 THE ASSEMBLY OF YOUR FURNITURE
 - * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO PREVENT SCRATHES.
 - * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

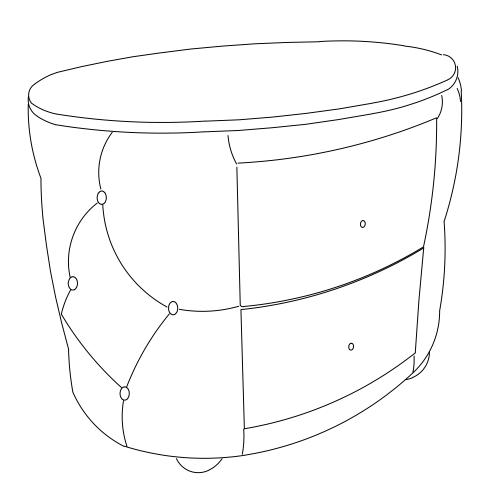

Parts

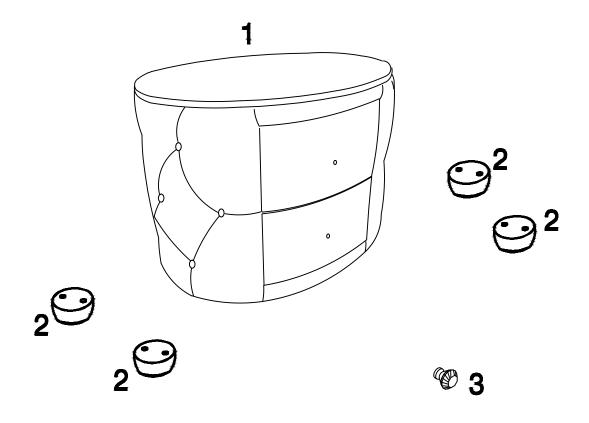

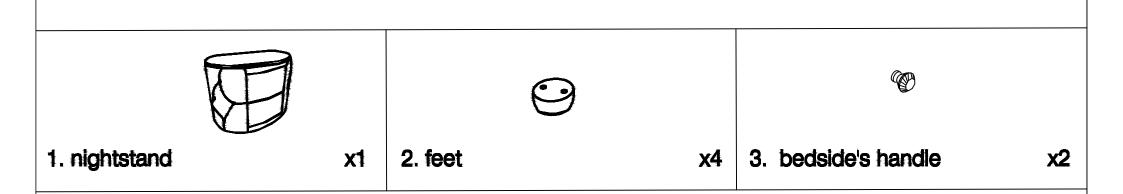


Fittings

Code Description Qty Code Description Qty

A Bolt (M4x65mm) x2 B Screw (M4x40mm) x8

Additional Tools Required

1 fix feets (2) to the nightstand (1).

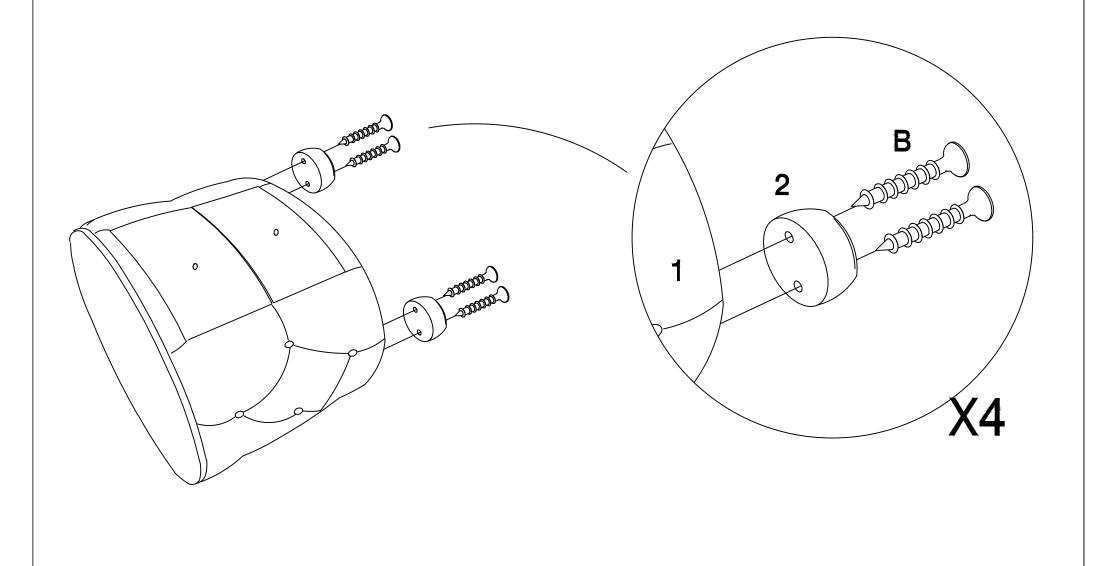

2 First remove the handle (3) inside the drawer, and then use screws (A) to secure the handle (3) to the outside of the drawer on the bedside table (1).

