
ASSEMBLY INSTRUCTION

GD01 QUEEN/FULL WF316750/WF317301



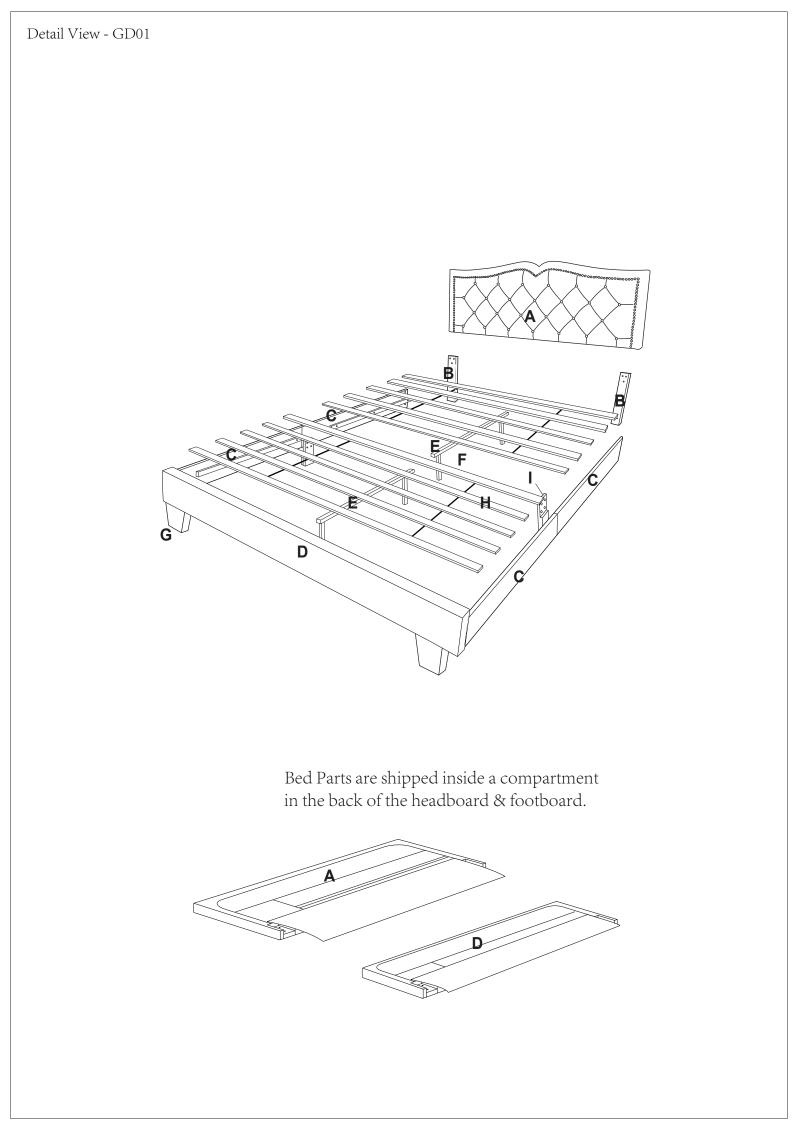

| NO | | PART LIST | QTY |
|----|---------------------|-----------|--------|
| А | Headboard | | 1 pc |
| В | Headboard Leg | | 2 pcs |
| С | Side Rail | | 4 pcs |
| D | Footboard | | 1 pc |
| E | Center Support Rail | | 2 pcs |
| F | Center Support Leg | | 4 pcs |
| G | Bed Leg | | 2 pcs |
| Н | Bed Slat | | 10 pcs |
| Ι | Side Rail Support | | 2 pcs |

| NO | HARDWARE | LIST QTY |
|----|------------------------|-------------|
| 1 | JCBB M8 x 20mm | 8 pcs |
| 2 | JCBC M6 x 60mm | = (b) 4 pcs |
| 3 | JCBC M6 x 40mm | 6 pcs |
| 4 | JCBC M6 x 25mm | @ 8 pcs |
| 5 | Spring Washer M6 | 6 pcs |
| 6 | Flat Washer M6 |) 14 pcs |
| 7 | Allen Key M4 (100mm) | 1 pcs |
| 8 | Allen Key M5 | 1 pcs |
| 9 | Adjuster M6 | 4 pcs |
| 10 | JCBC M6 x 70mm | 2 pcs |
| 11 | CSK M4 x 30mm ⊲ttttttt | 20 pc |
| 12 | Dowel M8 X 30mm | 4 pcs |

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :

- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



