



Assembly Instructions

W167382618

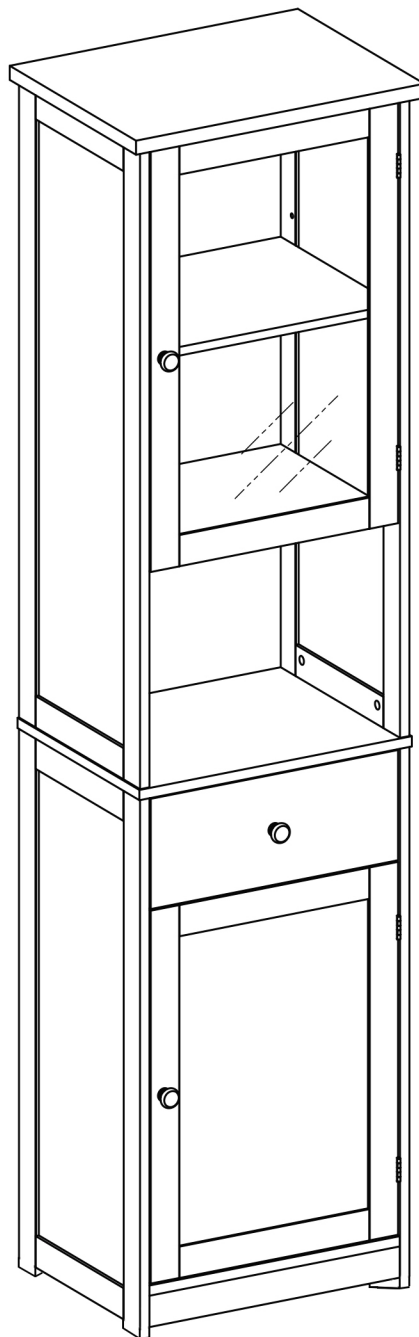


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE




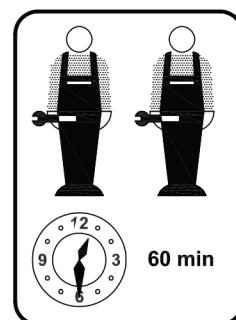








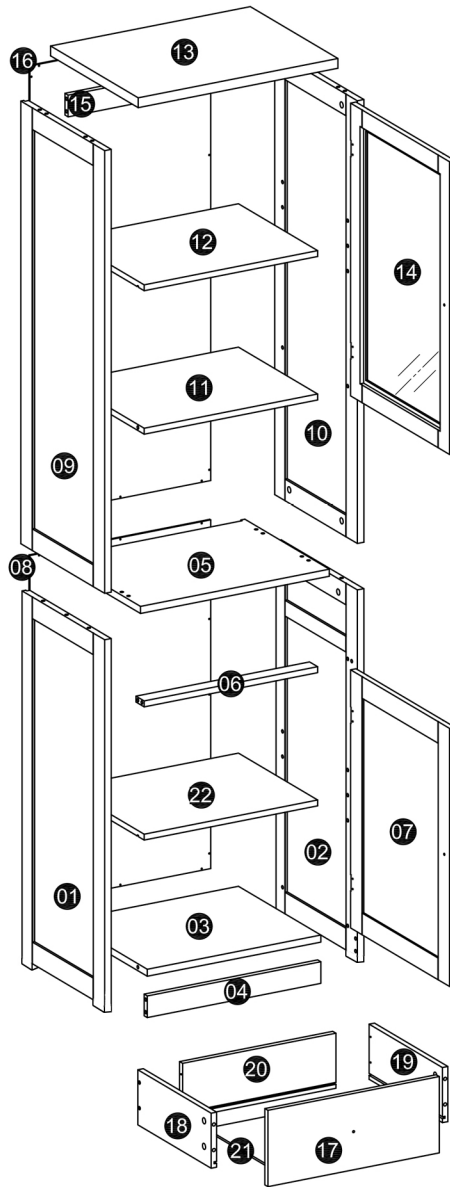


NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.





EXPLODED VIEW








HARDWARE


A x26 	B x26 	C x20  Ø 6 x 30mm	D x1 	E x61  Ø 3 x 10mm
F x2 	G x2 	H x6  Ø 4 x 30mm	I x4 	J x8 
K x3 	L x3 	M x4 	N x2 	O x2 

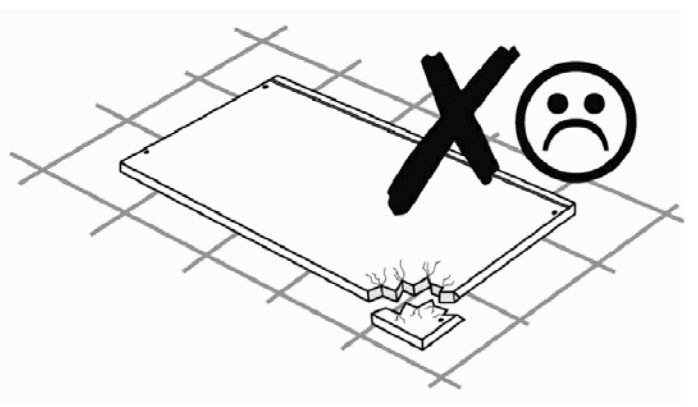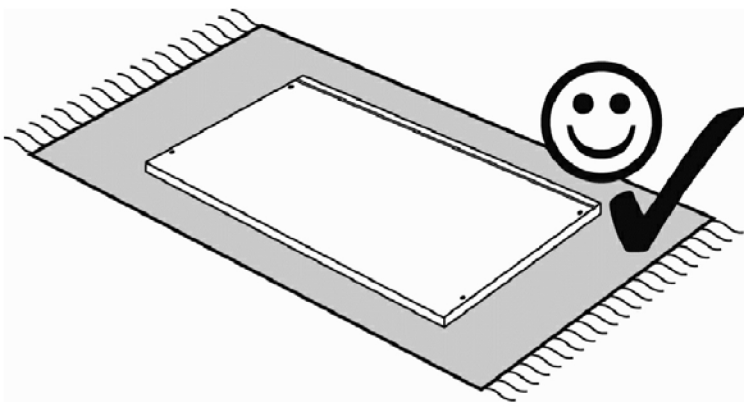


01

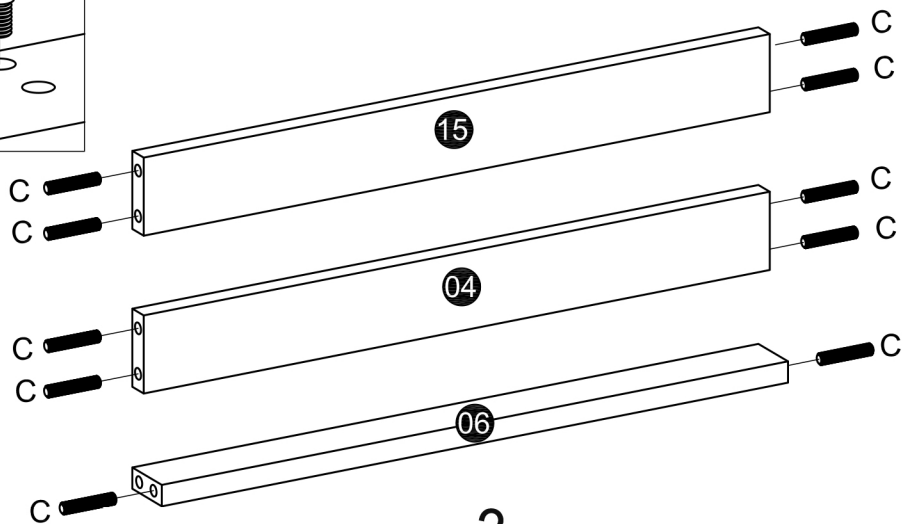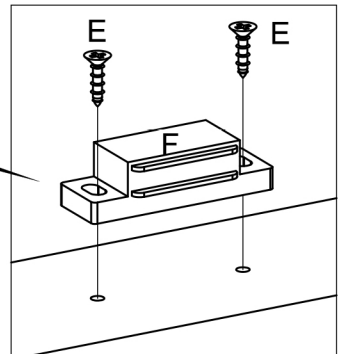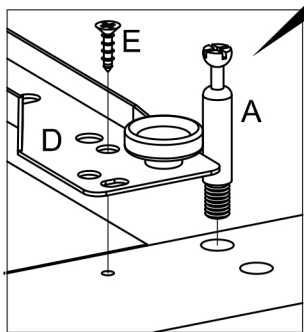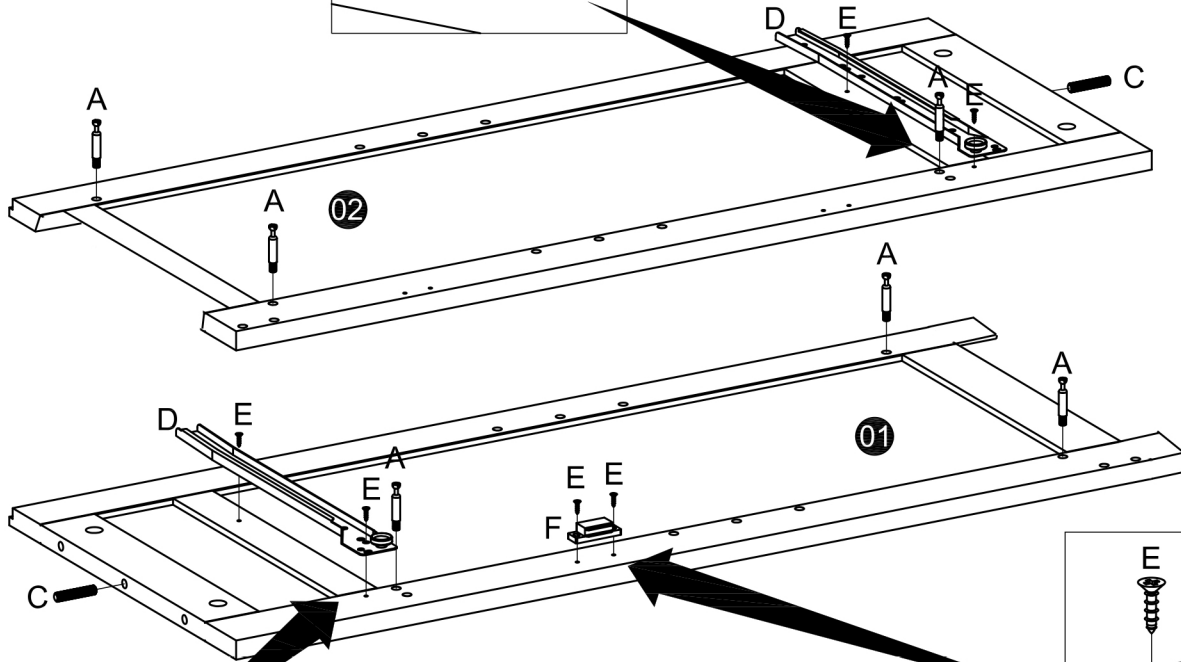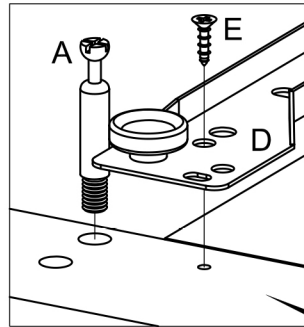


02

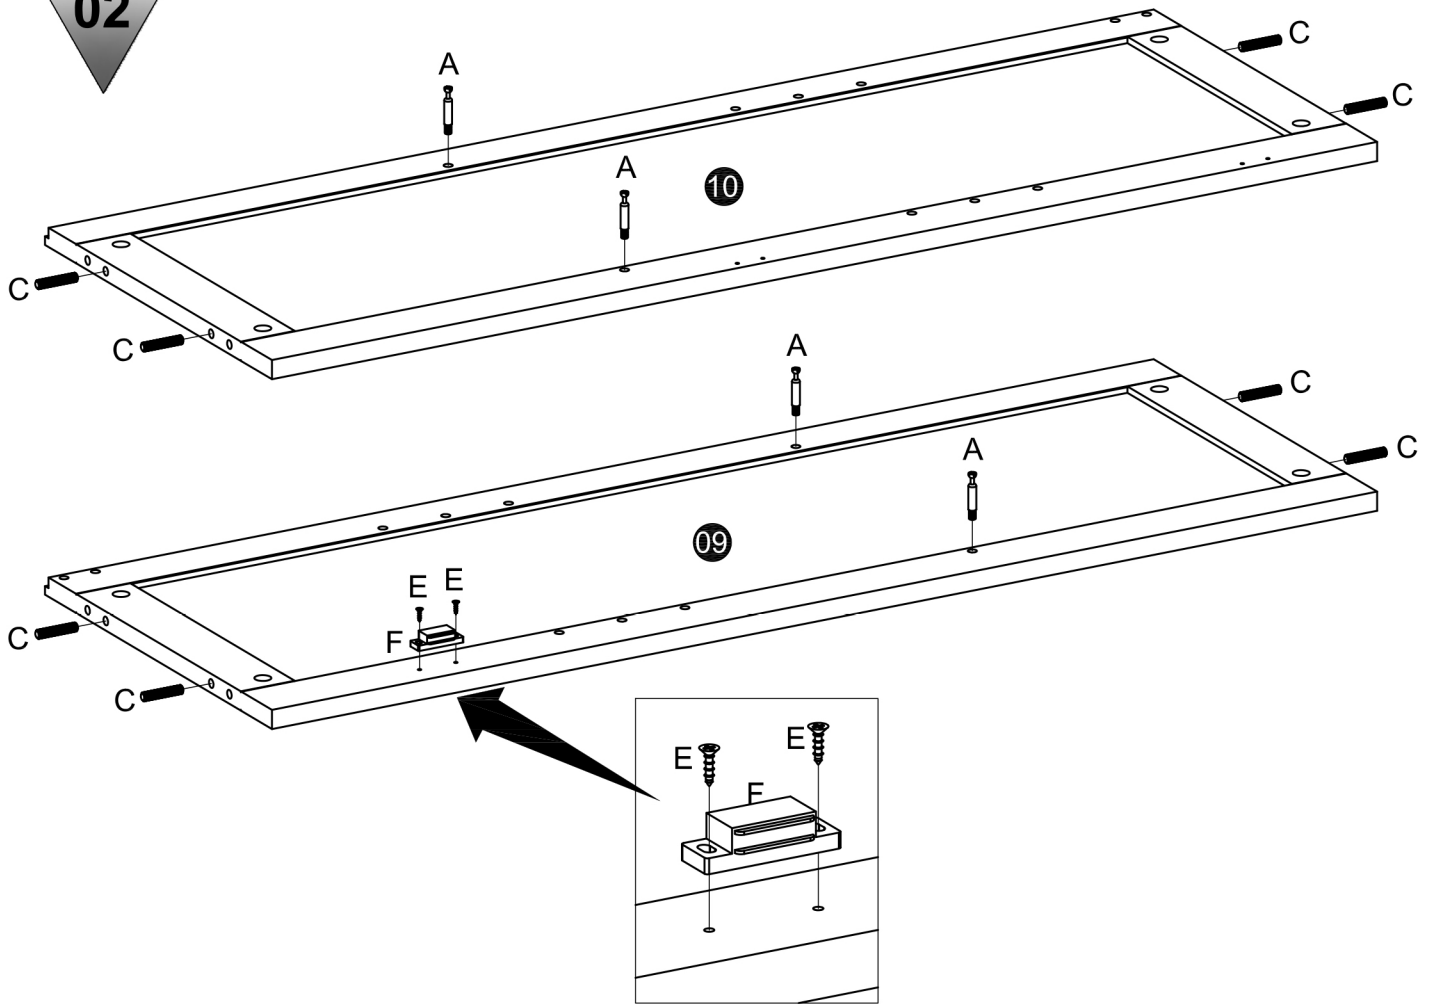


03

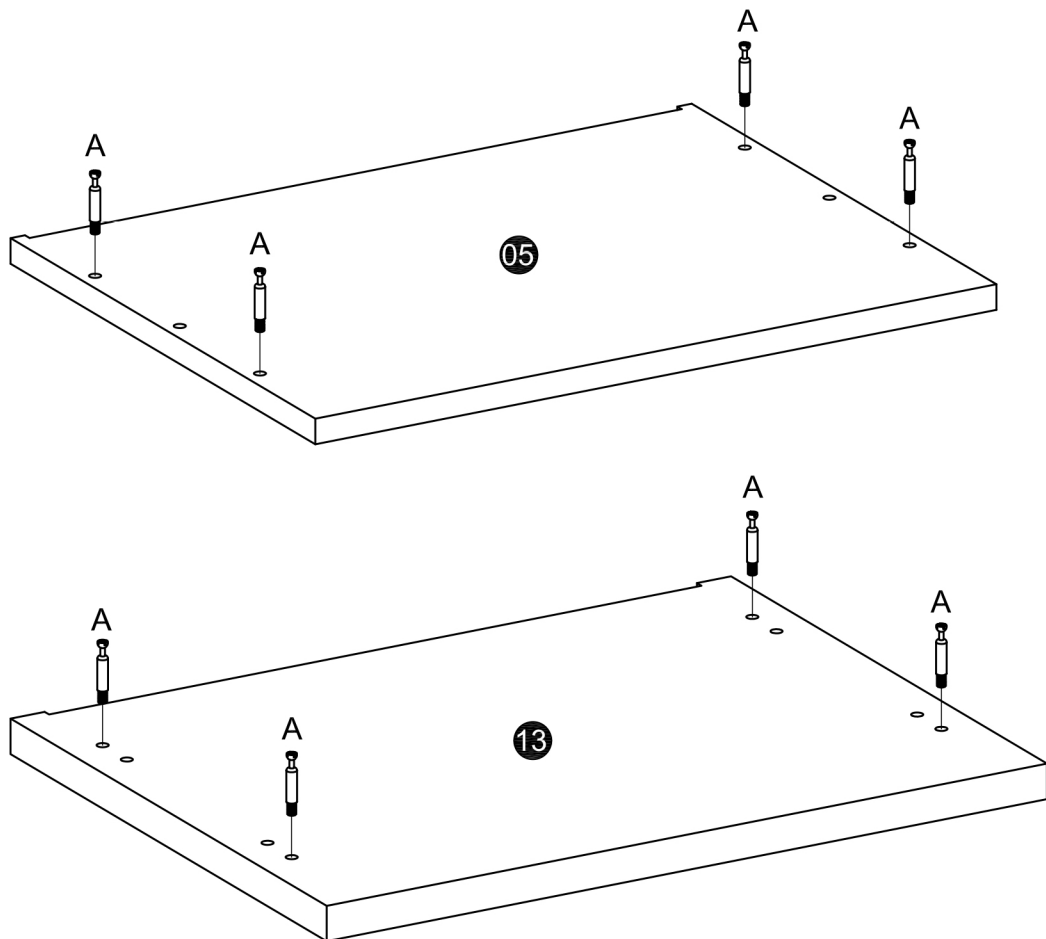

04

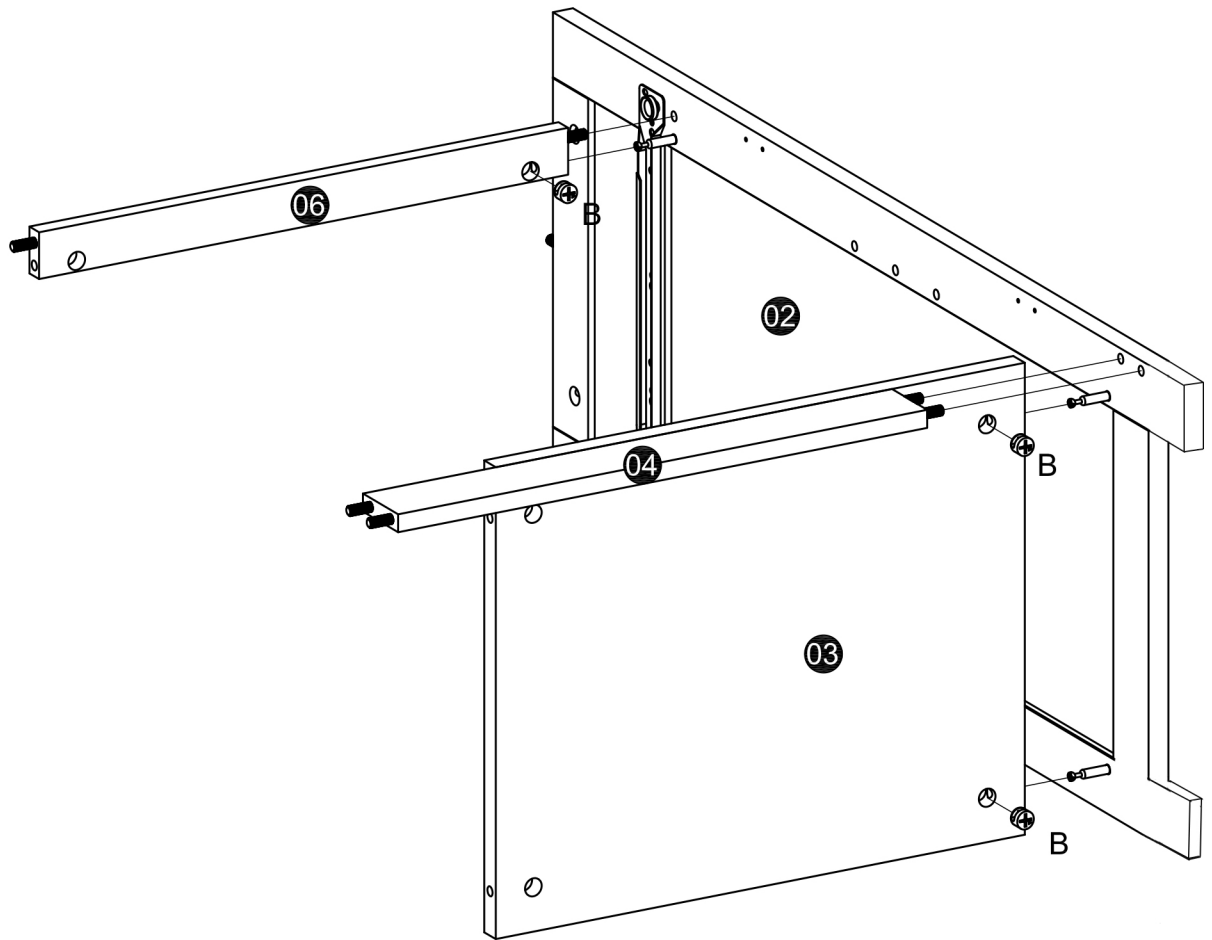


05

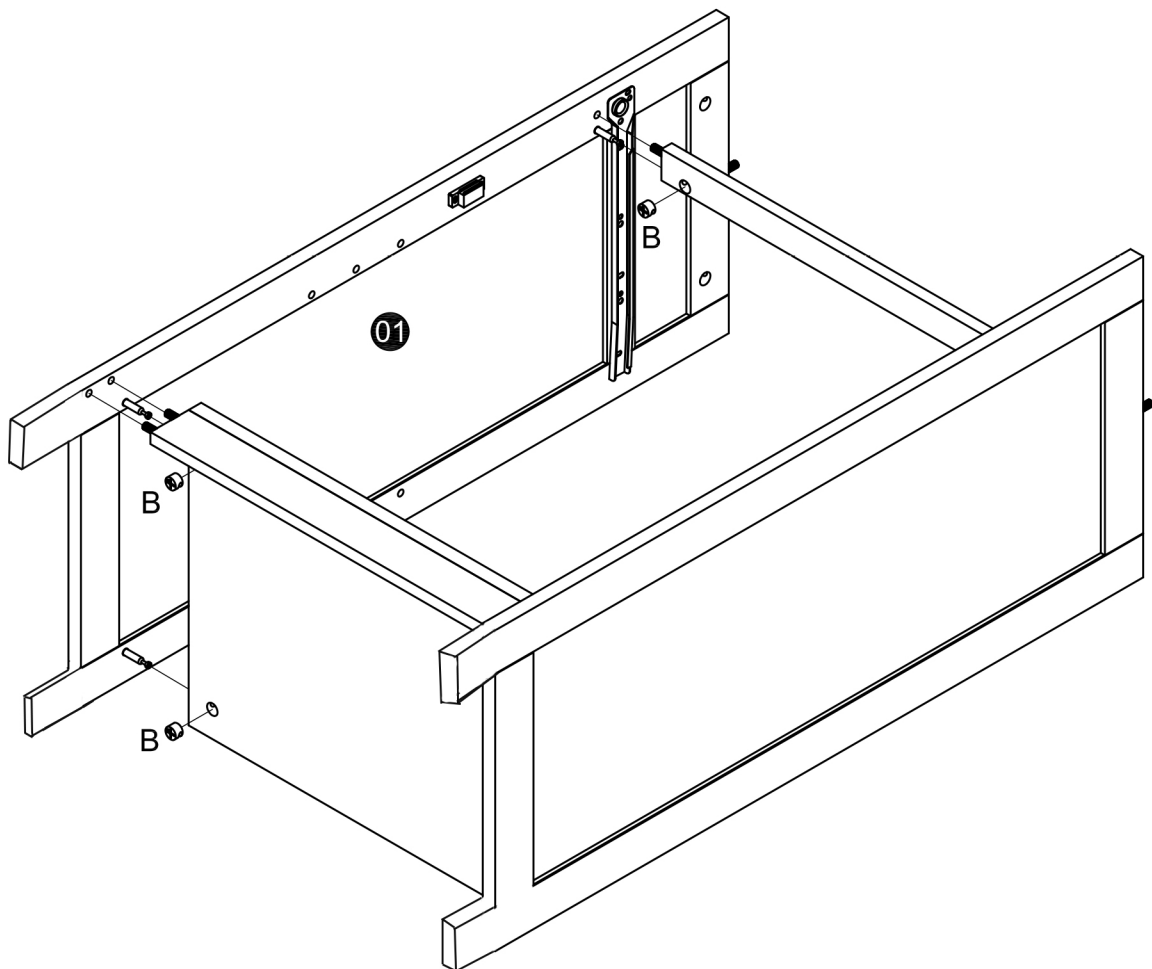


5

06

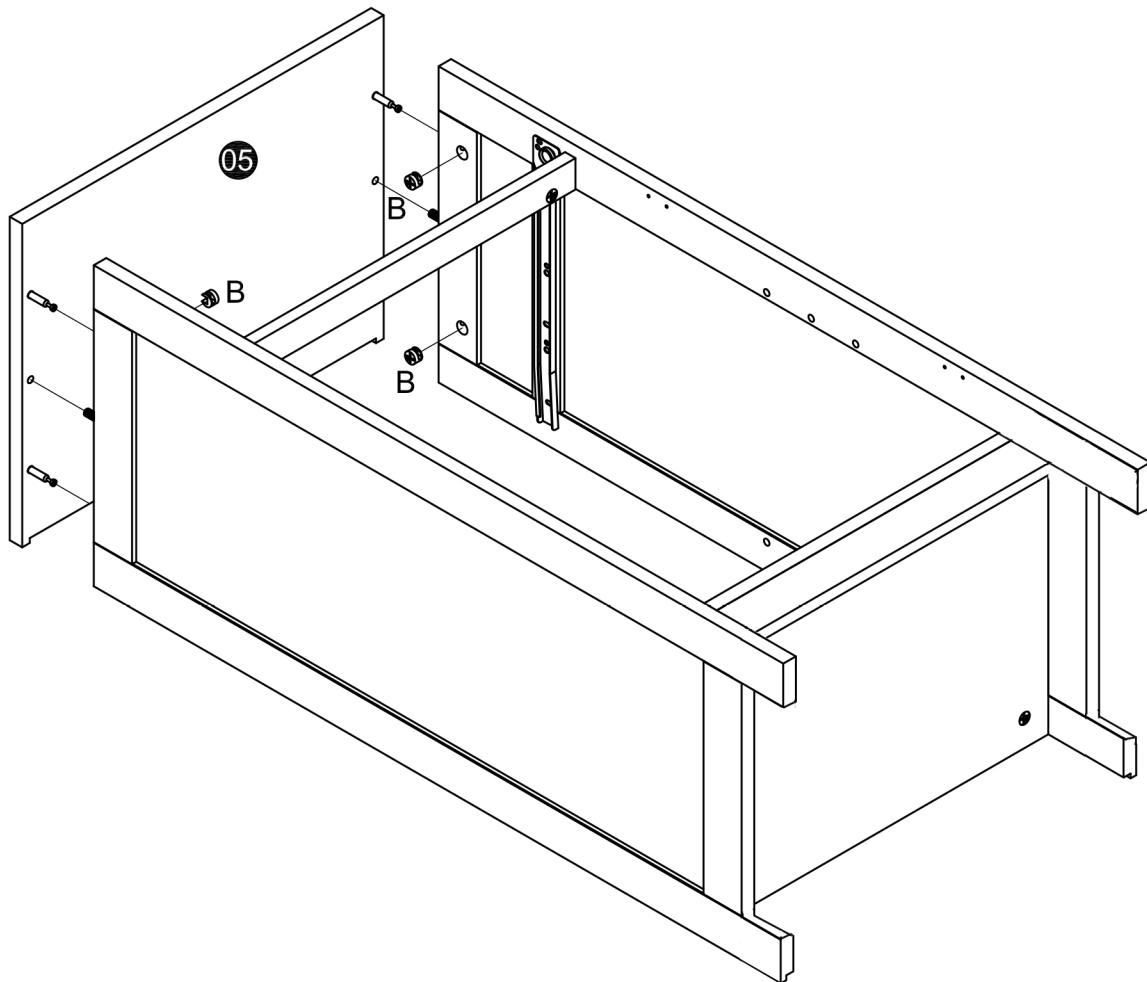


07

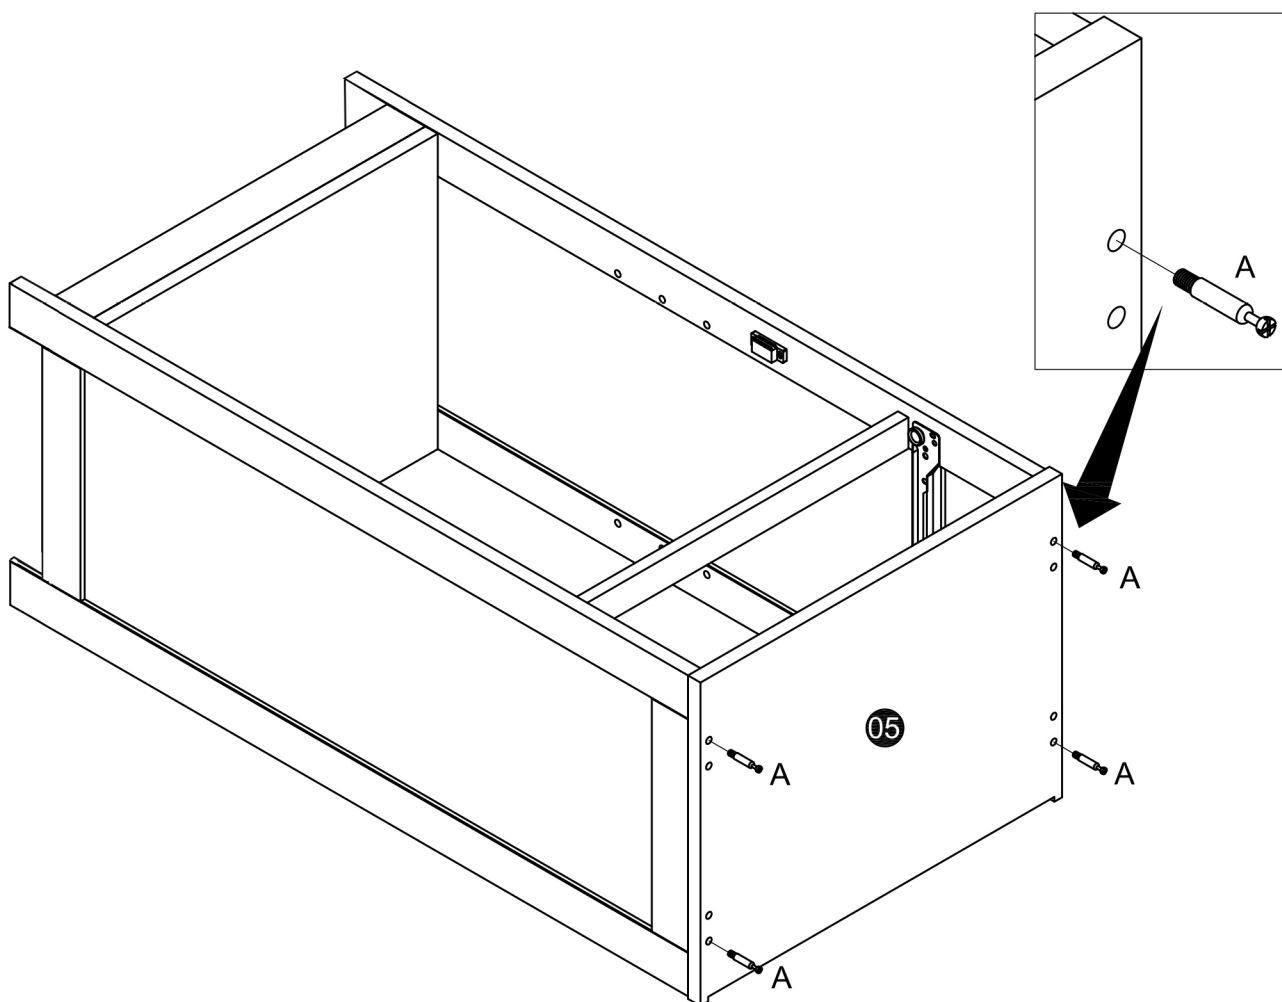


6


08

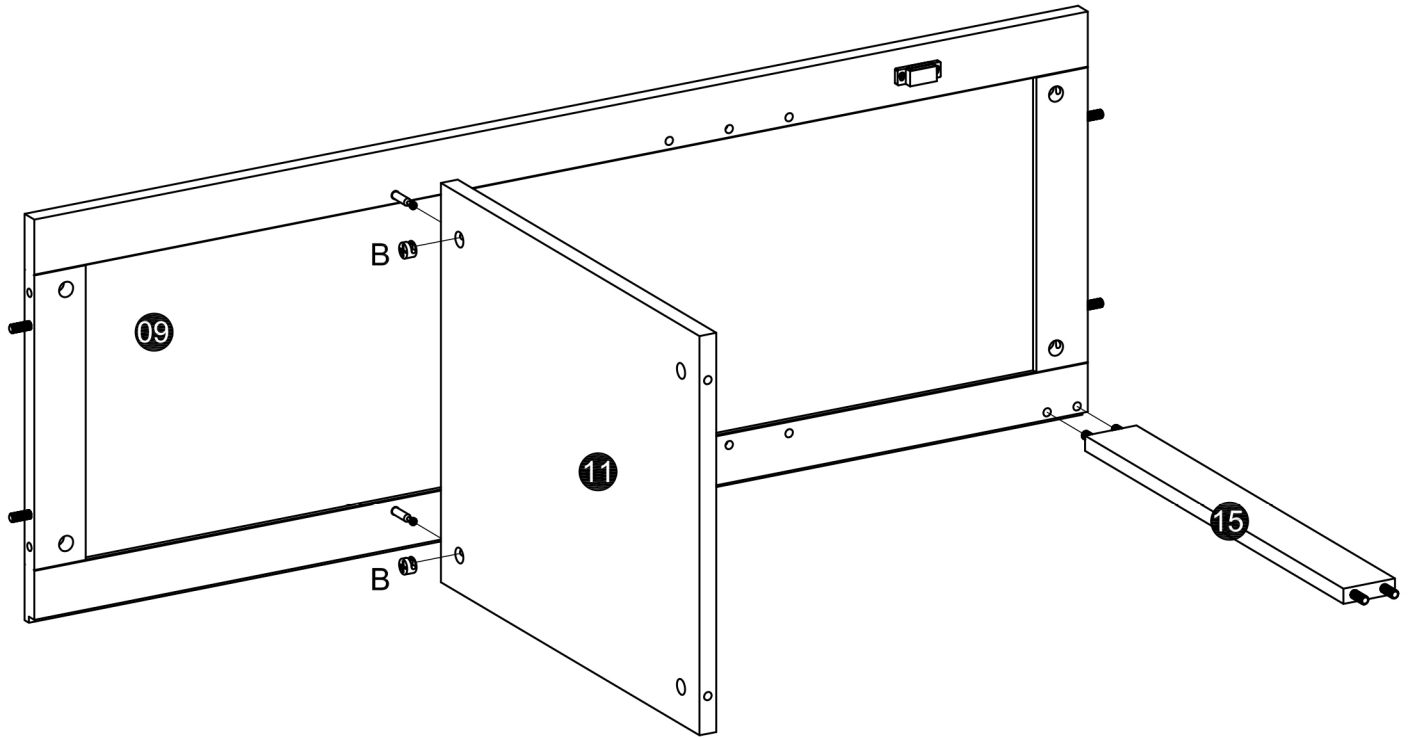


09

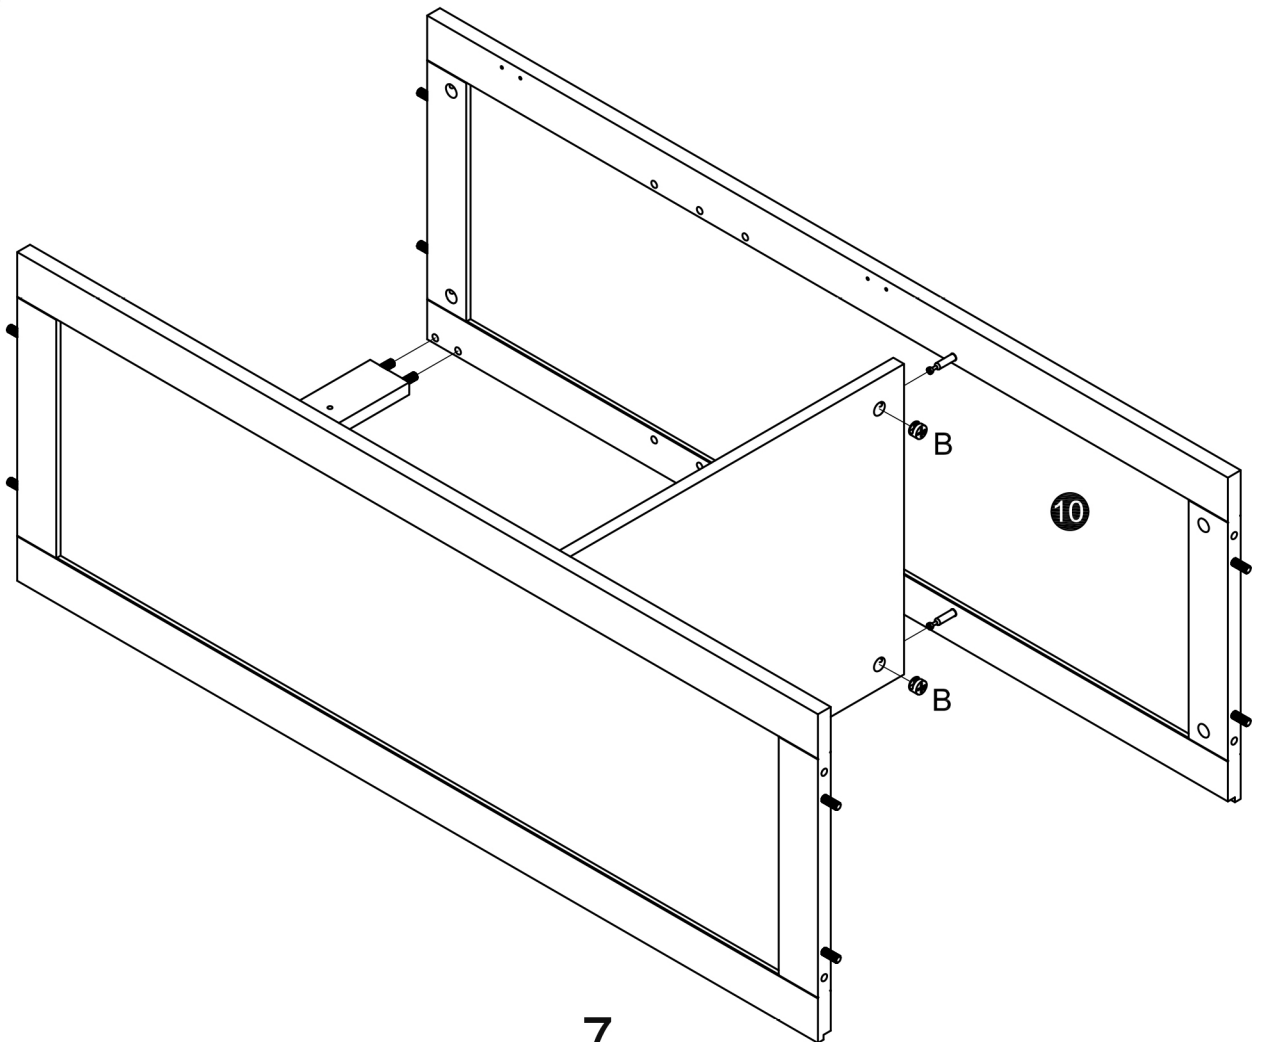


10

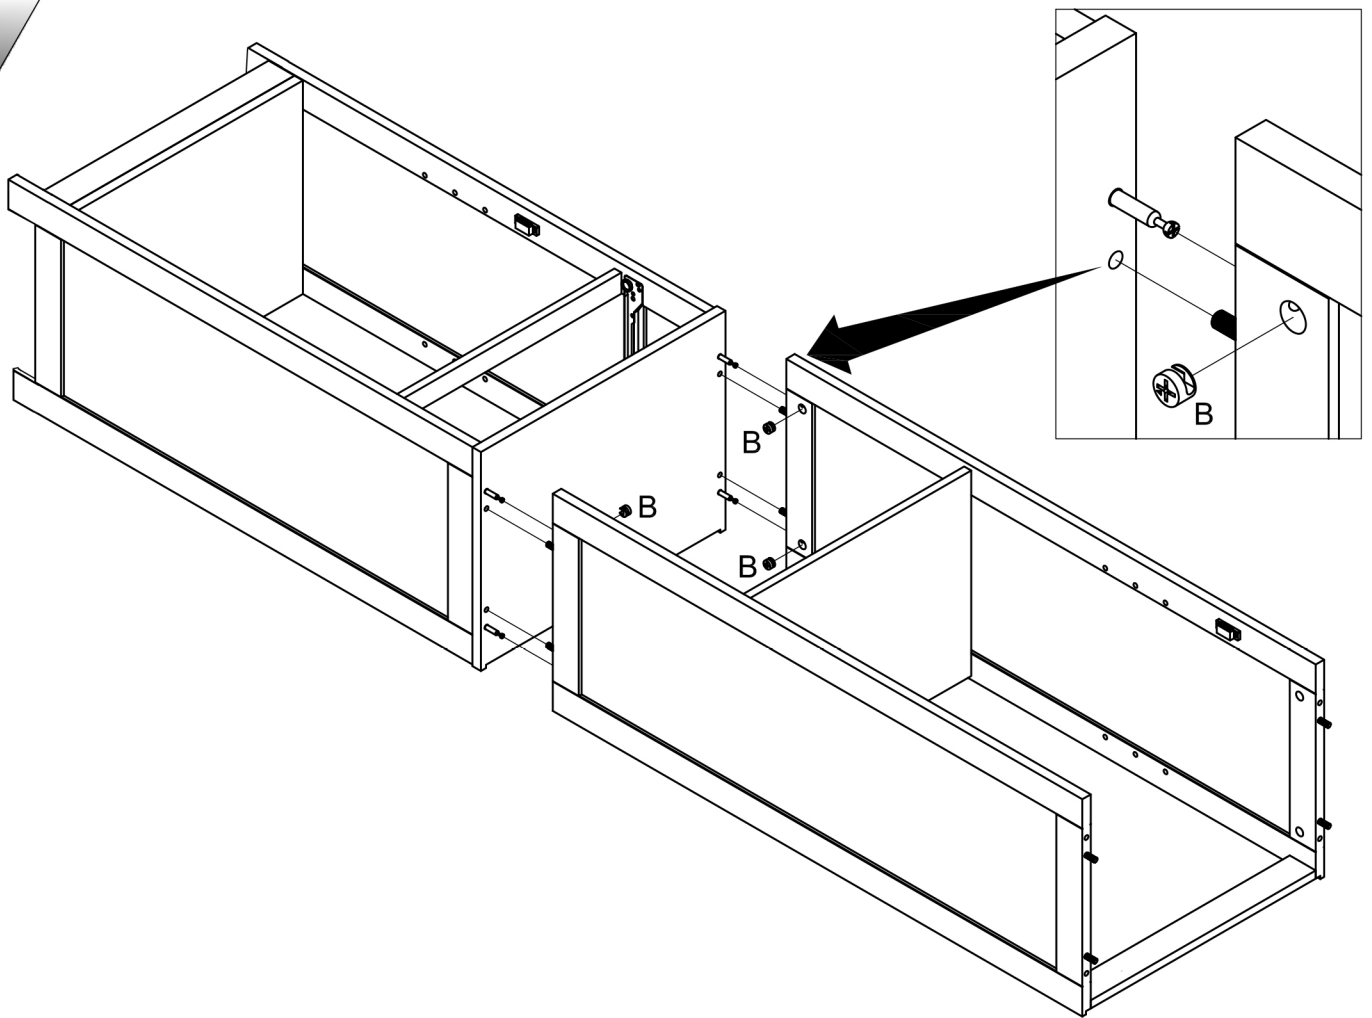





11

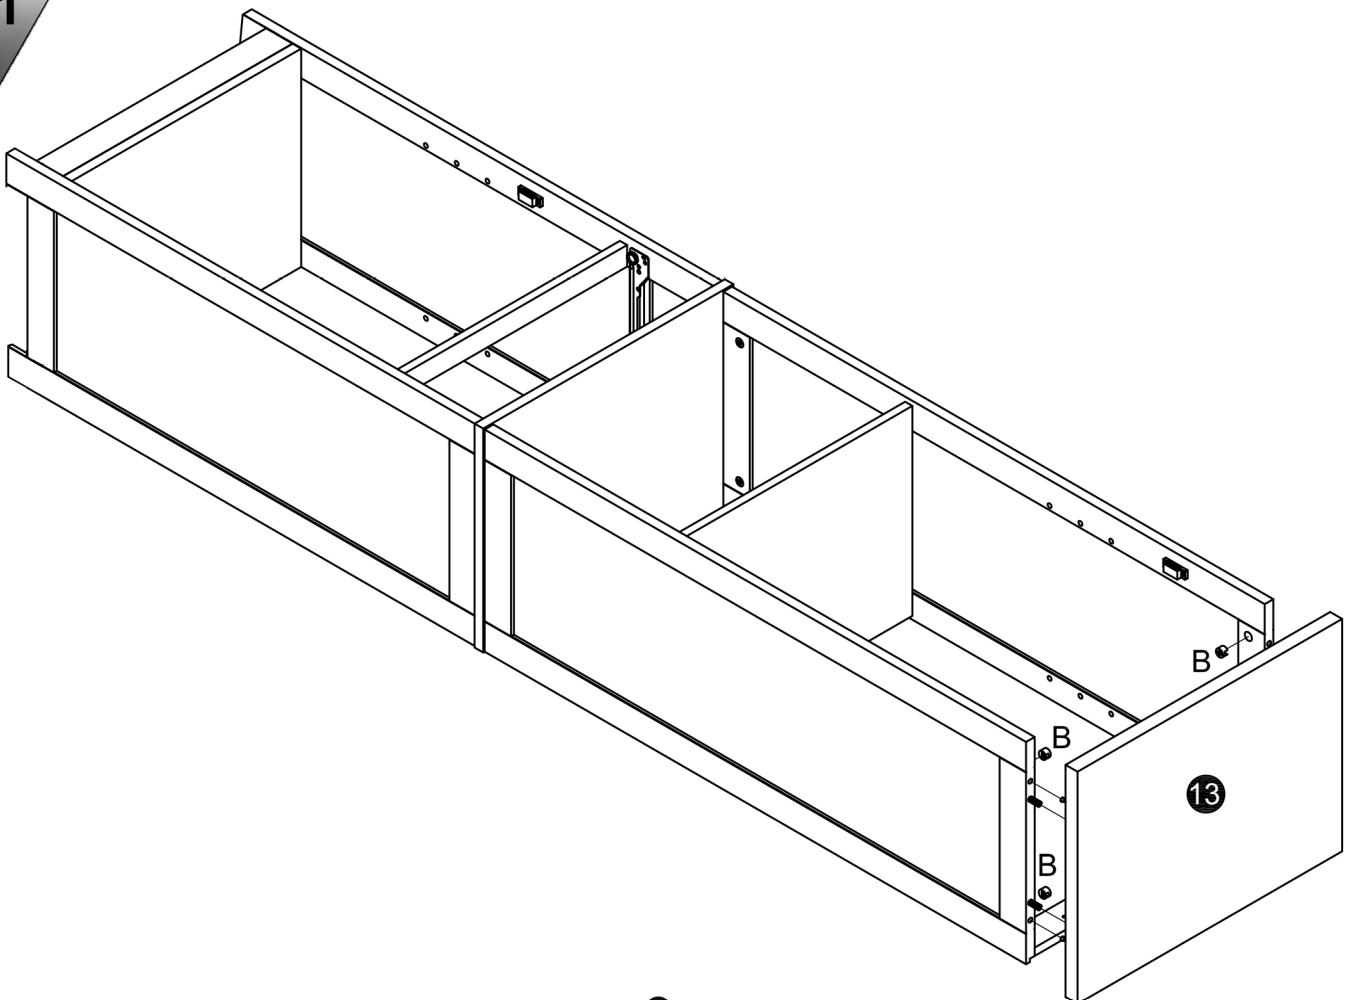


12

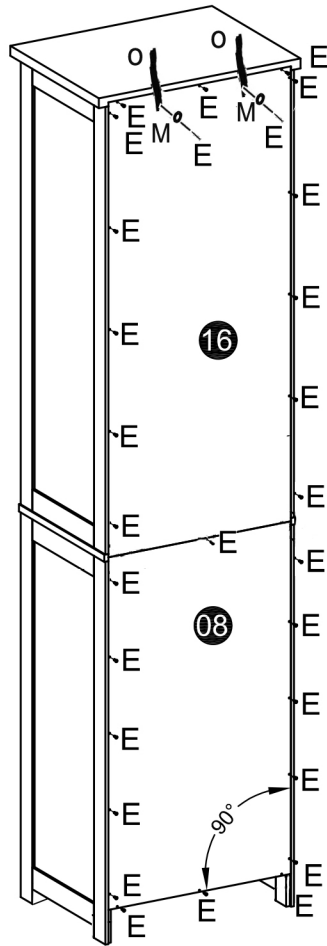


13

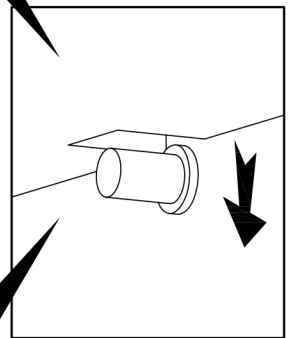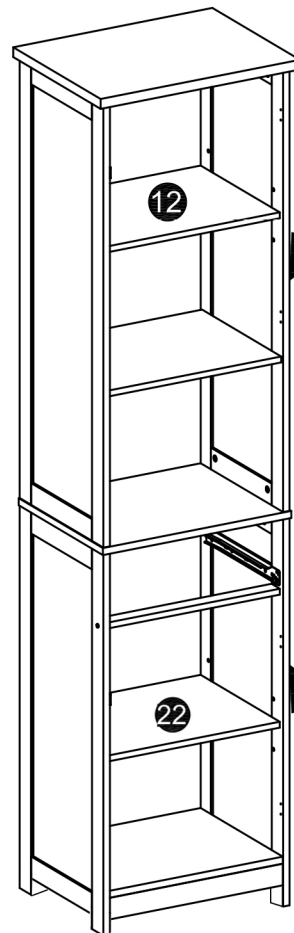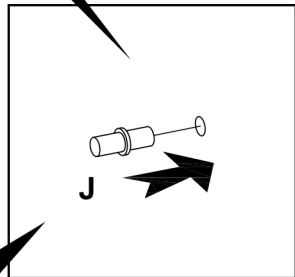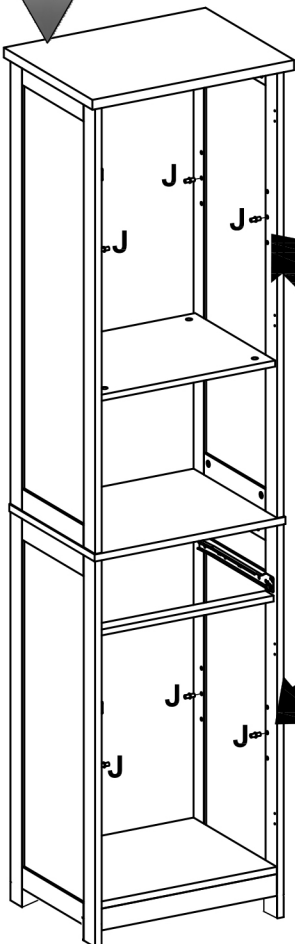

14

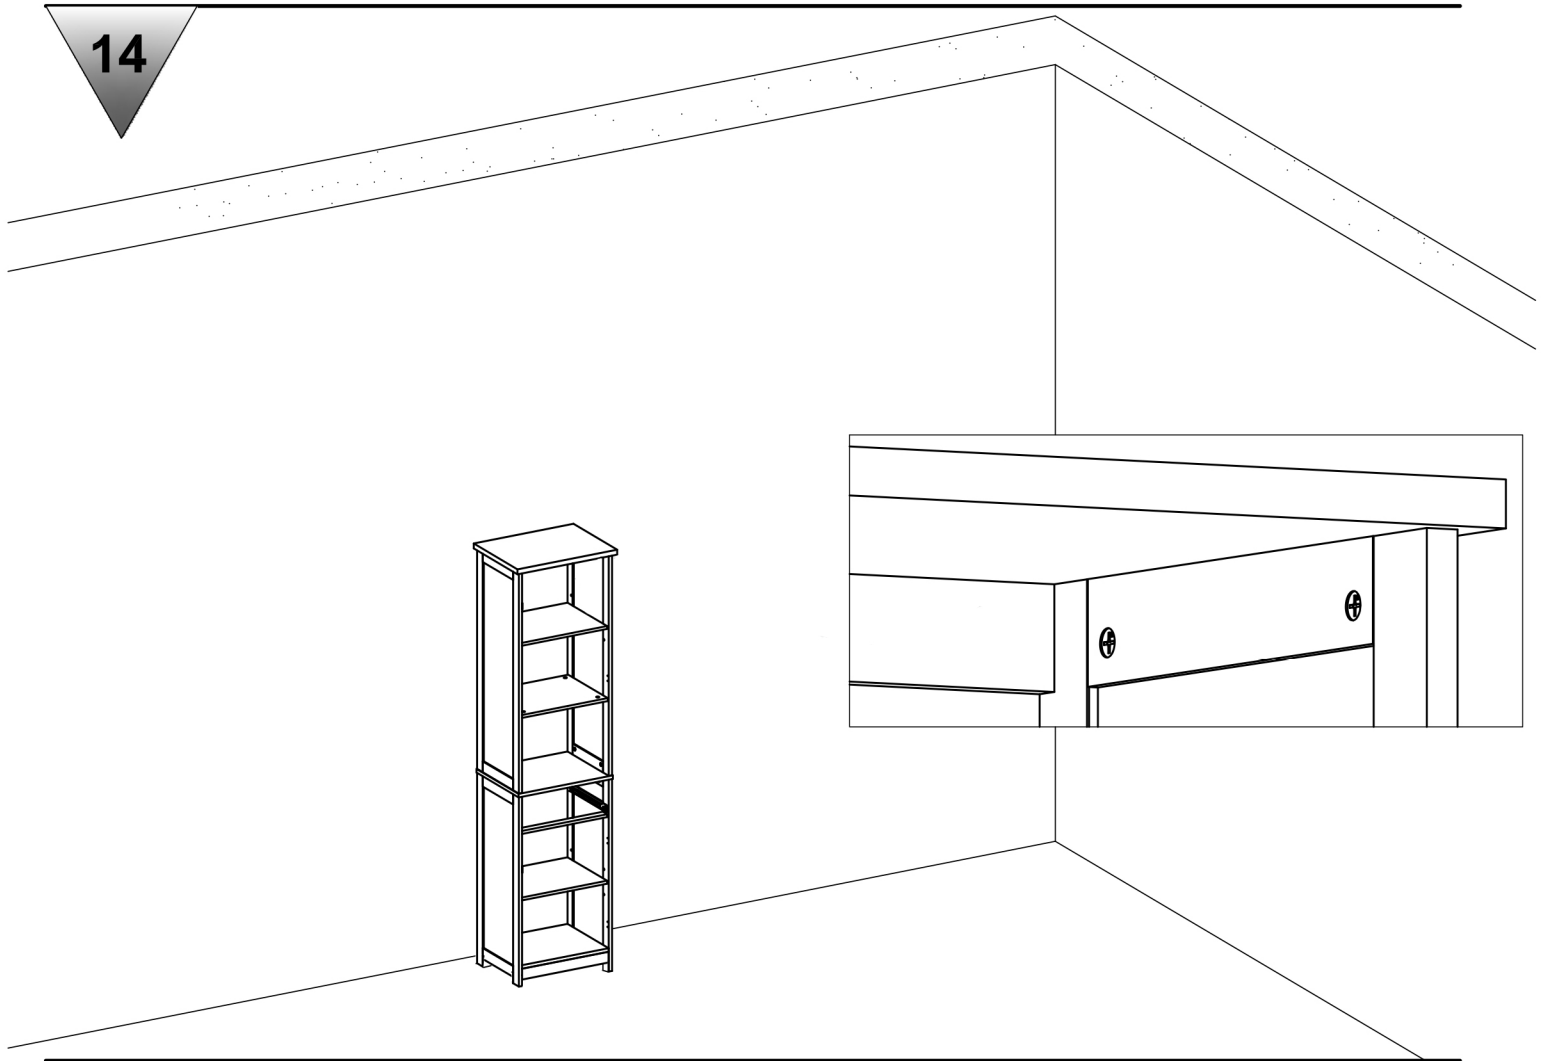


15

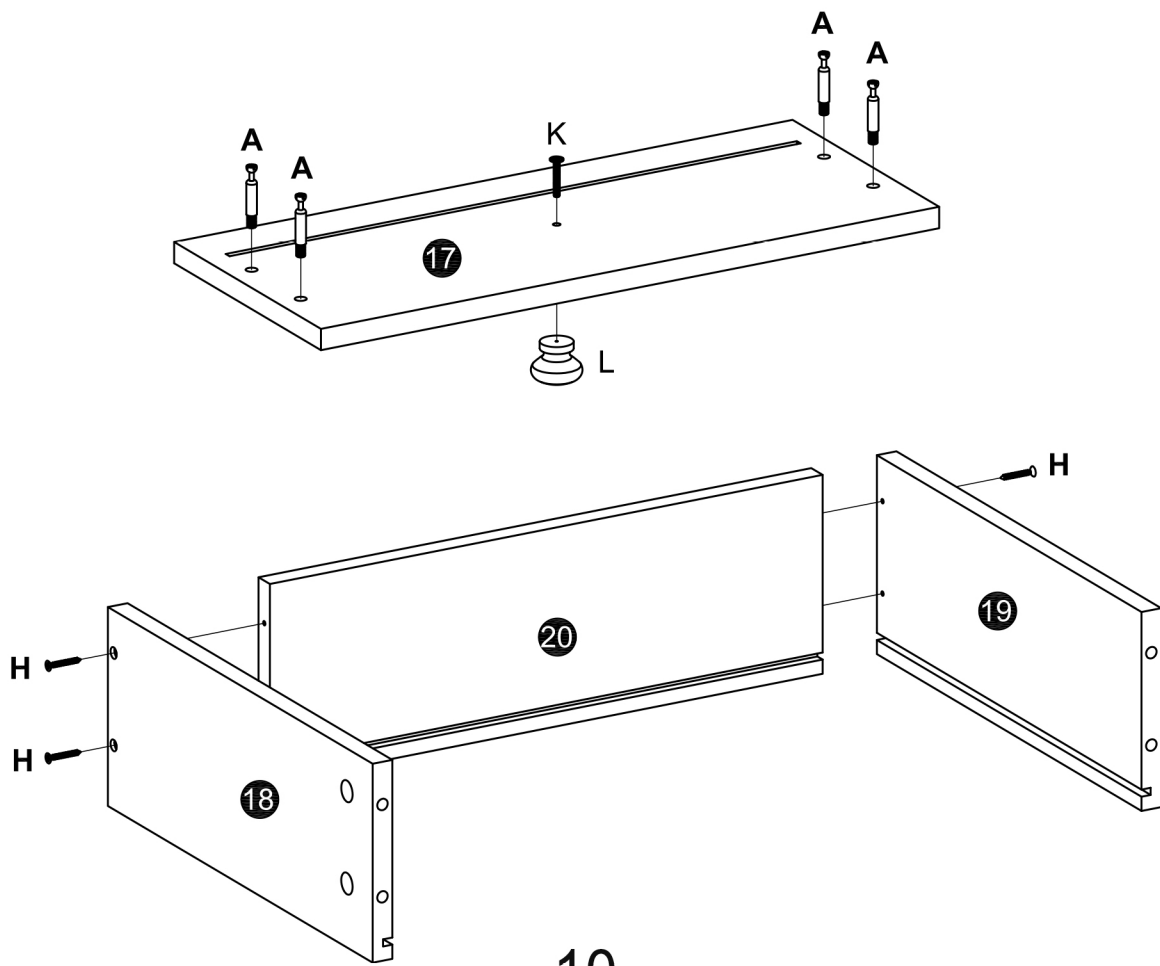


10


16

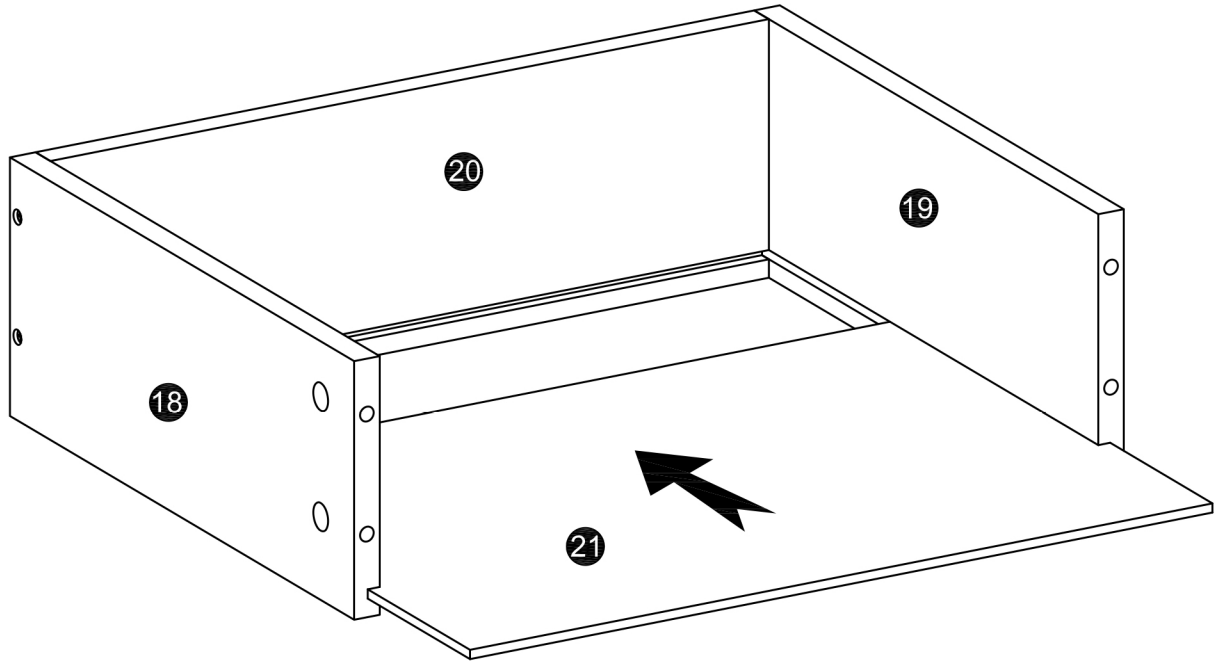


17

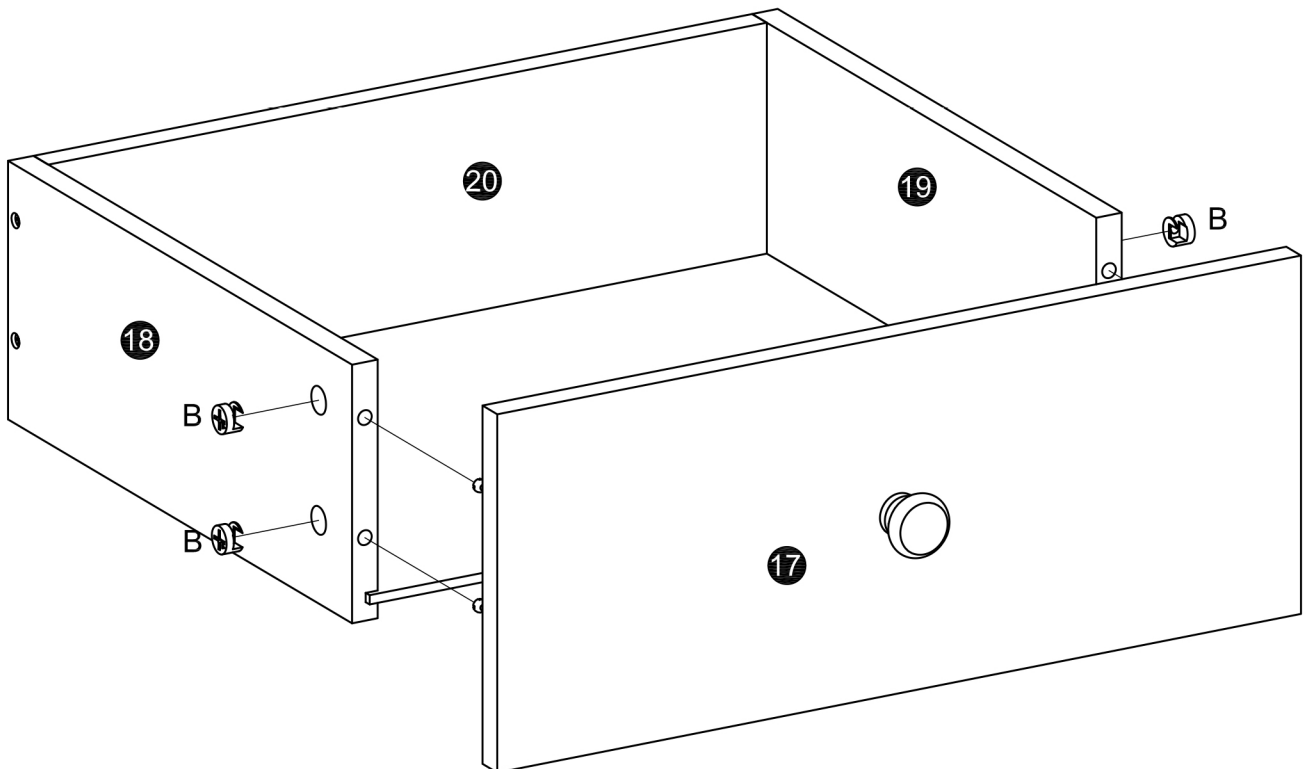

18


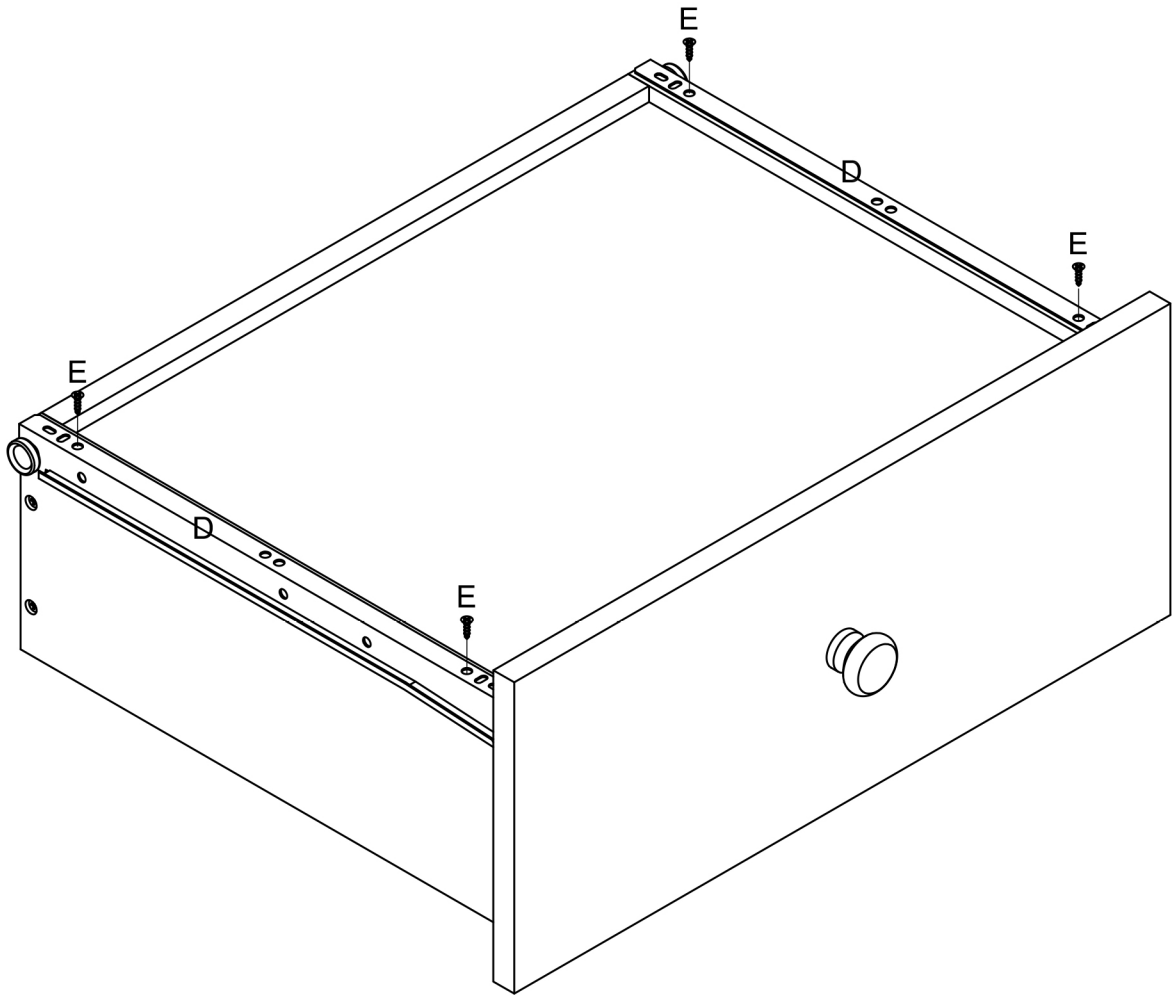


19

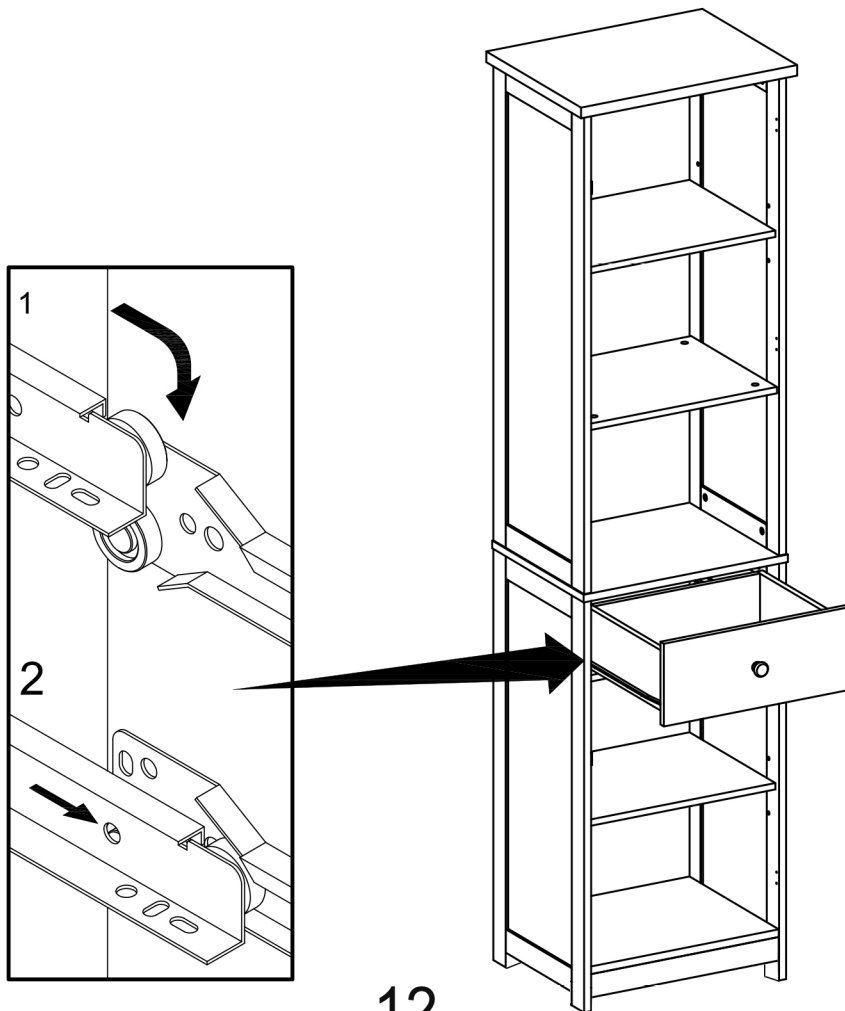

12

20

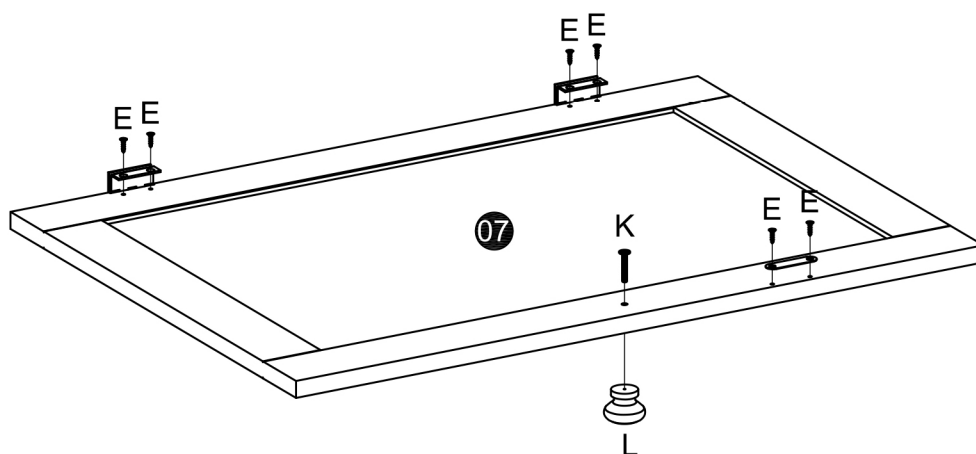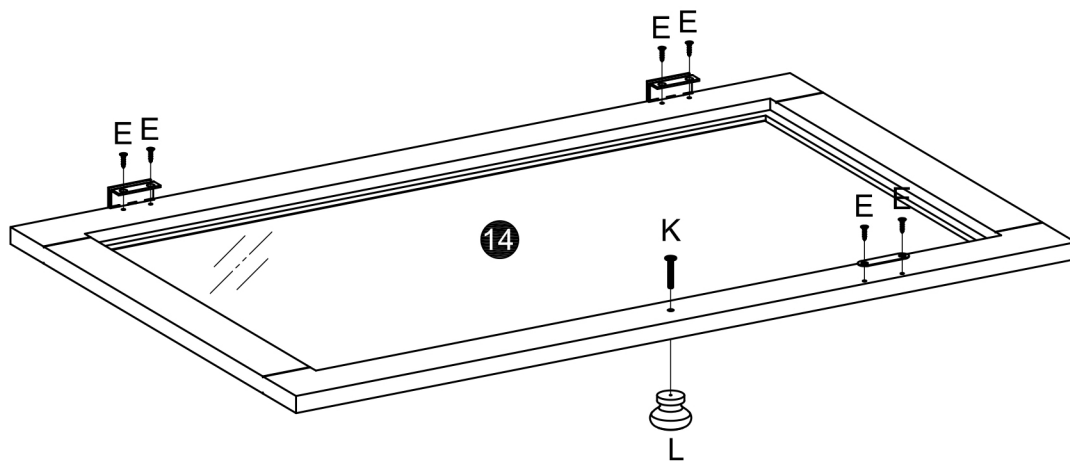

21

